




User Manual

ELECTRIC SHAVER

Model No.: □ WS-R001

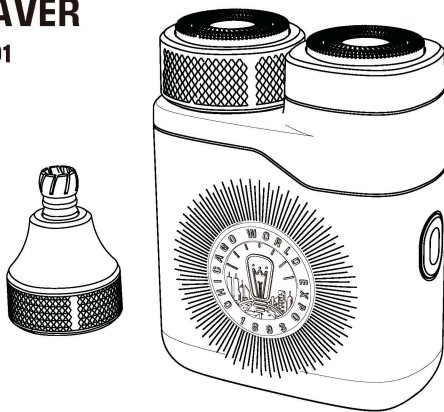

CONSUMER SAFETY INFORMATION

Please read this manual before installing and operating this appliance.

CONTENTS

1. IMPORTANT SAFETY INFORMATION	1
2. PRODUCT SPECIFICATIONS	2
3. PARTS & ACCESSORIES	2
4. OPERATING INSTRUCTIONS	3
5. CHARGING INSTRUCTIONS	6
6. CARE & MAINTENANCE	7
7. TROUBLESHOOTING	9
8. ENVIRONMENTAL PROTECTION	10
9. CUSTOMER SUPPORT	11

IMPORTANT SAFETY INFORMATION



WARNING



1. Read this user manual carefully before using the product.
2. This product bears a tap water symbol, indicating it is suitable for cleaning under a faucet. Do not soak the unit for long periods. Always disconnect the shaver from the charging cable before cleaning under running water.  IPX7
3. The shaver foil is precision-machined. Do not press hard or strike it with hard objects – this may damage the foil and cause skin scratches.
4. Use only cold or warm water for cleaning. Do not use salt water, water above 122°F, gasoline, alcohol, or other chemicals to clean the shaver.
5. The shaver may become slightly warm during use or charging; this is normal.
6. Do not charge the shaver for excessively long periods.
7. Charging voltage is 5V $\overline{\text{---}}$. Charge, use, and store the product at temperatures between 41°F and 95°F. Do not store in direct sunlight or near other heat sources.
8. Persons with impaired mobility, limited mental capacity, or lack of experience or knowledge (including children) must use the product under supervision and guidance of a responsible person.
9. The blade head can harbor bacteria; clean the shaver head frequently.
10. Do not share the shaver with others to avoid spreading skin infections.
11. This product contains magnets. If you have a pacemaker or other implanted medical device, consult your physician or the device manufacturer before use.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



WARNING:

This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.




PRODUCT SPECIFICATIONS

Product Name	Electric Shaver	Model NO.	WS-R001
Operating Voltage	3.7V $\approx$	Charging Voltage	5V $\approx$ 1A
Rated Power	2W	Charging Time	$\approx$ 90min
Operating Time	> 90min	Waterproof Rating	IPX7

PREPARATON

Remove all parts and accessories from the box and place them on a clean, soft, dry surface. Follow the assembly instructions. Check the parts list to ensure nothing is missing. Dispose of packaging materials properly and recycle where possible.


PARTS & ACCESSORIES

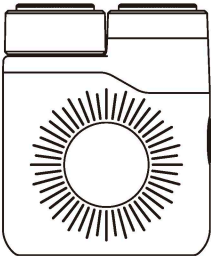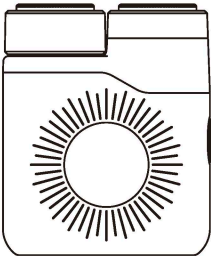			
	Nose Hair Trimmer	Charging Cable	Carrying Case
			
	Cleaning Brush	Nose Hair Trimmer Storage Pouch	User Manual


OPERATING INSTRUCTIONS

*For household use only. Keep out of reach of children.



Carrying Case for Travel

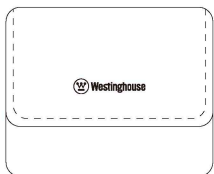

Carrying Case

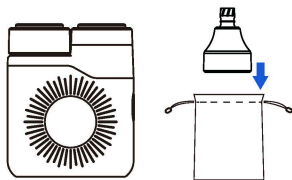

Magnetic Head

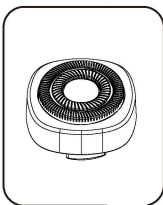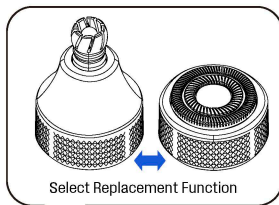


Magnetic Head



Circle

Match and install the head with the corresponding shape

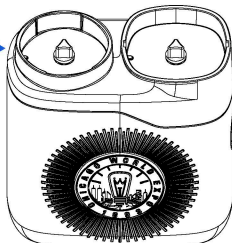

Rounded Rectangle

Storage Compartment


Power Switch

Charging Port


47 CFR Part 15 Subchapter B, ANSI C63.4:2014

Quick Use


1. Press the side power switch; the white indicator light will turn on and the shaver will start.

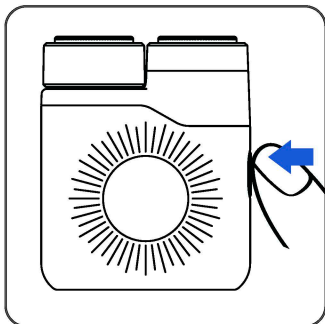


2. Press the power switch again to stop.

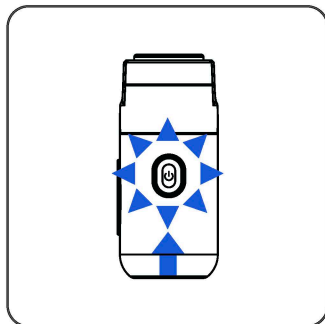

3. Press the power switch to turn on the shaver.

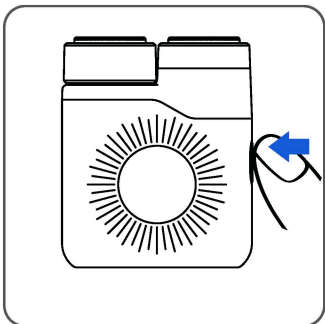


4. Move the shaver head back and forth over hair growth areas.

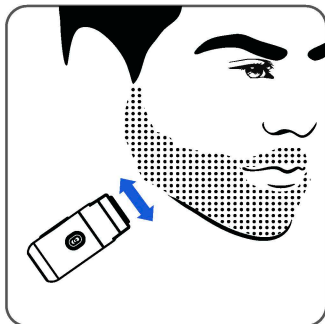


* This shaver can be used while connected to a power adapter for charging. If not using while charging, ensure the product is turned off.

Trimming Nose Hair


1. The shaver head is magnetically attached. Hold the head on the left side and lift upward to remove it.

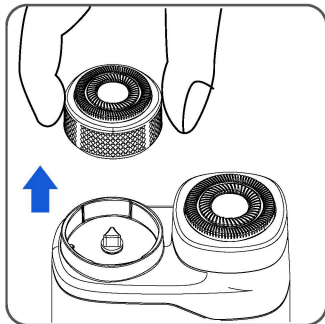


2. Place the nose hair trimmer in its corresponding position.

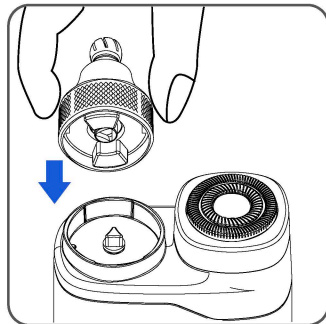

3. Turn on the shaver, gently move the nose hair trimmer inside the nostril.

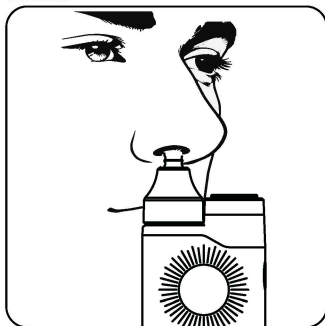

4. When finished, replace the shaver head and store the nose hair trimmer.

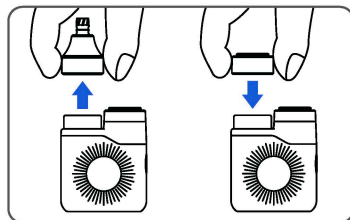


CHARGING INSTRUCTIONS


1. When the white indicator light on the shaver's side flashes, the battery is low and needs charging.




2. Connect a power adapter to the USB charging cable.

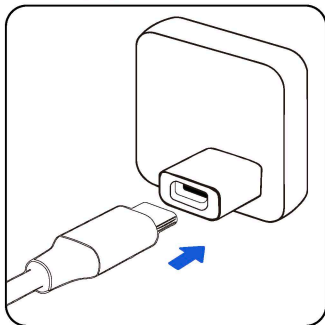


3. Insert the Type-C connector into the shaver.

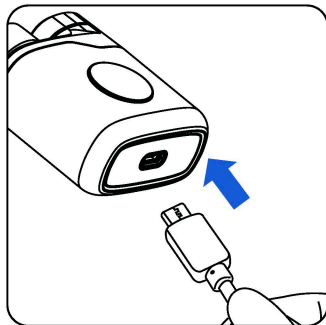

4. When connected, the red indicator light will be on.

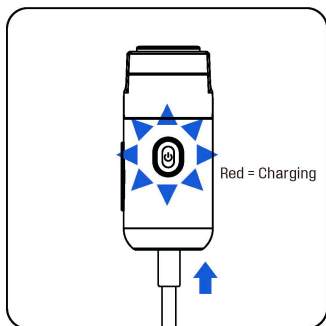

5. When fully charged, the white indicator light will turn on. Unplug the charging cable.


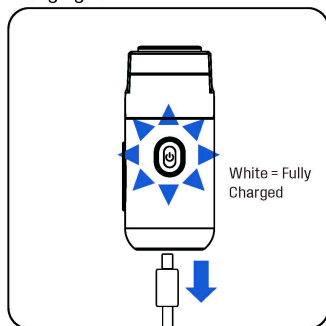


6. After charging, remove the cable and store it properly.



***Do not immerse while charging.**

CARE & MAINTENANCE

1. Before cleaning, confirm the shaver is disconnected from the charging cable and switched off.
 2. Regularly clean the shaver to ensure optimal performance. It is recommended to clean once a week.
 3. This product can be cleaned under running water or with the cleaning brush.
- Water Cleaning: The head is magnetically attached. Hold the head and lift upward to remove it.

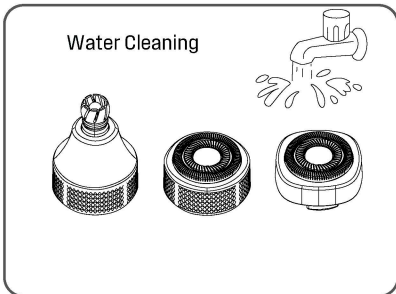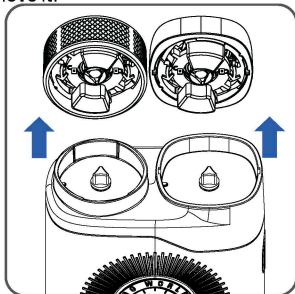


Rinse the shaver head and storage compartment directly under the faucet.

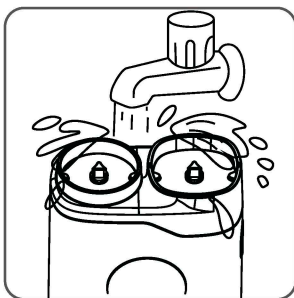
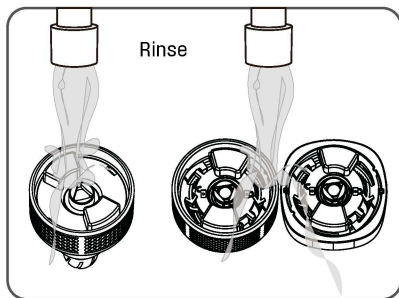


After rinsing, shake off excess water. Place the head and body separately in a shaded, ventilated area to air dry.



Brush Cleaning: Remove the head and clean the storage compartment with the cleaning brush.

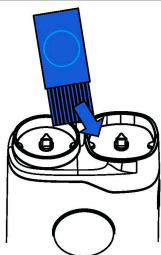



Rotate to unlock, then lift up.

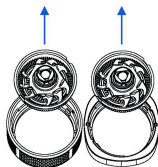

Clean each part separately and thoroughly.

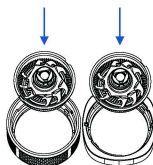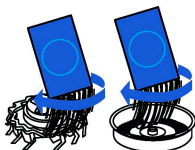

Press and rotate the head to secure (installation complete).

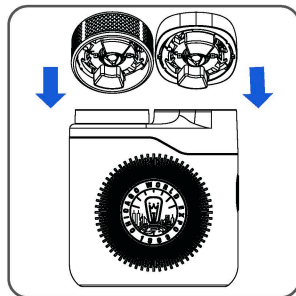

After cleaning, reinstall the head.

* Turn on the shaver to check for normal operation. The shaver should operate without abnormal noise and provide a comfortable shave.

TROUBLESHOOTING



WARNING





Before any repair, disconnect power completely.
Only qualified technicians should repair the device.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Won't turn on	1. Battery is empty 2. Battery or main board is damaged	1. Connect to power and charge 2. Contact after-sales service
Unusual noise when turned on	1. Head not installed properly 2. Storage compartment not clean	1. Ensure the head is properly installed 2. Clean the storage compartment
Odor from head	1. Shaver foil storage compartment not clean	1. Clean promptly
Cannot charge or short battery life	1. Battery or main board is damaged	1. Contact after-sales service

ENVIRONMENTAL PROTECTION

1. Environmental protection: The built-in rechargeable battery may contain substances that can be harmful to the environment. Dispose of batteries safely. Before discarding the appliance, remove the battery and take it to an authorized recycling center.

2. Battery removal: Disconnect power and run the shaver until the battery is fully depleted. Remove the head, pry up the inner tab in the storage compartment, then unscrew all screws on the shaver. Open the housing and remove the battery.

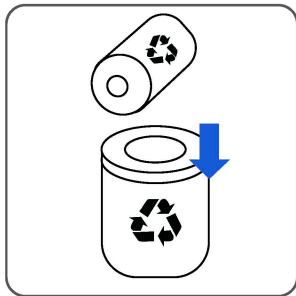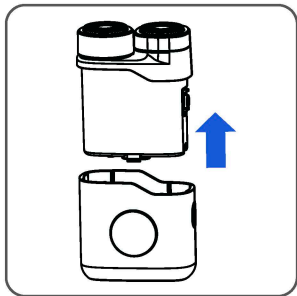

*Do not dispose of in fire.

*Recycle according to local regulations.

CUSTOMER SUPPORT

Return Policy

The return policy applies to Westinghouse Electric Shaver products sold directly by Westinghouse. Purchases made via resellers, please follow the reseller's sales and after-sales policies.

Personal Care Return Policy

- If your product arrives damaged, defective or incomplete, please contact **care@ht.westinghouse.com**
- If damage or defects are found within seven (7) days after delivery, they will be handled under the warranty terms.
- Westinghouse does not accept returns or offer refunds due to buyer's remorse.
- Unopened, resalable Westinghouse products may be returned within thirty (30) days from delivery.
- Warranty does not cover man-made damages.
- Return shipping cost is borne by the consumer.

Warranty

- One-year Warranty (Full Replacement within One Year)

CONTACT US: care@ht.westinghouse.com

TOLL-FREE: 1-800-619-8007



 and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation. Used under license by Westinghouse Health Technology (Ningbo) Co., Ltd. All Rights Reserved.

CONTACT US: care@ht.westinghouse.com
TOLL-FREE: 1-800-619-8007