



ABKO

SV01

Silicone
Facial
Cleansing
Brush

abkoglobal.com

Product Introduction

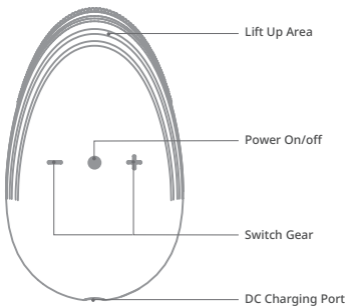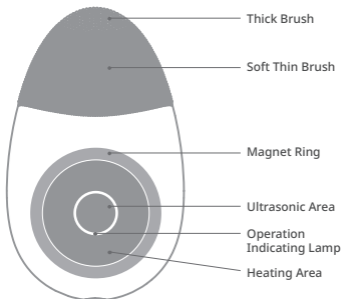

Specification

Model	SV01
Rated	DC 3.7 V, 2.5 W
Voltage	DC 5 V, 0.5 A
Battery	DC 3.7 V, 500 mAh, Lithium ion
Ultrasonic Frequency	About 2.6 MHz – 3.4 MHz
Heating Temperature	About 42 – 55 °C
Charging Time	About 2.5 hours
Working Time	9 hours for Vibration cleansing mode 30 mins for ultrasonic mode
Vibration Speed	1 - 8 stages
Product Size	110.9 x 67.1 x 31.5 mm
Weight	125 g
Waterproof Level	IPX7
Noise	< 65 dB
Main Material	Silicone, PC, ABS, SUS304

Produced by Zhuhai Ciran Technology Co.,Ltd | Made in China
Manufacturer / Source of income ABKO

Content

Divice, Introduction Manual, USB Cable

Light State

- Low battery : Red light flashes
(Power off after flashing for three times)
- Charging : The red light is on
- Fully charged : Blue light is on

How to use

Start at the lowest level and gradually step up when the skin becomes familiar with the product.

Remove Makeup

01. Remove the magnetic suction ring.
02. Put a remove makeup cotton on the makeup remover area.
03. Use a magnetic ring to clamp the makeup cotton.
04. Long press and hold the power mode button to turn on the machine. Sonic vibration assists the makeup removal.
05. The gear shift key can be used to adjust the vibration frequency.
06. After the makeup removal is completed, long press the power mode key to shut down.

Cleansing

01. Use a proper amount of facial cleanser to put it in the area of the brush and wet the face with water.
02. Long press and hold the power mode button to start the system. Sonic vibration assists deep cleaning.
03. The gear shift key can be used to adjust the vibration frequency.
04. After the cleansing, long press the power mode key to shut down.

Shaping and Lifting

01. Long press the power mode button to start, sonic wave assisting in lifting and massage.
02. The gear shift key can be used to adjust the vibration frequency.
03. Shape and lift the area to fit the skin upwards.
04. After the plastic lifting is completed, press and hold the power mode button to shut down.

Thermal Ultrasonic Import

01. Spread the essence evenly on the face, press and hold the power mode button to switch on, press the power mode button shortly to switch to the Thermal Ultrasonic Import mode.
02. Use thermal ultrasonic to import the essence, acoustic vibration assist flapping import the essence.

Cleansing and Maintenance

In the case that the machine is not used for a long time, the main engine should be cleaned and wiped dry, and stored in a dry place.

Precautions

01. Prohibit it from being soaked for a long time.
02. Do not touch corrosive liquids.
03. Please ensure that the charging port is dry when charging.
04. Do not disassemble or beat.

Common problems

01. The machine does not respond after pressing the power mode button:

Check if the battery is insufficient, retry after charging;
If it still does not work, contact customer service and send the machine to the designated point for repairing.

02. It cannot be charged :

Check whether the connection of the charging cable is connected;

If it still does not work, contact customer service and send the machine to the designated point for repairing.

03. No heating or no ultrasonic :

Please contact the customer service and send the device to the designated place to repair.

04. Aging of the silica gel brush surface of beauty skin instrument :

Stop using it immediately; silicone is durable but will age under certain conditions.

WARRANTY

All warranty service is provided by our factory service center, or an authorized customer care technician. If you have any inquiry, please visit our website or email us. Please check below information. To schedule your service, please have your serial number and your model number available for service.

- **Website** : <https://abkoglobal.com/contact-us/>
- **E-mail** : cs_support@abko.co.kr

For the period of	ABKO will replace
1 year from the date of the original purchase (+ 6 months for motors)	ABKO will replace free of charge the part that proves defective in material and manufacturing workmanship, under normal installation, use and service.

What ABKO will not cover

- Failure of the product if it is abused, misused, modified, or used for other than the intended purpose or used commercially.
- Damage to the product caused by accident, fire, floods, any natural disasters or acts of God.
- Damage to finish, such as surface rust, tarnish, or small blemishes not reported within 48 hours of delivery.
- Incidental or consequential damage caused by improper use or not following manual.
- Damage caused after delivery.
- Product not accessible to provide required service.
- Service to repair or replace lights bulbs, except for LED lamp.

※ This limited warranty is extended to the original purchaser and any succeeding owner for products purchased for home use in the world.

If the product is located in an area where service by a ABKO is not available, you may be responsible for a trip charge or you may be required to bring the product to an authorized ABKO service location for service.

Some regions/countries do not allow the exclusion or limitation of incidental or consequential damages. This limited warranty gives you specific legal rights, and you may also have other rights which vary from country to country. To know what your legal rights are, consult your local/region or country consumer affairs office or your Attorney General.

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedy is product repair as provided in this Limited Warranty. Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

Head Office

M Signature 7th floor, 20, Magokjungang 1-ro, Gangseo-gu, Seoul, Republic of Korea
(TEL : +82-2-749-1311)

China Branch

Rm202, Mei Dong Electronics Building, Tie Shan He Street, San Dong Road,
Hua Shan Town, Hua Du District, Guang Zhou, China (TEL : +86-20-36969919)