



User Guide

SUMMARY

This guide provides technical specifications and information about monitor features, setting up the monitor, and using the monitor.

Legal information

© Copyright 2026 HP Development Company, L.P.

MacOS is a trademark of Apple Inc., registered in the U.S. and other countries and regions. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. USB Type-C and USB-C are registered trademarks of USB Implementers Forum. VESA, DisplayPort and the DisplayPort logo are trademarks owned by the Video Electronics Standards Association (VESA) in the United States and other countries.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Product notice

This guide describes features that are common to most models. Some features may not be available on your product. To access the latest user guide, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.

First Edition: May 2026

Document Part Number: Q04311-001

Table of contents

1 About this guide	1
2 Getting started	2
Important safety information	2
More HP resources	2
Preparing to call technical support	3
Getting to know your monitor	3
Features	3
Front components	5
Rear components	5
Locating the serial number and product number	7
Setting up the monitor	7
Attaching the monitor stand (flat screen monitor)	8
Mounting the monitor head	9
Removing the monitor stand	9
Attaching the monitor head to a mounting device	10
Connecting the cables	12
Adjusting the monitor	16
Installing a security cable	19
Turning on the monitor	19
HP watermark and image retention policy	20
Using the USB Type-C mode	21
3 Using the monitor	22
Downloading HP Display Center	22
Downloading software and utilities	22
The Information (INF) file	23
The Image Color Matching (ICM) file	23
Using the OSD menu	23
Using the Joypad buttons	24
Reassigning the OSD menu options	24
Display mode status	25
Changing the power mode setting	25
Using auto-sleep mode	25
DisplayPort multistreaming	26
Updating monitor firmware	27
Changing the refresh rate	27
4 Support and troubleshooting	29

Using the self-test function.....	29
Internal test pattern generator.....	30
Solving common issues.....	31
Button lockouts.....	32
5 Maintaining the monitor	33
Maintenance guidelines.....	33
Cleaning the monitor	33
Shipping the monitor.....	34
Appendix A Technical specifications	35
68.6 cm (27 in) model specifications (FHD).....	35
Preset display resolutions.....	36
68.6 cm (27 in) model (FHD)	36
High-definition video formats.....	36
Energy saver feature.....	37
Appendix B Accessibility.....	38
HP and accessibility.....	38
Finding the technology tools you need.....	38
The HP commitment.....	38
International Association of Accessibility Professionals (IAAP).....	39
Finding the best assistive technology.....	39
Assessing your needs.....	39
Accessibility for HP products.....	39
Monitor accessibility features (select products/regions only).....	40
Built-in accessibility features	40
What is Accessibility Mode?	40
How do you turn Accessibility Mode on or off?.....	40
Standards and legislation.....	41
Standards.....	41
Mandate 376 - EN 301 549.....	41
Web Content Accessibility Guidelines (WCAG).....	42
Legislation and regulations	42
Useful accessibility resources and links.....	42
Organizations.....	42
Educational institutions	43
Other disability resources.....	43
HP links.....	43
Contacting support	43
Index	45

1 About this guide

This guide provides technical specifications and information about monitor features, setting up the monitor, and using the software. Depending on the model, your monitor may not have all the features included in this guide.

-
-  **WARNING!** Indicates a hazardous situation that, if not avoided, **could** result in serious injury or death.
 -  **CAUTION:** Indicates a hazardous situation that, if not avoided, **could** result in minor or moderate injury.
 -  **IMPORTANT:** Indicates information considered important but not hazard-related (for example, messages related to property damage). Warns the user that failure to follow a procedure exactly as described could result in loss of data or in damage to hardware or software. Also contains essential information to explain a concept or to complete a task.
 -  **NOTE:** Contains additional information to emphasize or supplement important points of the main text.
 -  **TIP:** Provides helpful hints for completing a task.
-



This product incorporates HDMI® technology.

2 Getting started

Read this chapter to learn about safety information and where to find additional HP resources.

Important safety information

An AC adapter and power cord might be included with the monitor. If you use another cord, use only a power source and connection appropriate for this monitor.

For information about the correct power cord set to use with the monitor, see the *Product Notices* at [HP Regulatory, Safety, Compliance, and Warranty Information](#).

 **WARNING!** To reduce the risk of electric shock or damage to the equipment:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- If the power cord has a three-pin attachment plug, plug the cord into a grounded (earthed) three-pin outlet.
- Disconnect power from the monitor by unplugging the power cord from the AC outlet. When unplugging the power cord from the AC outlet, grasp the cord by the plug.

For your safety, do not place anything on power cords or cables. Take care to route all cords and cables connected to the monitor so that they cannot be stepped on, pulled, grabbed, or tripped over.

 **IMPORTANT:** For the protection of the monitor and the computer, connect all power cords for the computer and its peripheral devices (such as a monitor, printer, scanner) to a surge protection device such as a power strip or uninterruptible power supply (UPS). Not all power strips provide surge protection; the power strip must be specifically labeled as having this capability. Use a power strip whose manufacturer offers a damage replacement policy so that you can replace the equipment if surge protection fails.

Use the appropriate and correctly sized furniture designed to properly support your monitor.

 **WARNING!** Monitors that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, or carts could fall over and cause personal injury.

 **WARNING! Stability hazard:** The device might fall, causing serious personal injury or death. To prevent injury, securely attach the monitor to the floor or wall in accordance with the installation instructions.

 **WARNING!** This equipment is not suitable for use in locations where children are likely to be present.

 **NOTE:** This product is suitable for entertainment purposes. Consider placing the monitor in a controlled luminous environment to avoid interference from surrounding light and bright surfaces that might cause disturbing reflections from the screen.

More HP resources

Use this table to locate resources that provide product details, how-to information, and more.

Table 2-1 Additional information

Resource	Contents
Setup Instructions	Overview of monitor setup and features
HP support	For HP support or to resolve a hardware or software problem, perform one of these tasks: • Go to http://www.hp.com/support, and follow the instructions to find your product. • Select the Search icon in the taskbar, type <code>support</code> in the search box, and then select HP Support Assistant. • Select the question mark icon in the taskbar.



NOTE: Contact customer support to replace the power cord, the AC adapter (select products only), or any other cables that shipped with your monitor.

Preparing to call technical support

Use this information if you have to troubleshoot an issue.

If you cannot solve a problem using [Support and troubleshooting on page 29](#), a call to technical support can provide additional help. Have the following information available when you call:

- Monitor model number
- Monitor serial number
- Purchase date on invoice
- Conditions under which the problem occurred
- Error messages received
- Hardware configuration
- Name and version of the hardware and firmware that you are using

Getting to know your monitor

Your monitor has top-rated features. This section provides details about your components, where they are located, and how they work.

Features

Depending on the model, your monitor might include the following features:

Display features

- 68.6 cm (27 in) diagonal viewable screen area with 1920 × 1080 (FHD) resolution with 120 Hz refresh rate, plus full-screen support for lower resolutions; includes custom scaling for maximum image size while preserving original aspect ratio.
- Liquid crystal display (LCD) with active matrix and in-plane switching (IPS) technology

- 8-bit depth (6 + 2 FRC) (FHD model)
- 100% sRGB display color gamut
- Wide viewing angle to allow viewing from a sitting or standing position, or when moving from side to side
- Antiglare panel with an LED backlight
- Tilt, swivel, and height adjustment capabilities
- Pivot capability to rotate the monitor head from landscape to portrait orientation
- On-screen display (OSD) adjustments in several languages for easy setup and screen optimization
- Energy saver feature to meet requirements for reduced power consumption
- Security cable slot on the rear of the monitor for an optional security cable
- Cable management feature for placement of cables and cords
- Plug and Play capability, if supported by your operating system
- DisplayPort™ multistreaming capability
- Joypad OSD navigation
- Flicker-free technology, which eliminates visible screen flicker and prevents eye strain and fatigue, producing a more comfortable viewing experience
- HP Eye Ease (TÜV Low Blue Light Hardware Solution certified)
- Compatible with HP Display Center and HP Client Management Script Library (CMSL)
- Secure firmware updates with HP Display Center

Connectors

- DisplayPort video input and video output
- High-Definition Multimedia Interface (HDMI) video input
- USB Type-C® Alt DisplayPort 1.4 with 100W PD
- USB hub with one USB Type-C port that connects to the computer (upstream), three USB ports that connect to USB devices (downstream), and one USB Type-C port (downstream)
- RJ-45 (network) jack with IT Manageability (MAPT, PXE Boot, Wake on LAN)

Monitor stand

- Removable stand for flexible monitor head mounting solutions
- 100 mm x 100 mm VESA® mounting capability for attaching the monitor to a wall mount device or swing arm



NOTE: For safety and regulatory information, see the *Product Notices* at [HP Regulatory, Safety, Compliance, and Warranty Information](#). To access the latest user guide, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **Setup & User Guides**.

Front components

Use this illustration and table to identify the components on the front of the monitor.



Table 2-2 Front components and their descriptions

Component		Description
(1)	Power button	Turns the monitor on or off. NOTE: When applicable HP products are connected to the USB Type-C port, pressing the power button on the display turns on/off your notebook, or puts it to sleep, based on your power setting.
(2)	Power LED	Indicates that the monitor is powered on.

Rear components

Use this illustration and table to identify the components on the rear of the monitor.



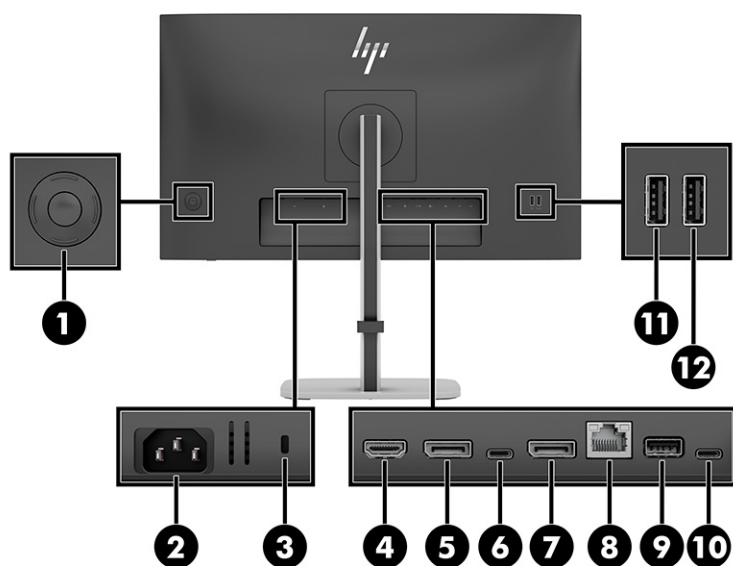


Table 2-3 Rear components and their descriptions


Component		Description
(1)	Joypad	Press to open the OSD settings.
(2)	Power connector	Connects a power cord.
(3)	Security cable slot	Connects an optional security cable.
(4)	HDMI port	Connects the HDMI cable to a source device, such as a computer.
(5)	DisplayPort	Connects a DisplayPort cable to a source device, such as a computer.
(6)	USB Type-C port (upstream)	Connects a USB Type-C cable to a source device, such as a computer. This USB Type-C port can function as a DisplayPort audio/video input or as a USB Type-C 3.2 Gen 1 connection. The USB Type-C port offers a faster transfer rate, and the alternate mode with DP1.4 supports the maximum resolution of 1920 × 1080 @120 Hz. It can also be used to deliver up to 100 W of power to a device. Power delivery outputs are 20 V/5 A, 15 V/5 A, 12 V/5 A, 9 V/3 A, and 5 V/3 A to achieve a 100 W PD output. The USB Type-C port should only be connected to specific equipment that is equipped by the manufacturer with a fire enclosure and compliant with IEC 62368-1 or IEC 60950-1. For specific equipment, go to http://www.hp.com/go/hppc-60950-62368.
(7)	DisplayPort OUT connector	Connects the monitor to another monitor for multistreaming.
(8)	RJ-45 (network) jack	Network (RJ-45) data rate via USB Type-C max speed is 1000 Mbps - Green (left): The network is connected. - Amber (right): Activity is occurring on the network. NOTE: Supports Out-of-Band Wake on Lan (WOL), Out-of-Band Mac Address Passthrough (MAPT), and PXE boot (HP models only). The functionality may vary with PC settings. NOTE: This network port is fully energy efficient according to IEEE standards (IEEE 802.3az-2010), as long as all connected devices support this feature.
(9)	USB port	Connects a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive.

Table 2-3 Rear components and their descriptions (continued)

	Component	Description
(10)	USB Type-C port (downstream)	Connects a USB Type-C cable to a peripheral USB device and provides data transfer, even when the monitor is in sleep mode or DC off with OSD performance mode on. This port charges most devices (up to 15 W), such as a smartphone or a tablet. NOTE: Cables or adapters may be required (purchased separately).
(11)	USB port	Connects a USB cable to a peripheral device, such as a keyboard, mouse, or USB hard drive, and charges peripheral devices.
(12)	USB port with battery fast-charging 1.2	USB port: Connects a USB device, provides data transfer, and (for select products) charges small devices (such as a smartphone). USB port with battery fast-charging 1.2 (5 V × 1.5 A = 7.5 W): Connects a USB device, provides high-speed data transfer, and charges small devices (such as a smartphone), even when the monitor is DC off with OSD performance mode on. NOTE: Use a standard USB Type-A charging cable or cable adapter when charging a small external device (purchased separately).

Locating the serial number and product number

Depending on the product, the serial number and product model number are located on a label on the rear of the monitor in one of the locations shown below. You might need these numbers when you contact HP for support.

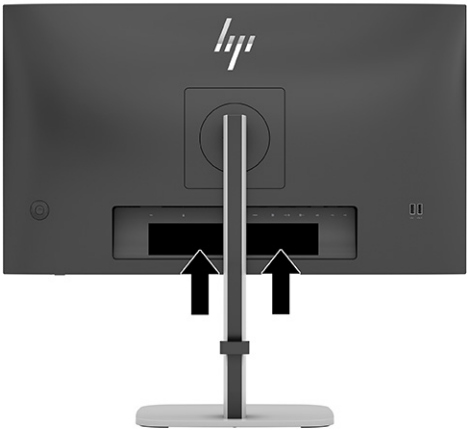

Setting up the monitor

This section describes attaching the monitor stand or wall mount, and the options for connecting your monitor to a PC, notebook, gaming console, or similar device.

⚠ WARNING! To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort*



Guide also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.

 **IMPORTANT:** To prevent damage to the monitor, do not touch the surface of the LCD panel. Pressure on the panel can cause nonuniformity of color or disorientation of the liquid crystals. If this occurs, the screen will not recover to its normal condition.

 **IMPORTANT:** If you remove the monitor from the box, to prevent the screen from getting scratched, defaced, or broken and to prevent damage to the control buttons, position the monitor facedown on a flat surface covered with protective sheet foam or a nonabrasive cloth.

Attaching the monitor stand (flat screen monitor)


Correctly attaching your monitor stand is critical for safe use. This section describes how to safely attach a stand.

 **TIP:** Consider the placement of the monitor, because surrounding light and bright surfaces might cause interfering reflections.

 **NOTE:** The procedures for attaching a monitor stand might be different on other models.

 **NOTE:** Leave the monitor in the box to protect the screen.

1. Open the box so that the monitor head is facedown in the box.
2. Remove the protective covering from the monitor.
3. Position the monitor stand on the mounting plate on the rear of the monitor, and then snap the monitor stand into place.

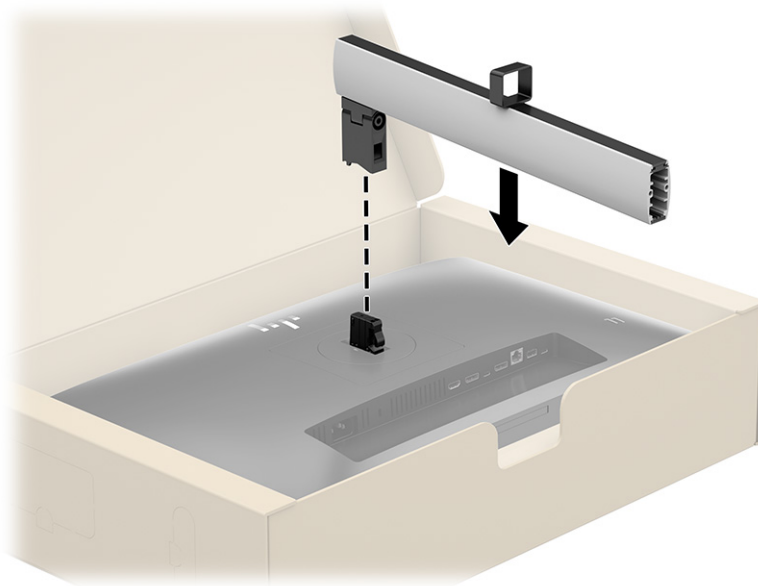

4. Attach the base to the monitor stand (1), and then tighten the screw (2).



Mounting the monitor head

To attach your monitor to a wall using a swing arm or other mounting fixture, follow the steps in this section to safely and securely connect your monitor.

 **IMPORTANT:** This monitor supports the VESA industry-standard 100 mm mounting holes. To attach a third-party mounting solution to the monitor head, use four 4 mm, 0.7 pitch, 10 mm long screws (M4 x 10L). Longer screws might damage the monitor. Be sure that the manufacturer's mounting solution is compliant with the VESA standard and is rated to support the weight of the monitor head. For best performance, use the power and video cables provided with the monitor.

 **NOTE:** Use a UL-listed, CSA-listed, or GS-listed wall-mount bracket when you attach the monitor to a mounting fixture.

Removing the monitor stand


If you decide to use a wall mount instead of the monitor stand that you attached, first remove the stand.

 **IMPORTANT:** Before you disassemble the monitor, be sure that the monitor is turned off and all cables are disconnected.

 **IMPORTANT:** To position and stabilize the monitor, HP recommends that two people perform these procedures.

1. Disconnect and remove all cables from the monitor.
2. Position the monitor facedown on a flat surface covered by a protective sheet made of foam or a clean, dry cloth.
3. Push up the latch or screw near the bottom center of the stand where it attaches to the monitor (1).


4. Remove the stand (2).

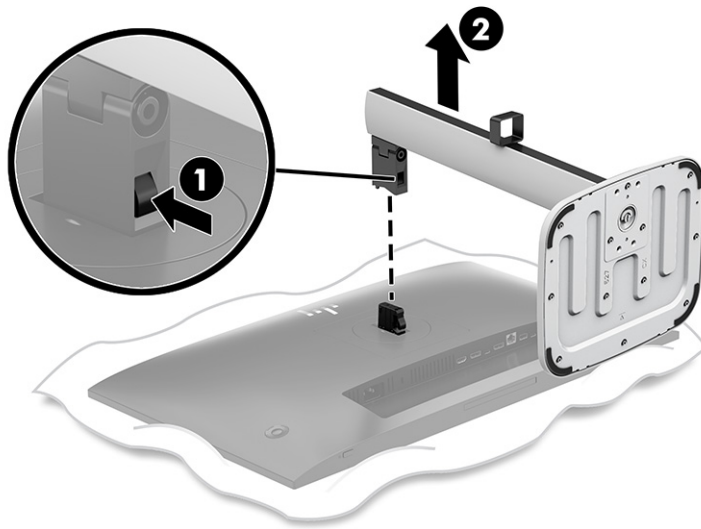


Attaching the monitor head to a mounting device

You might need additional tools such as a screwdriver (purchased separately) when you attach a mounting device. Follow these instructions to avoid damage to your monitor:


1. Remove the monitor stand.
2. Press down on the cover (1), and then gently lift it up (2) to remove the plate surrounding the stand connector.

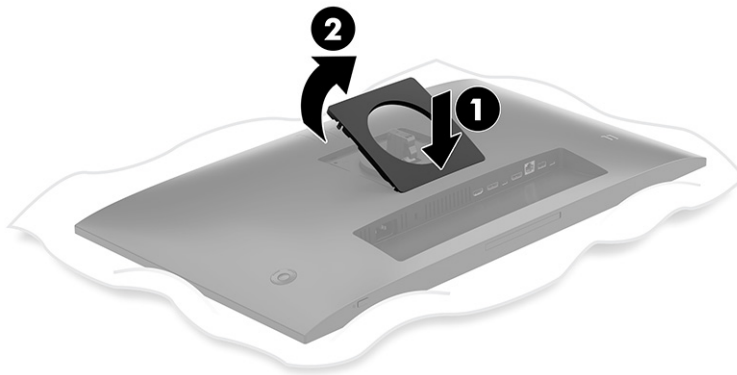

3. Remove the four screws from the VESA holes located on the rear of the monitor head **(1)**, and then remove the monitor stand connector **(2)**.

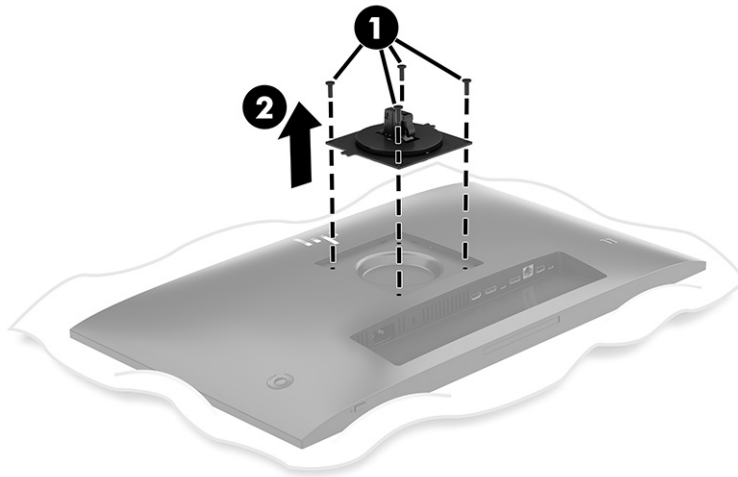


4. To attach the monitor head to a swing arm or other mounting device, insert four mounting screws through the holes on the mounting device into the VESA screw holes on the back of the monitor head.

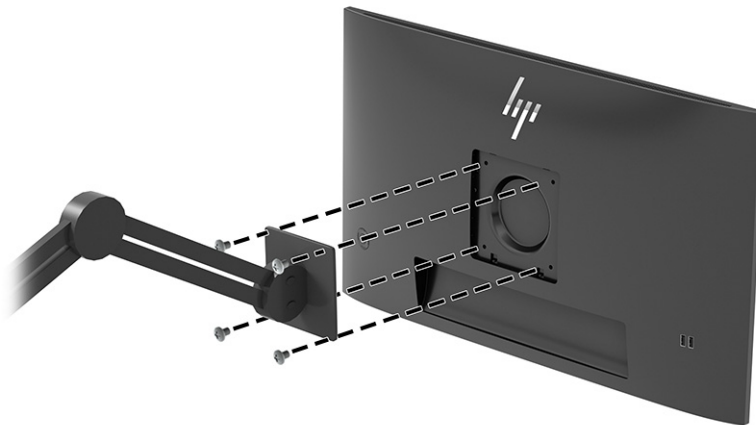

 **IMPORTANT:** If these instructions do not apply to your device, follow the mounting device manufacturer's instructions when mounting the monitor to a wall or swing arm.

 **NOTE:** If you are attaching the monitor to a wall or other flat surface, HP recommends that you purchase a wall mount kit with the dimensions shown here.

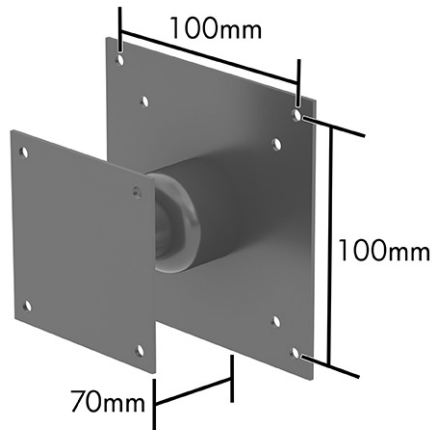

Connecting the cables

In addition to details about how to connect a cable, this section contains information about how your monitor functions when you connect certain cables.

⚠ WARNING! To reduce the risk of electric shock or damage to the equipment:


- Do not disable the power cord grounding plug. The grounding plug is an important safety feature.
- Plug the power cord into a grounded (earthed) AC outlet that is easily accessible at all times.
- Disconnect power from the equipment by unplugging the power cord from the AC outlet.

For your safety, do not place anything on power cords or cables. Arrange them so that no one can accidentally step on or trip over them. Do not pull on a cord or cable. When unplugging the power cord from the AC outlet, grasp the cord by the plug.

📝 NOTE: Depending on the model, the monitor might be capable of supporting USB Type-C, HDMI, or DisplayPort inputs. The video mode is determined by the video cable used. The monitor automatically determines which inputs have valid video signals. You can select the inputs through the OSD menu. The monitor ships with select cables. Not all cables shown in this section are included with the monitor.

1. Place the monitor in a convenient, well-ventilated location near the computer.
2. Connect one end of the power cord to the power connector on the monitor and the other end to a grounded AC outlet.


📝 NOTE: If you are using a second monitor, each monitor must be connected to a power cord and plugged into a grounded AC outlet.

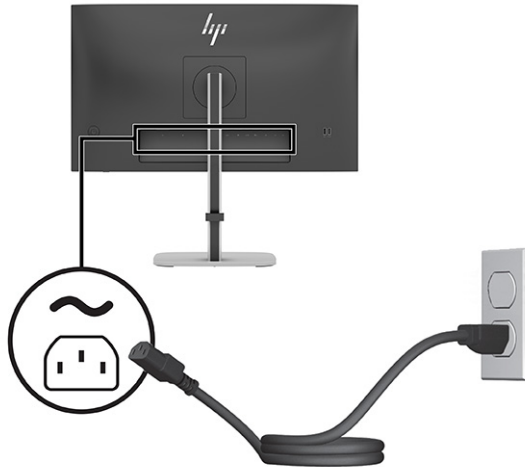

3. Connect a video cable.

 **NOTE:** The monitor automatically determines which inputs have valid video signals. To select any input, open the OSD menu and select **Input**.


- Connect one end of a USB Type-C cable to the USB Type-C upstream port on the rear of the monitor and the other end to the USB Type-C port on the source device. Use only the approved HP USB Type-C cable provided with the monitor.

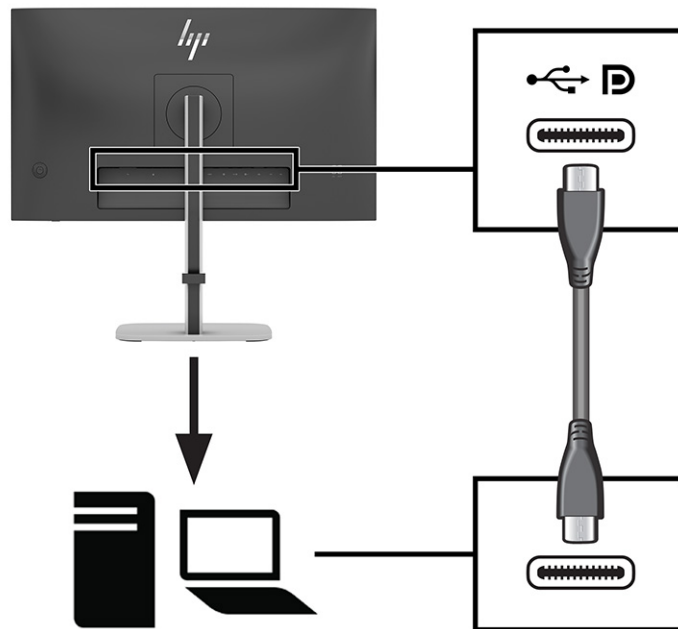


 **NOTE:** The monitor's USB Type-C port provides network, data, video, and power delivery (up to 100 W).

The host device must be able to support DisplayPort alt mode (video, charging, and USB 3.2) over the USB Type-C connector.

- Connect one end of an HDMI cable to the HDMI port on the rear of the monitor and the other end to the HDMI port on the source device.

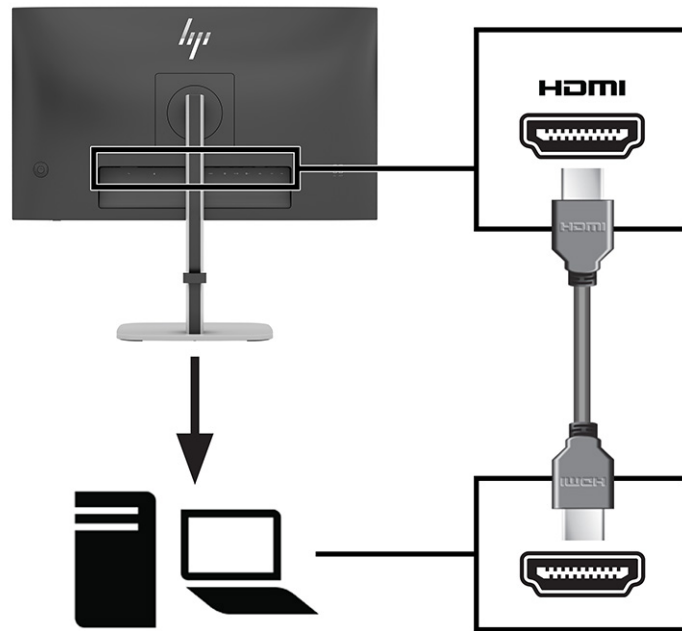


- Connect one end of a DisplayPort cable to the DisplayPort connector on the rear of the monitor and the other end to the DisplayPort connector on the source device.

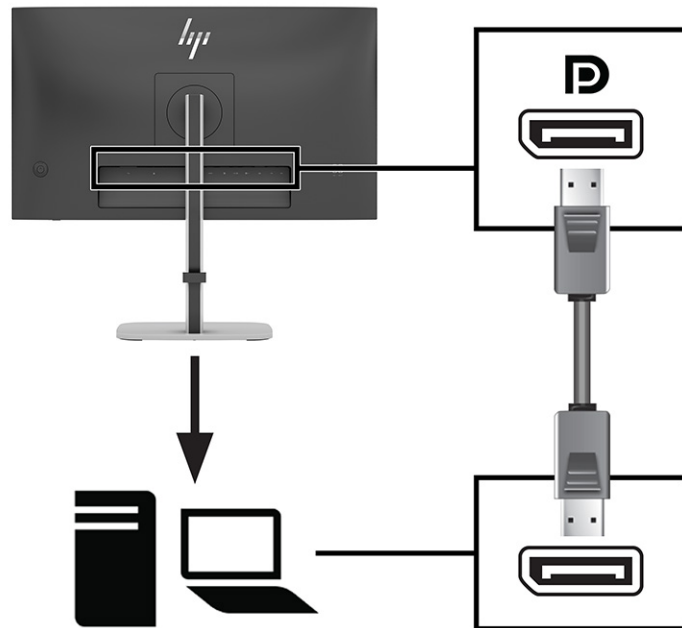


 **NOTE:** Connect the primary monitor to the source device by connecting the USB Type-C to USB Type-C cable between the USB Type-C port on the monitor and the USB Type-C port on the

source device or by connecting a DisplayPort cable between the DisplayPort connector on the monitor and the DisplayPort connector on the source device.


- Add a second monitor by connecting a DisplayPort cable between the DisplayPort OUT port on the primary monitor and the DisplayPort IN port on a secondary monitor (select products only).

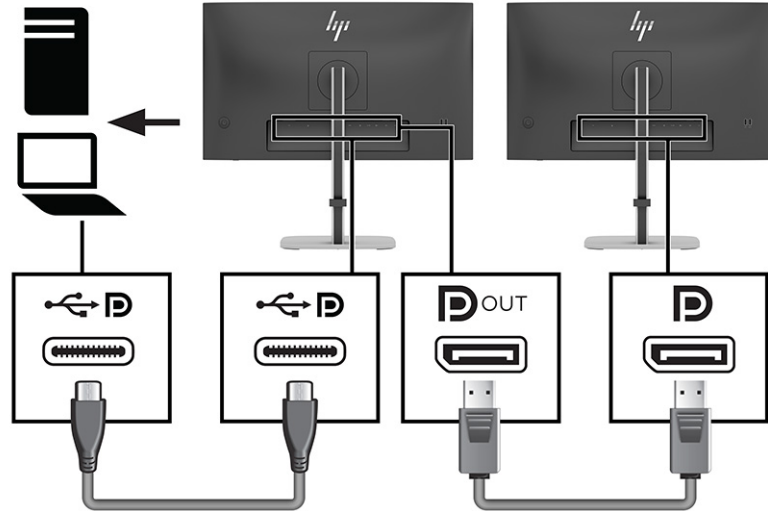

Or

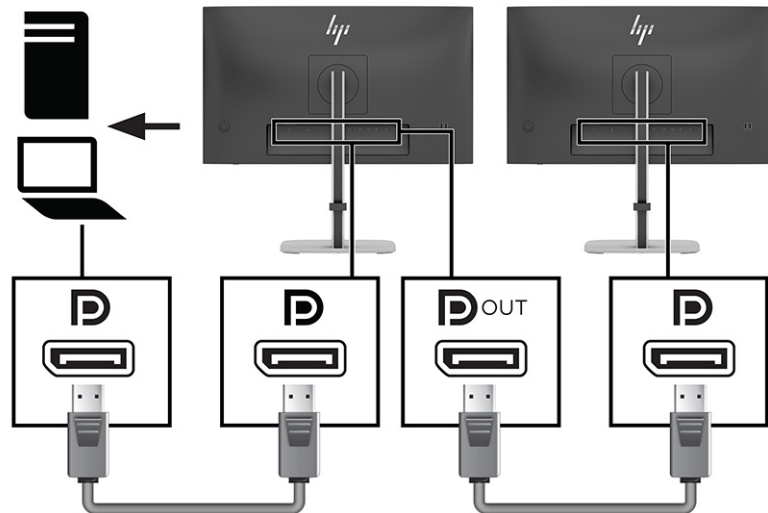

4. Use the USB port or USB Type-C port (downstream) on the rear of the monitor to connect devices such as the ones shown below.

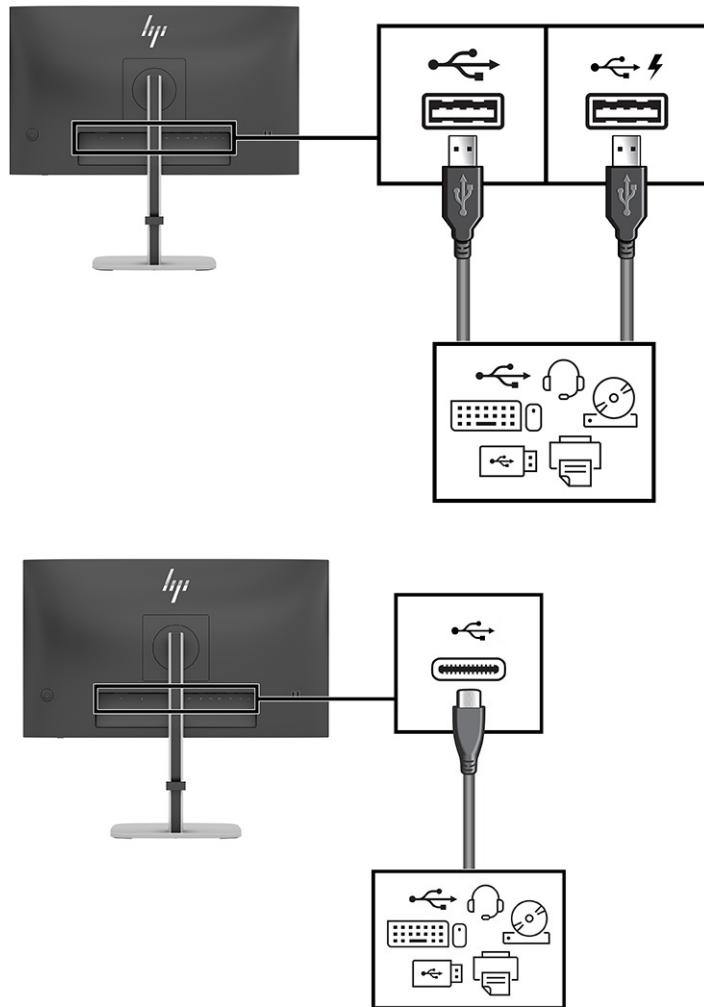


 **NOTE:** To enable the USB ports and USB Type-C port (downstream), connect the USB Type-C cable or the USB Type-C to USB Type-A cable from the source device to the USB Type-C (upstream) port at the rear of the monitor. This connection serves as a USB hub for a mouse, keyboards, phones, external hard drives, and anything else that is connected via a USB port.

Adjusting the monitor


To support an ergonomic work space, your monitor offers the adjustment options outlined in this section.

 **WARNING!** To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is available on the web at <http://www.hp.com/ergo>.


1. Tilt the monitor head forward or backward to set it to a comfortable eye level.

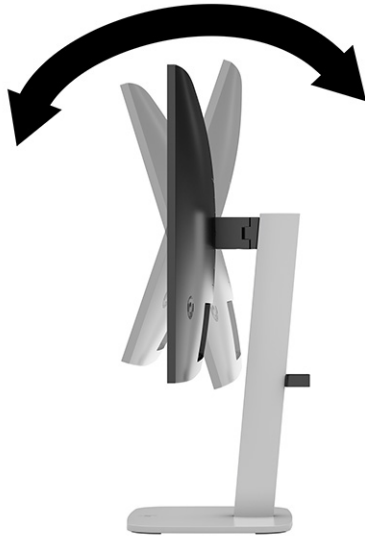

2. Adjust the monitor's height to a comfortable position for your individual workstation. The monitor's top bezel edge should not exceed a height that is parallel to your eye height. A monitor that is positioned low and reclined might be more comfortable for users with corrective lenses. Reposition your monitor as you adjust your working posture throughout the workday.

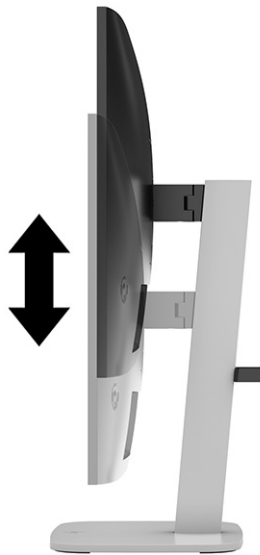

3. Swivel the monitor head to the left or right for the best viewing angle.

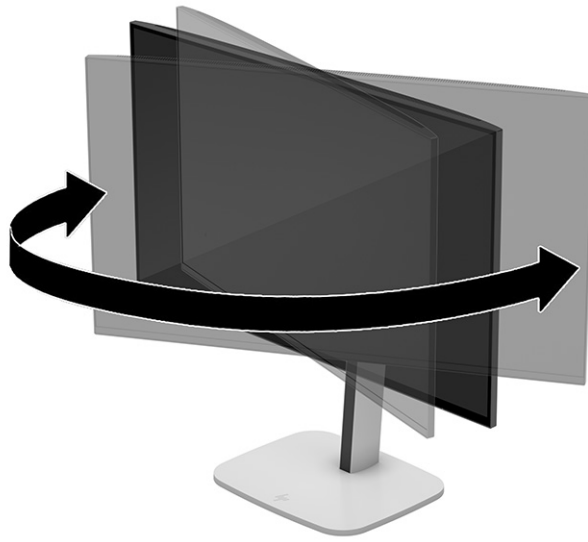


4. You can pivot the monitor head from landscape to portrait orientation viewing to adapt to your application:

CAUTION: HP recommends that you disconnect all cables before pivoting the monitor from landscape to portrait. If you pivot the monitor with the cables connected, you might damage the cables or the connectors.

IMPORTANT: If the monitor is not in full height and full tilt position when pivoting, the bottom-right corner or bottom-left corner of the monitor panel will come in contact with the base and potentially cause damage to the monitor.

If you are adding an optional speaker bar to the monitor, install it after pivoting the monitor. The speaker bar will come in contact with the base when the monitor pivots and potentially cause damage to the monitor or speaker bar.


- Adjust the monitor to full height position and tilt the monitor back to full tilt position **(1)**.
- Pivot the monitor clockwise or counterclockwise 90° from landscape to portrait orientation **(2)**.

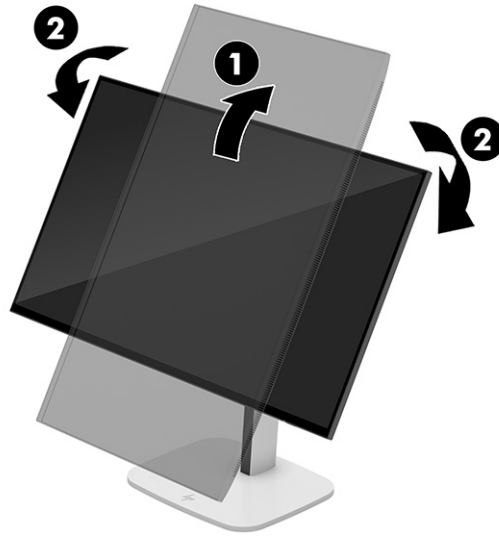

 **NOTE:** Use the operating system's display settings to rotate the image on the screen from landscape to portrait. To rotate the OSD from landscape to portrait, open the OSD menu and select **Image Adjustment**, select **On-Screen Menu Rotation**, and then select **Portrait**.

Installing a security cable

As a security measure, you can secure the monitor to a fixed object with an optional security cable available from HP. Use the key that came with the optional security cable to attach and remove the lock.

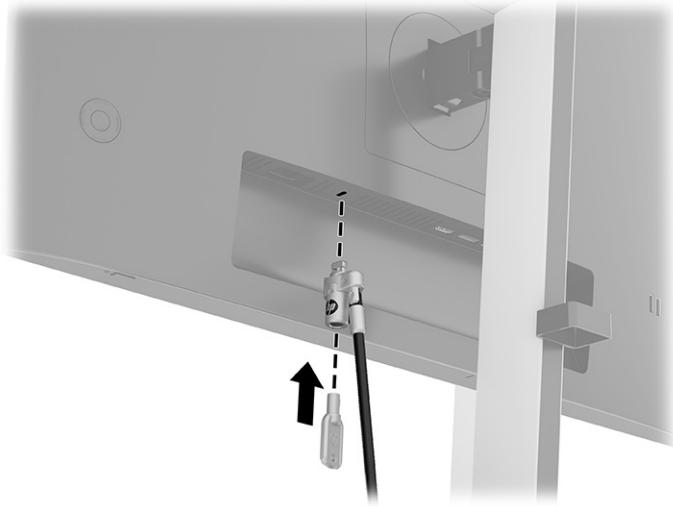


Turning on the monitor

This section provides important information about preventing damage to your monitor, startup indicators, and troubleshooting information.

 **IMPORTANT:** Burn-in image damage might occur on monitors that display the same static image on the screen for 12 or more hours. To avoid burn-in image damage, you should always activate a screen saver application or turn off the monitor when it will not be in use for a prolonged period of time. Image

retention is a condition that might occur on all LCD screens. Burn-in damage on the monitor is not covered under the HP warranty.

Press the power button on the monitor to turn it on.

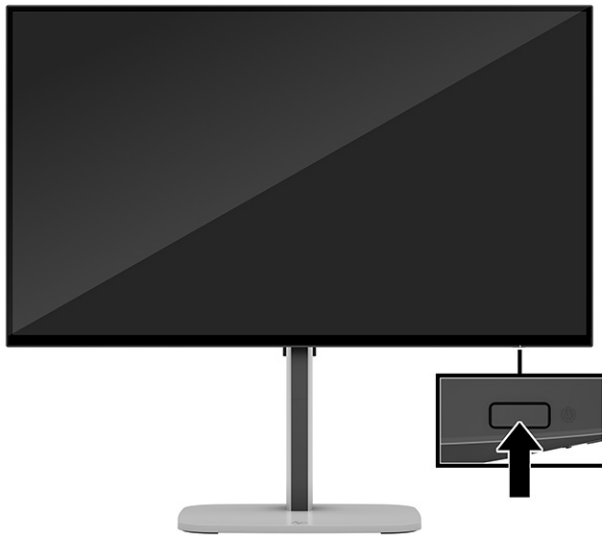

NOTE: If pressing the power button has no effect, the Power Button Lockout feature might be enabled. To disable this feature, press and hold the monitor power button for 10 seconds.

When you first turn on your monitor, a monitor status message is displayed for 5 seconds. The message shows which input is the current active signal, the status of the auto-switch source setting (On or Off; default setting is On), the current preset display resolution, and the recommended preset display resolution.

Another message then appears to ask if you want to keep the monitor in power-saving mode or switch to performance mode. You can choose which setting you prefer.

The monitor automatically scans the signal inputs for an active input and uses that input for the display.

HP watermark and image retention policy

Some monitors are designed with In-Plane Switching (IPS) display technology, which provides ultrawide viewing angles and advanced image quality. Though suitable for many applications, this panel technology is not suitable for static, stationary, or fixed images for long periods of time, unless you use screen savers.

Applications with static images can include camera surveillance, video games, marketing logos, and templates. Static images can cause image retention damage that could look like stains or watermarks on the monitor's screen.

Image retention damage on monitors that are in use 24 hours per day is not covered under the HP warranty. To avoid image retention damage, always turn off the monitor when it is not in use, or use the power management setting, if supported on your computer, to turn off the monitor when the computer is idle.

Using the USB Type-C mode

When a USB Type-C cable is connected to the computer and alt mode is detected, the monitor switches to the USB Type-C mode and the following features are activated.

- **PXE boot:** Preboot execution environment (PXE) boot enables you to load an operating system over a network connection.
- **MAC Address Passthrough:** Your computer might support MAC Address Passthrough from the on, off, sleep, or hibernation states, or only when the computer is on or in the sleep state.

The MAC Address Passthrough is supported for UEFI PXE boot.

- **Wake on LAN (WOL):** Your computer might support WOL from the off, sleep, or hibernation states, or only when the computer is on or in the sleep state.

WLAN-LAN switching is supported only on select computers running the Windows® 11 or Windows 10 operating systems.

- **Single Power On mode:** You can turn on or turn off the computer and put the computer in sleep mode by pressing the monitor power button one time.
- **Single Power Off mode:** You can put the computer into sleep mode or shutdown mode by pressing the monitor power button twice. The function of the monitor power button is controlled by the computer power setting. If you want to turn off the monitor and do not have the monitor power setting synchronized with the computer, press the monitor's power button one time.

3 Using the monitor

This chapter describes how to use your monitor and its features, including software and utilities, the OSD menu, the function buttons, and power modes.

Downloading HP Display Center

You can download and install the HP Display Center software from the Microsoft store or from HP Customer Support.

You can use HP Display Center (HPDC) to adjust your HP monitor to suit your preferences and update firmware for the monitor. You can also customize the viewing features, the video input source, and the power setting. You can also use HP Display Center to leverage custom settings from one monitor to another identical monitor.



NOTE: HP Display Center is available only for PCs. It is not supported on mobile devices.

Download HP Display Center from Microsoft store:

1. Select the Microsoft Store app on your desktop or type `Microsoft Store` in the taskbar search box.
2. Type `HP Display Center` in the **Microsoft Store** search box.
3. Follow the on-screen instructions.

Download HP Display Center for macOS®:

1. Go to [HP Customer Support](https://www.hp.com/support) and search for the monitor.
2. Select **Software and Drivers**.
3. Select **Choose a different OS**, and then select **macOS + version**.
4. Select **Software Solutions**, and then select **Download**.

The tool downloads to the selected location.

Downloading software and utilities

You can download and install these files from HP Support.

- INF (Information) file
- ICM (Image Color Matching file <model name>.icm)

To download the files:

1. Go to <http://www.hp.com/support>.
2. Select **Software and Drivers**.
3. Select your product type.

4. Enter your HP monitor model in the search field and follow the on-screen instructions. The .inf and .icm files are included in the SoftPak.

The Information (INF) file

The INF file defines monitor resources used by Windows® operating systems to ensure monitor compatibility with the computer's graphics adapter.

This monitor is Plug and Play compatible, and the monitor will work correctly without installing the INF file. Monitor Plug and Play compatibility requires that the computer's graphics card is VESA DDC2 compliant and that the monitor connects directly to the graphics card. Plug and Play does not work through separate BNC-type connectors or through distribution buffers or boxes.

The Image Color Matching (ICM) file

The ICM files are data files that are used in conjunction with graphics programs to provide consistent color matching from monitor screen to printer, or from scanner to monitor screen. These files are activated from within graphics programs that support this feature.



NOTE: The ICM color profile is written in accordance with the International Color Consortium (ICC) Profile Format specification.

Using the OSD menu

You can adjust your HP monitor to suit your preferences. Use the OSD menu to customize the viewing features of your monitor.

To access and make adjustments in the OSD, use the Joypad on the monitor's rear panel. See [Rear components on page 5](#).

1. If the monitor is not already on, press the power button to turn on the monitor.
2. Press the center of the Joypad.
3. Press the function buttons up, down, left, or right to navigate menu choices. Press the center of the Joypad to make a selection.

The following table lists possible menu selections in the OSD main menu. It includes descriptions for each setting and its impacts on your monitor's appearance or performance.

Table 3-1 OSD menu options and descriptions for using a button or a controller

Main menu	Description
Brightness +	Adjusts the brightness level of the screen.
Color	Selects and adjusts the screen color.
Image	Adjusts the screen image.
Input	Selects the video input signal (DisplayPort, HDMI, USB-C® video).
Power	Adjusts the power settings.
Menu	Adjusts the OSD menu and function button controls, and selects the language used to display the OSD menu (the factory default is English).
Management	Adjusts the DDC/CI settings, and returns all OSD menu settings to the factory default settings.

Table 3-1 OSD menu options and descriptions for using a button or a controller (continued)

Main menu	Description
Information	Provides information about the monitor such as optimal display mode, power mode, and serial number.
Exit	Exits the OSD menu screen.

Using the Joypad buttons

The Joypad menu options offer useful actions, and you can customize all except one of the options to make them even more useful.

 **NOTE:** The actions of the Joypad menu options vary among monitor models.

For information about changing the function of the Joypad menu options, see [Reassigning the OSD menu options on page 24](#).



Table 3-2 Menu options and functions

Option	Icon	Description
Menu		Opens the OSD main menu, selects a menu item from the OSD, or closes the OSD menu.
Brightness		Adjusts the monitor screen brightness.
Color		Opens the Color menu where you can select a preset view mode.
Information		Provides information about the monitor such as optimal display mode, power mode, and serial number.
Next		Switches the monitor's input source to the next active input.

Reassigning the OSD menu options

Except for the **Menu** option, you can change the action associated with an option from its default action to a menu option you use more frequently.



To reassign the function buttons:

1. Press the **Menu** option to open the OSD menu.
2. Select **Menu**, select **Assign Buttons**, and then select one of the available options for the button that you want to assign.

Display mode status

When you turn on the monitor, the status message shows the display mode. The display mode is also displayed when you change the video input.

Changing the power mode setting

This section describes how to activate performance mode. Certain features on your monitor might require performance mode to be active.

When in sleep mode, to comply with international power standards, the monitor default setting is power saver mode.

If your monitor supports performance mode and you need to keep the USB ports enabled when the monitor is in auto-sleep mode, change the power mode setting from **Power Saver** to **Performance**.



NOTE: If you are connecting a computer that is not battery powered, you must change the power mode setting to performance mode.

To change the power mode setting:

1. Press the **Menu** button to open the OSD menu.
2. Select **Power**, select **Power Mode**, and then select **Performance**.
3. Select **Back** and close the OSD.

Using auto-sleep mode

Your monitor has an energy-saving feature called auto-sleep mode, which is a reduced power state. This section describes how to activate or adjust auto-sleep mode on your monitor.

When auto-sleep mode is enabled, which it is by default, the monitor enters a reduced power state when the computer signals low-power mode, which it does by the absence of either a horizontal or vertical sync signal.

Upon entering this reduced power state (auto-sleep mode), the monitor screen is blanked, the backlight turns off, and the power light turns amber. The monitor draws less than 0.5 W of power when in this reduced power state. The monitor wakes from auto-sleep mode when the computer sends an active signal to the monitor, for example, when you activate the mouse or keyboard.

To disable auto-sleep mode in the OSD:


1. Press the **Menu** button to open the OSD, or press the center of the OSD controller to open the OSD.
2. In the OSD, select **Power**.
3. Select **Auto-Sleep Mode**, and then select **Off**.

DisplayPort multistreaming

Depending on your primary video input source, you can multistream to other DisplayPort monitors connected in a daisy-chain configuration. You can connect to a second monitor in this configuration if the graphics card in your computer supports this configuration.

The number of monitors you can connect through DisplayPort multistreaming depends on a number of factors, including the resolutions and scan rates used for each monitor and the capabilities of your GPU or embedded graphics system. If you have purchased a new graphics card for your computer, check the manual that came with your graphics card for further information about its capabilities.

1. Be sure that your primary video input is one of these inputs:
 - USB Type-C Alt Mode DisplayPort
 - DisplayPort
2. Add a second monitor by connecting a DisplayPort cable between the DisplayPort OUT port on the primary monitor and the DisplayPort IN port on a secondary monitor.

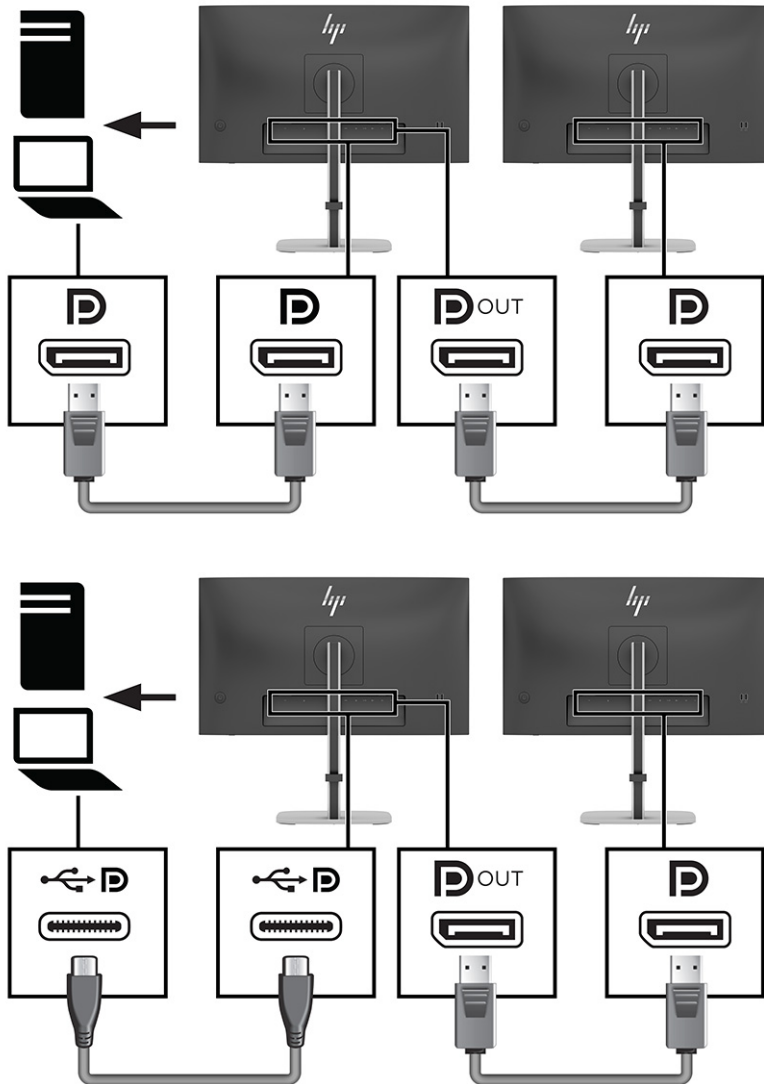

3. Set a connected monitor to display the same image as the primary monitor or a different image.
4. To adjust the multistreaming setting, press the **Menu** button to open the OSD menu. Navigate to the USB Type-C configuration and select **USB-C Video + USB 2.0** or **USB-C Video + USB 3.2**.



NOTE: The daisy-chained monitors must have DisplayPort IN and OUT ports. The last monitor in the chain needs to have only a DisplayPort IN video port.

Updating monitor firmware

You can update monitor firmware from a computer.

Use this procedure to update the monitor from a connected computer:

1. Download HP Firmware Installer from <http://www.hp.com/support>.
2. Open Windows Explorer and navigate to where you saved HP Firmware Installer.
3. Double-click **HPFirmwareInstaller.exe**.
4. Verify that updates are available, and then select which updates to install.



NOTE: You must be connected to the internet for new updates to download to HP Firmware Installer.



NOTE: If the firmware update package includes camera firmware, first complete the monitor update, and then update the camera using the **Update now** option.

5. Select one of the following options.

- **Update now:** Installs the update immediately.



NOTE: You cannot disconnect the monitor from your computer during an update. You might see your monitor flicker and hear some audio clicks. Your internet connection might be intermittent, and your mouse and keyboard could become unresponsive until installation is complete.

- **Update on disconnect:** Installs the update after you disconnect your monitor from the computer.



NOTE: You cannot connect your monitor to the computer during an update.



NOTE: The disconnect state is defined as one of the following:

- The computer is in one of the following states: S3 (standby), S4 (hibernation), or S5 (shutdown).
- Disconnected USB-C cable from the monitor.
- Power turned off to the monitor.

6. Select **Install**.

Changing the refresh rate

This section describes how to change the refresh rate of your monitor based on the type of content you are viewing.

To change the refresh rate:

1. Select **Start**, and then select **Settings**
2. Select **System**, and then select **Display**.
3. Select **Advanced Display**, and then choose the refresh rate that you want.

4 Support and troubleshooting

If your monitor is not working as expected, you might be able to resolve the issue by following the instructions in this section.


Using the self-test function

To help verify the correct operation of this monitor, a series of startup images and messages is displayed. These images and messages function as a self-test. Use the following procedure to start the self-test.

1. Turn off the monitor and disconnect all of the cables except the power cord.
2. Turn on the monitor. An image similar to the one shown here is displayed.



A monitor status message is displayed next.

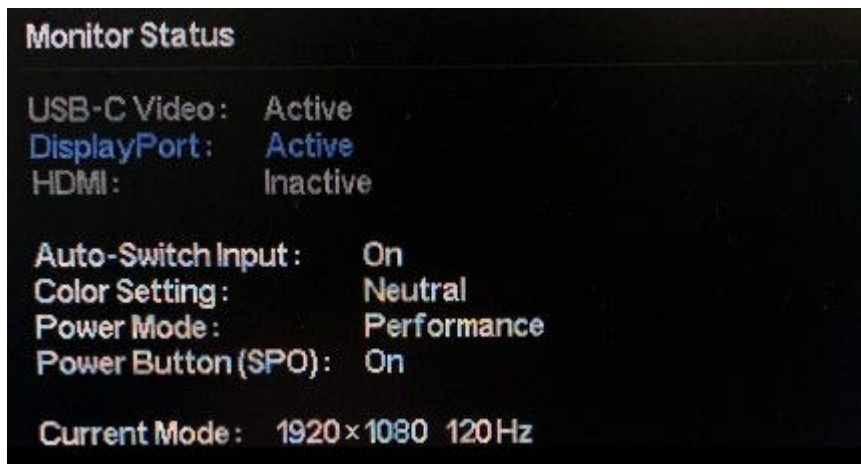

The power-on image and monitor status message indicate that the monitor is working as expected and is looking for a valid video signal.

3. Connect a video source to the monitor and repeat steps 1 and 2. If no external video signal is detected, check the video connection to the host computer.

Internal test pattern generator


This monitor includes a built-in test pattern generator called **Diagnostic Patterns** to help with diagnosing visual anomalies.

To open **Diagnostic Patterns**:

- 1. Turn on the monitor.

 **NOTE:** Video inputs do not need to be connected.

- 2. In the left column, navigate to **Management**.
- 3. In the middle column, navigate to **Diagnostic Patterns**.
- 4. Perform one of these tasks for the options in the right column:
 - Highlight an option to see a preview in the background (behind the OSD menu).
 - Select an option to close the OSD menu and view the test pattern in full screen. Press any of the menu buttons in the column to exit the full screen pattern and return to the OSD menu.
 - To close the **Diagnostic Patterns** menu, select **Back** at the bottom of the right column or select any of the other options in the middle column.
 - To close the OSD menu, select **Exit** at the bottom of the left column.

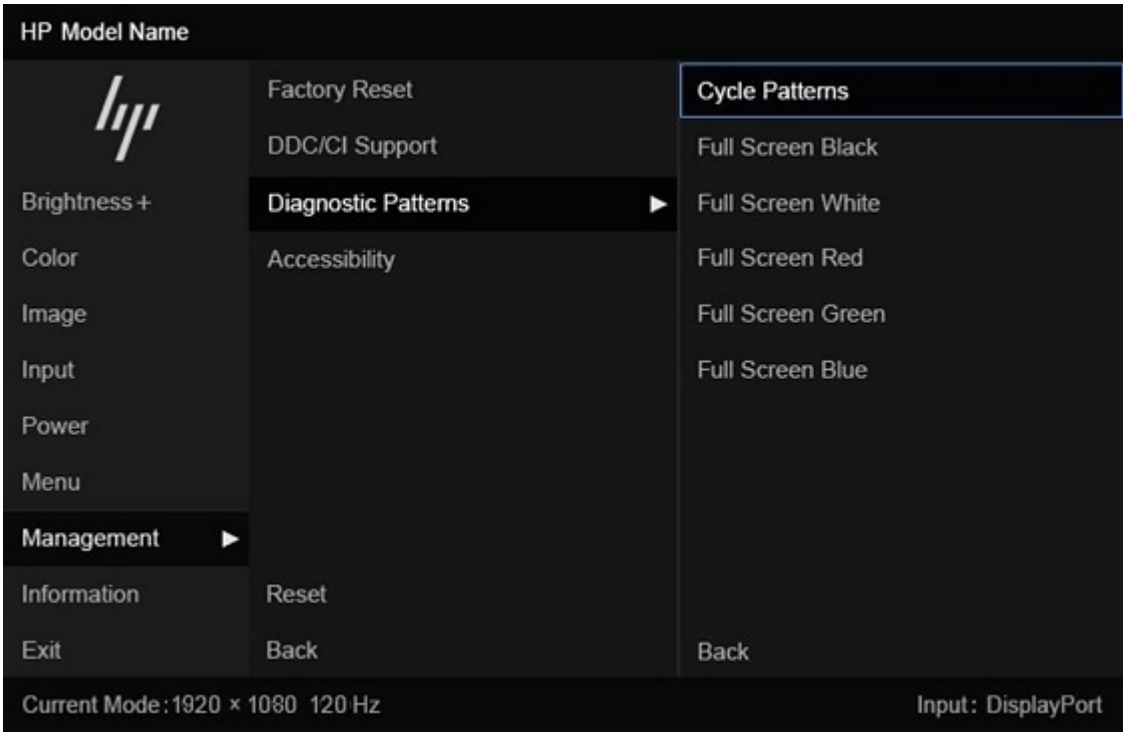

 **NOTE:** You can view the diagnostic patterns with or without an active external video signal.



Solving common issues

The following table lists possible issues, the possible cause of each issue, and the recommended solutions.



NOTE: Always ensure that the BIOS, device firmware, and monitor firmware are updated to the latest version.

Table 4-1 Common issues and solutions

Issues	Possible cause	Solution
Screen is blank or video is blinking.	Power cord is disconnected.	Connect the power cord.
	Monitor is off.	Press the monitor power button. NOTE: If pressing the power button has no effect, press and hold the power button for 10 seconds to disable the Power Button Lockout feature.
	Video cable is improperly connected.	Connect the video cable properly. For more information, see Connecting the cables on page 12 .
	System is in auto-sleep mode.	Press any key on the keyboard or move the mouse to inactivate the screen blanking utility.
	Video card is incompatible.	Perform one of the following actions: • Open the OSD menu and select the Input menu. Set Auto-Switch Input to Off, and then manually select the input. • Replace the video card or connect the video cable to one of the computer's on-board video sources.
Image appears blurred, indistinct, or too dark.	Brightness setting is too low.	Open the OSD menu, and select Brightness to adjust the brightness scale as needed.
"Check Video Cable" is displayed on the screen.	Monitor video cable is disconnected.	Connect the appropriate video signal cable between the computer and monitor. Be sure that the computer power is off while connecting the video cable.
"Input Signal Out of Range" is displayed on screen.	Video resolution rate, refresh rate, or both, are set higher than the monitor supports.	Change the settings to a supported setting. See Preset display resolutions on page 36 .
The monitor does not enter into a low-power sleep state.	The monitor's power saving control is disabled.	Open the OSD menu and select Power , select Auto-Sleep Mode , and then set auto-sleep to On .
"OSD Lockout" is displayed.	The monitor's OSD Lockout function is enabled.	Press and hold the Left button for 10 seconds to disable the OSD Lockout function.
"Power Button Lockout" is displayed.	The monitor's Power Button Lockout feature is enabled.	Press and hold the Power button for 10 seconds to unlock the power button function.
Monitor has trouble waking from sleep mode		DisplayPort inputs: Set the DisplayPort hot-plug detection to Always Active . Power mode monitors: Set the hot-plug detection to Always Active to switch the monitor to Performance mode.
Slow performance from USB		The monitor has a two-lane default for USB-C. On selected products, you can press the Joypad button to open the OSD menu, navigate to the USB Type-C configuration, and then select USB-C Video + USB 3.0 for data transfer prioritization.

Table 4-1 Common issues and solutions (continued)

Issues	Possible cause	Solution
Lower refresh rate or color bits		Select USB-C Video + USB 2.0 for refresh rate/color bits prioritization.
LAN connection drop		Check if the LAN driver version on the host PC is up to date.

Button lockouts

The button lockout function is available only when the monitor is on, an active signal is displayed, and the OSD menu is closed. Holding down the power button or [Left](#) button for 10 seconds disables that button. You can enable the button again by holding it down for 10 seconds.

5 Maintaining the monitor

Properly maintained, your monitor can run for many years. These instructions provide steps you can perform to keep your monitor in the best condition.

Maintenance guidelines

Follow these instructions to enhance the performance and extend the life of the monitor.

- Do not open the monitor cabinet or attempt to service this product yourself. Adjust only those controls that are covered in the operating instructions. If the monitor is not operating properly or has been dropped or damaged, contact an authorized HP dealer, reseller, or service provider.
- Use only a power source and connection appropriate for this monitor, as indicated on the label or back plate of the monitor.
- Be sure that the total ampere rating of the products connected to the outlet does not exceed the current rating of the AC outlet and that the total ampere rating of the products connected to the cord does not exceed the rating of the cord. Look on the power label to determine the ampere rating (AMPS or A) for each device.
- Install the monitor near an outlet that you can easily reach. Disconnect the monitor by grasping the plug firmly and pulling it from the outlet. Never disconnect the monitor by pulling the cord.
- Turn the monitor off when it is not in use, and use a screen saver program. Doing this can substantially increase the life expectancy of the monitor.



NOTE: A burned-in image on the monitor is not covered under the HP warranty.

- Never block the slots or openings of the cabinet or push objects into them. These openings provide ventilation.
- Do not drop the monitor or place it on an unstable surface.
- Do not allow anything to rest on the power cord. Do not walk on the cord.
- Keep the monitor in a well-ventilated area, away from excessive light, heat, or moisture.

Cleaning the monitor

Use these instructions to clean your monitor when necessary.

1. Turn off the monitor and unplug the power cord from the AC outlet.
2. Disconnect any external devices.
3. Dust the monitor by wiping the screen and the cabinet with a soft, clean antistatic cloth.



CAUTION: Never spray cleaner directly onto the screen. It can run behind the bezel and damage the electronics. Water dripping into the ventilation openings or other points of entry can cause

damage to the monitor. Protect your monitor by always consulting your user guide for cleaning procedures, or go to <http://www.hp.com/support> and search for How to Clean Your Computer.

 **IMPORTANT:** Do not use cleaners that contain petroleum-based materials such as benzene, thinner, or any volatile substance to clean the monitor screen or cabinet. These chemicals might damage the monitor.

 **IMPORTANT:** Spray the cleaner onto a cloth and use the damp cloth to gently wipe the screen surface. The cloth should be moist, but not wet. Allow the monitor to air-dry before use.

4. After you remove the dirt and debris, you can also clean the surfaces with a disinfectant. The World Health Organization (WHO) recommends cleaning surfaces, followed by disinfection, as a best practice for preventing the spread of viral respiratory illnesses and harmful bacteria. A disinfectant that is within HP's cleaning guidelines is an alcohol solution consisting of 70% isopropyl alcohol and 30% water. This solution is also known as rubbing alcohol and is sold in most stores.

Shipping the monitor

Keep the original packing box in a storage area. You might need it later if you ship the monitor or move.

A Technical specifications

This section contains technical specifications for the physical aspects of your monitor, such as the weight and viewing dimensions, as well as required environmental operating conditions and power source ranges.

All specifications represent the typical specifications provided by HP component manufacturers; actual performance can vary either higher or lower.



NOTE: For the latest specifications or additional specifications for this product, follow this procedure:

1. Go to the [HP Marketing Document Library](#).
2. Enter the model in the search field and select **Go**.
3. Select the QuickSpecs or Datasheet for the monitor from the list of documents.

68.6 cm (27 in) model specifications (FHD)

This section provides specifications for your monitor.

Table A-1 Technical specifications

Specification	Metric	U.S.
Display, wide-screen	68.60 cm	27.00 in
Type	IPS	
Viewable image size	68.58 cm diagonal	27.00 in diagonal
Maximum weight (unpacked)	7.62 kg	16.80 lb
Dimensions (unpacked with stand)		
Height	54.34 cm	21.39 in
Depth	22.23 cm	8.75 in
Width	61.17 cm	24.08 in
Tilt	-5° to 20°	
Swivel	±45°	
Pivot	±90°	
Environmental requirements temperature		
Operating temperature	5°C to 35°C	41°F to 95°F
Storage temperature	-40°C to 65°C	-40°F to 149°F
Storage humidity	5% to 95% (noncondensing)	
Power source	100 V AC to 240 V AC, 50 Hz to 60 Hz, 2.5 A	
Video input terminal	One HDMI port, one DisplayPort port, and one USB Type-C Alt mode DisplayPort port	

Preset display resolutions

The following display resolutions are the most commonly used modes and are set as factory defaults. The monitor automatically recognizes these preset modes, and they will appear properly sized and centered on the screen.

68.6 cm (27 in) model (FHD)

This section provides preset display modes.

Table A-2 Preset display modes

Preset	Pixel format	Horz freq (kHz)	Horz polarity	Vert freq (Hz)	Vertical polarity	Pixel clk (MHz)	Source
1	640 × 480	31.469	-	59.940	-	25.175	DMT
2	640 × 480	37.500	-	75.000	-	31.500	VESA DMT
3	720 × 400	31.469	-	70.087	+	28.322	VGA (Note-1)
4	800 × 600	37.879	+	60.317	+	40.000	DMT
5	800 × 600	46.875	+	75.000	+	49.500	VESA DMT
6	1024 × 768	48.363	-	60.004	-	65.000	DMT
7	1024 × 768	60.023	+	75.030	+	78.750	VESA DMT
8	1280 × 720	45.000	+	60.000	+	74.250	DMT/CEA
9	1280 × 800	49.702	-	59.810	+	83.500	CVT
10	1280 × 1024	63.981	+	60.020	+	108.000	DMT
11	1280 × 1024	79.976	+	75.030	+	135.000	VESA DMT
12	1440 × 900	55.935	-	59.887	+	106.500	DMT
13	1600 × 900	60.000	+	60.000	+	108.000	DMT
14	1680 × 1050	65.290	-	59.954	+	146.250	CVT 1.76MA
15	1920 × 1080	67.500	+	60.000	+	148.500	CEA-861
16	1920 × 1080	83.894	+	74.970	-	174.500	CVT-RB v1
17	1920 × 1080	113.221	+	99.930	-	235.500	CVT-RB v1
18	1920 × 1080	137.260	+	119.980	-	285.500	CVT-RB v1

High-definition video formats

This section provides high-definition video formats.

Table A-3 High-definition video formats

Preset	Timing name Pixel	Pixel format	Horz freq (kHz)	Vert freq (Hz)
1	480p	720 × 480	31.469	59.94
2	480p	720 × 576	31.250	50.00

Table A-3 High-definition video formats (continued)

Preset	Timing name Pixel	Pixel format	Horz freq (kHz)	Vert freq (Hz)
3	576p	1280 × 720	37.500	50.00
4	720p50	1280 × 720	45.000	60.00
5	720p60	1920 × 1080	56.250	50.00
6	720p100	1920 × 1080	67.500	60.00
7	1080p50	1920 × 1080	56.250	50.00
8	1080p60	1920 × 1080	67.500	60.00
9	1080p100	1920 × 1080	112.500	100.000
10	1080p120	1920 × 1080	135.000	120.000

Energy saver feature

This monitor supports a reduced power state.

The reduced power state is initiated if the monitor detects the absence of either the horizontal sync signal or the vertical sync signal. Upon detecting the absence of these signals, the monitor screen is blank, the backlight is turned off, and the power light turns amber. In the reduced power state, the monitor uses < 0.5 W of power. There is a brief warm-up period before the monitor returns to its normal operating state.

See the computer manual for instructions on setting the energy saver mode (sometimes called “power management feature”).



NOTE: This power saver feature works only when the monitor is connected to a computer that has energy-saver features.

By selecting the settings in the monitor Sleep Timer utility, you can also program the monitor to initiate the reduced power state at a predetermined time. When the monitor Sleep Timer utility initiates the reduced power state, the power light blinks amber.

B Accessibility

HP's goal is to design, produce, and market products, services, and information that everyone everywhere can use, either on a standalone basis or with appropriate third-party assistive technology (AT) devices or applications.

HP and accessibility

Because HP works to weave diversity, inclusion, and work/life into the fabric of the company, it is reflected in everything HP does. HP strives to create an inclusive environment focused on connecting people to the power of technology throughout the world.

Finding the technology tools you need

Technology can unleash your human potential. Assistive technology removes barriers and helps you create independence at home, at work, and in the community. Assistive technology helps increase, maintain, and improve the functional capabilities of electronic and information technology.

For more information, see [Finding the best assistive technology on page 39](#).

The HP commitment

HP is committed to providing products and services that are accessible for people with disabilities. This commitment supports the company's diversity objectives and helps ensure that the benefits of technology are available to all.

The HP accessibility goal is to design, produce, and market products and services that can be effectively used by everyone, including people with disabilities, either on a standalone basis or with appropriate assistive devices.

To achieve that goal, this Accessibility Policy establishes seven key objectives to guide HP actions. All HP managers and employees are expected to support these objectives and their implementation in accordance with their roles and responsibilities:

- Raise the level of awareness of accessibility issues within HP, and provide employees with the training they need to design, produce, market, and deliver accessible products and services.
- Develop accessibility guidelines for products and services, and hold product development groups accountable for implementing these guidelines where competitively, technically, and economically feasible.
- Involve people with disabilities in the development of accessibility guidelines and in the design and testing of products and services.
- Document accessibility features, and make information about HP products and services publicly available in an accessible form.
- Establish relationships with leading assistive technology and solution providers.
- Support internal and external research and development that improves assistive technology relevant to HP products and services.
- Support and contribute to industry standards and guidelines for accessibility.

International Association of Accessibility Professionals (IAAP)

IAAP is a not-for-profit association focused on advancing the accessibility profession through networking, education, and certification. The objective is to help accessibility professionals develop and advance their careers and to better enable organizations to integrate accessibility into their products and infrastructure.

As a founding member, HP joined to participate with other organizations to advance the field of accessibility. This commitment supports HP's accessibility goal of designing, producing, and marketing products and services that people with disabilities can effectively use.

IAAP will make the profession strong by globally connecting individuals, students, and organizations to learn from one another. If you are interested in learning more, go to <http://www.accessibilityassociation.org> to join the online community, sign up for newsletters, and learn about membership options.

Finding the best assistive technology

Everyone, including people with disabilities or age-related limitations, should be able to communicate, express themselves, and connect with the world using technology. HP is committed to increasing accessibility awareness within HP and with our customers and partners.

Whether it's large fonts that are easy on the eyes, voice recognition that lets you give your hands a rest, or any other assistive technology (AT) to help with your specific situation—a variety of assistive technologies make HP products easier to use. How do you choose?

Assessing your needs

Technology can unleash your potential. AT removes barriers and helps you create independence at home, at work, and in the community. AT helps increase, maintain, and improve the functional capabilities of electronic and information technology.

You can choose from many AT products. Your AT assessment should allow you to evaluate several products, answer your questions, and facilitate your selection of the best solution for your situation. You will find that professionals qualified to do AT assessments come from many fields, including those licensed or certified in physical therapy, occupational therapy, speech/language pathology, and other areas of expertise. Others, while not certified or licensed, can also provide evaluation information. You will want to ask about the individual's experience, expertise, and fees to determine if they are appropriate for your needs.

Accessibility for HP products

These links provide information about accessibility features and AT, if applicable and available in your country or region, that are included in various HP products. These resources will help you select the specific assistive technology features and products most appropriate for your situation.

- HP Aging & Accessibility: Go to <http://www.hp.com>, type **Accessibility** in the search box. Select **Office of Aging and Accessibility**.
- HP computers: For Windows products, go to <http://www.hp.com/support>, type **Windows Accessibility Options** in the **Search our knowledge library** search box. Select the appropriate operating system in the results.
- HP Shopping, peripherals for HP products: Go to <http://store.hp.com>, select **Shop**, and then select **Monitors** or **Accessories**.

If you need additional support with the accessibility features on your HP product, see [Contacting support on page 43](#).

Additional links to external partners and suppliers that may provide additional assistance:

- [Microsoft Accessibility information \(Windows and Microsoft Office\)](#)
- [Google Products accessibility information \(Android, Chrome, Google Apps\)](#)

Monitor accessibility features (select products/regions only)

HP monitors enable you to find and configure display settings directly from your monitor, without needing to use an external device such as a computer, using multiple types of accessibility enhancements.

Built-in accessibility features

The following accessibility features are built into the monitor.

- Physical buttons or a joypad that are tactilely discoverable.
- Physical button or joypad labels that are displayed on-screen.
- On-Screen Display (OSD) menu
 - Menu items, text, and elements meet a 4.5:1 (or greater) contrast ratio.
 - Focus indication is provided.

What is Accessibility Mode?

Accessibility Mode enables you to use audio navigation and to enlarge items on the screen.

When you turn on Accessibility Mode, the following adjustments are made:



- Menu timeout setting is set to the maximum duration of 60 seconds (default is 30 seconds).
- Language is set to English, which is the only language currently supported in Accessibility Mode. When Accessibility Mode is turned off, the previous language is used.
- On FHD monitors, the OSD menu is set to a fixed position in the lower-right quadrant of the screen.
- Menu items, text, and other elements meet a 4.5:1 contrast ratio or greater.
- Text is enlarged to a 4.8 mm or larger font size.

How do you turn Accessibility Mode on or off?


Turn Accessibility Mode on or off using either physical monitor controls or an OSD menu.

- On a monitor with a Joypad, press and hold the center of the Joypad for four seconds to turn Accessibility Mode on or off.

When Accessibility Mode is turned on using a physical button, an Accessibility Mode is On message is displayed. When Accessibility Mode is turned off using a physical button, an Accessibility Mode is Off message is displayed.

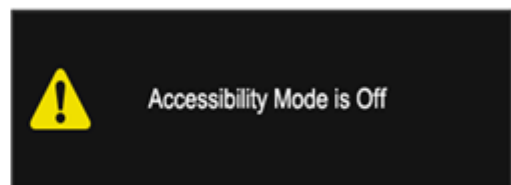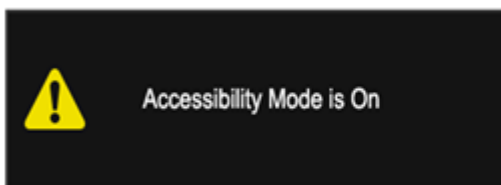

- Using the OSD menu:
 - To turn on Accessibility Mode, set the language to English, and then select **Management > Accessibility > On**.
 - To turn off Accessibility Mode, select **Management > Accessibility > Off**.

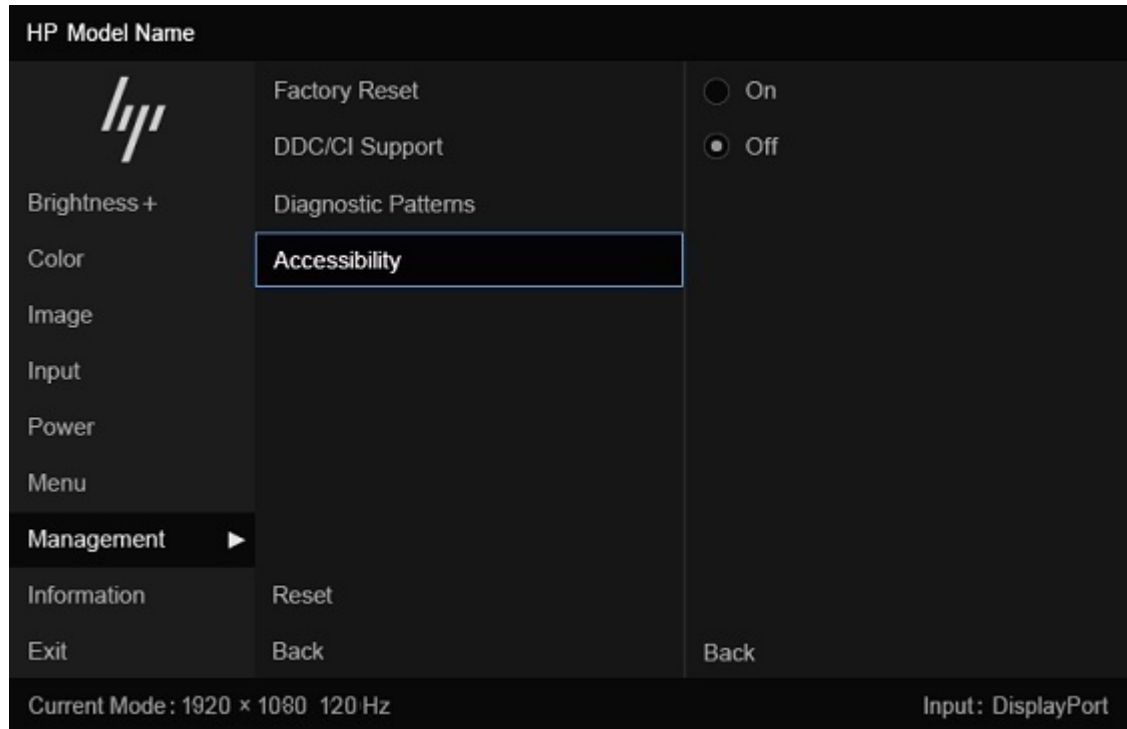

Standards and legislation

Countries worldwide are enacting regulations to improve access to products and services for persons with disabilities. These regulations are historically applicable to telecommunications products and services, PCs and printers with certain communications and video playback features, their associated user documentation, and their customer support.

Standards

The US Access Board created Section 508 of the Federal Acquisition Regulation (FAR) standards to address access to information and communication technology (ICT) for people with physical, sensory, or cognitive disabilities.

The standards contain technical criteria specific to various types of technologies, as well as performance-based requirements which focus on functional capabilities of covered products. Specific criteria cover software applications and operating systems, web-based information and applications, computers, telecommunications products, video and multimedia, and self-contained closed products.

Mandate 376 – EN 301 549

The European Union created the EN 301 549 standard within Mandate 376 as an online toolkit for public procurement of ICT products. The standard specifies the accessibility requirements applicable to ICT products and services, with a description of the test procedures and evaluation methodology for each requirement.

Web Content Accessibility Guidelines (WCAG)

Web Content Accessibility Guidelines (WCAG) from the W3C's Web Accessibility Initiative (WAI) helps web designers and developers create sites that better meet the needs of people with disabilities or age-related limitations.

WCAG advances accessibility across the full range of web content (text, images, audio, and video) and web applications. WCAG can be precisely tested, is easy to understand and use, and allows web developers flexibility for innovation. WCAG 2.0 has also been approved as [ISO/IEC 40500:2012](#).

WCAG specifically addresses barriers to accessing the web experienced by people with visual, auditory, physical, cognitive, and neurological disabilities, and by older web users with accessibility needs. WCAG 2.0 provides characteristics of accessible content:

- **Perceivable** (for instance, by addressing text alternatives for images, captions for audio, adaptability of presentation, and color contrast)
- **Operable** (by addressing keyboard access, color contrast, timing of input, seizure avoidance, and navigability)
- **Understandable** (by addressing readability, predictability, and input assistance)
- **Robust** (for instance, by addressing compatibility with assistive technologies)

Legislation and regulations

Accessibility of IT and information has become an area of increasing legislative importance.

The [HP policy landscape](#) website provides information about key legislation, regulations, and standards in the following locations:

- United States
- Canada
- Europe
- Australia

Useful accessibility resources and links

These organizations, institutions, and resources might be good sources of information about disabilities and age-related limitations.



NOTE: This is not an exhaustive list. These organizations are provided for informational purposes only. HP assumes no responsibility for information or contacts you encounter on the internet. Listing on this page does not imply endorsement by HP.

Organizations

These organizations are a few of the many that provide information about disabilities and age-related limitations.

- American Association of People with Disabilities (AAPD)
- The Association of Assistive Technology Act Programs (ATAP)

- Hearing Loss Association of America (HLAA)
- Information Technology Technical Assistance and Training Center (ITTATC)
- Lighthouse International
- National Association of the Deaf
- National Federation of the Blind
- Rehabilitation Engineering & Assistive Technology Society of North America (RESNA)
- Telecommunications for the Deaf and Hard of Hearing, Inc. (TDI)
- W3C Web Accessibility Initiative (WAI)

Educational institutions

Many educational institutions, including these examples, provide information about disabilities and age-related limitations.

- California State University, Northridge, Center on Disabilities (CSUN)
- University of Wisconsin - Madison, Trace Center
- University of Minnesota computer accommodations program

Other disability resources

Many resources, including these examples, provide information about disabilities and age-related limitations.

- ADA (Americans with Disabilities Act) Technical Assistance Program
- ILO Global Business and Disability network
- EnableMart
- European Disability Forum
- Job Accommodation Network
- Microsoft Enable

HP links

These HP-specific links provide information that relates to disabilities and age-related limitations.

[HP comfort and safety guide](#)

[HP public sector sales](#)

Contacting support

HP offers technical support and assistance with accessibility options for customers with disabilities.



NOTE: Support is in English only.

- Customers who are deaf or hard of hearing who have questions about technical support or accessibility of HP products:
 - Use TRS/VRS/WebCapTel to call (877) 656-7058 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.
- Customers with other disabilities or age-related limitations who have questions about technical support or accessibility of HP products:
 - Call (888) 259-5707 Monday through Friday, 6 a.m. to 9 p.m. Mountain Time.

Index

A

accessibility 38, 39, 42, 43
accessibility needs
 assessment 39
assistive technology (AT)
 finding 39
 purpose 38
AT (assistive technology)
 finding 39
 purpose 38

C

calling technical support 3
components
 front 5
 rear 5
connectors
 DisplayPort 5
 mini DisplayPort 5
 power 5
customer support,
 accessibility 43

D

diagnostics 29
DisplayPort connector 5

F

front components 5

G

getting started 2
getting to know your monitor 3

H

HDMI port 5
HP Assistive Policy 38
HP Customer Support 22
HP Display Center 22
HP resources 2
HP support 2

I

internal diagnostics 30

International Association of
 Accessibility Professionals 39

L

label 7

M

menu button 5

O

OSD button 5

P

ports
 HDMI 5
 USB Type-C 5
power connector 5
product label 7
product number 7

R

rear components 5
resources, accessibility 42

S

safety information 2
Section 508 accessibility
 standards 41
self-test 29
serial number 7
standards and legislation,
 accessibility 41
support 3

T

technical support 3
troubleshooting 29

U

USB Type-C port 5

W

warnings 2