

Coravin Timeless Systems User Guide

Features



Important Safety Guidelines

Caution


Damaged or flawed wine bottles may break when pressurized. The Coravin Wine Bottle Sleeve is provided to reduce the risk of injury from broken glass.

DO NOT USE with sparkling wine or Champagne.

Needle and Needle Clearing Tool are sharp, use caution when handling.

CAUTION: Needles are sharp. Handle with care.

Warning

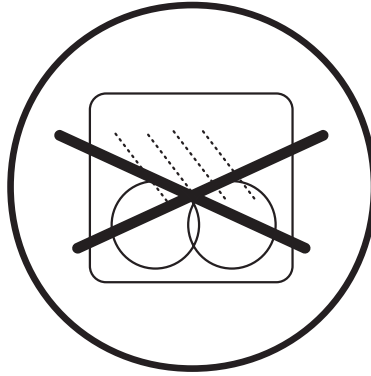

DO NOT USE System for anything other than intended use.

DO NOT submerge System in water or other liquids.

System is not dishwasher safe.

System is not a toy. Keep out of reach of children.

Note

Not intended for use with plastic corks. For screw cap wines, use Coravin Screw Caps.

Wine quality is impacted by many factors. Use Coravin System only as intended and properly clean System after each use. Coravin cannot guarantee the quality of any wine and will not be responsible for damage or loss of any wine unless that damage or loss is found to be caused by a defective Coravin System.

Additional Warnings applying only to Timeless Eleven

DO NOT USE damaged cord or power adapter.

DO NOT expose System to extreme conditions, including rain and excessive heat.

System contains non-replaceable Lithium Ion battery.

DO NOT attempt to open System.

Tampering with system may cause overheating, fire, and injury.

Dispose of System according to local regulations for electronic devices.

Coravin Pure™ Capsules

For all Coravin systems (Model One, Model Two, Model Two Elite, Model Two Elite Pro, Model Three, Model Five, Model Six, Model Eight, Model Eleven, Limited Editions, Timeless Three, Timeless Six, Timeless Eleven).



Argon 6.5g (0.23oz) CAS 7440-37-1

WARNING: Gas Capsules are under high pressure. Coravin Systems are designed to work ONLY with genuine Coravin Capsules. Use of none-Coravin capsules, re-use of any part of the Capsule, or connection to sources of gas other than Coravin Capsules is dangerous and may cause injury to users or others nearby. Use of large capacity gas sources with Coravin System can result in gas leaks which could cause serious injury or death. Large capacity gas sources are NEITHER tested NOR approved by Coravin. The use of alternative gas sources will void the System warranty and remove all responsibility of Coravin from any issues or injury that may arise. For more information, contact Coravin Customer Service.

Storage

Coravin Capsules are pressurized and should be stored between -22 and 149 F, (-30 to +65 C).

Coravin Capsules contain gas under pressure, and may explode if heated.

Store in a well-ventilated place, out of direct sunlight.

Capsule Disposal

Coravin Capsules are made of recyclable materials.

Empty Capsules may be recycled according to local regulations.


DO NOT dispose of unused Capsules.

Installing and Optimizing Capsules

On average, each Coravin Pure Capsule will enable you to pour about fifteen 5 ounce glasses of wine. We recommend using several short presses of the trigger to control and optimize gas use. If you hear a hissing sound when you stand your bottle up after pouring you are using more Argon gas than is necessary for your pour. And, don't forget, it takes more Argon gas to pour when you get down to the bottom of the bottle, so pull the cork if you know you will be drinking the rest of the bottle that day.

Step-by-Step Guide

1. While pushing the Clamp Release up, slide SmartClamps™ all the way up.

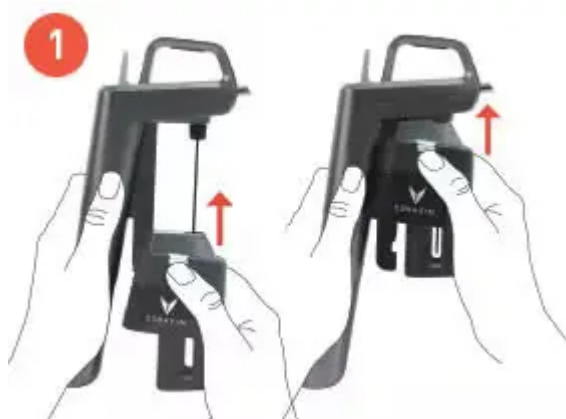

2. Unscrew Capsule Cup.



3. Insert round end of Capsule into Capsule Cup.




4. Quickly screw Cup back onto System until there is no gap and Cup is aligned. This ensures a tight seal and no gas loss.



5. Slide SmartClamps down until locked into place.



6. Quickly press the trigger to release a short burst of gas. If there is no hissing sound, see Troubleshooting.

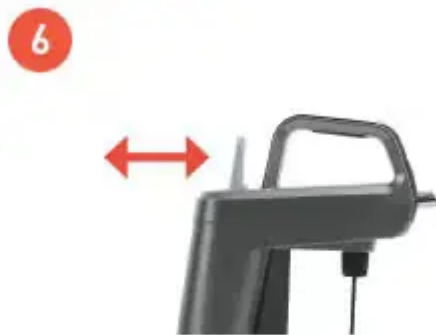

Note: Coravin Capsules are made of recyclable materials. EMPTY Capsules can be recycled according to local regulations. DO NOT dispose of unused Capsules.

Pouring Wine

NOTE: Use on bottles with natural cork (remove foil to confirm), or on screw cap bottles using Coravin Screw Caps.

NOTE: Make sure Clamp is in the down position before use.

1. Align SmartClamps™ over neck of bottle and push down firmly on Handle in one fluid motion, until Needle is fully inserted into cork and no longer visible. SmartClamps™ are

designed to fit snugly around bottle neck.



2. Hold bottle with one hand and Handle with the other. Tilt bottle until Spout is over glass and bottom of bottle is raised higher than Spout. DO NOT hold System by Capsule Cup while pouring.



3. To pour wine, quickly PRESS AND RELEASE Trigger. Wine will pour when Trigger is released. Repeat until desired amount of wine is poured.



4. To stop wine from pouring, tip bottle upright while keeping Spout over glass. Any remaining gas in bottle will be released and a hissing sound may be heard.

5. To remove System, hold bottle with one hand. With other hand, hold Handle and firmly pull System straight up and off in one fluid motion.



6. Rinse System before storing (see instructions on Cleaning the System).
7. Store bottle on its side in temperature controlled area suitable for wine.

If you hear a large release of gas when returning the bottle to upright it is an indication that you have used more gas than you need for the pour that you want. Using several quick presses of the trigger will help to manage and optimize gas flow.

Information about Wine Closures

NOTE: Use Coravin Timeless System on bottles with natural cork (remove foil to confirm), or on screw cap bottles using Coravin Timeless Screw Caps. After removing the Coravin Timeless Needle, natural cork will reseal itself. Cold or older corks may take a little longer to reseal. If cork continues to drip after several minutes, cork may be made of synthetic material (plastic) and will not reseal.

NOTE: Natural Cork is effective at protecting wine, but can deteriorate over time and become loose in the bottle neck. When this happens, the cork is no longer protecting your wine. Using a Coravin Timeless System on a deteriorated cork could push the cork into the bottle, or the pressure from the System could push the cork out of the bottle. This is safe, but could be messy. **If the cork moves when pushing the Coravin Timeless Needle in, or when pouring wine, the cork is likely deteriorated and is no longer helping preserve the wine. Stop using the Coravin Timeless System on that bottle and simply pull the cork.**

Useful Tips

CHANGING BETWEEN WINES

Quickly PRESS AND RELEASE Trigger to purge Needle of residual wine before pouring another wine.

GETTING THE MOST OUT OF EACH CORAVIN CAPSULE

DO NOT unscrew Capsule Cup until Capsule is empty. Unscrewing Capsule Cup will cause

remaining gas to be quickly released and wasted. Press trigger quickly to check for gas. If a hissing sound is heard, Capsule still has gas.

Before use, always check that Needle is tightly screwed in place.

To reduce overall use of gas, press Trigger quickly while pouring, repeating only when pour slows. Holding Trigger down for long periods of time wastes gas.

When ready to finish the bottle, pull the cork.

CAUTION:

Use only official Coravin Pure™ Capsules. Coravin Pure™ Capsules are specifically designed for Coravin and are filled with 100% pure argon gas to ensure the best quality performance and preservation of the wine.

Coravin Pure™ Capsules are made of recyclable materials. EMPTY Capsules can be recycled according to local regulations. DO NOT dispose of unused Capsules.

Cleaning the System

1. Rinse Spout, SmartClamps™ and Needle Guide with warm, clean water. Ensure SmartClamps™ move up and down with ease. **IMPORTANT:** Never press the Trigger while rinsing the Spout. This may damage the System.



2. Remove from water and dry thoroughly with a soft cloth.
3. Quickly PRESS AND RELEASE trigger to clear any excess water.

Changing and Clearing the Needle


1. Start with SmartClamps™ in down position. Grasp Needle Grip, located at top of Needle, and unscrew to release from System. Needle drops down quickly.



2. Tilt Needle slightly and pull it up and away from System to remove.



3. If installing a new Needle, carefully remove Needle Guard. Place Guard onto old Needle and dispose according to local regulations.
4. If the existing Needle is clogged, use Needle Clearing Tool to poke cork/sediment through the eye of Needle.

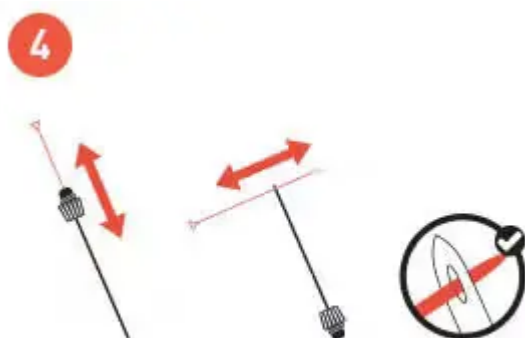

5. Hold new Needle by Needle Grip and slide pointed end back into Needle Guide, slightly tilting Needle.
6. Screw Needle Grip back into System until fully tightened.

Using the Coravin Timeless Screw Cap

Step-by-Step Guide

NOTE: Choose the size that fits your bottle. Try the standard size first. If it does not fit, use the Large one, if available. (Some packs only include one size.)

1. Remove and discard existing screw cap. DO NOT pour wine from the open bottle.



2. Immediately replace with Coravin Screw Cap.



3. Use Coravin System normally, per instructions.
4. Be sure white liner is firmly in place. If not, press down with finger to secure.

Cleaning the Coravin Timeless Screw Cap

1. Rinse entire Cap with clean water. DO NOT use soap.
2. Pat dry with clean cloth.

Tips:

DO NOT over tighten Coravin Timeless Screw Cap on bottle.

Store bottle as you normally would with Screw Cap installed.

When bottle is empty, remove Screw Cap, clean, and reuse on next bottle. Each Screw Cap can be used for up to 50 insertions.

Using the Coravin Timeless Aerator

Step-by-Step Guide

NOTE: Coravin Aerator is compatible with all Coravin Systems. Some Systems do not include Coravin Aerator.

1. Push Aerator onto Coravin Spout.




2. Use Coravin System normally, per instructions.



3. Pull Aerator off Coravin System when finished. Rinse before storing.



4. Hand wash after each use.

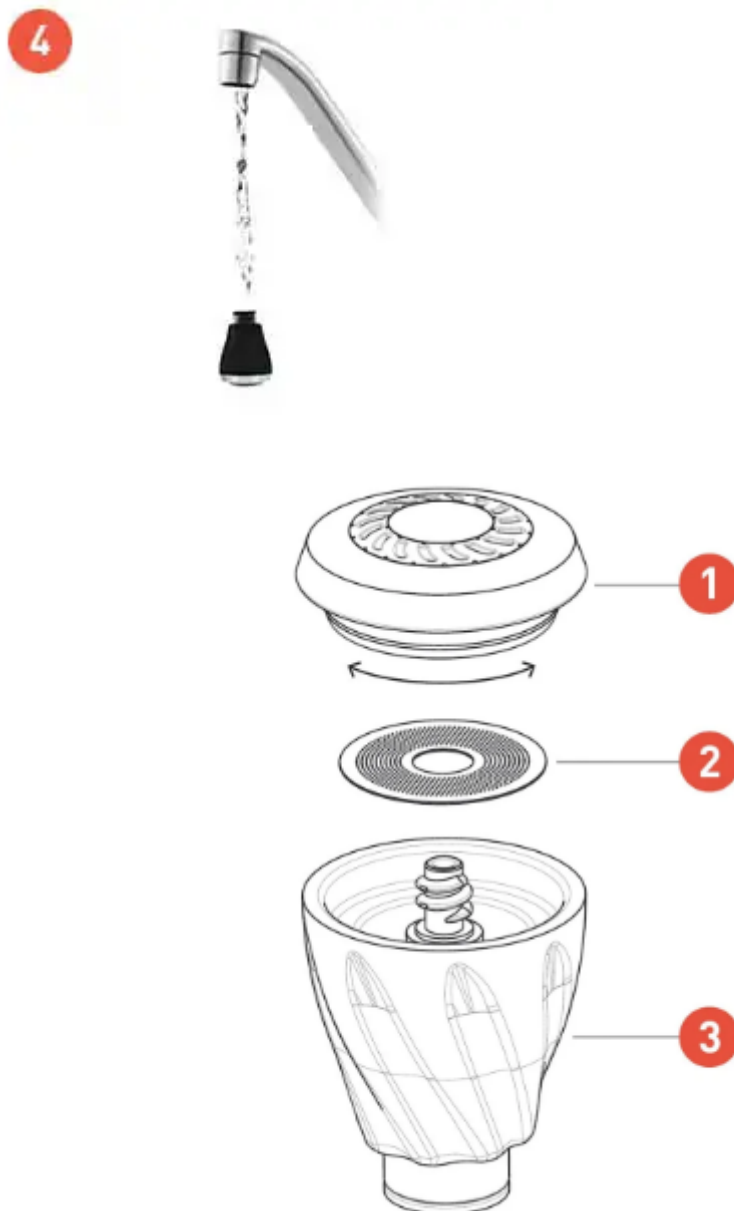

1. Head

2. Screen

3. Rubber Housing

Tips: To ensure best performance, press Trigger longer than usual, ensuring wine pours quickly from all holes of Timeless Aerator.

Troubleshooting



Problem	Possible Cause	Solution
Wine is not pouring	Trigger was not pressed and released to initiate pour.	Make sure to press and release Trigger so wine can start flowing.
	Bottle is not tilted enough.	Ensure bottom of bottle is raised higher than Spout while pouring.
	Needle is clogged or damaged.	Unscrew Needle. Quickly press and release Trigger, If System emits a hissing sound, Needle is clogged. Refer to Changing Needle for instructions.
	Coravin Pure Capsule is empty.	Insert a new Coravin Pure Capsule.
	Needle is not fully inserted through cork.	Press Handle all the way down to ensure Needle is fully through cork.
Wine is pouring slowly	This happens when the bottle is accessed for the first time.	Press and release Trigger a few times to get wine to pour. Repeat as necessary.
It is difficult to insert and remove System from wine bottles.	Some corks are more difficult to puncture than others.	This is normal, especially for cold corks.
	Coating on Needle may be worn.	Replace Needle if tip is worn or damaged.
The cork is leaking/dripping	Bottle has a plastic cork which does not reseal.	Only access wines with natural corks. Use Coravin Timeless Screw Caps for bottles with screw cap closures.

	System was left in the cork for too long.	Remove Coravin System immediately after pouring.
	Cork might be cold, old, or dry and has difficulty resealing.	Give cork additional time to reseal or try the Vintage Needle.
	Residual wine from the Needle or the wine path	This is normal; wait a few minutes, wipe the top of the cork and it should be resealed.
There are particles in the wine	Cork particles or sediment in wine have passed through Needle.	This is normal for some wines.
System is not dispensing 15 5oz pours per capsule	Too much gas is being used to pour wine (pressing the Trigger too often and too long).	Refer to " <i>Getting the Most Out of Each Coravin Pure™ Capsule</i> " section under " <i>Useful Tips</i> ".
	Capsule Cup or Needle is not installed tight enough.	Tighten Capsule Cup and Needle. Wipe the Capsule Cup threads and the System threads each time you change the Capsule to ensure a tight seal.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.