

**Model:** EDHV01 | **Color:** Gray | **Brand:** EFURDEN

## Overview

The EFURDEN Handheld Pool Vacuum (Model EDHV01) is a cordless, rechargeable pool cleaner designed for above-ground pools, inground pools, spas, and hot tubs. It operates without hoses or cords, using a rechargeable battery and a rotary switch for simple on/off control. The vacuum is intended for spot cleaning and regular maintenance, particularly in areas that are difficult for automatic robotic cleaners to reach.



## Key Specifications:

- **Model:** EDHV01
- **Material:** Plastic
- **Dimensions:** 34.13" L x 8.07" W x 6.57" H
- **Power Source:** Battery Powered (Lithium-Ion, 4000 mAh, 21.6 Wh)
- **Charging Time:** Approximately 3.5 hours
- **Water Displacement:** 18 gallons/min
- **Battery Weight:** 0.17 kg

## Features

### Cordless Operation

The vacuum is battery-powered and requires no connection to a pool pump, hose, or electrical outlet. This allows unrestricted movement around the pool.



## Battery and Runtime

Equipped with a 4000 mAh rechargeable lithium-ion battery. A full charge provides up to 90 minutes of continuous runtime. The battery recharges fully in approximately 3.5 hours.

## Rotary Switch Control

The vacuum is operated using a rotary switch located on the unit. Turning the switch activates the motor. There are no multiple speed settings; the vacuum operates at a single power level.

## Telescopic Pole

The included telescopic pole adjusts from 33.5 inches to 69 inches in length, making it suitable for above-ground pools, spas, and hot tubs. For inground pools, the vacuum can be connected to a standard pool pole (not included).




## Removable Brush Head

The suction head features a removable brush and rotational ball wheels for smooth movement along the pool floor. The brush helps dislodge debris and allows cleaning in corners and tight spaces.

## Large Filter

The vacuum uses a large built-in filter to capture sand, leaves, bugs, and other debris. The filter is washable and reusable.

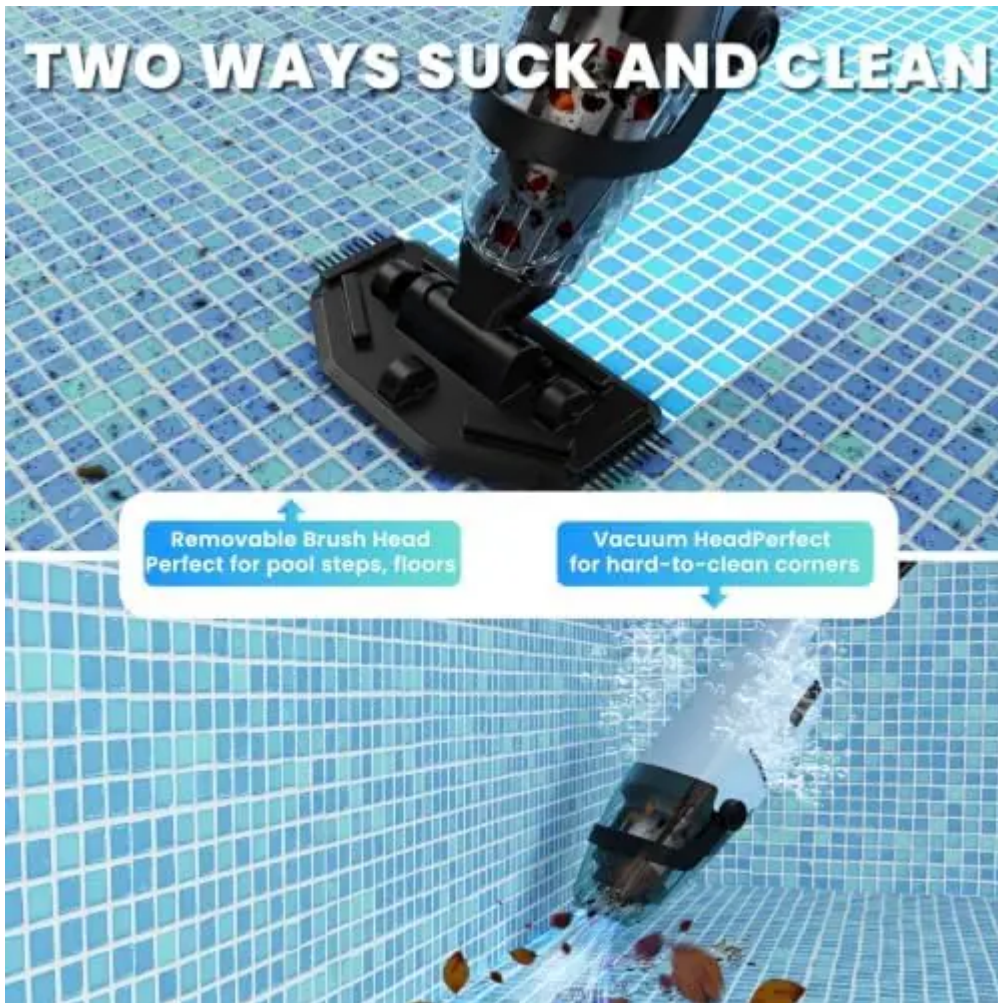

## Tool-Free Assembly

No tools are required for assembly. The pole attaches directly to the vacuum unit, and the brush head clips into place.

## What's in the Box

- EFURDEN Handheld Pool Vacuum unit (with built-in motor and filter)
- Telescopic pole (adjustable 33.5" – 69")
- Removable brush head
- Charger (for the internal battery)
- User manual

# Use Guide

## Charging the Battery

1. Ensure the vacuum is turned off (rotary switch in the OFF position).
2. Connect the charger to the charging port on the vacuum unit.
3. Plug the charger into a standard wall outlet.
4. The battery will fully charge in approximately 3.5 hours. A full charge provides up to 90 minutes of runtime.
5. Do not overcharge. Disconnect the charger once the battery is full.

**Note:** The battery is built-in and cannot be removed. Use only the charger provided with the vacuum.

## Assembly

1. Attach the telescopic pole to the vacuum unit by inserting the pole into the connection socket until it clicks or locks into place.
2. If using the brush head, attach it to the bottom of the vacuum unit by aligning the tabs and pressing until it snaps on.
3. Adjust the telescopic pole to the desired length by twisting the locking collar and extending or retracting the pole.

**Note:** No tools are required for assembly. All connections are designed to be hand-tightened.

## Operating the Vacuum

1. Ensure the battery is fully charged.
2. Attach the assembled vacuum to the pole.
3. Submerge the vacuum head in the pool water.
4. Turn the rotary switch to the ON position. The motor will start, and the vacuum will begin drawing water and debris.
5. Guide the vacuum across the pool floor, spa, or hot tub surface using the pole. Move slowly to allow the vacuum to pick up debris.
6. To stop, turn the rotary switch to the OFF position.

**Important:** Always turn the vacuum off before removing it from the water. Do not run the vacuum dry for extended periods.

## Cleaning the Filter

1. Turn off the vacuum and remove it from the water.

2. Open the filter compartment (refer to the markings on the unit).
3. Remove the filter and rinse it with clean water to remove trapped debris.
4. Allow the filter to dry completely before reinstalling.
5. Reinsert the filter and close the compartment securely.

**Note:** Clean the filter after each use to maintain suction performance. A clogged filter will reduce efficiency.

## Video Demonstration

The following video demonstrates the product in use and provides setup guidance.

Your browser does not support the video tag.

*Video: The video showcases the product in use and guides you through product setup.*

## Maintenance

- **Filter:** Rinse the filter with fresh water after each use. Replace the filter if it becomes damaged or excessively worn (replacement filters are available separately).
- **Brush Head:** Inspect the brush head regularly for debris or wear. Clean with water as needed.
- **Battery:** Charge the battery fully before first use and after each cleaning session. Store the vacuum in a cool, dry place. Do not expose the battery to extreme temperatures.
- **General:** Rinse the vacuum body with fresh water after use in saltwater pools to prevent corrosion.

## Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not start	Battery is discharged; rotary switch is off	Charge the battery fully; ensure the rotary switch is in the ON position
Weak suction	Filter is clogged; brush head is blocked	Clean the filter; remove debris from the brush head
Short runtime	Battery not fully charged; battery aging	Charge for the full 3.5 hours; if problem persists, contact support
Vacuum stops suddenly	Battery depleted; debris jam in the impeller	Charge the battery; check and clear any debris from the intake area

## **Important Information**

### **Directions**

Assemble the pole, attach the vacuum, and operate it in the pool.

### **Safety Warnings**

- Do not operate the vacuum out of water for more than a few seconds.
- Do not use the vacuum to clean sharp objects or large debris that could damage the filter or motor.
- Keep the charger away from water. Only charge the battery indoors in a dry location.
- Do not attempt to open the battery compartment or replace the battery yourself.
- Use only the charger supplied with the product.

## Product Information

<b>Brand</b>	EFURDEN
<b>Model Name</b>	EDHV01
<b>Manufacturer Part Number</b>	EDHV01
<b>Color</b>	Gray
<b>Material</b>	Plastic
<b>Product Dimensions</b>	34.13" L x 8.07" W x 6.57" H
<b>Power Source</b>	Battery Powered
<b>Battery Description</b>	Lithium-Ion (4000 mAh, 21.6 Wh)
<b>Charging Time</b>	3.5 hours
<b>Runtime</b>	Up to 90 minutes
<b>Water Displacement</b>	18 gallons/min
<b>Control Method</b>	Touch (Rotary Switch)
<b>Installation Type</b>	Manual
<b>Unit Count</b>	1 Count
<b>ASIN</b>	B0D81DYTFG

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.