

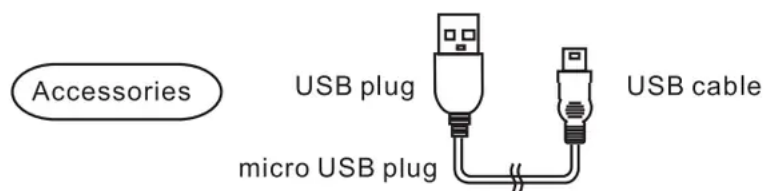


## Product Structure

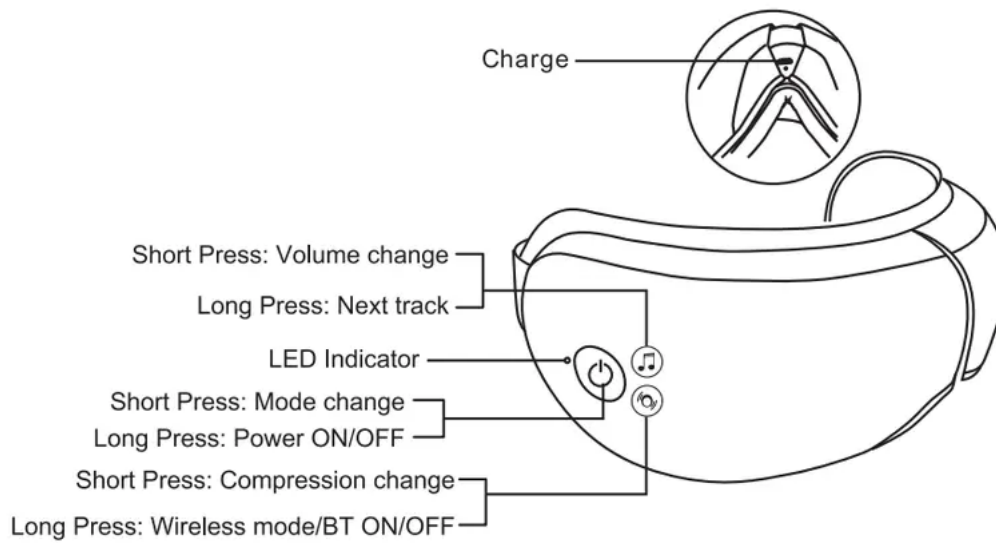

## Wearing the device

Align the cloth cover to your eyes, put on the device, adjust the elastic band, adjust the device to the most comfortable position. Hold the power button for 3-5 seconds to turn on the eye massager

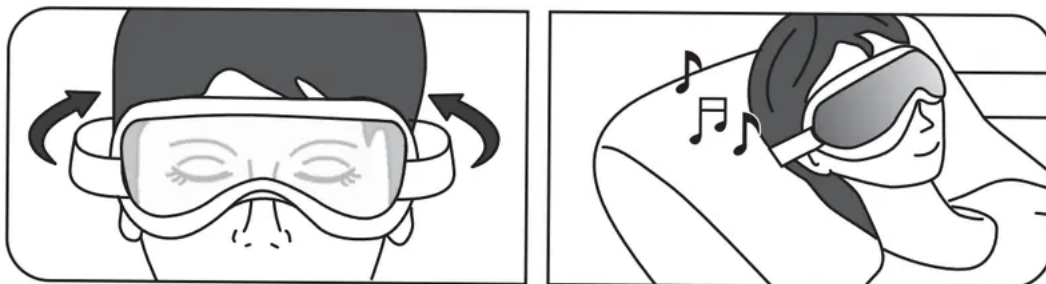

## Attention

Remove any glasses, contact lenses, hairpins and hair accessories before use to avoid discomfort. Do not operate the device with wet hands.


## During operation

Default Setting: Air Pressure + Heat + Music

Default Timer: 15 minutes


### Press power button to change mode:

Hold power button 3-5 seconds to turn on/off the eye massager. Gently press power button to change modes. Audio voice will confirm mode change.

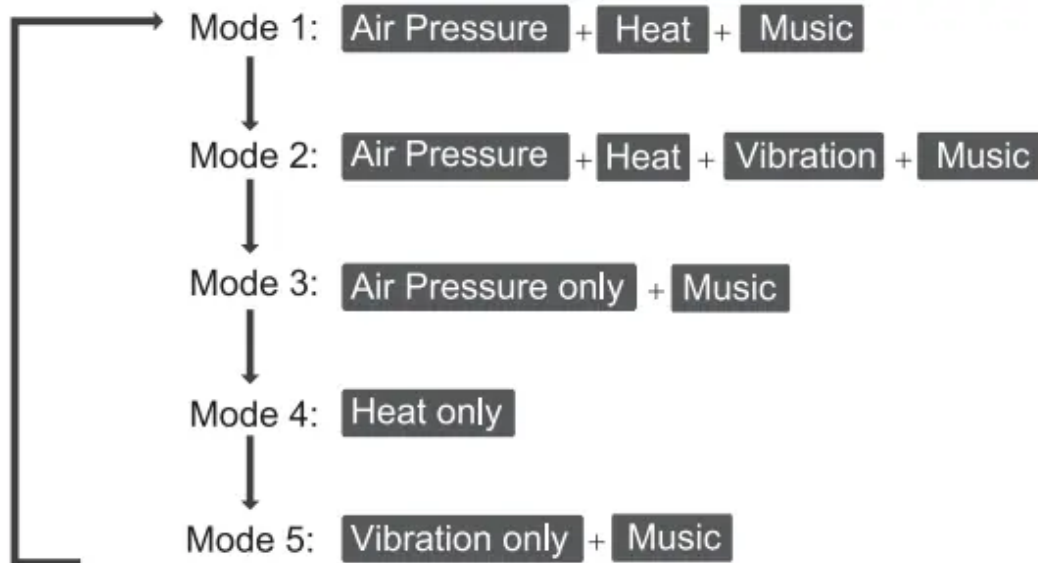


## Charging

1. Use the 5V mobile charger(not included) for charging your eye massager.
2. Insert USB cable into the socket of the mobile charger.
3. Softly insert the micro USB plug into the socket of the device, making sure the micro USB is inserted in the right direction.
4. Plug the charger into power.
5. While charging, the red LED indicator will show. When done charging, the LED will be green. The device will not work while charging is in progress.
6. The charge duration will be 2-3 hours. Disconnect the power adapter after charging is complete.

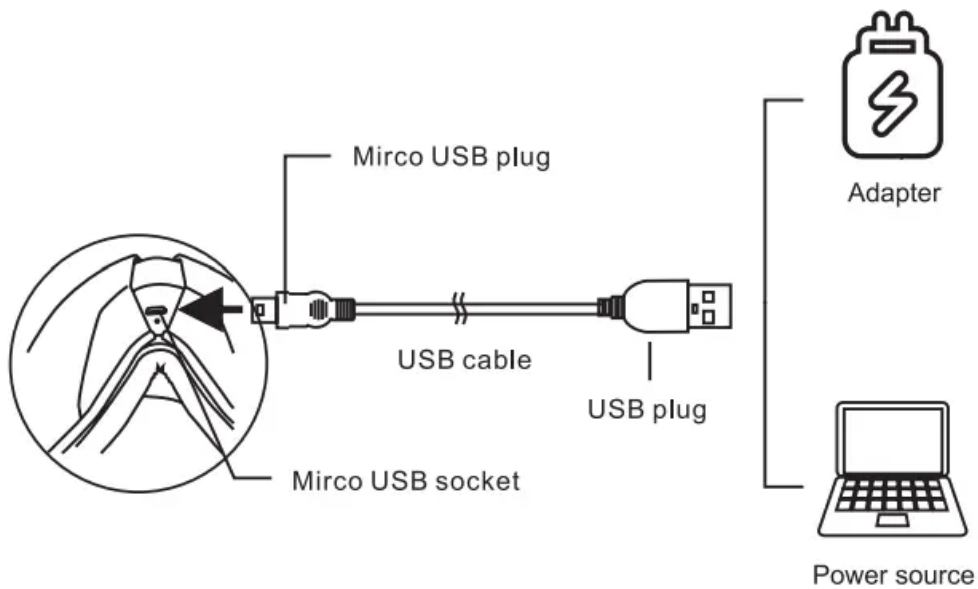


Note: The adapter is not included.

## Volume adjustment

Short press "  " to control volume, and the volume will turn up/down continuously, the volume change is No volume-volume 1-volume 2-volume 3-volume 4-volume 5(max)-no volume.

## Wireless/BT Pairing

Hold "  " button for 3 seconds to enter Wireless/BT pairing mode, on your phone or tablet enter your Wireless/BT settings and select "eye massager" to connect.

To quit the wireless/BT pairing mode, hold "  " button till the LED indicator stop flashing.

## FAQ and Troubleshooting

Problem	Possible causes	Actions
There is a sound mechanical or air sound coming from device	Normal sound of air pump inflating, motor working, or air pressure	No need to do anything
Device turns off automatically. Device does not turn on. Buttons are not responsive. Air pressure is weak.	1. Battery is Low. 2. The 15 minutes timer.	1. Charge the device. 2. Turn on the massager again.

If there are other problems, turn off the device and contact us at [support@ren-pho.com](mailto:support@ren-pho.com). RENPHO is not responsible for any damage or injuries that occur if you attempt to disassemble or repair the product yourself.

## Cleaning and Maintenance



Please turn off the power when cleaning, do not use corrosive detergents such as benzene or diluents to clean the product. Do not expose the device to excessive sun or hot temperature.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.