TOURING ITEMS
TYPES®

T402E

Dual View 4K Dashcam With AI Triggered Smart Incident Recording

WP ITM. BT535838
Care & Use Instructions



Important, retain for future reference: Read carefully

For more detailed instructions, please scan the QR code above or visit www.typesauto.com to access the complete user manual.

TABLE OF CONTENTS

1. Introduction 1
2. Package Contents 2
3. Product Specifications 3
4. Dimensions 3
5. Product Overview 4
6. Controlling The Camera 5
7. Installing The Camera 6
8. Setting Up The Camera 7
9. Camera Status & LED Indicators 11
10. Recording Time 11
11. Time-Lapse Recording Logic 11
12. Technical Specifications 12
13. Downloading The App 12
14. Setting Up The App 13
15. FAQs 17
16. Safety Information 18
17. Maintenance & Warranty 20
18. General Information 23

1. INTRODUCTION

Please carefully review all installation instructions before installing the product. Improper installation may void the manufacturer's warranty. These instructions are not applicable to all vehicle types and are provided as guidelines to aid in product installation.


If you require assistance with camera installation, please feel free to either consult an experienced technician or reach out to TYPE S customer support at **1.866.294.9244**.

BEFORE using the camera, please read the safety information in this manual, and always follow the guidelines outlined in it while using the product.

Please make sure you've read and understood local laws and regulations regarding cameras in vehicles, as these laws can vary by state.

2. PACKAGE CONTENTS

1. 1 x TYPE S T402E Dual View Dashcam
2. 1 x 12/24V Power Adapter
3. 1 x Mounting Bracket with 3M VHB™ Double-Sided Tape
4. 1 x Spare 3M VHB™ Double-Sided Tape
5. 2 x Cable Clips
6. 1 x USB-A to USB-C Data Transfer Cable
7. 1 x Adhesive Film
8. 1 x 32GB MicroSD Card (Factory-installed, replaceable)
9. 1 x Warranty Card

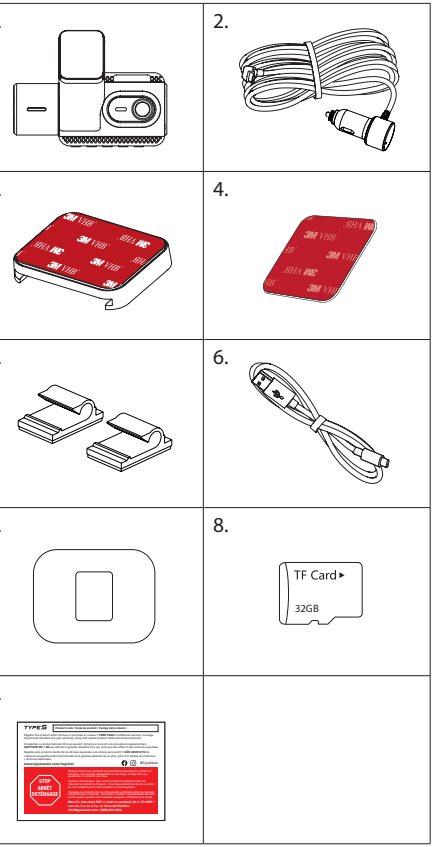


3. PRODUCT SPECIFICATIONS


T402E Dual View Dashcam

Display:	2.4”
Video Resolution:	Front Camera – UHD 4K (3840 x 2160) Interior Camera – FHD 1080P (1920 x 1080)
Frequency:	2.4GHz
Operating Voltage:	DC 12/24V / DC 5V (USB-C)
Operating Temperature:	14°F~140°F (-10°C~60°C)
Lens (View Angle):	Front Camera – 120°; Interior Camera – 130°
Maximum Signal Range:	Up to 10ft / 3m

4. DIMENSIONS

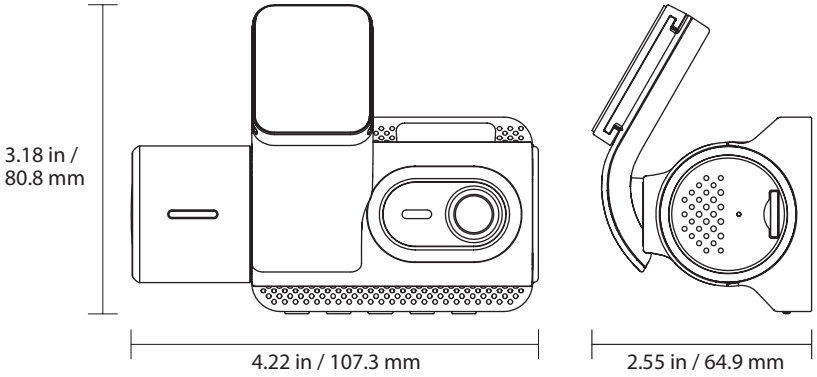


5. PRODUCT OVERVIEW

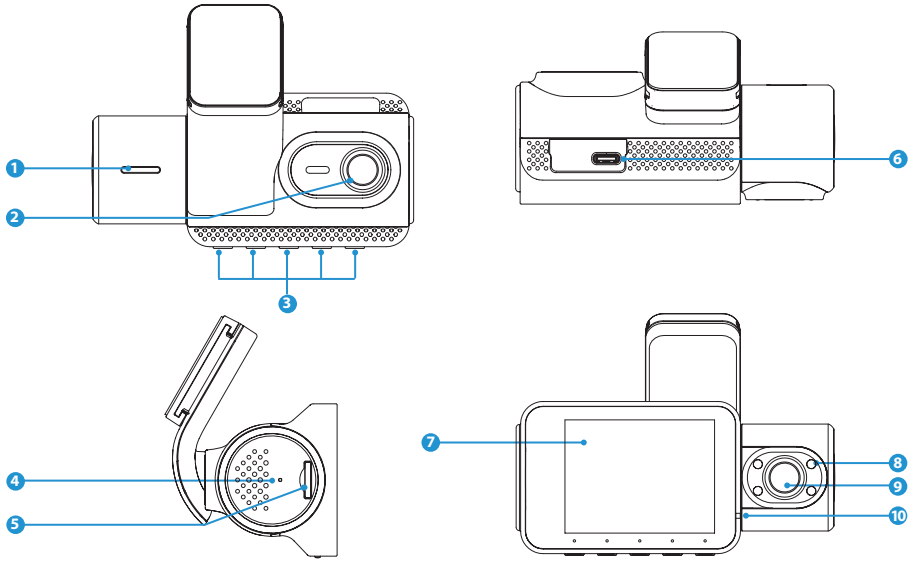

1. Speaker
2. Front Camera
3. Function Buttons
4. Reset Button
5. MicroSD Card Slot (MicroSD Card Factory-Installed)
6. Power Input
7. Display Screen
8. Infrared Sensors
9. Interior Camera
10. LED Indicators

6. CONTROLLING THE CAMERA

Apply configuration and settings to the camera using the 5 function buttons. Please refer to the section below for the functions of each button under different modes.

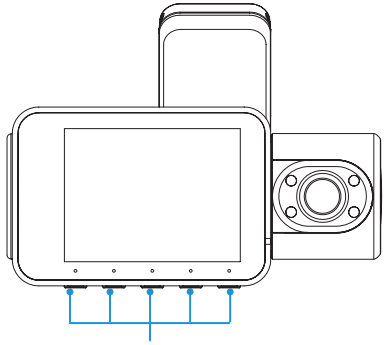




- Menu (click once)
- Switch between Front/Interior/PIP view (click once)
  Record/Stop Recording (press & hold)
- Event Recording (click once)
- Snapshot (click once)
  Access WiFi QR Code (press & hold)
- Audio Recording On/Off (click once)
  Power On/Off (press & hold)


For more information about AI Dashcam operation, please refer to the e-manual on www.typesauto.com.

7. INSTALLING THE CAMERA

1. Remove the protective film from the display screen.

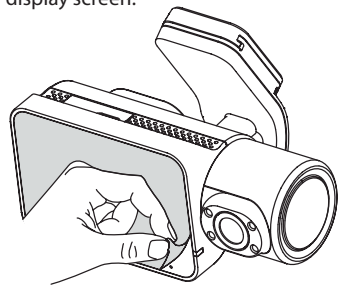


2. Connect the USB-C power cable to the input port on the camera.

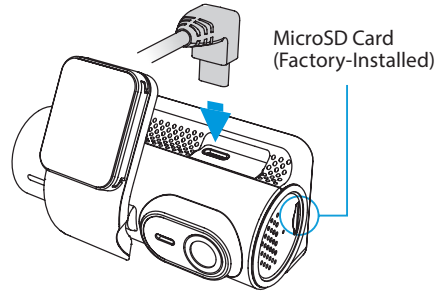


3. Mount the camera onto the windshield:

- Take the adhesive film, remove the protective layer, and apply it onto the windshield.
- Peel off the 3M VHB™ tape backer from the windshield mount and affix the camera to the center of the adhesive film.

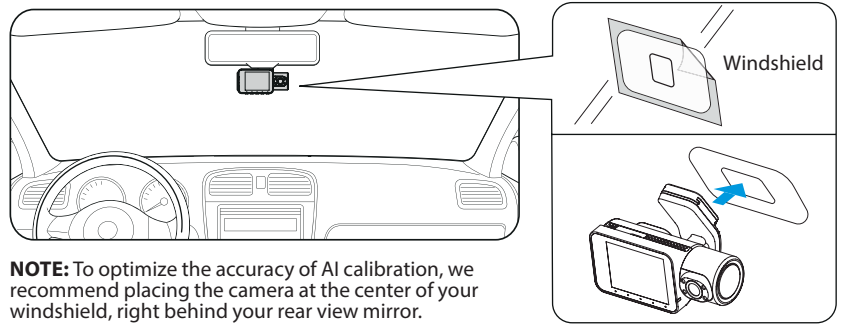

NOTE: To optimize the accuracy of AI calibration, we recommend placing the camera at the center of your windshield, right behind your rear view mirror.

4 Route the power cable through the headliner and pillars inside your vehicle. To ensure it doesn't obstruct the driver's view, we recommend passing it through the passenger side. You may use the included cable clips to prevent the cable from dangling.

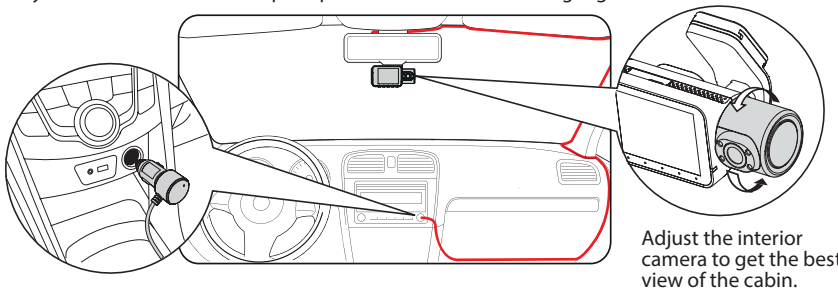


Adjust the interior camera to get the best view of the cabin.

Park & Record Mode
To access Park & Record Mode, a hardwiring cable (AC533513) is required. Please visit www.typesauto.com or contact our customer service regarding the purchase.

8. SETTING UP THE CAMERA

Set the date & time before using the camera. The date stamps that appear on all future recordings will follow this setting. You may also sync the date & time to your phone by connecting the camera to the TYPE S Drive App.

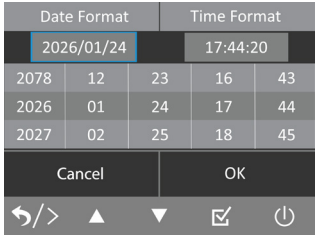





Auto-Calibration
The front camera features an AI-powered Advanced Driver Assistance System. Upon initial use, the device will automatically calibrate to enhance the accuracy of detecting safety events. Please note that this calibration process may take up to 15 minutes to complete.

Tips for Faster Calibration
- Calibration requires an active GPS signal. Drive around, and the GPS signal should usually be acquired quickly.
- Calibration only occurs during first-time use unless the user manually initiates recalibration.
- We recommend driving on the highway for faster calibration.
- Once calibration is complete, an F icon will appear on the screen.


Initially, the camera will search for a GPS signal. The screen will display the message: "Searching for GPS Signal". To expedite this process, drive in an open area, away from tall buildings or heavy foliage that may obstruct GPS reception.

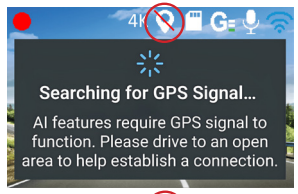

Once the GPS signal is acquired, the screen will change to "GPS Signal OK, Calibrating AI". This indicates that the calibration process is initiated but is not yet complete. Continue driving so the camera can finish calibrating.

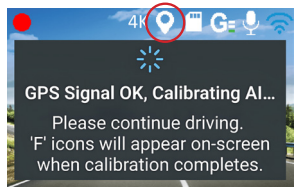

WARNING: Please ensure you complete the initial calibration. Failure to do so may result in inaccurate data, potentially affecting your safety and the performance of Advanced Driver Assistance features while driving.

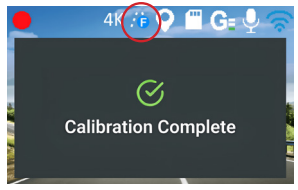

Recalibrating the AI
Recalibration is required when transferring the camera to a different vehicle. To do this, format the SD card in General Settings, and then repeat the calibration process. Make sure to transfer all important files to another storage device before formatting to avoid data loss.

Advanced Driver Assistance System (ADAS)

1. Forward Collision Warning



While driving above your selected speed, the camera calculates an estimated safe following distance. If your vehicle gets too close to the vehicle ahead and a collision risk is detected, the camera will issue visual and audio alerts and saves the recording in the "Event" folder. Select the speed at which you would like the feature to be activated. If you select 20 MPH, this feature will only activate when you're driving at over 20 MPH.

- 20 MPH / 25 MPH / 30 MPH
- 30 KM/H / 40 KM/H / 50 KM/H

NOTE: Please set your desired speed unit before adjusting the activation speed (Menu > General Settings > Speed Unit).

AI Triggered Incident Recording

Traditional G-sensor event recording is triggered only after a sudden impact is detected.

With AI Triggered Incident Recording, the dashcam can begin saving footage earlier in the sequence:

1. The Forward Collision Warning (FCW) system detects a possible collision ahead.
2. The dashcam automatically triggers event recording, and the event video length depends on your loop record setting.
3. Footage leading up to the event is saved in the "Event" folder. This helps capture more context before an impact occurs, not just after the fact.

NOTE: AI features are for driver assistance purposes only. FCW may not detect all driving situations or hazards. GPS signal is required for AI features to function properly.

1




2



Collision

3

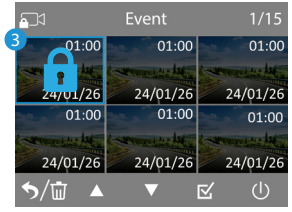

2.Lane Departure Warning



The Lane Departure Warning system provides alerts when your vehicle deviates from the driving lane at a speed over the selected threshold. Select the speed at which you would like the feature to be activated.

- 40 MPH / 45 MPH / 50 MPH
- 60 KM/H / 70 KM/H / 80 KM/H


NOTE: Please set your desired speed unit before adjusting the activation speed (Menu > General Settings > Speed Unit).

3. Pedestrian Warning



The camera tracks nearby pedestrians, cyclists, and motorcyclists. If any of these road users are detected within 33 feet (10 meters) ahead while you're driving between 7 MPH and 25 MPH (10 KM/H and 40 KM/H), visual and audio alerts will be issued.

4. Stop & Go

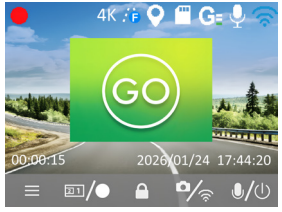

Stop & Go system notifies you if traffic starts moving, but your vehicle hasn't. When your vehicle has stopped for over 5 seconds, and the vehicle ahead moves at least 7 feet (2 meters) forward, the camera will issue both visual and audio reminders.

9. CAMERA STATUS & LED INDICATORS

Power / Mode Status	LED Indicators
Power On Camera powers ON when the engine is turned on.	Red LED light stays on when camera is powering on.
Recording	Red LED light flashes.
Recording Stopped	Red LED light stays on.

10. RECORDING TIME

Memory Card Capacity	Total Recording Time		
	(4K + FHD)	(2K + FHD)	(FHD + FHD)
32GB	≈ 106 minutes	≈ 142 minutes	≈ 170 minutes
64GB	≈ 213 minutes	≈ 285 minutes	≈ 342 minutes
128GB	≈ 431 minutes	≈ 575 minutes	≈ 690 minutes
256GB	≈ 797 minutes	≈ 1063 minutes	≈ 1276 minutes
512GB	≈ 1726 minutes	≈ 2301 minutes	≈ 2762 minutes

NOTE: If you use your own MicroSD card please insert it into the camera and format it before first use.

11. TIME-LAPSE RECORDING LOGIC

Mode	Behavior
Off	Without time-lapse record.
1 Second	Time-lapse record, captures 1 frame per 1 second.
3 Seconds	Time-lapse record, captures 1 frame per 3 seconds.
5 Seconds	Time-lapse record, captures 1 frame per 5 seconds.

12. TECHNICAL SPECIFICATIONS

Memory Management

Mode	Resolution	1-Minute Video Size	Loop Period (32GB SD Card)
4K + FHD	3840 X 2160 + 1920 X 1080	240MB	≈ 106 minutes
2K + FHD	2560 X 1440 + 1920 X 1080	180MB	≈ 142 minutes
FHD + FHD	1920 X 1080 + 1920 X 1080	150MB	≈ 170 minutes

Memory Card Capacity	Usable Space	System Reserve	Event & Parking	Video & Photo
32GB	29.4GB	2.6GB	11.76GB	17.64GB
64GB	58.9GB	5.1GB	23.56GB	35.34GB
128GB	119GB	9GB	47.6GB	71.4GB
256GB	220GB	36GB	88GB	132GB
512GB	476GB	36GB	190.4GB	285.6GB

13. DOWNLOADING THE APP

TYPE S Drive

The auto-sync feature in the TYPE S Drive App allows you to 1) Synchronize the camera's time with your phone's time, 2) Manage the camera's functions from your phone, and 3) View and download recorded videos. To access this feature, scan the QR code below or search for "TYPE S Drive" on the App Store or Google Play. Download and install the App.

Download on the App Store

GET IT ON Google Play

SSID:
TYPE_S_DVR31_4K_xxxxxx

Password:
12345678


Compatible with iPhone, iPad, Mac and iPod touch with iOS 15 or higher.


Compatible with devices with Android™ 7.0 or higher.

14. SETTING UP THE APP

Auto-sync with the Camera

1. Press and hold in the live view to access the camera's WiFi QR code.
   Alternatively, click ☰ to open the camera's menu and navigate to General Settings > WiFi.
2. The designated QR code will appear.

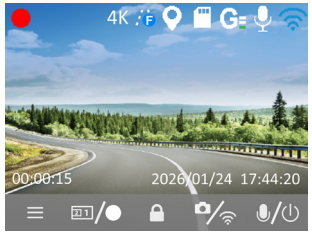

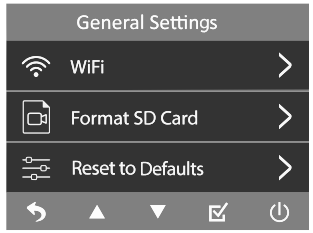





Before Connecting:

- If your vehicle has wireless Apple CarPlay or wireless Android Auto (the wired version is fine), please temporarily disconnect your phone from them, as they may hinder the connection.
- App connection is not mandatory for using the camera; it is primarily for accessing video files wirelessly. There's no need to maintain a constant connection.

Android Device

3. Run the TYPE S Drive App and select **Dash Camera**.
4. Select **AI SERIES DASHCAM** from the list of devices. Click **Set Up Device**.
5. Grant permissions for Bluetooth, Location, Nearby Devices, and Notifications if prompted.

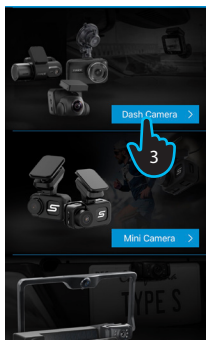


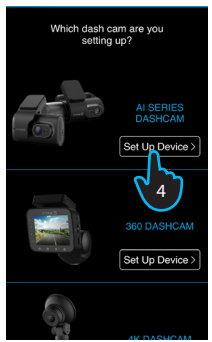



6. Click **Scan QR code**.
7. Allow access to your camera.
8. Scan the QR code on the camera.
9. Once connected, you can view the camera's dashboard.


NOTES:

After the initial sync, the App remembers your camera's network so that you will be automatically directed to the live view the next time you join, without the need for manual reconnection.
The camera connects to only one device at a time. If it was previously connected to another device, make sure that device is either out of range or has WiFi turned off.

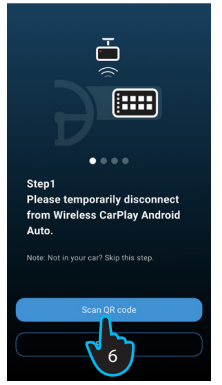

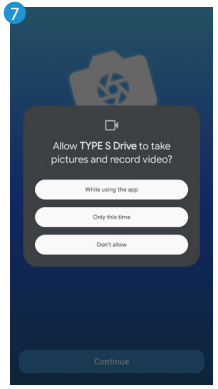


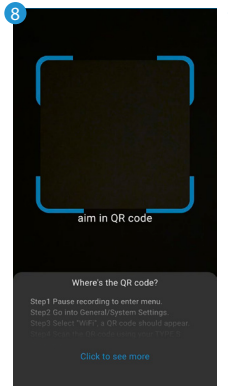

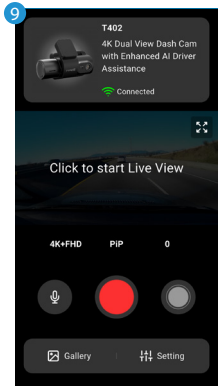


iOS Device (Follow Steps 1-2 from previous instructions)

3. Turn on Bluetooth and Location Services on your phone.
4. Run the TYPE S Drive App and select **Dash Camera**.
5. Select **AI SERIES DASHCAM** from the list of devices. Click **Set Up Device**.
6. Grant permissions for Bluetooth, Location, Local Network, and Notifications if prompted.
7. Click **Scan QR code**.
8. Allow access to your camera.
9. Scan the QR code on the camera.
10. Click **Join** in the pop-up message to connect to the camera's WiFi network.

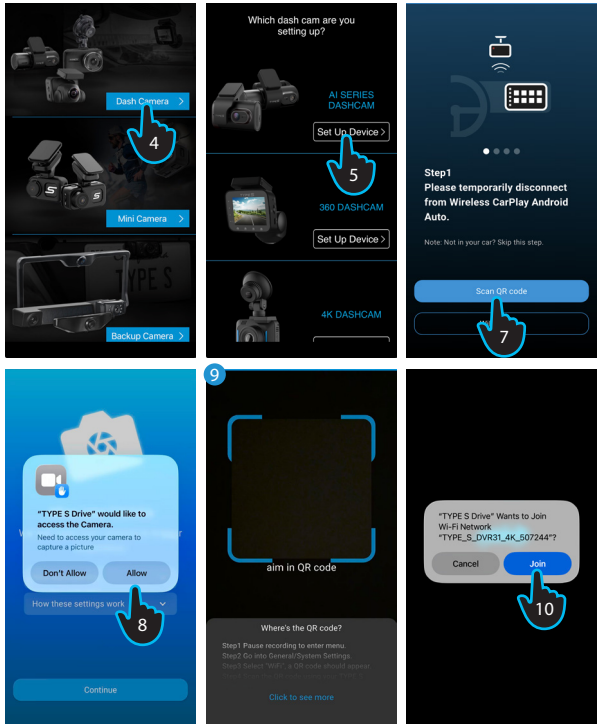

11. (Optional) If there is any issue with the auto pairing, exit the App and navigate to the WiFi setting page on your device. Connect to "TYPE_S_DVR31_4K_xxxxxx" with the default password "12345678", then return to the App.
12. Once connected, you can view the camera's dashboard.

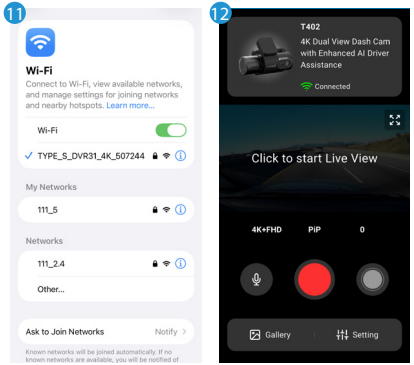

NOTES:

After the initial sync, the App remembers your camera's network so that you can simply click **Join** to reconnect next time.

For older iPhones, you may need to temporarily switch off DATA to access this feature.

The camera connects to only one device at a time. If it was previously connected to another device, make sure that device is either out of range or has WiFi turned off.

WiFi Connection Troubleshooting

If you're having trouble connecting, please follow these steps:

1) Disconnect wireless Apple CarPlay / Android Auto (not needed for wired).

2) Temporarily enable Airplane Mode. In WiFi setting, connect to the camera's WiFi network using password "12345678".

3) Return to the App and allow all permissions when prompted.

15. FAQS

1) Problem: The camera is not providing AI warnings even after driving for a while.
Solution: Ensure the GPS signal is strong, as AI features require an active GPS connection. If the issue persists, check if the AI calibration is complete and restart the camera if needed.

2) Problem: Can't connect to App, or "Connection Error".
Solution: If you're having trouble connecting, try temporarily disconnecting from Wireless Apple CarPlay, Wireless Android Auto, or mobile data. You can reconnect after using the App. App connection is not required for the camera to function.

3) Problem: The camera is displaying a clock on the screen. Is it still recording?
Solution: Yes, the camera is still recording. The clock icon indicates that the screen saver is active. You can press any button to wake the screen while recording continues in the background.

4) Problem: Message showing “SD card error”.
Solution: Please try formatting the MicroSD card (Menu > General Settings > Format SD Card).

5) Problem: Cannot find my accident/event footage.
Solution: Check the Events folder in the App or memory card. Ensure the G-sensor sensitivity is set correctly. If the memory card is full, older files may be overwritten.

6) Question: Can I use my own MicroSD memory card?
Answer: Yes, you can use your own. If you choose a memory card over 64GB, please make sure it’s U3 rated to ensure optimal recording performance.

For other issues, please contact our customer service at info@typesauto.com or call 1.866.294.9244.

16. SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS

1. SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions of 12/24V car charger for Model BT535838.
2. Before using the product, read all instructions and cautionary markings.
3. Do not expose car charger to rain, moisture, or snow.
4. Use of an attachment not recommended or sold by the product manufacturer may result in a risk of fire, electric shock, or injury to persons.
5. To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting car charger.
6. Make sure the cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
7. Do not operate the car charger with a damaged cord or cigarette lighter connector – replace the damaged items with new factory replacement items immediately.
8. Do not operate the car charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified serviceperson.
9. Do not disassemble the car charger; take it to a qualified serviceperson when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
10. To reduce risk of electric shock, unplug the charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.

WARNING: A failure to read and follow these warnings and instructions may result in a serious accident, including damaged property or a serious injury, including loss of life.

- The AI Dashcam is designed as an aid to the driver in detecting large stationary objects to help avoid damaging the vehicle. However, you, the driver, must use it safely and properly. Use of the AI Dashcam is not a substitute for safe, proper and legal driving.
- Never depend on the AI Dashcam entirely when driving. The image on the screen is different from actual conditions. Objects viewed in the AI Dashcam display screen differ from actual distance because a wide-angle lens is used.
- The AI Dashcam “Night Vision” feature that is high performance brightness with colorful image is an aid to a driver but is limited. Always use your own eyes to confirm the vehicle’s surroundings, as the displayed image may be faint or dark, distorted, or not entirely visible.

- Always check behind and all around the vehicle visually with mirrors before proceeding.
- The area displayed by the AI Dashcam is limited. The AI Dashcam does not display objects that are out of the camera's field of view. The area displayed on the screen may vary according to vehicle orientation or road conditions.
- Be sure to check the camera's position and mounting angle before each use.
- Do not strike the AI Dashcam. It is a precision instrument. Otherwise, it may malfunction or cause damage resulting in a fire or an electric shock.
- This product will only provide images of items that are within the field of view of the AI Dashcam. Thus, it is imperative that the AI Dashcam should be kept clean and unobstructed.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Never allow children to play with the device. Small parts may be a choking hazard.
- There is a plastic cover over the AI Dashcam. Do not scratch the cover when cleaning dirt or snow from it.
- If the temperature changes rapidly, the system may not operate normally.
- When strong light directly enters a camera, objects may not be displayed clearly.
- The screen may flicker under fluorescent light.
- The colors of objects on the AI Dashcam may differ from those of the actual objects.
- Do not use alcohol or thinner to clean the camera. This will cause discoloration. To clean the camera, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

SAFETY AROUND AND BEHIND OTHER VEHICLES

Many preventable injuries and deaths occur in driveways or parking lots when drivers do not see children, pets, or others near their vehicles. Here are a few safety tips that will help you to avoid a back-over accident:

- Walk completely around your vehicle before getting in. Check for kids, toys, and pets before entering the vehicle and starting the engine.
- Know where children are. Have children stand in a place where they are in full view.
- Be aware of young children. Young children are small and hard to see.
- Parents, caregivers and all adults need to be vigilant in supervising children, especially when children are in the yard, driveway or parking lot playing near parked cars.
- Roll down your window so you will be able to hear what is happening outside your vehicle.
- Owners of SUVs, trucks, and vans need to take extra care to avoid hitting or running over a child.
- Teach children to move away from a vehicle whenever it is started.

17. MAINTENANCE & WARRANTY

CLEANING

- If dirt, rain or snow attaches to the camera, the display screen may not clearly display objects. If water droplets, snow or mud adhere to the camera lens, rinse with water and wipe with a dry cloth.
- Do not use alcohol, benzene or thinner to clean the AI Dashcam. This will cause discoloration. To clean the AI Dashcam, wipe with a clean cloth dampened with mild cleaner diluted with water and then wipe with a dry cloth.

WARRANTY

- **TYPE S**
  LIMITED WARRANTY
  TYPE S warrants, to the original purchaser, that its products are free from defects in material and workmanship for 1 year from the date of original purchase. Where permitted by law, TYPE S liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and TYPE S makes no other warranty of any kind aside from the limited express warranty stated above.

  NOTE: Warranty only applies for North American customers of purchases made in North America.
  CONDITIONS OF WARRANTY
  If during the 1 year warranty period your new product is found to be defective, TYPE S will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:
  1. All repairs must be performed by TYPE S.
  2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
  3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.

4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by TYPE S under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

OWNER'S RESPONSIBILITIES:
TYPE S will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 8:00 AM TO 5:00 PM.

NOTE: Toll Free # is for North America Customers ONLY. See Customer service section for customer contact numbers for other regions/offices.

For customer service and technical support, please call us at 1.866.294.9244. If at that time it is determined that a replacement unit is needed, the support representative will issue a Return Authorization and instruct on how to get a new unit. TYPE S makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIES, IS MADE AS TO THE AI DASHCAM. EXCEPT AS EXPRESSLY SET FORTH HEREIN, TYPE S AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

TYPE S and/or its affiliates do not guarantee or promise that the user of AI Dashcam will not be in an accident or otherwise not collide with an object and/or person. Our AI Dashcam is not intended in any way to be a substitute for careful and cautious driving or for the consistent adherence to all applicable traffic laws and motor vehicle safety regulations.

The AI Dashcam is not intended to be a substitute for rearview mirrors or for any other motor vehicle equipment mandated by law. Even when properly installed, our AI Dashcam has a limited field of vision and does not provide a comprehensive view of the rear area of the vehicle.

TYPE S and/or its affiliates are not responsible for a user's intended or actual use of the AI Dashcam. In no event shall TYPE S and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the AI Dashcam, including but not limited to damaged property, personal injury and/or loss of life. Neither shall TYPE S and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the AI Dashcam, or for any delays, inaccuracies and/or errors in connection with the AI Dashcam and its functioning.

TYPE S and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents occurring with vehicles having the installed, and TYPE S and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

18. GENERAL INFORMATION

CUSTOMER SERVICE/CONTACT

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT TYPE S DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/ EXCHANGE THE PRODUCT.

FCC Compliance Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or change to this equipment. Such modifications or change could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

T402E
Dual View 4K Dashcam With AI Triggered Smart Incident Recording
BT535838
Responsible Party:
TYPE S
2975 Red Hill Ave., Ste. 100,
Costa Mesa, CA 92626, U.S.A.

Tel: 1-866-294-9244

Android Auto and Android are trademarks of Google Inc.
Apple CarPlay, iPhone, iPad, Mac and iPod touch are trademarks of Apple Inc.
3M VHB™ is a trademark of 3M Company.

A Horizon Brands Company
2975 Red Hill Ave., Ste. 100, Costa Mesa, CA 92626, U.S.A.
1.866.294.9244 I info@typesauto.com
© 2026 TYPE S. All rights reserved.

www.typesauto.com

ML-535838_V1