



Quick Start Guide

ONNAIS Vision SE Safety Glasses with Earplugs

✉ support@onnaisafe.com

Model: GA-01

HEARING PROTECTION

Noise Reduction Rating (NRR): 32dB

EPA requires the NRR label for hearing protectors. The NRR is based on laboratory tests. The actual noise reduction you get will depend on how you wear the protectors.

Brand: ONNAIS
Model: GA-01



CERTIFIED TO MEET
ANSI Z87.1+
SAFETY STANDARD

Questions & Answers

Have a question?

Question 1: [What should I do if my earplugs are damaged or missing?](#)

Answer: The earplugs are designed with a standard size. You can purchase replacement earplugs from most stores or online retailers.

Question 2: [Are the lenses anti-fog or UV-protective?](#)

Answer: Yes. The lenses are coated with an anti-fog layer and block 100% of harmful UV rays.

Question 3: [How should I clean the lenses?](#)

Answer: Use a soft microfiber cloth and mild soap or lens cleaner. Avoid alcohol or abrasive materials to prevent scratching.

Question 4: [Are the lenses impact-resistant or bulletproof?](#)

Answer: The lenses are impact-resistant and meet ANSI Z87.1+ standards, but they are not bulletproof. They are designed to protect against flying debris, not live ammunition. **Please always follow proper safety precautions when performing hazardous tasks.**

Question 5: [How should I contact the seller regarding replacements, refunds, or other issues?](#)

Answer: The unit has 365 days replacement warranty and lifetime technical support. Send an email to support@onnaisafe.com with your order ID. We will work toward a resolution within 24 hours.


QUICK START GUIDE VIDEO



OR


<https://onnaisafe.com/pages/installation-guide>

Follow Onnais on Instagram & Facebook for faster help.

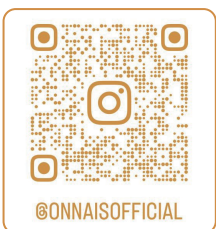


@ONNAISOFFICIAL

@Onnaisofficial

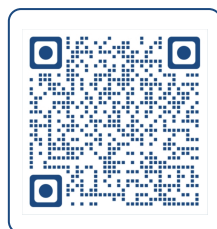

@Onnais

Product Overview

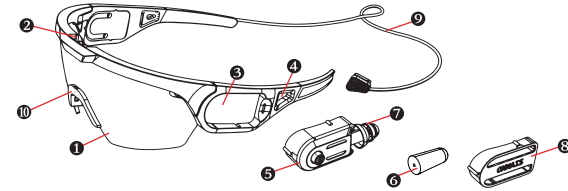

① Lens

② Lens Lock

③ Standard Slot / Earplug Slot

④ Glasses Strap Slot

⑤ Earplugs Module

⑥ Foam Earplugs

⑦ Silicone Earplugs

⑧ Standard Module

⑨ Glasses Strap


⑩ Nose Pad

Lens Replacement Instructions

Step 1 — Remove the Lens Lock

Use moderate force to remove the lens lock from the slot.


If it is difficult to remove, ask someone to hold both temple arms with both hands and gently bend them outward to create a small gap at the locking section, then remove the lens lock.

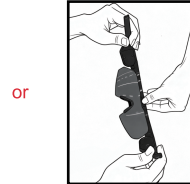

or

Step 2 — Take Out the Lens

Carefully remove the lens from **one side** of the frame groove, then take it out completely.

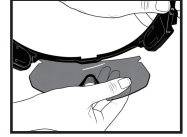



Step 3 — Replace the Nose Pad

Use moderate force to remove the nose pad from **one side** of the old lens, then attach it to the new lens until you hear a click.



Step 4 — Insert the New Lens

First, insert **one side** of the new lens into the frame groove, then gently push in the other side until you hear a click.

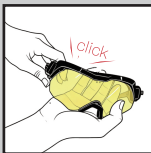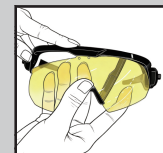

Step 5 — Reinstall the Lens Lock


Carefully press the lens lock back into place until you hear a light click, ensuring it is fully secured. **Double-check that the lens is firmly secured before use.**



Installing & Removing the Standard Module


Installation

Align the standard module with the standard slot on the **inside** of the glasses frame, and press it firmly until it snaps into place.

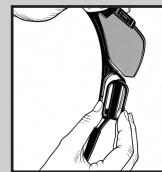

Removal

From the **outside** of the frame, gently press the standard module inward to release it from the standard slot.

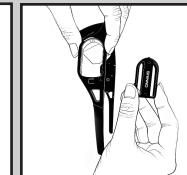


Earplug Module Installation & Removal

Installation

Step 1 — Insert Through the Earplug Slot



Pass the earplug through the earplug slot on the **inside** of the glasses frame.

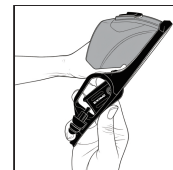

Step 2 — Press to Attach



Align the earplug module with the slot on the inside of the glasses frame, and press firmly until it snaps into place.

Make sure the earplug module is securely attached.

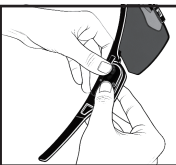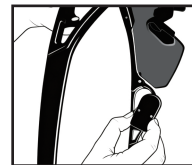

Removal


From the **outside** of the frame, gently press the earplug module inward to release it from the slot.

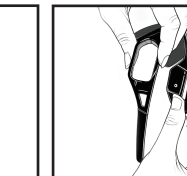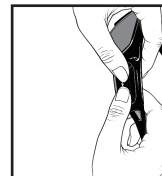

How to Pull Out, Retract & Replace the Earplugs



Pulling Out

Gently pull the earplugs outward to the desired length. You can adjust the length freely according to your needs.

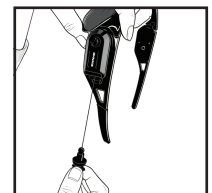



Retracting

Hold the earplug module vertically, facing downward, and press the button to retract the earplugs automatically.

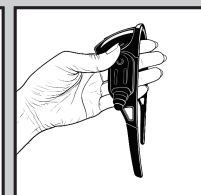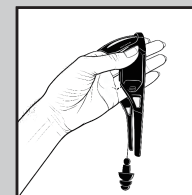

Replacing (Both types of earplugs are suitable)


Gently remove the old earplug, then screw in the new one counterclockwise until it fits securely.

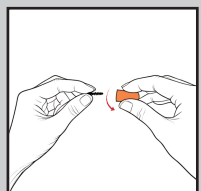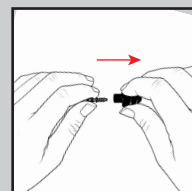

Using the Glasses Strap

Step 1 — Check the Left/Right Indicator

Before installation, confirm the "L" (Left) and "R" (Right) marks on the strap.

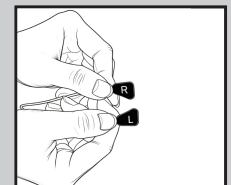

Step 2 — Attach from the Outside

Align the strap connector with the strap slot on the outside of the glasses frame and press it into the slot.

