

WALL BRACKET(S) INSTALLATION

Mount the provided wall “Z” brackets to wood studs or cement walls for strong support. Mount the bracket(s) at recommended height of 42.5” from the finished floor to the top of the bracket (Figure 6).

Slide the sink onto the wall brackets and be sure the sink sits securely on them.




FOR KNEE VALVE (KV) OR TOE-PUSH VALVE (FV) MODELS: Connect water supply lines to valve(s) and water supply line(s) from valve(s) to faucet(s). Connect drain(s). (Figure 6).

Adjust mixing valve at front of valve (Figure 7).



Suggested Rough Plumbing Dimensions

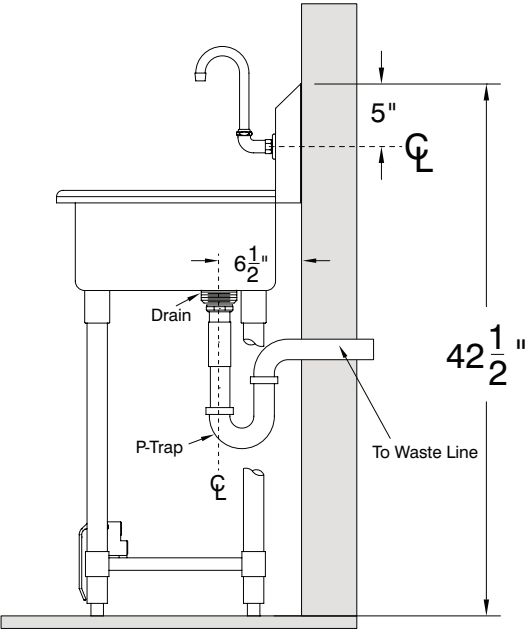

For Further Assistance  
Contact Customer Service at:  
**800-645-3166**  
or  
[customer@advancetabco.com](mailto:customer@advancetabco.com)



Installation Instructions for  
**FREE STANDING**  
**NSF MULTI-STATION SINKS**  
**FS-FM/FC-FM SERIES**

| NO FAUCET INCLUDED                  | MANUAL FAUCETS INCLUDED                 | ELECTRONIC OPERATED FAUCETS             |
|-------------------------------------|-----------------------------------------|-----------------------------------------|
| Model #                             | Model #                                 | Model #                                 |
| FC or FS-FM-1-ADA                   | FC or FS-FM-1-ADA-F                     | FC or FS-FM-1-EFADA                     |
| FC or FS-FM-23/FC or FS-FM-23-ADA   | FC or FS-FM-23-F/FC or FS-FM-23-ADA-F   | FC or FS-FM-23EF/FC or FS-FM-23EFADA    |
| FC or FS-FM-40/FC or FS-FM-40-ADA   | FC or FS-FM-40-F/FC or FS-FM-40-ADA-F   | FC or FS-FM-40EF/FC or FS-FM-40EFADA    |
| FC or FS-FM-60/FC or FS-FM-60-ADA   | FC or FS-FM-60-F/FC or FS-FM-60-ADA-F   | FC or FS-FM-60EF/FC or FS-FM-60EFADA    |
| FC or FS-FM-80/FC or FS-FM-80-ADA   | FC or FS-FM-80-F/FC or FS-FM-80-ADA-F   | FC or FS-FM-80EF/FC or FS-FM-80EFADA    |
| FC or FS-FM-100/FC or FS-FM-100-ADA | FC or FS-FM-100-F/FC or FS-FM-100-ADA-F | FC or FS-FM-100EF/FC or FS-FM-100EFADA  |
| FC or FS-FM-120/FC or FS-FM-120-ADA | FC or FS-FM-120-F/FC or FS-FM-120-ADA-F | FC or FS-FM-120EF/FC or FS-FM-120EFADA  |
| FC or FS-14-21-FM/FC or FS-16-25-FM | FC or FS-14-21-FM-F/FC or FS-16-25-FM-F | FC or FS-14-21EF-FM/FC or FS-16-25EF-FM |

| KNEE OPERATED FAUCETS                   | TOE-PUSH OPERATED FAUCETS               |
|-----------------------------------------|-----------------------------------------|
| Model #                                 | Model #                                 |
| FC or FS-FM-23KV/FC or FS-FM-23KV       | FC or FS-FM-23FV/FC or FS-FM-23FV       |
| FC or FS-FM-40KV/FC or FS-FM-40KV       | FC or FS-FM-40FV/FC or FS-FM-40FV       |
| FC or FS-FM-60KV/FC or FS-FM-60KV       | FC or FS-FM-60FV/FC or FS-FM-60FV       |
| FC or FS-FM-80KV/FC or FS-FM-80KV       | FC or FS-FM-80FV/FC or FS-FM-80FV       |
| FC or FS-FM-100KV/FC or FS-FM-100KV     | FC or FS-FM-100FV/FC or FS-FM-100FV     |
| FC or FS-FM-120KV/FC or FS-FM-120KV     | FC or FS-FM-120FV/FC or FS-FM-120FV     |
| FC or FS-14-21KV-FM/FC or FS-16-25KV-FM | FC or FS-14-21FV-FM/FC or FS-16-25FV-FM |



CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

**WARNING:** Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more Info, visit [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


**(1) Sink, (2) "Z" Wall Brackets, Legs\*, Faucet(s)\*, Drain(s)\***  
**\*See Below For Proper Quantities Supplied Per # Of Stations:**

**TOOLS NEEDED (Not Included):** 5/32" Allen Wrench


Insert top of legs into adjustable shelf corners (bottom of undershelf). Slide legs leaving desired leg length below the shelf (**Figure 1**). Insert Allen Head Set Screws into adjustable shelf corner and lightly tighten (**Figure 1a**). Do not over-tighten at this time.



Slide entire bracing over the legs to desired height and tighten with Allen Wrench (**Figure 3**).

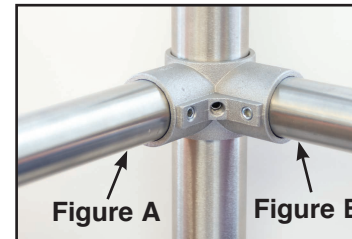

Slide tubular legs all the way into the gussets (**Figure 5**).  
Tighten each Set Screw using Allen Wrench (**Figure 6**).

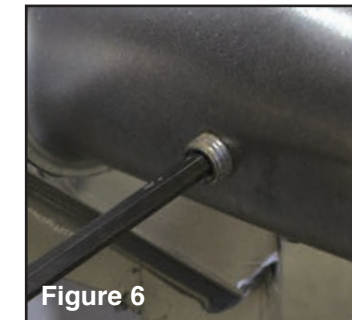

### Toe-Push Model FC-FM-40 Shown