



# Installation Instructions for **FSS-W SERIES** **WALL MOUNTED TABLES**



**CHECK FOR CONCEALED DAMAGE**  
**FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Pan Racks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of pan storage and transport and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

© ADVANCE TABCO MARCH 2018

# CONTENTS IN BOX

| Quantity | Part Description         |
|----------|--------------------------|
| (1)      | Wall Mount Table         |
| (2-4)    | Tubular Support Brackets |


**TOOLS REQUIRED:** One 5/32" Allen Wrench, One Open End Wrench or Ratchet, level and pencil

## STEP 1:

Place Wall Mount Table face down on a protected surface, exposing the hat channel on the bottom of the unit.

## STEP 2:

Insert all Tubular Support Brackets into each Gusset (**Figure 1**).  
Lightly tighten set screws using a 5/32" Allen Wrench (**Figure 2**).

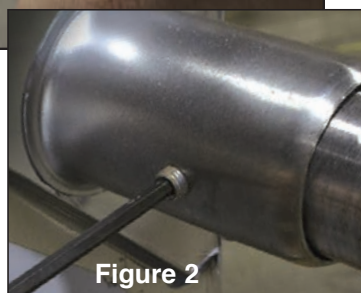


**STEP 3:**

Have partner(s) hold up table against the wall were to be installed and mark each Support Bracket Flange and Wall Angle Bracket holes on wall for drilling (**See Figure 3 For Diagram**). Level at this time. Loosen or tighten Wall Flange until it sits properly against the wall. Drill proper holes to accommodate mounting hardware (Not included).

**STEP 4:**

Have partner(s) hold up table against the wall, lining up pre-drilled holes, and secure wall flanges and Angle Brackets to wall. Tighten all set screws in all Support Brackets.

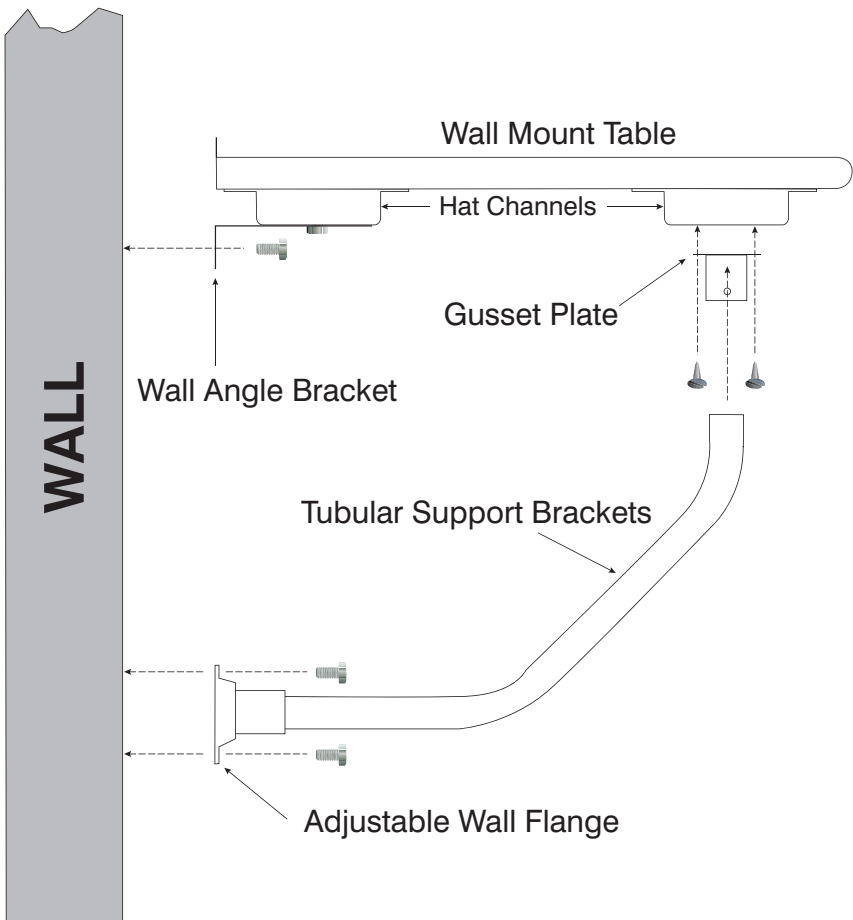

**Figure 3**



Edgewood, New York 11717-8380

[www.advancetabco.com](http://www.advancetabco.com)

800-645-3166