

Product Name: AQPU PET SMART TRACKER

Model No. : O-001

Charging & Power On

This tracker has no power button. First time use:

Charge for about 2 hours using the magnetic charging cable. The tracker will power on automatically while charging.

- Charging: Red ring light stays ON.
- Fully charged: Red ring turns OFF; small green light stays ON.

Important:

- Always use the original charging cable to ensure proper power-on and charging.
- To prevent battery failure, charge the tracker at least once a month if not in use.


Quick activation

1. Get the app. Scan the QR code to download the Aqupu app.
2. Sign up or log in. Open the app and create an account or log in.
3. Add your tracker. Enter the tracker ID or scan the QR code on the back.
4. Activate. Choose a subscription plan and follow the prompts.

Note: A subscription is required for cellular connectivity, which enables real-time tracking.

Add a pet

1. Tap **Account** on the bottom bar.
2. Select **Pets**, then tap **Add New Pet**.
3. Enter your pet's details and tap **Save**.

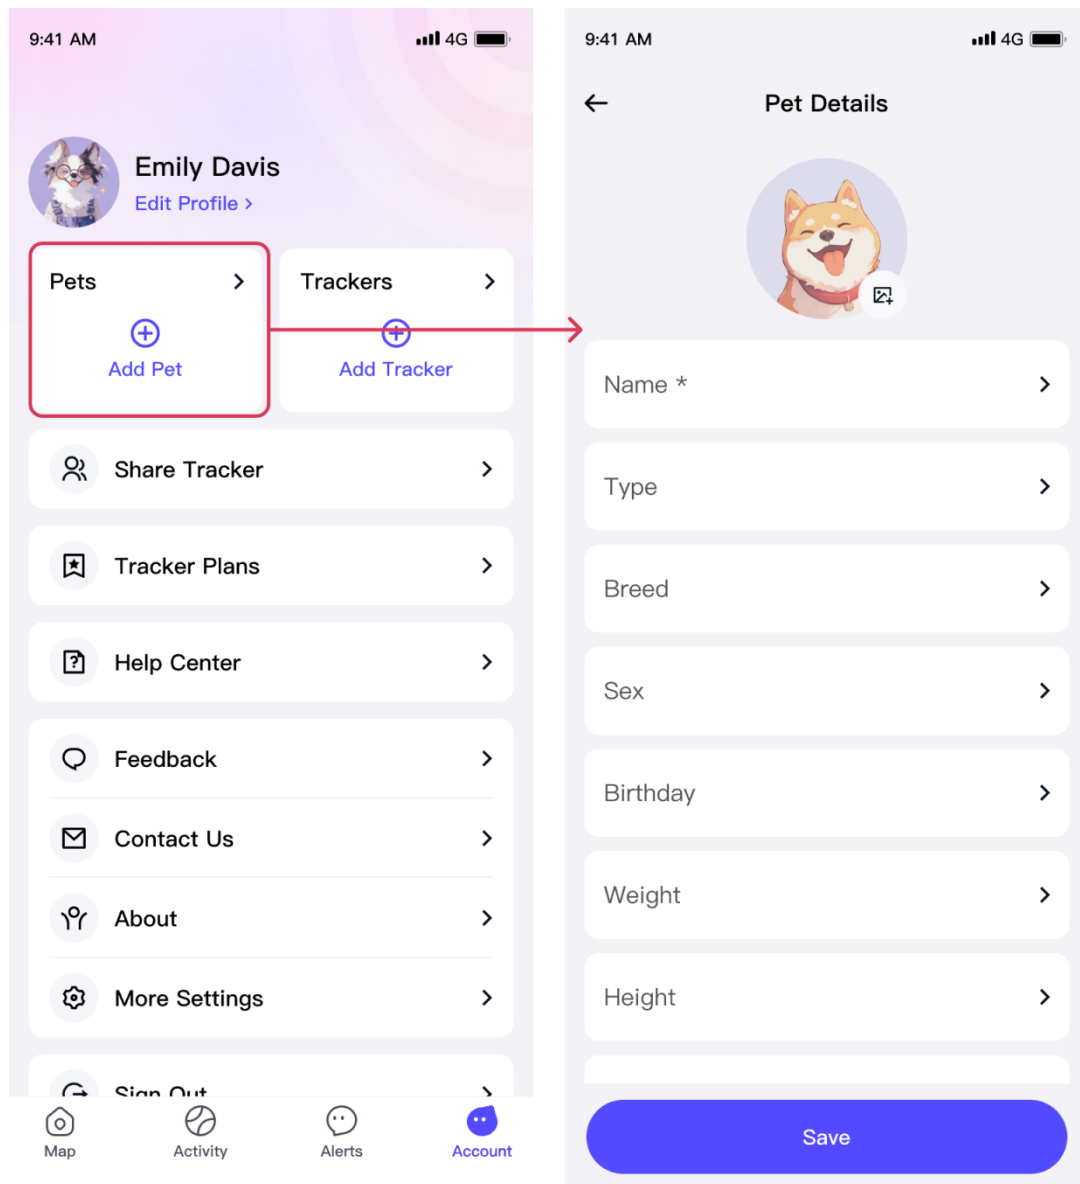

Link tracker to pet


You can link a tracker to a pet in two ways:

From the Pets page

Account > Pets > select a pet > Linked Tracker > choose a tracker

From the Trackers page

Account > Trackers > select a tracker > Linked Pet > choose a pet

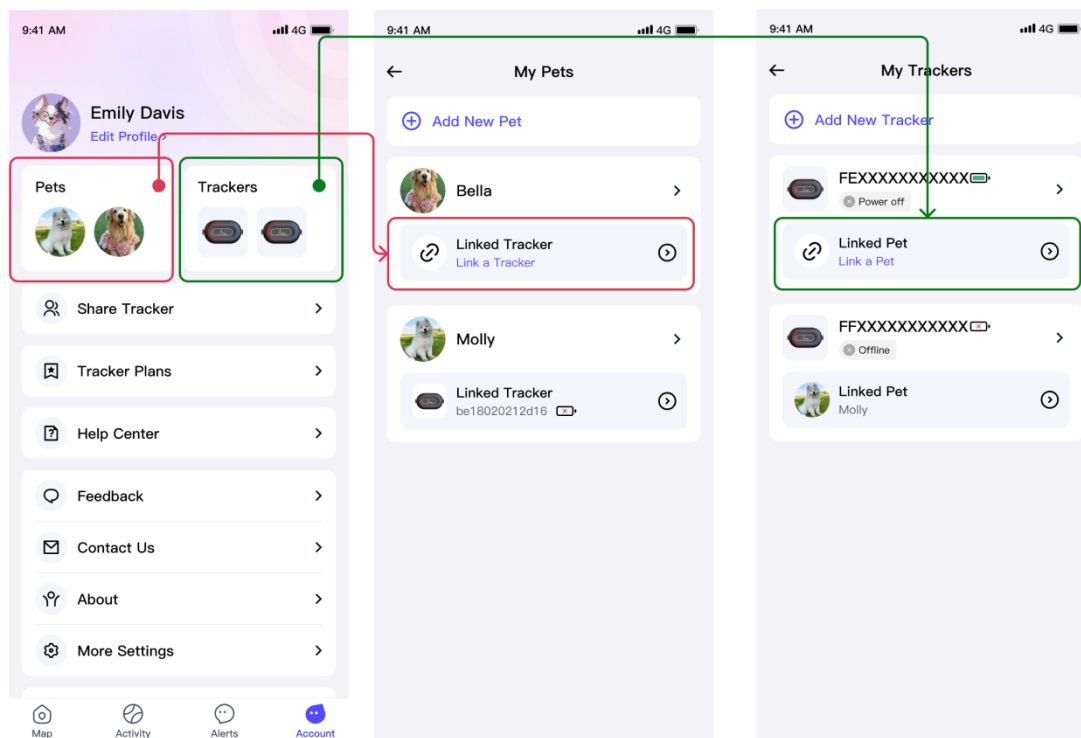

Get in touch

Thank you for choosing Aqupu.

We're committed to providing you with reliable support. If you have any questions, please reach out to us:

Email: service@zjsckd.com

Regulatory & Safety Information

FCC STATEMENT : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and,

if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Important Safety Instructions

Medical Devices

This product contains magnets and radio transmitters that may interfere with pacemakers, defibrillators, and other implanted medical devices. Maintain a minimum distance of 6 inches (15 cm) between the tracker and the medical device. Consult your physician and medical device manufacturer before use.

Battery Safety

This device contains a lithium-ion battery. Do not disassemble, crush, or puncture the device. Do not expose to fire or high temperatures. Use only the provided magnetic charging cable. Charge in a well-ventilated area. Discontinue use if the battery swells or overheats.

Choking Hazard

This device contains small components. Keep away from children and pets to prevent accidental swallowing.

Disposal

Please recycle the device and battery according to local laws and regulations. Do not dispose of in household waste.

For support, contact: service@zjsckd.com