

SMART GLASSES

User Manual



FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio

or television reception, which can be determined by turning the equipment off and on, the user is encouraged

to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

01

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Connection Instructions

Download the App

- This smart glasses is a standalone product. Please download the APP and connect it to your mobile phone before use.
- Method 1: Scan the QR code below with your mobile phone to download and install the application.

02

- Method 2: Search for "EYEVUE" in major mobile app stores such as Android or Apple to download and install.



How to Connect


- Mobile Pairing:
 1. Press and hold the button on the right temple to power on, and the blue indicator light will flash.
 2. Turn on Bluetooth and location service on your mobile phone, launch the "EYEVUE" app, tap Add Device to search for the glasses name, then tap Bind to pair.
 3. Wait a few seconds. If a Bluetooth pairing request pops up on your phone, tap Allow to pair. A "ding" sound from the glasses indicates a successful connection.
- Note: Please allow network permission when importing captured content to the APP.

Warm Tips:

- 1. This product supports photo taking and video recording, but the power consumption is relatively high during use. When the battery level is below 15%, the device will disable photo taking, video recording and data transmission to mobile phone functions, which can be restored after charging.
- 2. This product supports WIFI data transmission to mobile phone for saving. This function can be realized only after the mobile phone allows the APP to obtain relevant permissions.

03

Appearance

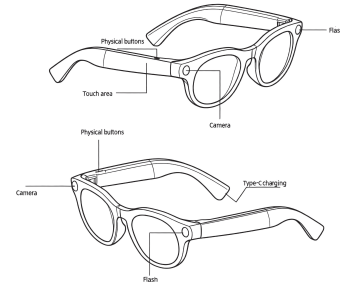

Operation Instructions

- Power on: Press and hold the button for 3 seconds in power-off state;
- Power off: Press and hold the button for 5 seconds in power-on state;
- Photo taking: Short press the button once in power-on state to take photos. Photos will be automatically stored in the built-in memory of the product and can be imported to a mobile phone for saving after connecting to the APP;

04

- Video recording: Quick short press the button twice in power-on state to start recording. Short press once again during recording to end it. Videos will be automatically stored in the built-in memory of the product and can be imported to a mobile phone for saving after connecting to the APP;
- Audio recording: Press and hold the button for 2 seconds in power-on state to start audio recording. Short press once during recording to end it. Recorded audio will be automatically stored in the built-in memory of the product and can be imported to a mobile phone for saving after connecting to the APP;
- Call handling: Short press once to answer an incoming call, long press for 2 seconds to reject it. Short press once to end a call during conversation;
- Factory reset: Press the button 5 times continuously in power-on state to restore the product to factory settings. (This operation will clear all data on the device, please use with caution.)

Touch Control Area

- Voice Assistant: Press and hold the touch area for 3 seconds in power-on state, or use the voice command "Hey Alice" to activate voice control.
- Music: Single tap the touch area to play/pause music.
- Previous track: Triple tap the touch area while playing music.
- Next track: Double tap the touch area while playing music.
- Volume up: Slide forward on the touch area while playing music.
- Volume down: Slide backward on the touch area while playing music.

05

EN/英语



Temple Indicator Light

AI wake-up word	Hey Alice	
Direct voice	Answer call	
Direct voice	Hang up	
	Take a photo/Take a picture	Previous song
	Take a video/Record video	Next song
	Stop recording	Volume dow
	Take a recording/Record audio	Volume up
	Stop recording	Visual recognition
	Play music	Photo recognition
	Continue Playing	What's this
	Pause music	

※ This product supports photo taking and video recording functions. It is strictly prohibited to use this product for secret shooting and other improper behaviors. Please strictly abide by local laws and regulations and use this product properly.



连接说明

下载应用

- 本智能眼镜是单机产品，使用前请先下载APP与手机连接后方可使用
- 方法一：请使用手机扫描下方二维码下载并安装应用。
- 方法二：在安卓或者苹果等各大手机品牌应用市场搜索“EYEVUE”，下载并安装。



如何连接


- 手机配对：
 - 1.长按镜腿右侧按键开机，蓝色指示灯闪烁
 - 2.手机打开蓝牙，定位后进入软件(EYEVUE),点击添加设备搜索到眼镜名称，点击绑定进行配对。
 - 3.等待几秒，若手机弹出蓝牙配对请求，点击允许配对，眼镜听到叮咚一声表示连接成功
- 注：在导入拍摄内容到APP时，请允许获取网络权限。

温馨提示：

- 1.本产品支持拍照和录像，但使用时功耗相对较高，在电量低于15%时，设备将停用拍照、录像功能和传输数据到手机功能，充电后可恢复使用。
- 2.本产品支持WIFI传输数据到手机并保存，需要手机允许APP使用相关权限后方可实现。



外观

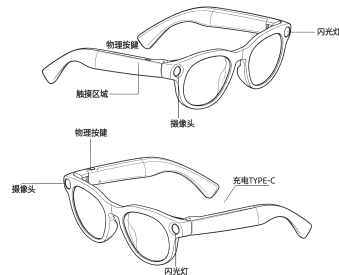

操作说明

- 开机：关机状态下，长按按键3秒开机；
- 关机：开机状态下，长按按键5秒关机；
- 拍照：开机状态下，短按1次可拍照，照片会自动存储在产品的本地内存，可连接APP后导入手机保存；
- 录像：开机状态下，快速短按2次可录像，录像过程中再短按一次结束本次录像，拍摄的视频会自动存储在产品本地内存，可连接APP后导入到手机保存；
- 录音：开机状态下，长按按键2秒，开启录音功能，录音过程中短按一次结束，录制的音频会自动储存在产品本地内存，连接APP后可导入手机保存；
- 通话：当有电话进入时，短按一次可接听，长按2秒可拒接当次来电，在通话中，短按一次结束通话；
- 出厂设置：开机状态下，连击按键5次，会使产品恢复出厂设置，（此操作会清空设备上所有数据，请谨慎使用）



触摸区域

- 语音助手:开机状态下，长按触摸区域3秒或者使用语音指令“小艾，小艾”即可激活语音控制
- 音乐:单击触控区域，可播放/暂停音乐
- 上一曲:播放音乐时，三击触摸区域
- 下一曲:播放音乐时，双击触摸区域
- 加大音量:播放音乐时，向前滑动触摸区域
- 减小音量:播放音乐时，向后滑动触摸区域



语音唤醒词与控制指令

AI唤醒词
直接语音
直接语音

小艾，小艾
接听电话
挂断电话
开始拍照/打开拍照
开始录像/打开录像
停止录像/关闭录像
开始录音/打开录音
停止录音/关闭录音
播放音乐
继续播放
暂停播放

上一首/上一曲
下一首/下一曲
减小音量
增大音量/加大音量：
视觉识别
拍照识别
我面前的是什么

※ 本产品支持照相，录像功能，严禁使用本产品进行偷拍等行为，请严格遵循当地法律法规，健康使用本产品。

合格证

QUALIFIED CERTIFICATE

型 号：
(MODEL)
检 验 员：
(CHECKER)
出厂日期：
(DATE)

