

智能眼镜


SMART GLASSES

使用手册

User Manual

产品图示

Product Diagram

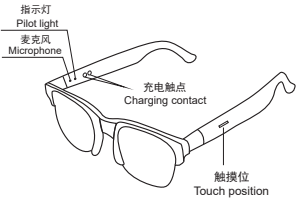

包装清单

1、GM7智能蓝牙眼镜	1副
2、磨砂PE袋	1个
3、一托二充电线	1条
4、眼镜布	1片
5、使用说明书	1份
6、眼镜收纳袋	1个

Packing list

1、GM7 Smart Glasses	1 pair
2、Matte PE bag	1 piece
3、One to two charging line	1 item
4、Glasses cloth	1 piece
5、User Manual	1 copy
6、Glasses storage bag	1 piece

产品规格

产品型号：GM7

蓝牙版本：V5.4

电池规格：3.7V 55mAh

信号距离：≥10米

播放时间：约4小时

通话时间：约4小时

待机时间：约140小时

充电时间：约2小时

Product specifications

Product Model：GM7

Bluetooth version：V5.4

Battery specifications：3.7V 55mAh

Distance：≥10 meters

Play time：About 4 hours

Talk time：About 4 hours

Standby time：About 140 hours

Charging time：About 2 hours

开关机

长按两侧凸起触摸位3秒开机。

长按两侧凸起触摸位4秒关机。

（注：眼镜上有汗水会影响触摸效果，请注意清洁）

Power on/off

Long press the protruding touch positions on both sides will turn on in 3 seconds.

Long press the protruding touch positions on both sides will turn off in 4 seconds.

(Note: Sweat on glasses can affect the touch effect, please pay attention to cleaning)

配对

1. 智能眼镜开机后左右腿橙绿灯交替闪烁，进入双腿搜索配对状态，配对成功后左腿指示灯熄灭右腿橙绿灯交替闪烁，同时播放配对成功提示音。

2. 启动手机或者其它设备的蓝牙功能，搜索到设备名“GM7”后点击连接，连接成功后右腿指示灯熄灭同时播放连接成功提示音。

3. 当连接成功后，第二次开机时眼镜会优先进入回连状态自动回连已连接过的手机。

Pairing

1. After turning on the smart glasses, the orange and green lights on the left and right legs flash alternately, entering the search pairing state. After successful pairing, the left leg indicator light goes out and the orange and green lights on the right leg alternate, while playing a pairing success prompt sound.

2. Turn on the Bluetooth function of your phone or other device, search for the device name "GM7" and click on connect. After successful connection, the right leg indicator light will turn off and a successful connection prompt sound will be played.

3. After successful connection, the glasses will first enter the reconnection state and automatically reconnect to the connected phone when turned on again.

参考图示

设置

蓝牙

蓝牙

已发现手机

GM7 未连接

GM7

Refer to the diagram

Settings

Bluetooth

Bluetooth

Now discoverable as "iPhone"

GM7 Connected

GM7

音乐

触摸左腿或右腿凸起位2下可播放/暂停音乐。

触摸左腿凸起位1下切换到上一曲，触摸右腿凸起位1下切换到下一曲。

触摸左腿凸起位3下加大音量，触摸右腿凸起位3下减小音量。

Music

Touch the protruding position of the left or right leg twice to play/pause music.

Touch the left leg protrusion 1 to switch to the previous track, and touch the right leg protrusion 1 to switch to the next track.

Touch the left leg protrusion 3 times to increase the volume, and touch the right leg protrusion 3 times to decrease the volume.

电话

来电时，触摸左腿或右腿凸起位2下可接听电话。

通话时，触摸左腿或右腿凸起位2下可挂断电话。

来电时，触摸左腿或右腿凸起位2秒可拒接来电。

Phone

When calling, touch the protruding position of the left or right leg twice to answer the call.

When making a call, touch the protruding position of the left or right leg twice to hang up the phone.

When receiving a call, touch the protruding position of the left or right leg for 2 seconds to reject the call.

摇控拍照

先将手机进入相机拍照模式，触摸左腿或右腿凸起位2下可进行拍照。

Remote control photography

First, enter the camera mode on your phone and touch the protruding position on your left or right leg twice to take a photo.

唤醒语音助手

触摸左腿或右腿凸起位2秒可启动苹果Siri或谷歌语音助手进行语音控制手机操作。

Wake up voice assistant

Touch the protruding position of the left or right leg for 2 seconds to activate Apple Siri or Google Voice Assistant for voice control of mobile phone operations.

充电

将一托二充电线USB端插入DC5V/1A充电器的USB口，另一端两个磁吸头分别对着眼镜两只腿的充电点吸上去（注：眼镜腿上有汗水会影响接触效果，请注意清洁），充电时橙色指示灯长亮，充满后熄灭（充电时间约2小时）。

当电池电量不足时，间隔1分钟播放一次电量不足提示音，直至低电关机。

Charge

Insert the USB end of the one to two charging line into the USB port of the DC5V/1A charger, and use two magnetic suction heads on the other end to suction onto the charging points of the two legs of the glasses (note: sweat on the legs of the glasses can affect the contact effect, please pay attention to cleaning). The orange indicator light will stay on during charging and turn off after being fully charged (charging time is about 2 hours).

When the battery is low, play a low battery warning sound every minute until it shuts down due to low battery.

M

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.