
Network media player

User Manual



Model: V3

Product Packaging Details


No.	Component Name	Quantity
1	Device	1
2	Type-c cable	1
3	BT Voice Remote Controller	1
4	User Manual	1
5	HDMI cable	1

Connection Diagram



Remote Controller Button Guide

All functions of the device can be operated via the remote controller, please refer to the function introduction of each button below

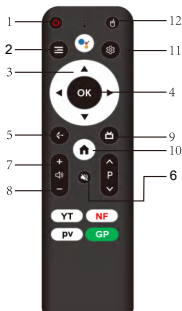

- | | |
|---------------------|---------------------|
| 1. Power Switch | 2. Menu |
| 3. Directional Keys | 4 OK/Confirm Button |
| 5. Back | 6. Mute |
| 7. Volume Up | 8. Volume Down |
| 9 . Delete | 10. Home |
| 11. Settings | 12. Mouse |

Button Name	Button Function
Power Switch	Power On/Off
Directional Keys	Move left, right, up, or down among the screen menu items to select the required directory, highlighting the selected information
OK	Select or confirm the selected information
Home	One-click return to the main interface
Back	Return to the previous screen while navigating menus. Press to exit the current folder when browsing files.
Voice	Voice-controlled set-top box
Menu	Access the menu of the current function
Volume Up	Increase Volume
Volume Down	Decrease Volume
Delete	Delete the input

Home	One-click return to the main interface
Settings	One-click to the system Settings

Android tv Box Connection with TV

1. Connect the TV Box to the TV's HDMI interface.



2. Switch the TV to the appropriate HDMI channel, e.g., if connected to the TV's HDMI2 interface, select HDMI2 as the TV signal input source (refer to the TV manual).

3. Plug in the TV Box power supply.

[Note] Do not hot-plug the HDMI cable, please turn off the device power when connecting cables.

If the HDMI interface is not used for an extended period, plug and unplug it 2-3 times to ensure good contact.

Without written permission from our company, no individual or entity may copy or translate part or all of this user manual. It cannot be distributed commercially or for profit in any form or by any means (electronic, mechanical, photocopying, recording, or any other possible way).

The product specifications and information provided in this manual are for reference only; updates may be made without notice. This manual is solely for user guidance. All statements, information, etc., do not constitute any form of warranty.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body