


ZNP

Bluetooth AI Companion

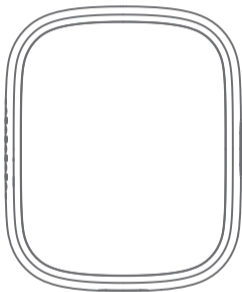

Quick Start Guide
ZNP Z02

Product Specifications

Product Name: ZNP Bluetooth AI Companion

Model: ZNP Z02

Version: 6.0

Range: $\geq 10\text{m}$

Battery Capacity: 500mAh

Rated Input Voltage: 5V $\overline{\text{---}}$ 500mA

Battery Type: Li-Polymer Battery,

Standard Voltage: 3.7V

Standby time: approx. 500 H


Charging Time: About 1.5 H

Our Story & Strengths

We spent 3 years challenging norms and building our exclusive AI model Saymi—to fix real regrets: lost ideas without WiFi, missed stories due to language, hidden worries over privacy. That's ZNP.

- Bluetooth + Saymi: Works without WiFi—Saymi responds anytime, anywhere.
- Saymi's 60 Languages: Millisecond switching + visual interaction—no communication barriers.
- Saymi's Local Operation: Solid privacy—no cloud data risks, all processing on-device. We never aimed for "smarter AI"—but a companion that helps you get through all inconveniences.

What's in the box

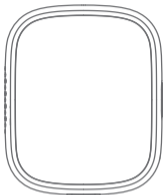

ZNP Bluetooth AI Companion



Lanyard



Magnetic clip







Quick Start Guide



USB-C cable

Components

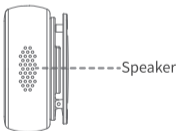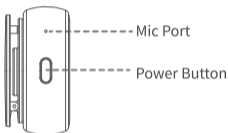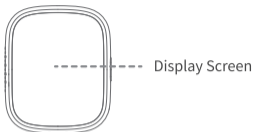

Instructions

- 1. Power on:** Press and hold the power button for 5 seconds to power on the device.
 - 2. Power off:** Press and hold the power button for 2 seconds. The page will pop up three icons: Power Off, Restart, and Restore Factory Settings. Click the corresponding icon to complete the desired operation.
 - 3. Force shutdown:** Press and hold the power button for 10 seconds to force shutdown. This is suitable for emergency operations when the device freezes or the screen gets stuck.
 - 4. Voice Dialogue:** When the device's main page is in a connected state, swipe up to access the QR code page. You can download the APP or scan the code to complete device pairing. After successful pairing and connection, the AI voice dialogue function can be activated.
 - 5. Meeting Minutes:** When the main page is connected, swipe down and click the Meeting Minutes icon, or directly double-click the power button to enter the Meeting Minutes page. Click the microphone button to start recording meeting minutes.
 - 6. Memo:** In the AI voice dialogue state, you can use voice commands to set a memo. The memo switch can be turned on/off either on the APP side or on the device itself. Memo settings are only supported for a period within 24 hours.
 - 7. Quick Adjustment:** Swipe down on the device's main page to directly adjust the volume and screen brightness.
 - 8. Change Wallpaper:** Swipe left or right on the main page to switch the background image style.
 - 9. Screen Wake-up:** Double-tap the screen to quickly wake up the device.
 - 10. Function Settings:** Audio playback output switching and device sleep time can be set in the "My Devices" section of the APP.
- Note:** After restoring the device to factory settings, Apple (iOS) phones need to manually unpair the device from the Bluetooth list and then scan the code again to connect and use it.

Installing Software



Android Download



ISO Download





Scan to Download the App

Software Connection and Usage




Three connection methods:

1. Open the app, and a pop-up window will appear on the page, allowing you to connect.
2. On the app home page, connect your device by tapping on the device named " ZNP Z02 ".
3. Tap the scan icon in the upper right corner and scan the device QR code to connect.

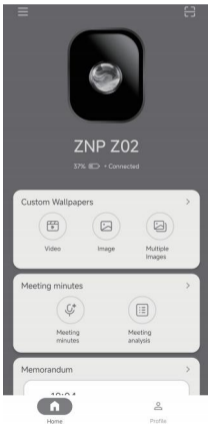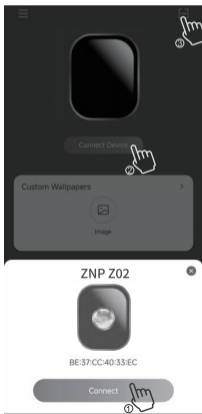



Meeting minutes

1. After successfully connecting, swipe down on the device's main interface and click the Meeting Minutes icon, or double-click the button to enter "Meeting Minutes", then click the "Meeting Minutes" icon and start recording.
2. After the recording is complete, click "Generate Now" in the app to obtain accurate transcription, summary, and mind map. You can also select the language for transcription.

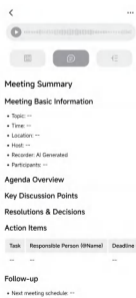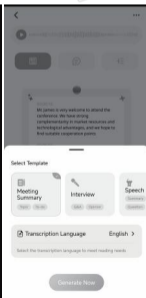

Custom Wallpapers



1. Online Wallpaper: Select your favorite themes. Tap "Upload".
2. Video: Tap "+" to choose from the album/file manager. The duration of each video clip must be between 3 and 8 seconds. Tap "Upload" to proceed. (Up to 5 historical videos can be saved.)
3. Single Image: Tap "+" to choose from the album/file manager. Stickers are also available for image editing. Tap "Upload" to proceed. (Up to 5 historical images can be saved.)
4. Multiple Images: Tap "+" to choose 1–10 images from the album/file manager. You can also select the playback duration for each image in the carousel. Tap "Upload" to proceed. (Up to 5 multiple-image AVI files can be saved.)

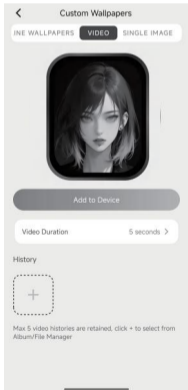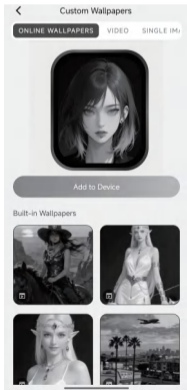

Playback Mode

On my interface, click My Device.

You can freely select the audio playback source: wireless Device or Phone Speaker.

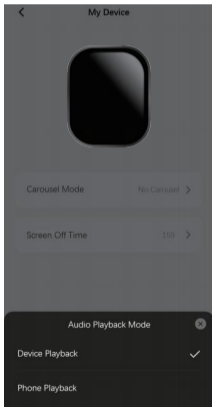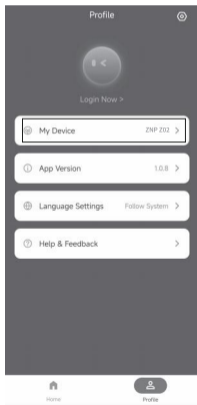

Display Screen Features

Wallpaper Interface



Swipe left or right to change the wallpaper, and delete the current one by long-pressing the home screen for 2 seconds.

Chat Interface



In a Chat



Listening...

Battery Level / Brightness Control



Volume /Brightness
/Meeting minutes
/Memo

Power-off screen



Factory Reset / Restart
/ Power Off

1. Do I need to connect Bluetooth from the phone settings first?

No, you only need to connect via the APP. Remember to click "Pair".

2. Is "Saymi" the only option for switching audio playback?

Yes, the audio playback switch in the APP interface is only for the "Saymi" audio output port. Please disconnect the "Saymi" connection first if other APPs need to change the audio output port.

3. Does "Saymi" have a memory function?

Currently, it does not. The previous memory is not supported for storage after each restart of the conversation.

4. What can "Saymi" do?

At present, "Saymi" can provide mutual translation in 60 languages (you can do this by issuing the command "Enter translation mode"), knowledge Q&A (equivalent to an "encyclopedia"), and companion mode (playing games and adventures together, and it can also tell you stories)...

5. Why didn't my wallpaper upload succeed? It shows insufficient memory.?

Uploading videos consumes a significant amount of memory. If you have insufficient space, you can try pressing and holding an unwanted wallpaper for 2 seconds to delete it, freeing up space before re-uploading.

6. Why can't my device connect/pair?

Due to the Bluetooth auto-reconnection mechanism, the device failed to pair. To resolve this, clear the historical connection records in both your phone and the APP, or perform a factory reset on the device.

The development of Saymi's functions has never stopped. Feel free to use your imagination and put forward your needs—we are always here!

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.