



Suggested Rough-In Plumbing Dimensions

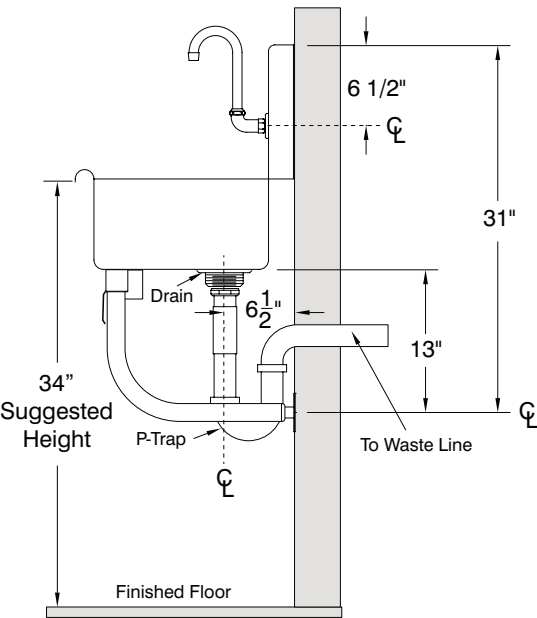

STEP 5

Adjust the tubular wall support brackets and flanges to proper alignment. Loosen or tighten each flange to sit snug against the wall and secure to wall using screws (Not Included) (Figure 4). Be sure to go back and hand tighten the set screws at this time.

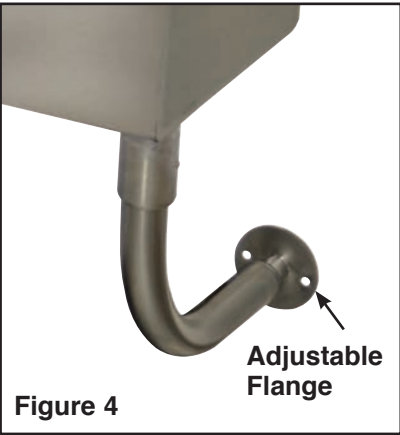


INSTALLING KNEE VALVES FOR KV SERIES

Knee Valves can be installed before or after sink is mounted to the wall. Attach each Knee Valve onto the sink by fitting into existing stud welded screws found underneath the unit.

Use supplied nuts to secure valve(s) to sink. Tighten with 7/16 inch open end wrench (Figure 5).

Connect supply lines to knee valve(s) and supply line(s) from knee Valve(s) to Faucet(s). Connect drain(s).

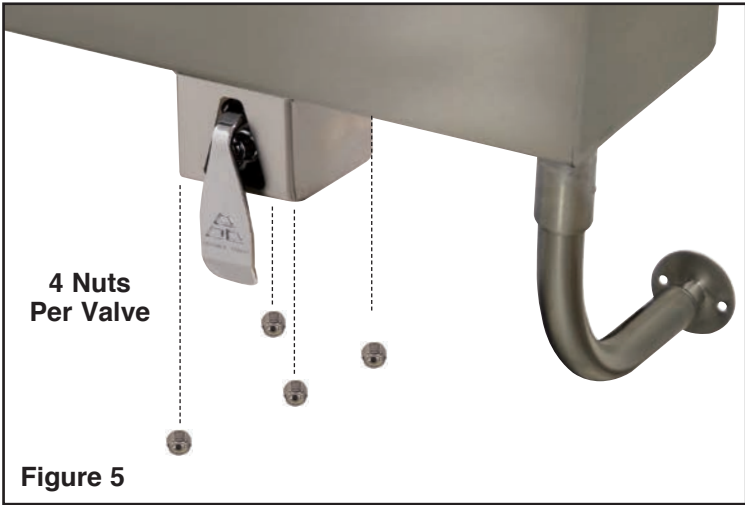

For Further Assistance
Contact Customer Service at:
800-645-3166
or
customer@advancetabco.com



Installation Instructions for
WALL MOUNTED
19-18 SERIES & WSS SERIES SINKS

MANUAL FAUCET OPERATED	ELECTRONIC OPERATED	KNEE OPERATED
Model #	Model #	Model #
19-18-1-ADA	19-18-1-EFADA	N/A
19-18-40/19-18-40-ADA	19-18-40EF/19-18-40EFADA	19-18-40KV/19-18-40KV
19-18-60/19-18-60-ADA	19-18-60EF/19-18-60EFADA	19-18-60KV/19-18-60KV
19-18-80/19-18-80-ADA	19-18-80EF/19-18-80EFADA	19-18-80KV/19-18-80KV
19-18-100/19-18-100-ADA	19-18-100EF/19-18-100EFADA	19-18-100KV/19-18-100KV
19-18-120/19-18-120-ADA	19-18-120EF/19-18-120EFADA	19-18-120KV/19-18-120KV
WSS-14-21/ WSS-16-25	WSS-14-21EF/ WSS-16-25EF	WSS-14-21KV/ WSS-16-25KV



CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

