



Bluetooth Glasses User manual

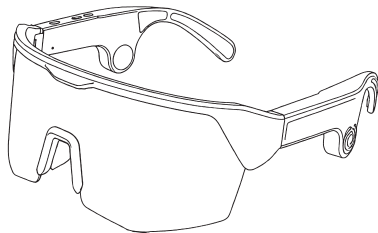

YM-S01

Product diagram

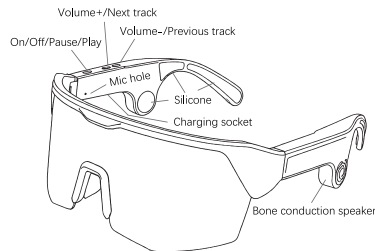

Packing list

- ① Bone Conduction Bluetooth Glasses
- ② Charging cable
- ③ Glasses storage bag and microfiber cloth
- ④ Instruction manual

Product specifications

Product model: YM-S01 Bone Conduction Bluetooth Glasses
Bluetooth version: V5.4
Charging time: approximately 60 minutes
Battery capacity: 180mAh
Transmission distance: > 20 meters
Frame material: TR90+Silicone
Lens material: PC
Charging voltage and current: DC 5V
Battery life: 12 hours
Standby time: 120 hours
Bluetooth protocol: AVRCP/A2DP/HFP/SBC/AAC
Channel: Dual channel

Functional operation instructions

- (1) Power on
Long press the pause/play button for 1.5 seconds to turn on the device and prompted "Power on"
- (2) Shut down
Long press the pause/play button for 3 seconds to shut down the device and the prompt "Power off"
- (3) Battery reminding
When power on, the device will prompt battery remaining:
High battery: > 70%
Medium battery: 30%~70%
Low battery: < 30%
- (4) Play/Pause
Click the pause/play button
- (5) Switch songs
Long press the volume- button: Previous track
Long press the volume+ button: Next track
- (6) Volume +/-
Click - button: Volume -
Click + button: Volume +
- (7) Voice assistant
Long press the pause/play button for 1.5 seconds to release and wake up the

voice assistant function

(8) Answer phone calls

Click the pause/play button, prompt for incoming call number

(9) Hang up the call

Click the pause/play button

(10) Reject incoming calls

Long press the pause/play button for 1.5 seconds

(11) Low battery warning

When the battery level is below 3.3V, the low battery warning sound will cycle once every 60 seconds, When the battery level is below 3.1V, the device will shut down due to low power

Pairing method

(1) Phone pairing

Open your phone's Bluetooth, scan for a new device, find "YM-S01", and click on pairing

(2) Phone pairing successful

The device displays a successful connection and prompts "connect "

(3) Pairing time

In pairing mode, if the phone is not paired for more than 5 minutes the glasses will automatically shut down

(4) Disconnect

The phone actively disconnects from the glasses and prompts "disconnected"

(5) Automatic reconnection

When the Bluetooth of the phone is turned on, the glasses will automatically reconnect to the last paired pair after being turned on device, prompt "connect "

Charging Operation

(1) Glasses charging

Input DC: 5V power supply for charging, red light always on

(2) Glasses fully charged

Blue light always on

Pay attention to

1. Before using the product, please read this user manual carefully and keep it properly
2. For first use, please fully charge this product first
3. If the product is not used for a long time (more than 1 month), please charge it
4. If the phone cannot search for Bluetooth glasses, please confirm whether the Bluetooth glasses are in "pairing status". If pairing or connection is not made for a long time, the Bluetooth glasses pairing function will be turned off, please turn on the Bluetooth glasses again to "pairing status"; if there is an error in the mobile program, please restart the phone; if there is an error in the Bluetooth glasses program, please restart the Bluetooth glasses

Warning

1. Do not dismantle, repair or modify glasses for any reason, otherwise it may cause electronic components to break down or even completely damage this product due to fire
2. Do not place the device in an environment where the temperature is too low or too high (below 0°C or above 45°C)
3. Please avoid using device indicator lights near the eyes of children or animals
4. Do not use this device in thunderstorm weather, as thunderstorms can cause the device to malfunction and increase the risk of electric shock
5. Do not wipe this product with oil or other volatile liquids. Do not wet the device when it comes into contact with liquid

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.