

ISOtunes®

PRO 3.0


**ONLINE
MANUAL**



TABLE OF CONTENTS

Included	3
Labeled Diagram	4
Fitting	5
<i>Eartip Choice</i>	5
<i>Fitting Instructions</i>	6
Bluetooth	7
<i>Pairing</i>	7
<i>Dual Connect</i>	8
<i>LE Audio & Auracast</i>	8
User controls	9
<i>Powering On/Off</i>	9
<i>Audio</i>	9
<i>Phone Calls</i>	9
<i>Voice assistant</i>	9
Battery & Charging	10
<i>Charging & Short charge</i>	10
Cleaning & Maintenance	11
<i>Battery Level Announcements</i>	11
Troubleshooting	12
<i>Reset</i>	12
<i>Customer Service</i>	12


INCLUDED

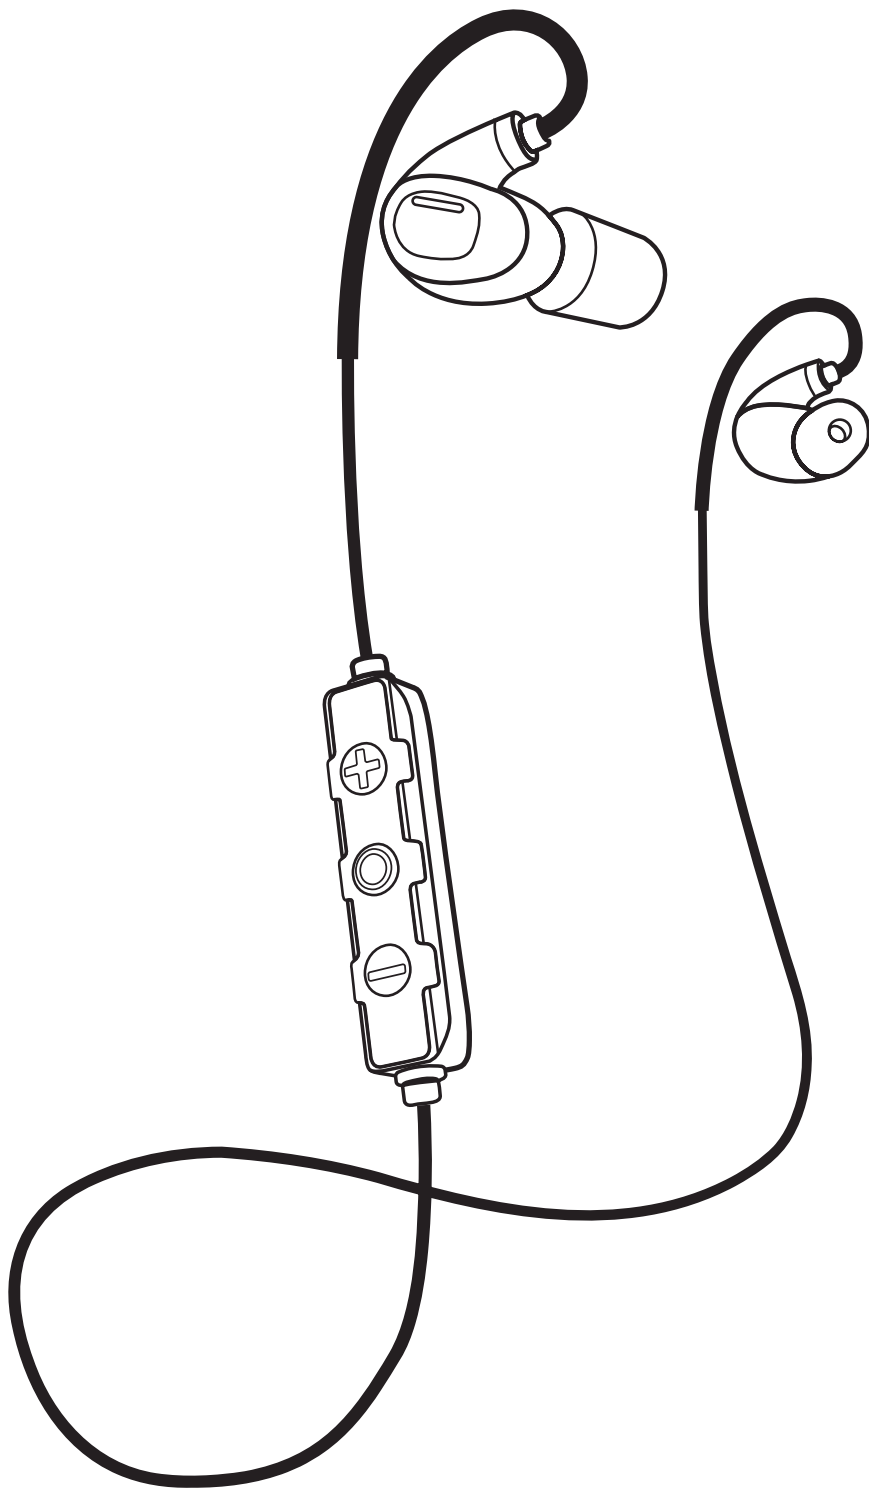

PRO 3.0 EARBUDS




RIGID CARRYING CASE

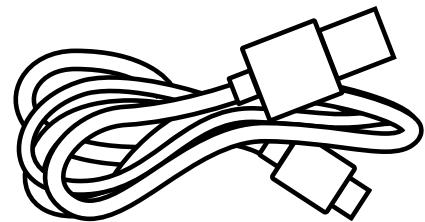

USB-C CHARGING CABLE



ALLIGATOR & CORD CLIPS



FOAM EARTIPS: XS, S, M, L
TRIPLE-FLANGE SILICONE EARTIPS

**Silicone eartips are included
only in North America*

LABELED DIAGRAM



FITTING

■ EARTIP CHOICE



Ensuring a secure fit is the **most critical** step to obtaining appropriate hearing protection.

There are multiple sizes of eartips. For the best hearing protection, use the largest eartip that fits your ear. The eartip should be snug, but not too large that it falls out.



X-SMALL TALL
WHITE CORE

SMALL TALL
GREEN CORE



MEDIUM TALL
BLACK CORE

LARGE TALL
BLUE CORE

TRIPLE-FLANGE
SILICONE*

**Silicone eartips are included only in North America*

■ FITTING INSTRUCTIONS

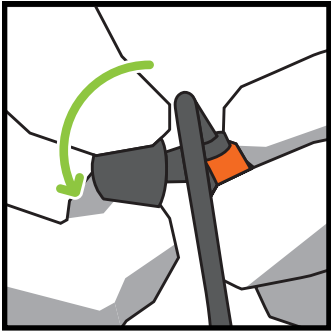


Figure 1

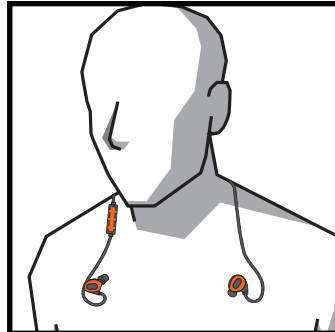


Figure 2

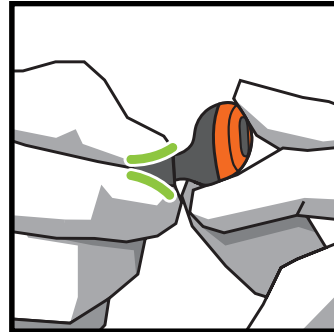


Figure 3


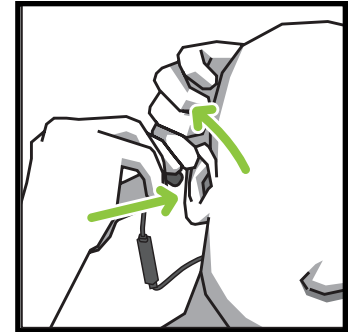


Figure 4


1. The eartip core is threaded, please screw eartips on or off the posts (*Figure 1*). Do not push or pull.
2. Place the product around your neck so that each eartip is resting on your chest (*Figure 2*).
3. Carefully roll and compress the foam tip between your fingers (*Figure 3*). Do not squeeze.
4. When ready to insert into the ear, reach over your head with your opposite hand and gently pull the top of your ear back and away from your head to open your ear canal (*Figure 4*).
5. While holding your ear open, insert the eartip into your ear and push the rolled eartip into your ear as deeply as comfortable. Hold the product in place for about 10 seconds, allowing the foam to expand and seal the ear.
6. Secure the earhook around the back of the ear. Repeat with the other eartip and ear.

BLUETOOTH

■ PAIRING

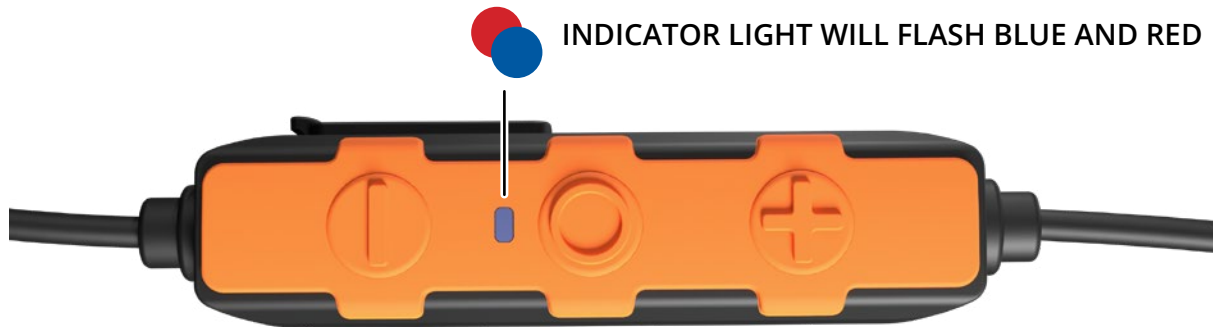

1. Open your Bluetooth settings on your device.
2. Select "ISOtunes PRO 3.0." Pair and connect.
3. Once connected you will hear "Bluetooth Connected."

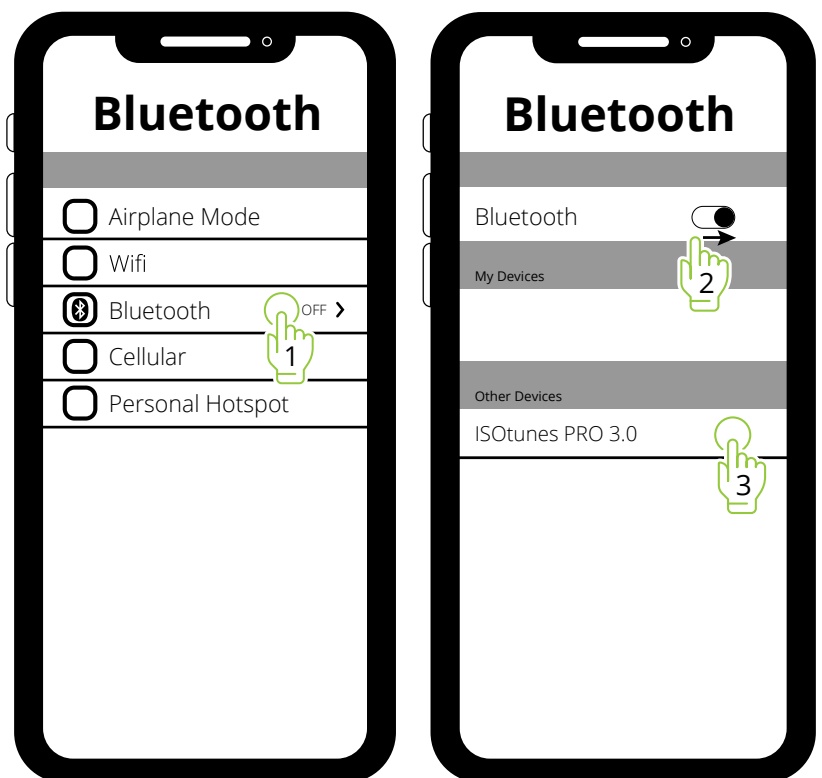

■ **DUAL CONNECT**

1. This product can connect to two devices simultaneously such as your phone and your computer.
2. Pair and connect to your first device as described in Bluetooth Pairing. This will be Device A.
3. Press and hold the multi-function button for 7 seconds.
4. You will hear *"Power Off,"* keep holding the button until you hear *"Bluetooth Pairing Mode."*
5. Pair and connect to the 2nd device as described in Bluetooth Pairing. This will be Device B.
6. On Device A, go to the Bluetooth settings and connect to the PRO 3.0. Both devices are now connected.

■ **LE AUDIO & AURACAST**

WHAT IS LE AUDIO?

LE Audio is a new feature within Bluetooth technology. LE Audio allows for better sound clarity at lower power usage. This provides a longer battery life.


WHAT IS AURACAST?

Auracast allows opportunities like:

- Broadcasting audio to invite others to listen to the same audio experience on separate devices
- Enjoying TV in public spaces, like the gym
- Being alert by hearing announcements and notifications in public spaces like the airport

To see if your phone or computer is compatible and supports these features, please consult the device's user manual or on the manufacturer's website.

USER CONTROLS

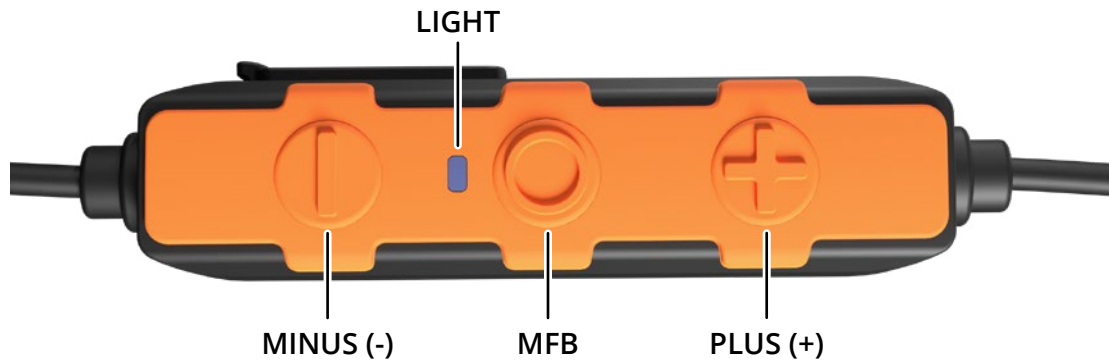

■ **POWERING ON/OFF**

🔌 **Power On/Off** — Press and hold MFB for 3 seconds

■ **AUDIO**

▶|| **Play/Pause** — Press MFB 1x

▶▶ **Next Track** — Press MFB 2x

◀◀ **Previous Track** — Press MFB 3x

🔊 **Raise Bluetooth Volume** — Press (+) button 1x*

🔊 **Lower Bluetooth Volume** — Press (-) button 1x*

■ **PHONE CALLS**

☎ **Answer Call** — Press MFB 1x

📞 **Deny/End Call** — Press and hold MFB 2 seconds

🔇 **Mute/Unmute** — Press MFB 1x

■ **VOICE ASSISTANT**

🗣 **Activate Assistant** — Press and hold MFB 2 seconds


**Double chime indicates minimum or maximum volume met*

BATTERY & CHARGING

■ *CHARGING & SHORT CHARGE*

PRO 3.0 supports Bluetooth battery-level indicator on smart devices.

These earbuds are equipped with a short charging feature. This means you can extend your listening by two hours with just a 10-minute charge.

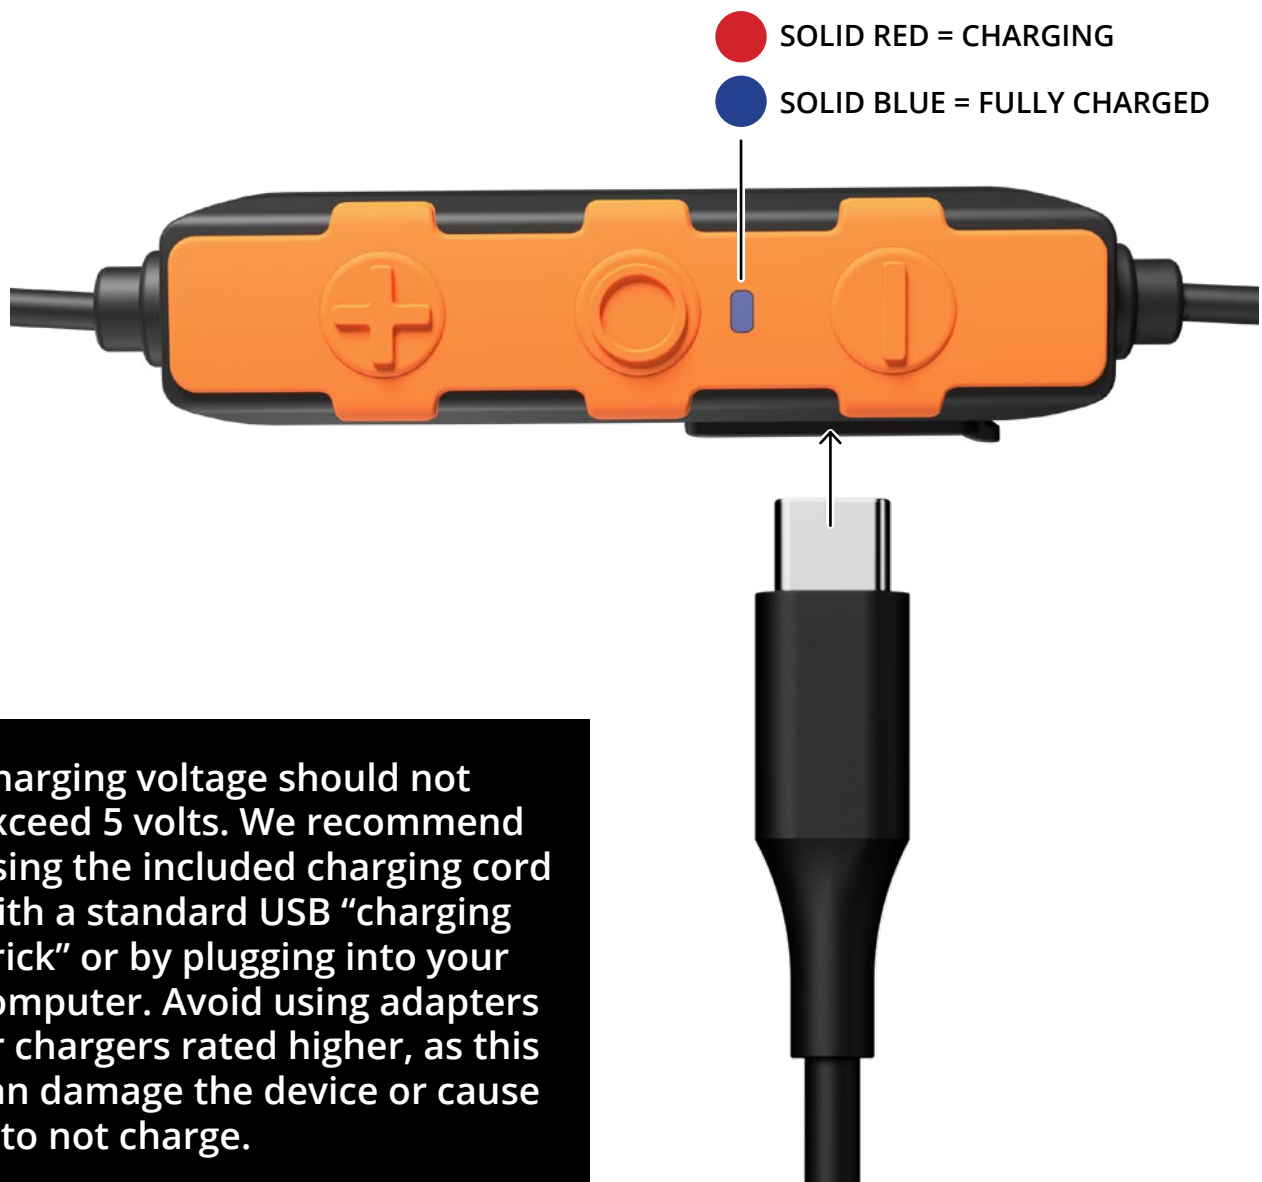

■ BATTERY LEVEL ANNOUNCEMENTS

When powered on, PRO 3.0 will alert you of its battery level.

- Battery Level High
- Battery Level Medium
- Battery Level Low (~3 hours left)
- Low Battery, Please Charge (15 to 20 minutes left)

CLEANING & MAINTENANCE

- TRILOGY™ foam eartips should be regularly inspected for deterioration, cracking, or other damage. The eartips can be cleaned in between uses with a damp cloth and water. Over time, the eartips should be replaced.
- Eartips are disposable and should be replaced over time. Depending on use, we recommend replacing them every 1- 3 months. Replacements are available on our website.
- Clean your product by gently wiping them with a clean, damp cloth with mild soap.
- Do not immerse the earbuds in water.
- Do not use abrasive cleaning solvents to clean the earbuds.
- If the earbuds get wet from sweat or rain, please discontinue use and allow them to dry.



X-SMALL TALL
WHITE CORE

SMALL TALL
GREEN CORE

MEDIUM TALL
BLACK CORE

LARGE TALL
BLUE CORE

TROUBLESHOOTING

■ **RESET**

1. Earbuds must be powered on.
2. Remove the earbuds from your Bluetooth connections.
3. Press and hold the Volume Up and the Volume Down buttons at the same time. Hold for 4 seconds.
4. Product will shut off and you will hear *"Power On,"* followed by *"Bluetooth Pairing Mode."*
5. Follow the pairing steps to reconnect your device.



■ **CUSTOMER SERVICE**

For more information, FAQs, or to reach out for further assistance —

- [ISOtunes.com/support](https://www.iso-tunes.com/support)
- [ISOtunes.ca/support](https://www.iso-tunes.ca/support)
- [ISOtunes.co.uk/support](https://www.iso-tunes.co.uk/support)
- [ISOtunes.eu/support](https://www.iso-tunes.eu/support)