



## Kieslect Calling Watch Kr Pro Ltd User Manual



Get the manual  
in more languages

## Notes:


1.1 The company reserves the right to modify the contents of this manual without any further notification. It is normal that some functions may vary in certain versions of software.

1.2 Please refer to this manual before using the product.

1.3 Before using the product you need to connect the APP synchronization time and set your personal information.

1.4 This product supports IP68 rank waterproof, not suitable for swimming and deep sea diving, hot water tea and other corrosive liquids are destructive to the watch, and will not be able to enjoy the product warranty and free maintenance services.

# 01 Appearance and charge

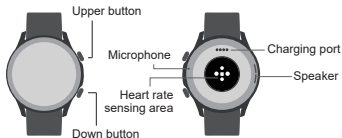

## Button functions

| Item         | Once-press                                   | Double-press    | Long-press             | Rotate                                                     |
|--------------|----------------------------------------------|-----------------|------------------------|------------------------------------------------------------|
| Upper button | Light screen/<br>Menu/Back                   | Lock screen     | Power on/<br>Power off | Changing watch face/<br>Turning page/<br>Volume adjustment |
| Down button  | Sport modes<br>(Customize in<br>the setting) | Voice Assistant | SOS                    | /                                                          |

## Tips:

- 1.Charging no less than 2 hours before using. Please use the correct charging adapters which are 5V 0.5A above.
2. If the watch cannot be turned on after being placed for a long time, you need to wipe the charging contacts of the charging cable clean when using it again to avoid sweat or water residue.

## 02 How to wear

---

Please wear the device on your wrist correctly, about one finger from the carpal and adjust it to comfortable position. Below pictures as reference.



Tip: Incorrect wear can result in inaccurate health test data.

## 03 Download & connect to APP

---

### 03.1 Scan QR code




### 03.2 Install the "KIE OS" APP




KIE OS

03.3 Open App,Click"Turn on"and"Allow" to turn on the phone bluetooth.

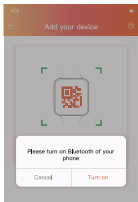

03.4 Click "Searching for devices"-Click "Kr Pro Ltd(ID-XXXX)"  
- Click "Pair" to connect the App and Audio Bluetooth.



### 03.5 Check the connection status.



\*Using BT call and playing music feature on the watch must be successfully connected to audio Bluetooth.

For further information about the settings and usage of watches, please visit: <https://www.kieslect.com/guide/user-manual/>

## Tips:

- (1) Please upgrade the App to latest version to get a better experience.
- (2) Android 5.0 and iOS 9.0 or above system are compatible with the App.
- (3) For the first time connection with android, "Permissions" reminder will pop-up, please follow up the guidance and allow permissions to ensure all functions working properly.
- (4) To connect successfully, please turn on mobile phone's Bluetooth, GPS and network.
- (5) If the device cannot be searched or connected during use, please reset or turn off the watch to try again.
- (6) You can't turn off your Watch while it's charging. To turn off your Watch, first disconnect it from the charger.
- (7) If you need to use the functions such as message push, make sure that the App switch is on.

The specific operations are as follows.

a. Open the "KIE OS" App



b. Select the "Device"



b. Select the "Turned on"



## 04 Operating Instructions

a. Shortcut page: Slide down from main page, go to shortcut, and slide up to return.



b. Information page: Slide up from main page, go to information, and slide down to return.



c. go to menu: Press the upper button from watchface main page to enter menu list, press again the upper button to back to menu. Slide down based on watchface page and click "☰" to change menu style. 3 style "list" or "waterfall flow" or "chessboard" for your options (You can also go to settings to switch )



d.shortcut page: Slide left from main page.



e.Quick access to change watch faces: Long press the watch face on main page or rotate the upper button to switch different watch faces.



f.Smart component: Slide right from watch face in main page to enter to smart components, click "+" to add components, up to 6 components. Long press the component to enter the component editing interface.



## 05 Function introduction

|                                                                                     |                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><b>Workouts:</b> Support 100 sports modes, you can view heart rate, calorie consumption, steps, distance, pace, stride frequency, heart rate zone and training effect.</p>                                                 |
|    | <p><b>Voice Assistant:</b> Double-press the down button to enter the voice assistant.(Note: The watch needs to be connected to the mobile phone via Bluetooth and the phone page must be unlocked before it can be used.)</p> |
|    | <p><b>Games:</b> 2 build-in games. "Numbers klotski" &amp; "2048".</p>                                                                                                                                                        |
|   | <p><b>Sports Records:</b> Record daily sports data, including steps, Distance, calories, sports hours.</p>                                                                                                                    |
|  | <p><b>Heart Rate:</b> 24H heart rate monitoring set monitoring time interval and heart rate alarm threshold in the App.</p>                                                                                                   |

|                                                                                     |                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><b>Blood Oxygen:</b> 24H monitor blood oxygen status, and automatic monitoring can be turned on in the App.</p>                                                        |
|    | <p><b>Stress:</b> 24H monitor pressure conditions, and automatic monitoring can be turned on in the App.</p>                                                              |
|    | <p><b>Emotion:</b> Pleasure, calm, anxiety irritability, 4 kinds of emotions are accurately detected.</p>                                                                 |
|   | <p><b>Sleep:</b> Intelligently monitor your sleep status and quality, record data and scientifically analyze sleep time.</p>                                              |
|  | <p><b>Phone:</b> Connected to the mobile phone via Bluetooth, it can dial, answer, and hang up calls, and support viewing call records and a list of common contacts.</p> |

|                                                                                     |                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><b>Music:</b> After connecting to the mobile phone, you can click "play /pause/previous/next song" on the smart watch to control the music from mobile phone, and the volume can be adjusted.</p>          |
|    | <p><b>Camera Control:</b> Open the App after connecting to the mobile phone, the watch can remotely control the mobile phone to take pictures, and set the delay time and the number of continuous shots.</p> |
|    | <p><b>Weather:</b> After connecting the mobile phone, open and set the weather function in the App, the watch can display the weather information in recent days.</p>                                         |
|   | <p><b>Alarm:</b> 10 alarm reminders can be set.</p>                                                                                                                                                           |
|  | <p><b>Tomato clock:</b> You can set your own time to start with "focus on work", and end by taking a "rest".</p>                                                                                              |

|                                                                                     |                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|     | <p><b>Physiological Cycle:</b> Set the personal information to "female" on the APP, and click "Me" and "Physiological" on the APP to set the data. You can see the corresponding safety period, menstrual period, and ovulation period reminders on the watch side.</p>                            |
|    | <p><b>Breathe:</b> Set the breathing rhythm and time, and follow the training prompts to complete the breathing training.</p>                                                                                                                                                                      |
|    | <p><b>Setting:</b> Watch faces and time/ Display/ Sound &amp; Vibration/ SOS/ User preferences/ System.</p>                                                                                                                                                                                        |
|  | <p><b>Other functions:</b> Massive Online/ Custom Watch Faces, Timer, World Clock, Raise To Wake, Hand Down To Turn Off The Screen, Flashlight, Find Phone, Find Watch, Stopwatch, Do Not Disturb Mode, Brightness Adjustment, Button Down Function Customization, Various Prompt Sounds, etc.</p> |

## Tips:

- 1: More detailed information analysis and records can be viewed in the App.
- 2: The above health data are for reference only and cannot be used as a medical basis.

## 06 Parameters

---

Bluetooth:5.2  
Screen Size: 1.43"  
Waterproof:IP68  
Net Weight:34.8g  
Battery Type: Li-ion  
Size:45\*45\*12.3mm  
Charging Voltage:3.8V  
Battery Capacity:300mAh  
WorkingTemperature:-20°C~60°C

## 07 Warranty

---

- 1.One year warranty for default hardware defectives, half of year for battery and charging cable.
- 2.Below reasons cause to defectives are not included in free warranty service:
  - (1)Personal assemble or disassemble.
  - (2)Falling damage during use.
  - (3)All man-made damage or due to the third party's fault, improper use(Such as:water in the smart watch, external force shattering,scratch during use etc.)
- 3.Please provide a warranty card with the details filled when request for after selling service.
- 4.Please contact with direct dealers for warranty service.
- 5.Please note all functions of the product are based on physical objects

| Warranty Certificate |          |               |           |
|----------------------|----------|---------------|-----------|
| Client Info          |          |               |           |
| Product Type         |          | Vendor        | (Stamp)   |
| Client Name          |          | Contact Info  |           |
| Vendor's Contact     |          | Purchase Date |           |
| Product SN Code      |          |               |           |
| Client's Address     |          |               |           |
| Vendor's Address     |          |               |           |
| Warranty Record      |          |               |           |
| Date                 | Problems | Diagnosis     | More Info |
|                      |          |               |           |
|                      |          |               |           |
|                      |          |               |           |
|                      |          |               |           |

Contact us: [service@kieslect.com](mailto:service@kieslect.com)

# IEC/EN 62133-2:2017

## AnnexC(informative)

### Recommendations to the end-users

The following represents a typical but non-exhaustive, list of good advice to be provided by the equipment manufacturer to the end-user.

- a) Do not dismantle open or shred secondary cells or batteries.
- b) Keep batteries out of the reach of children.
- c) Battery usage by children should be supervised. Especially keep small batteries out of reach of small children.
- d) Seek medical advice immediately if a cell or a battery has been swallowed.
- e) Do not expose cells or batteries to heat or fire. Avoid storage indirect sunlight.
- f) Do not short-circuit a cell or a battery. Do not store cells or batteries haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by other metal objects.
- g) In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- h) Do not use any charger other than that specifically provided for use with the equipment.
- i) Do not use any cell or battery which is not designed for use with the equipment.
- j) Always purchase the battery recommended by the device manufacturer for the equipment.
- k) Keep cells and batteries clean and dry.

- l) Secondary cells and batteries need to be charged before use. Always use the correct charger and refer to the manufacturer's instructions or equipment manual for proper charging instructions.
- m) Do not leave a battery on prolonged charge when not in use.
- n) After extended periods of storage, it may be necessary to charge and discharge the cells or batteries several times to obtain maximum performance.
- o) Retain the original product literature for future reference.
- p) Use the cell or battery only in the application for which it was intended.