


All-in-One Pet Health & Location Collar

User Manual

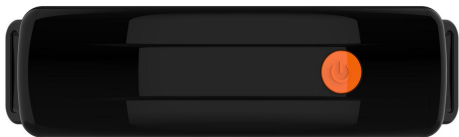

Device and APP Usage Process

1. Download the APP

Scan the QR code on the packaging box or this card to download the official APP from the Apple App Store or Google Play Store, depending on your mobile system.

2. Access Help Materials

Scan the QR code on the packaging box or this card to visit the Help Center, where you can view the electronic manual, instructional videos, and other support content.

3. Power On

Briefly press the power button on the device to turn it on.

4. Device Binding and Subscription

After opening the APP, complete the following steps in order:

- ① Register an account →
- ② Log in →
- ③ Bind the device (scan the QR code on the device body)
- ④ Top up the subscription fee →
- ⑤ Wait about 2 minutes, then restart the device →
- ⑥ Subscription successful

5. Power Off

Press and hold the device's power button to turn it off.

6. Charging Status Indicator

- **Charging:** Red light flashes slowly.
- **Fully Charged:** Red light stays steadily lit.

Important: Check the tightness of the collar by inserting one finger between the end of a contact point and your dog's skin. The fit should be snug but not constricting.

Important: Avoid leaving the collar on your dog for more than 12 hours a day, and never attach a leash or ID tag to it - use a separate collar for that

Thank you for purchasing our products! This manual provides important information that will help you safely operate this collar.

Please read this user manual carefully before using this product. Thank you! If you have any problem with the product, please don't hesitate to email us

at: **(A30CS@maxhom.com)**

We will reply to you within 24 hours and give you the best solution.

Catalog

Introduction.....	5
Warning.....	5
Getting Started.....	8
Login & Register.....	10
Add Device.....	12
Subscription.....	16
Electronic Fence Setup.....	17
Main Page Introduction.....	21
Product Specification.....	34
Warranty.....	35

Introduction

This collar integrates three practical core functions:

Real-Time Tracking, Wireless GPS Electronic Fence, Heart Rate Monitoring and **Remote Dog Training**, providing all-around protection and scientific management for your beloved pet.

Warning

- ★ Please read all safety instructions thoroughly. Ignoring these warnings could result in injury to you, your pet, or others, as well as property damage.
- ★ The collar is powered by a battery. Allowing your pet to chew on the collar or its battery may damage the product, create a fire hazard, or endanger your pet. Always inspect the battery and its plastic cover for punctures before placing the collar on your pet.
- ★ The collar contains electronic components, including a lithium-ion battery, which are sensitive to high temperatures. Do not leave the collar in hot environments for prolonged periods. Only use the provided charger for recharging. If you notice any punctures on the battery or its cover, stop using the collar immediately and contact customer support at once.
- ★ No containment system can guarantee 100% containment of all pets. Some dogs may be clever enough to escape any

containment system, and these systems may occasionally fail or malfunction. It is essential to monitor your pet regularly while using this collar. If your dog poses a danger to others, do not rely on the containment system without supervision.

★ The collar is specifically designed for dogs. It must not be used on humans.

★ Do not disassemble or attempt to modify the collar, as doing so will void the warranty.

★ The GPS accuracy of the collar may vary depending on location. It is designed for OUTDOOR use only and cannot receive GPS signals indoors.

★ This containment system cannot prevent predators from entering the fenced area.

★ The Collar is not designed to serve as your pet's primary restraint. Always ensure your dog is properly secured and safe.

★ The collar meets the IP67 standard, meaning it is dustproof and water-resistant. It can resist dust, spills, splashes, drool, and rain. Note that over time, normal wear and tear may affect its waterproof performance.


★ The collar performs best when pet owners invest time in training their dogs, just as they would with any obedience program—especially in the initial stage. Spend time helping your dog learn the location of the fence boundaries and the alerts that keep them safely contained. We cannot guarantee that the system will contain all pets. If you are concerned that your pet might pose a danger to others or itself, do not rely solely on the collar to keep it within the boundary.

★ The collar requires the mobile app for operation, along with sufficient battery power. The performance of tracking and

notifications may vary based on the strength of the cellular network signal in your area.

★The collar is not a toy. Adult supervision and close attention are necessary when the collar is used by or near children

Package List

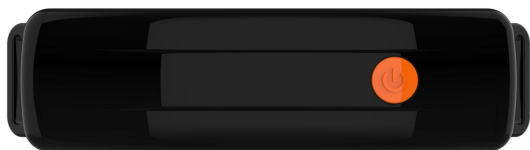

Magnetic Charging Cable

Note: Please check the product packaging carefully, if any accessories are missing, please contact the after-sales service personnel by email at

A30CS@maxhom.com

Getting Started

● **Fitting the Collar Straps**

Adjust the strap to fit snugly around your dog's neck, ensuring the static contact points make full contact with your dog's skin. You should only be able to slide one finger between the collar and your dog's neck.

● **Charge the collar**

1. Connect the magnetic charging cable to a power adapter.
2. Carefully attach the magnetic charger to the collar's charging port; it will automatically snap into place.

● **Charging Status Display**

Charging: Red LED flashes.

Fully Charged: Red LED stays on steadily.

Charging Time: Approx. 3 hours for a full charge.

- **Download the Like Pet App**

please download the Like Pet App.

Note: Before installation,ensure that your mobile device's browser is set to allow the installation of unknown apps.

▶ **Download App**

Scan the QR code to download and install it on the mobile device.



You can scan the QR code below to watch the detailed operation tutorial video of Like Pet App,access the electronic manual, and get support from the help center.





Scan the QR code for APP
Tutorial Videos & Support





Login & Register

- ▶ Open the downloaded Link Pet App to enter the login screen, then log in by entering your [registered email] and [password] and clicking [Login], or directly via third-party accounts such as [Google Login] or [Apple ID Login].
- ▶ If you don't have an account, click [Register] to enter to the registration screen.
 1. Enter your [Nickname], [Email], then set a login password; Click the eye icon to view the password.
 2. Click [Get Code]—the code will be sent to the email you entered;
 3. Enter the code, check the box to agree to the terms, then click [Register].
 4. After successful registration, you will be automatically redirected back to the login screen.

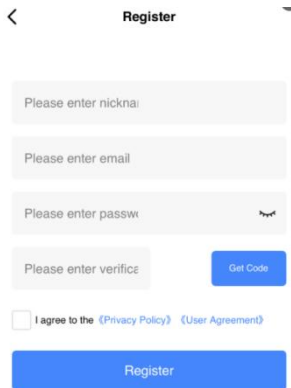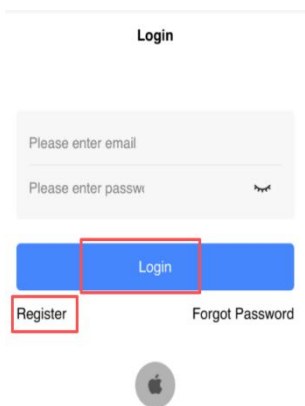

- ▶ If you forget your password,click [Forgot Password]on the right side of the login screen:
 - 1.Enter your registered email and set a new password;
 - 2.Click [Get Code],enter the code,then click [Confirm]—this will reset your password and return you to the login screen

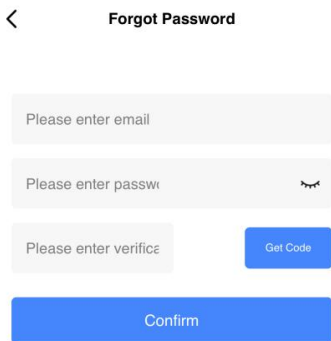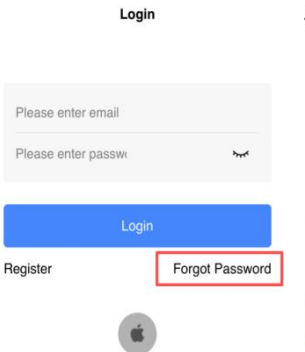

Add Device



This collar supports 3 entry points for adding a device. You can choose any one to access the [Add Device Interface]. The detailed operation process is as follows:

- Select an Entry Point for Device Addition (3 Methods)

1. First Login Guidance: After successfully logging into the APP for the first time, the system will automatically pop up a prompt window asking "Add Device?". Click [Confirm] to directly enter the [Add Device Interface].

2. Map Interface Entry: Open the APP and enter the [Map Interface], then click the [+] icon at the top-left corner of the interface to access the interface.

3. Devices Interface Entry: Open the APP and enter the [Devices Interface], then click the [+] icon at the bottom-right corner of the interface to access the interface.

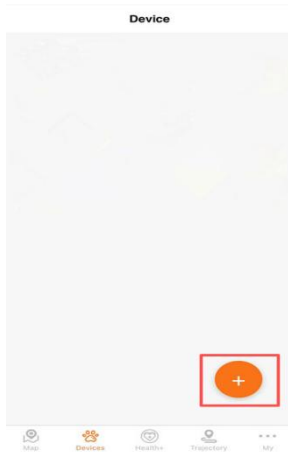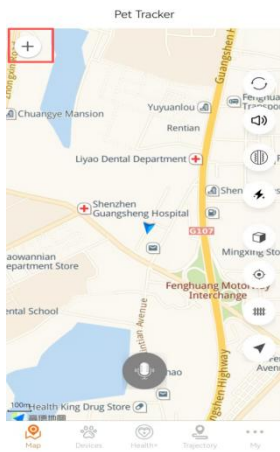


● Enter Device Information(2 Methods)

After accessing the [Add Device Interface],enter the device ID via one of the following methods:

1.Manual Entry: Enter the device ID manually in the designated input field.

2.QR Code Scanning: Click the "Scan"icon,then align the APP's scanning frame with the QR code on the device.The system will automatically enter the device ID.

Then click [Confirm].The system will automatically jump to the "Pet Information Editing Interface".

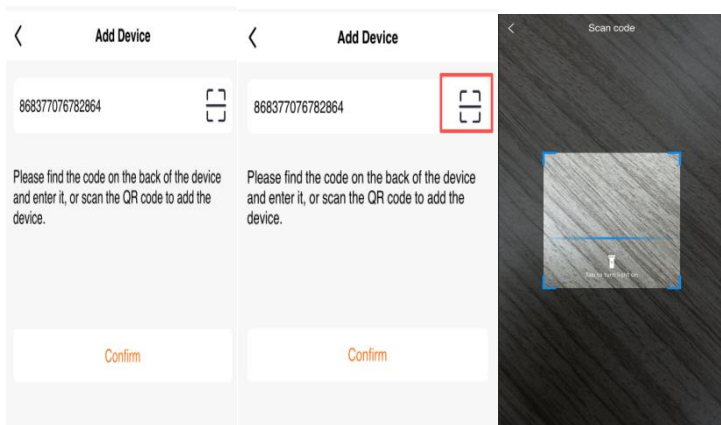

- Completing Pet Information

Please complete the following information:

Select a pet avatar: Choose from the system-provided avatars, or click [+] icon to add a custom image.

Enter pet name (required).

Finally, click [Save] to complete the device addition.

Pet Information

Number: 868377076762841

Choose Avatar

Pet Information

Pet Name * A21-62841


Pet Birthday Select pet birthday

Pet Gender Male Female

Weight kg

Pet body Length cm

Save

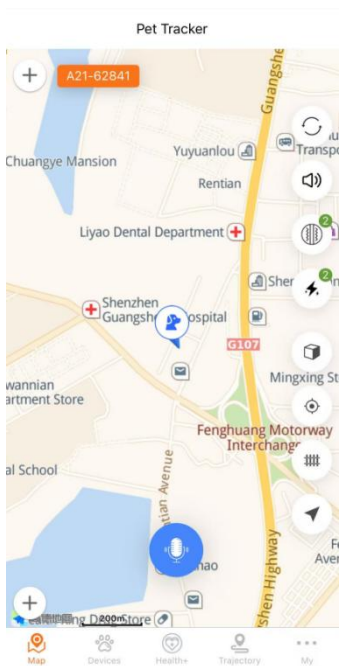

► Remote Device Control: Remotely restart or shut down the collar—no need for close contact with the device, enabling convenient management.

Plus, there are many more useful features to enhance your pet safety experience!


● Purchase a Subscription

On the list page, tap your pet's avatar/icon.

Three renewal options are available on the Renewal Interface:

► Monthly/Quarterly/Annual Plan:

Select your preferred plan, then click [Next]. The page will redirect to the Payment login page. Log in to your account and complete the payment.

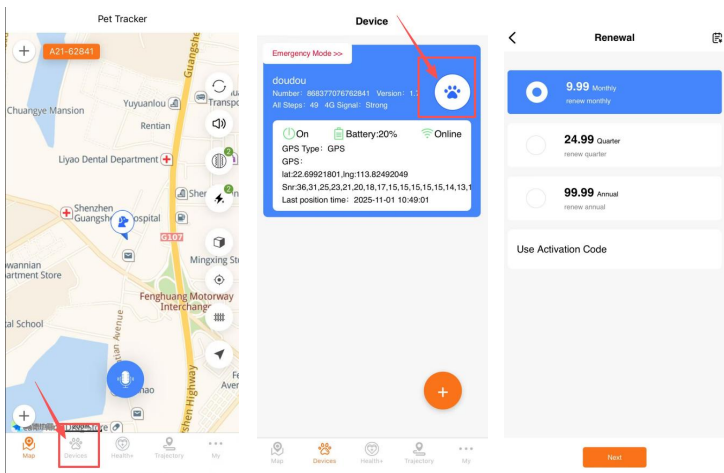

Subscription

● **Subscription Instructions**

This collar is a connected device. After activating the subscription service, you can unlock the following core features to fully protect your pet's safety:

- ▶ **Create an Electronic Fence:** Customize safe areas (e.g., home, park boundaries) to monitor your pet's activity range in real time.
- ▶ **Receive Escape Alerts:** Get instant alarm notifications when your pet goes beyond the electronic fence, allowing you to respond quickly.
- ▶ **View Location History:** Trace your pet's past activity routes to learn about their frequently visited areas and movement patterns.

Electronic Fence Setup

After successful subscription,click the [+]icon in the bottom left corner of the [Map Interface]to enter the electronic fence setup interface.

You can set up two types of electronic fences:circular electronic fences and polygonal electronic fences.

When the dog approaches the virtual boundary,the device will automatically emit a warning sound,vibration,—no manual operation is required—to help the dog form a boundary memory.

● **Circular Electronic Fences**

1.Enter the range of the circular electronic fence (65-3280 feet).Click anywhere on the map to generate a circular fence;if the settings are incorrect,click [Clear]to delete the created fence.

2.Click [Save],then enter the fence name.Next,set the vibration level

3.Click [Save]again,and the circular electronic fence will be created successfully.

● **Polygonal Electronic Fences**





1.Click [Polygon]to switch to the polygonal electronic fence setup mode.

2.Click on the map to add vertices(up to 6 points can be set). Use the following functions as needed:



*Click [Undo]to delete the last added vertex(at least 3 vertices must be retained to form a polygon).

*Click [Clear]to delete all currently added vertices.



3. Click [Save], then enter the fence name.
- Next, set the vibration level.
4. Click [Save] again, and the polygonal electronic fence will be created successfully.

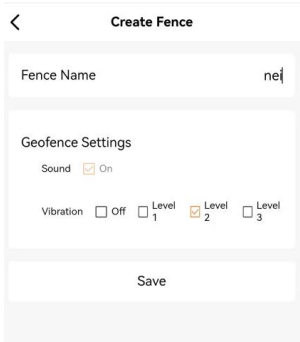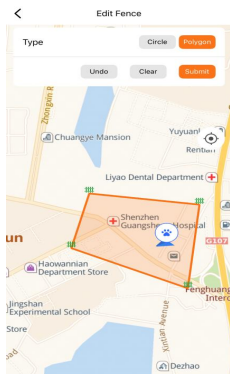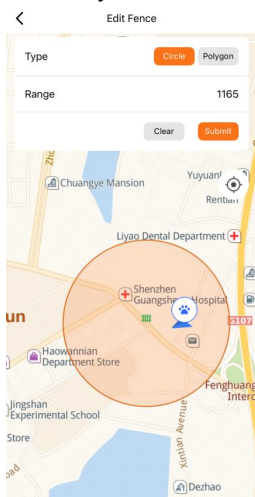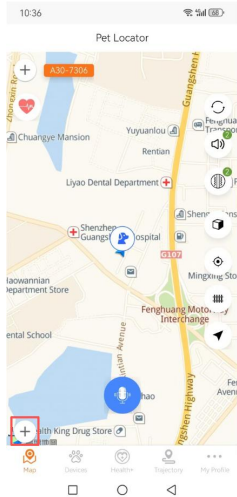

- ▶ Click the fence name on the [Map Interface] to switch the currently used fence

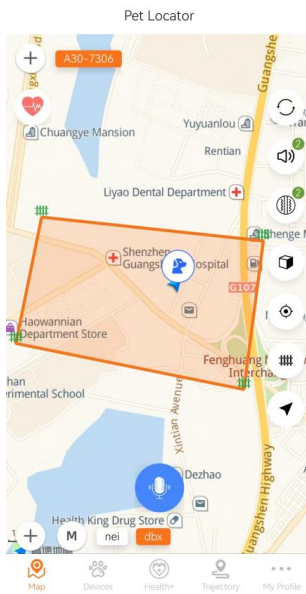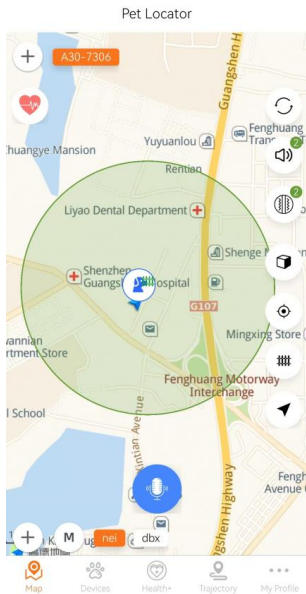


- ▶ Click the [M]icon at the bottom left corner of the [Map Interface]to enter the Fence Management Interface.On this interface,you can turn on/off,edit,and delete existing fences;you can also click the[+]icon at the bottom right corner to create a new fence.

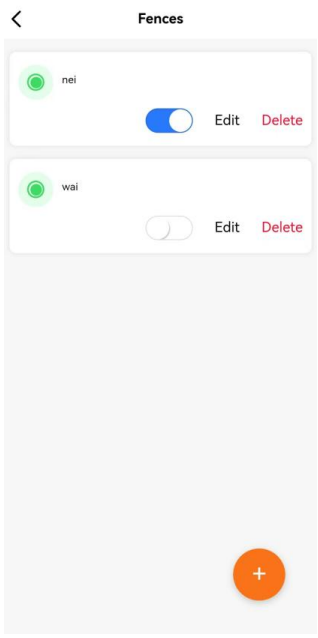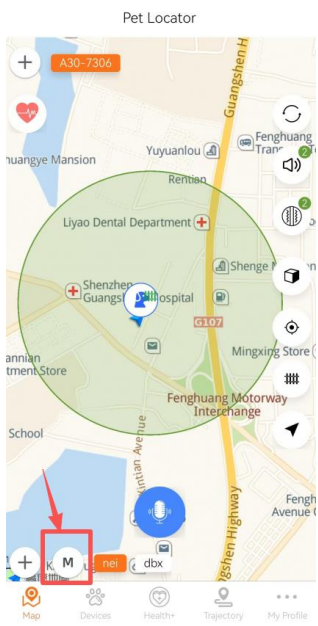


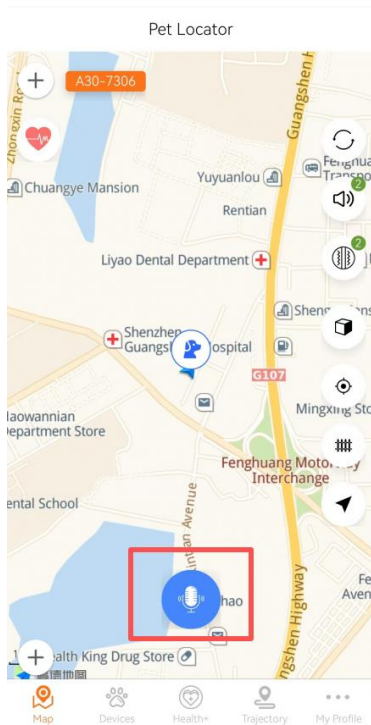
Main Page Introduction

The Like Pet app features 5 main interfaces in total: [Map Interface],[Devices Interface],[Health+ Interface],[Trajectory Interface],and [My Interface].


- **Map Interface**

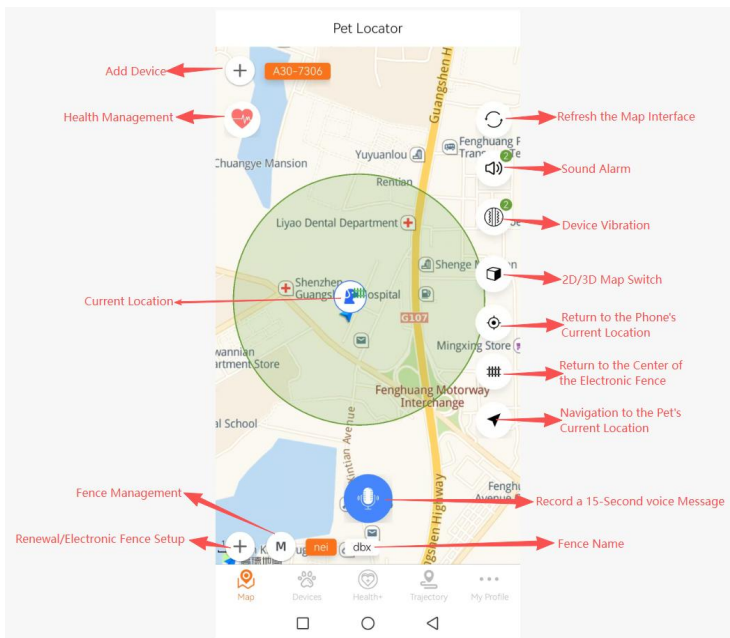


Click  to record a 15-second voice message. After recording is complete, click [CONFIRM]—the device will then play back the recorded message, allowing you to call your beloved pet anytime, anywhere.




● Devices Interface

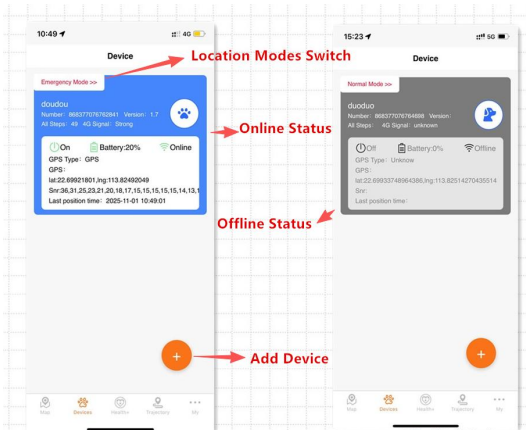

- ▶ When the device is online,you can switch the location mode by clicking the red text in the upper left corner.
- 1.Emergency Mode: Upload location every 10 seconds.
 - 2.Normal Mode: Upload location every 30 minutes.
 - 3.Power Saving Mode:Upload location every 60 minutes.

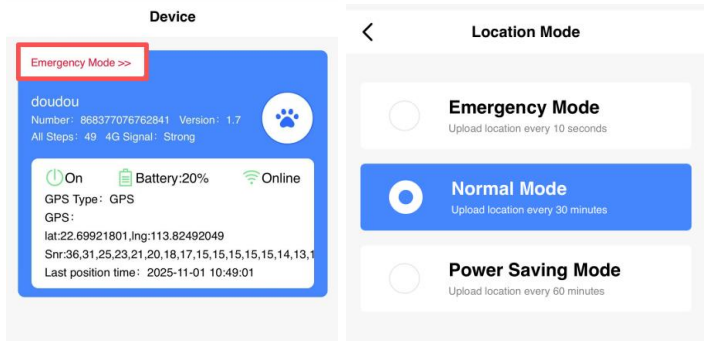

► Click any area in the top frame to access the Device Details Interface.

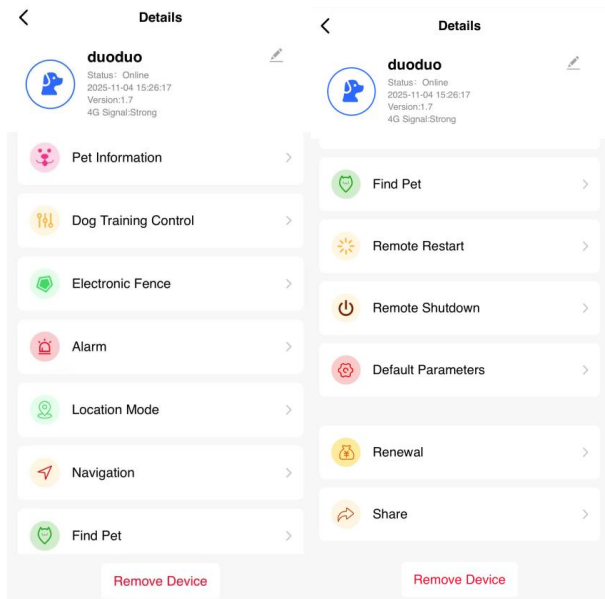

Pet's Name/

Click to rename the pet's name.

Pet Information

View and edit your pet's avatar and name.

Dog Training Mode

1.Sound:Click it and the device will play the voice prompt "Go home". Click the corresponding level (Level 1/Level 2/Level 3)

2.Vibration Level 1~3:Click the corresponding level (Level 1/Level 2/Level 3),and the device will vibrate.

Electronic Fence

Enter the fence management interface.You can open/close, edit,and delete the fence.

Alarm

Check alarm information,including geofence breaches and low battery alerts.

Location Mode

Switch the location mode between three options:Emergency Mode,Normal Mode,and Power Saving Mode.

Navigation

Click to open the map and navigate to the device's location.

Find Pet

Click it and confirm the operation,and the collar will play the voice prompt "Go home

Remote Restart



Click it and confirm the operation to remotely restart the device.

Remote Shutdown

Click it and confirm the operation to remotely turn off the device.



Default Parameters

You can adjust the Sound level and vibration level, then click [Save]. After successful saving, the vibration and shock levels on the right side of the map interface will be updated synchronously.

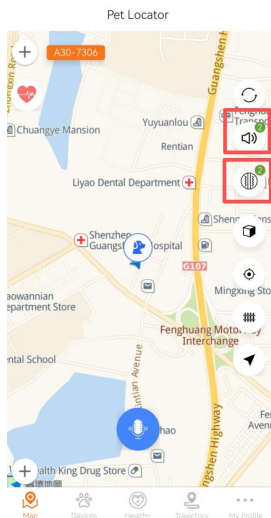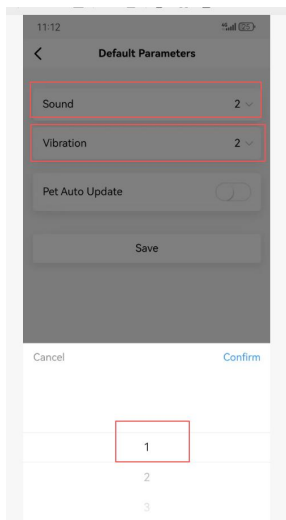

Renewal

Click to enter the renewal page. There are three renewal options: Monthly, Quarterly, Annual. Click the icon in the top right corner to view the device's expiration date, activation date, and renewal records.

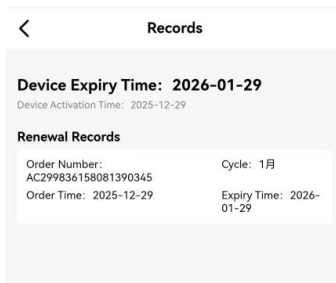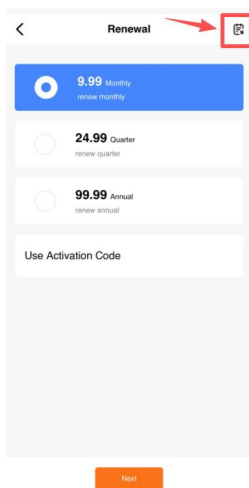


Share

Click to share the device. Enter the recipient's user ID and click the [+] icon to complete the sharing.

Remove Device

Click to delete the current device.

● Health+Interface

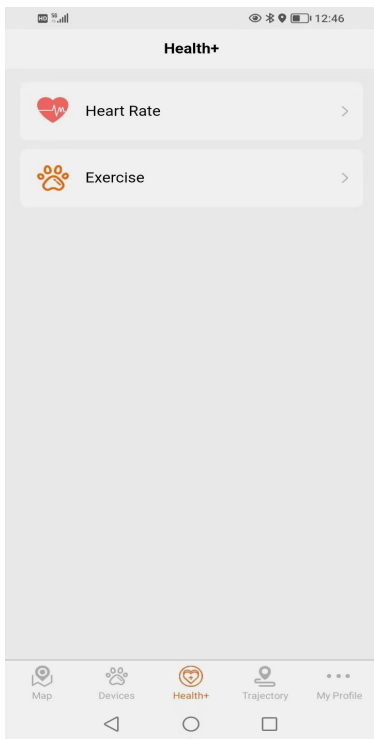

1. Click on Heart Rate

Click the "Heart Rate" tab to view your pet's real-time health data, including heart rate, respiratory rate, and activity level.


2. Click on Pet Name to Switch Devices

Tap your pet's name at the top of the screen to switch between different connected devices.




3. Click the Icon or Date

Tap the Health Report icon to view the comprehensive monitoring report.

Tap the date to select a different day and review historical monitoring data.

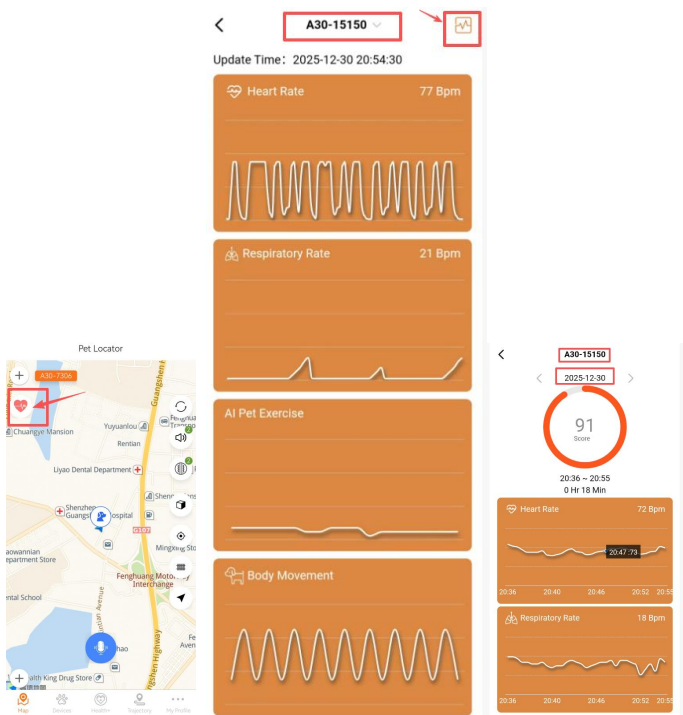


4. Click the pet's name to switch between other devices. Click the date to switch to another date and view historical activity data.

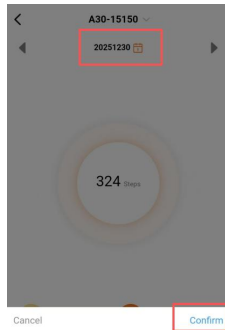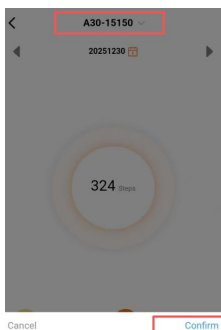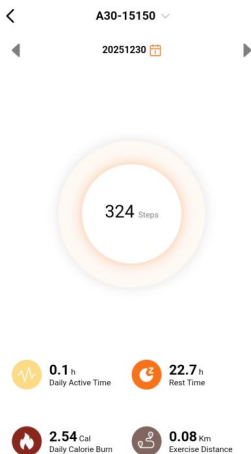

Cancel	Confirm	Cancel	Confirm	
		2023	10	28
		2024	11	29
A30-15150		2025	12	30
A62-11191		2026		31
A30-37220		2027		

●Trajectory Interface

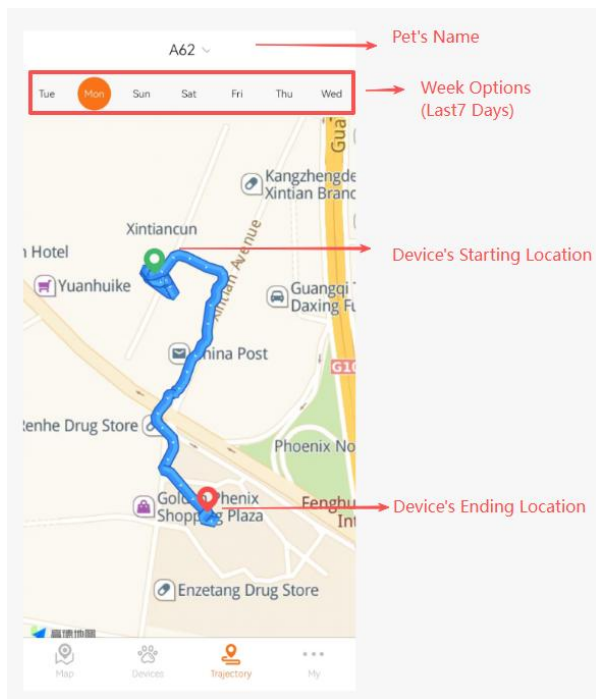


This is the [Trajectory Interface], where you can see the device's movement track.

Click the pet's name at the top to switch devices.

Click the week options to switch and view the device's trajectories for different days within the latest 7 days.

The green marker represents the device's starting location, and the red marker represents the device's ending location.


• My Interface

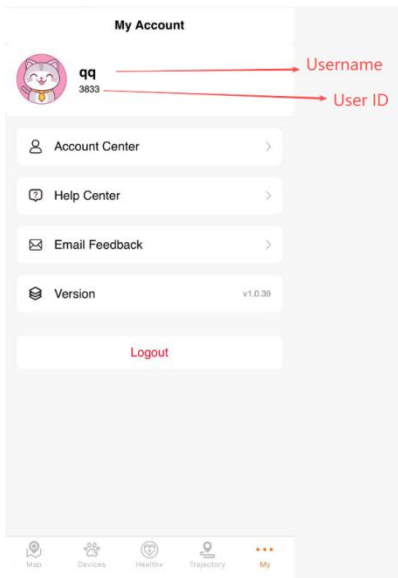

This is the [My Account] interface. It displays the and user ID, where the user ID can be used for device sharing.

Account Center

Shows the nickname and registered email. It supports changing password and deleting account.

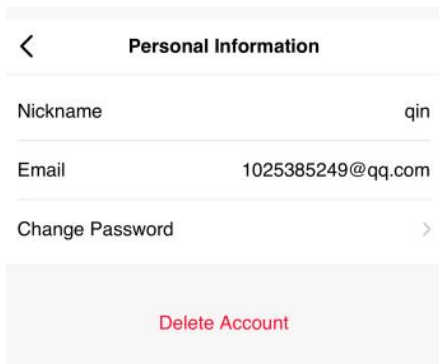

Help Center

Click to navigate to the Help Center interface.

Email Feedback

Click to initiate email feedback.

Logout

Click to log out of the current account.

Product Specification

Product Name	All-in-One Pet Health & Location Collar
Material	ABS
Waterproof Rating	IP67
Function	GPS +Electronic Fence,+Activity Monitoring+One-Way Voice (APP Remote Calling), Heart Rate Health Monitoring, Remote DogTraining+App Synchronization
Communication Mode	4G LTE
Positioning Modes	GPS + AGPS + WiFi + LBS
Positioning Accuracy	3-5 meters (No Interference)
Battery	750mAh
Charging Method	Magnetic Charging
Product Size	124.4*34*33.2MM
Product Weight	84.4g

Warranty

*Do not attempt to modify or repair the device yourself If you have any problem with the product,please don't hesitate to email us at:

[\(A30CS@maxhom.com\)](mailto:A30CS@maxhom.com)

We will reply to you within 24 hours and give you the best solution.

All-in-One Pet Health & Location Collar

User Manual

FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.