

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

Bed Lift Mechanism

MODEL:

HW-3701-1200MM-60KG

HW-3701-1500MM-120KG

HW-3701-1500MM-90KG

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

Bed Lift Mechanism

MODEL:HW-3701-1200MM-60KG

HW-3701-1500MM-120KG

HW-3701-1500MM-90KG



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate






www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

PARAMETER LIST

Model	HW-3701- 1200mm-60kg	HW-3701- 1500mm-120kg	HW-3701- 1500mm-90kg
Maximum Load Bearing (lbs)	154	308	264
Mattress size(m)	1.5-1.8	1.5-2	1.5-2

PART LIST

Model	Picture	Quantity
screw		8
air leg		2
M8 Nylon nut		4
M8 lock nut		8
left bracket		1
right bracket		1

Note:

HW-3701-1200mm-60kg/HW-3701-1500mm-120kg/HW-3701-1500mm-90 kg
The number of accessories is the same for the above three models.

SECURITY & WARNINGS

WARNING:

Do not allow children to climb on the unit.

2. Keep children and pets away during assembly.

ASSEMBLY PRECAUTIONS


1. Please assemble the product in strict accordance with the instructions. Incorrect assembly could be hazardous.
2. Please wear safety goggles and work gloves properly during assembly.
3. Do not try to assemble the product when feeling tired or when under the influence of alcohol, drugs or medication.
4. Load-bearing capacity and other product parameters are applied to the properly and completely assembled product only.
5. Separate and count all parts and hardware.
6. Prepare the following tool: Philips Head Screwdriver.
7. If using power tools, please be careful to slow down and stop when needed.
8. Two people are required for assembly.
9. Follow the intended uses only. Do not sit or stand on the above.
10. When using the bed box elevator to lift the mattress, there should be no items other than the mattress on the bed, otherwise people may be injured

SAVE THESE INSTRUCTIONS

INSTRUCTIONS



1. Mounting position of the lift: the distance between the rear end of the lift and the backboard of the bed box is about 5cm.
(Note: the installation position can be adjusted appropriately.)

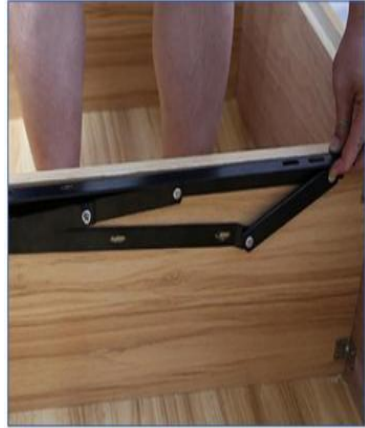

2. The longest side bracket of the lift shall be the same level with the side board of the bed box



3. Open the lifter slightly to reveal the mounting hole, use the marking



4. Remove the lifter, punch holes in the marked position with the

pen to correspond to the bracket hole under the lifter. and mark the hole on the board.



electric drill, then install the lifter and tighten the screw.



5. After the lifter is installed in the bed box, support the lifter and install the air support. (note: stroke rod should be installed face down)

6. Press down the mounted lifter to complete closure, measure the installation distance from the bed to the lifter, confirm the installation hole position of the longest side bracket on the bed board, and make a hole mark. (note: There are many mounting holes in the lift; the number of mounting holes can be selected according to the actual situation. It is recommended to measure the mounting screws of the tail and front end of the lift and then install other holes to avoid drilling wrong holes.)



7. Use the electric drill to punch holes on the bed board according to the mark. Place the lifter on the bed board. Correspond to the hole position, screw on and install it.

Manufacturer: Shanghai muxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu, shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREET EASTWOOD NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting Limited Office 147, Centurion House, London Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support