



Edgewood, New York 11717-8380

2-2007



## Installation Instructions for EQUIPMENT STANDS



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Equipment Stands manufactured by **ADVANCE TABCO** are designed and constructed for applications including Food Preparation, Cooking, Manufacturing, Material Handling, Laboratory Service and the like. **ADVANCE TABCO** does not recommend product use for activities employing harsh and active chemicals. Consult factory regarding unusual applications.

**Contents:**

Table Top  
Undershelf  
Legs  
Set Screws

**Tools Required:**

5/32" Allen Wrench

**NSF Installations require all set screws filled with an approved silicone sealer.**

**Step 1:**

Lay the table top flat on the box to protect the finish during assembly. **(Figure 1)**

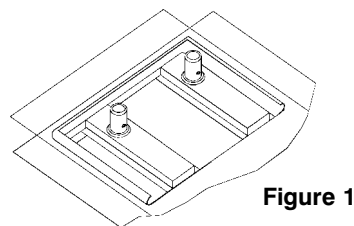


Figure 1

**Step 2:**

Remove plastic cap from gusset. **(Figure 2)** Set screws are located inside gusset.

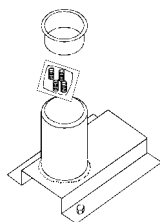


Figure 2

**Step 3:**

Insert set screws into adjustable shelf corner - (2) each corner (underneath shelf). Insert legs into adjustable shelf corner and set desired height. Tighten set screws. **(Figure 3)**

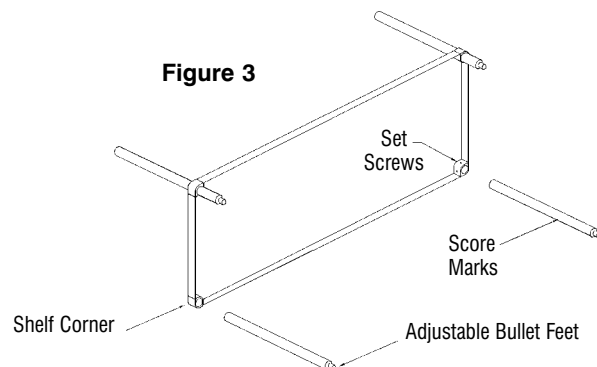


Figure 3

**Step 4:**

Insert legs and undershelf assembly into gussets as indicated in **Figure 4**. Tighten set screws.

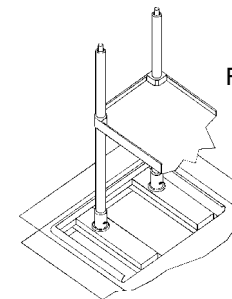


Figure 4

**Step 5:**

Turn table upright and level by adjusting bullet feet.

