

WALL BRACKET(S) INSTALLATION


Mount the provided wall “Z” brackets to wood studs or cement walls for strong support. Mount the bracket(s) at recommended height of 42.5” from the finished floor to the to the top of the bracket (Figure 6).

Slide the sink onto the wall brackets and be sure the sink sits securely on them.




FOR KNEE VALVE (KV) OR TOE-PUSH VALVE (FV) MODELS: Connect water supply lines to valve(s) and water supply line(s) from valve(s) to faucet(s). Connect drain(s). (Figure 6).

Adjust mixing valve at front of valve (Figure 7).

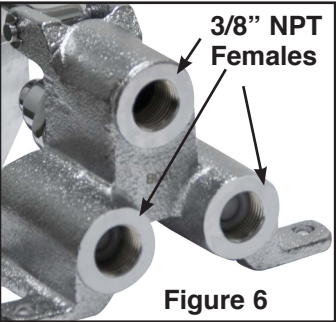

Suggested Rough Plumbing Dimensions

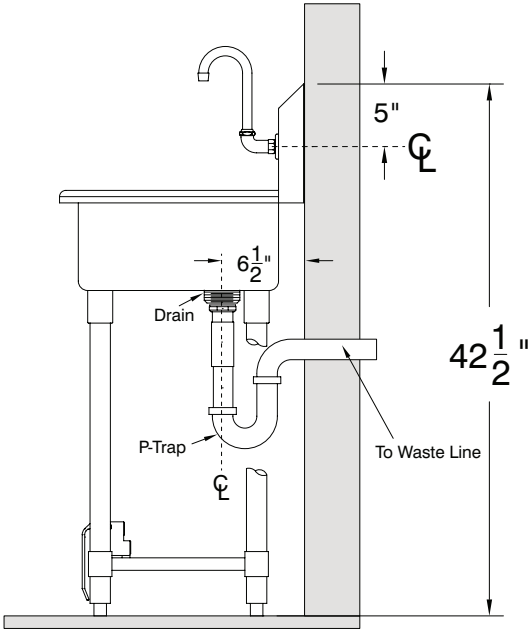

For Further Assistance
Contact Customer Service at:
800-645-3166
or
customer@advancetabco.com



Installation Instructions for
FREE STANDING
NSF MULTI-STATION SINKS
FS-FM/FC-FM SERIES

NO FAUCET INCLUDED	MANUAL FAUCETS INCLUDED	ELECTRONIC OPERATED FAUCETS
Model #	Model #	Model #
FC or FS-FM-1-ADA	FC or FS-FM-1-ADA-F	FC or FS-FM-1-EFADA
FC or FS-FM-23/FC or FS-FM-23-ADA	FC or FS-FM-23-F/FC or FS-FM-23-ADA-F	FC or FS-FM-23EF/FC or FS-FM-23EFADA
FC or FS-FM-40/FC or FS-FM-40-ADA	FC or FS-FM-40-F/FC or FS-FM-40-ADA-F	FC or FS-FM-40EF/FC or FS-FM-40EFADA
FC or FS-FM-60/FC or FS-FM-60-ADA	FC or FS-FM-60-F/FC or FS-FM-60-ADA-F	FC or FS-FM-60EF/FC or FS-FM-60EFADA
FC or FS-FM-80/FC or FS-FM-80-ADA	FC or FS-FM-80-F/FC or FS-FM-80-ADA-F	FC or FS-FM-80EF/FC or FS-FM-80EFADA
FC or FS-FM-100/FC or FS-FM-100-ADA	FC or FS-FM-100-F/FC or FS-FM-100-ADA-F	FC or FS-FM-100EF/FC or FS-FM-100EFADA
FC or FS-FM-120/FC or FS-FM-120-ADA	FC or FS-FM-120-F/FC or FS-FM-120-ADA-F	FC or FS-FM-120EF/FC or FS-FM-120EFADA
FC or FS-14-21-FM/FC or FS-16-25-FM	FC or FS-14-21-FM-F/FC or FS-16-25-FM-F	FC or FS-14-21EF-FM/FC or FS-16-25EF-FM

KNEE OPERATED FAUCETS	TOE-PUSH OPERATED FAUCETS
Model #	Model #
FC or FS-FM-23KV/FC or FS-FM-23KV	FC or FS-FM-23FV/FC or FS-FM-23FV
FC or FS-FM-40KV/FC or FS-FM-40KV	FC or FS-FM-40FV/FC or FS-FM-40FV
FC or FS-FM-60KV/FC or FS-FM-60KV	FC or FS-FM-60FV/FC or FS-FM-60FV
FC or FS-FM-80KV/FC or FS-FM-80KV	FC or FS-FM-80FV/FC or FS-FM-80FV
FC or FS-FM-100KV/FC or FS-FM-100KV	FC or FS-FM-100FV/FC or FS-FM-100FV
FC or FS-FM-120KV/FC or FS-FM-120KV	FC or FS-FM-120FV/FC or FS-FM-120FV
FC or FS-14-21KV-FM/FC or FS-16-25KV-FM	FC or FS-14-21FV-FM/FC or FS-16-25FV-FM



CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER

Sinks manufactured by **ADVANCE TABCO®** are designed and constructed for the use of liquid containment. Suggested applications include Food Preparation, Manufacturing, Cooking, Laboratory and Service and the like. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

WARNING: Equipment that includes a faucet may expose you to chemicals, including lead, that are known to the State of California to cause cancer or birth defects or other reproductive harm. For more Info, visit www.p65warnings.ca.gov.


(1) Sink, (2) "Z" Wall Brackets, Legs*, Faucet(s)*, Drain(s)*
***See Below For Proper Quantities Supplied Per # Of Stations:**

TOOLS NEEDED (Not Included): 5/32" Allen Wrench


Insert top of legs into adjustable shelf corners (bottom of undershelf). Slide legs leaving desired leg length below the shelf (**Figure 1**). Insert Allen Head Set Screws into adjustable shelf corner and lightly tighten (**Figure 1a**). Do not over-tighten at this time.



Slide entire bracing over the legs to desired height and tighten with Allen Wrench (**Figure 3**).

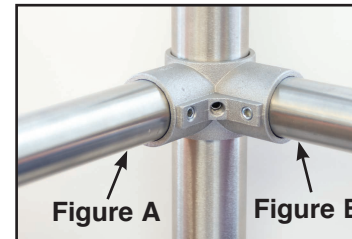

Slide tubular legs all the way into the gussets (**Figure 5**).
Tighten each Set Screw using Allen Wrench (**Figure 6**).

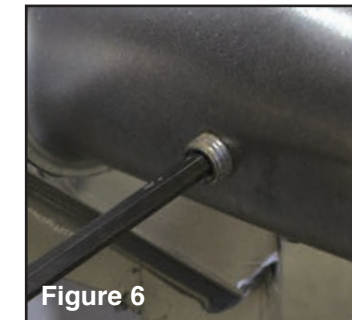

Toe-Push Model FC-FM-40 Shown