

SMART AI GLASSES

User's Manual

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Precautions


- Prohibit charging in a waterlogged or humid environment.
- Please use the charging cable accompanying this product to charge.
- The material of this product is soft, please hold it gently and put it down, and it is forbidden to drop it; when you find the product broken, please pay attention to safety and avoid scratching your body.
- This product cannot be worn for swimming or soaked in water.

※ This product supports photo, video function, it is strictly prohibited to use this product for clandestine photography and other behaviors, please strictly follow the local laws and regulations, healthy use of this product.

Appearance

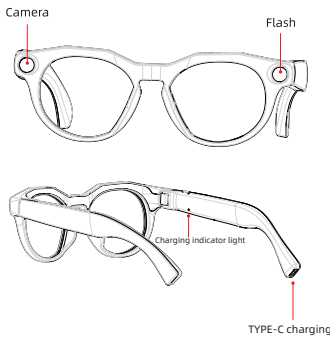

Key Definition

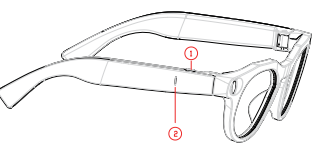

Key ①:

A: In the off state, press and hold the button for 3 seconds to turn on the device.
B: In the on state, press and hold the button for 3 seconds to turn off the device.
C: In the on state, press and hold the button for 8 seconds to restore factory settings and restart the device (This operation will clear all data on the device. Please use it with caution!).
D: In the on state, press once briefly to take a photo. The photo will be automatically stored in the local memory of the product. You can connect to the APP to import it to your phone.
E: In the on state, press and hold the button for 2 seconds to start recording. During the recording process, press once briefly to end the current recording. The recorded video will be automatically stored in the local memory of the product and can be imported to your phone after connecting to the APP.
F: In the on state, press briefly twice consecutively to record audio. During the recording process, press once briefly to end the recording. The recorded file will be automatically stored in the local memory of the product and can be imported to your phone after connecting to the APP.
G: In the on state, press and hold the button for 8 seconds to force the device to restart and enter the connection waiting state.
H: When a call comes in, press once briefly to answer the call. Press for 1 second to reject the current call.

Touch area ②:

A: When the device is powered on, press the button once to wake up the AI voice assistant. This operation requires the HeyCyan application to remain displayed at the front end.
B: When powered on, press the button quickly twice to activate the AI rapid image recognition function.
C: When powered on, press and hold the button for 3 seconds to activate the recording function. Press once while recording to end it. The recorded audio will be automatically saved in the product's local memory. After connecting to the APP, it can be imported to the phone.

Connection instructions

- This smart glasses is a stand-alone product, many functions must be connected with the cell phone before use.
- You can search "EYEVUE" in Google Play or iPhone App Store, download and install it to your cell phone.
- You can also scan the QR code and select the corresponding system version to download.



Open the installed app and follow the instructions to complete the registration.

Select [Home] and click [Connect Device].

Select the name of the searched device.

When you hear the ding-dong sound, the connection is successful.

Warm tips

- This product supports photo and video recording, but the power consumption is relatively high, when the power is lower than 15%, the device will deactivate the photo and video recording function, when the power is lower than 15%, the device will pause the transmission of data to the cell phone, and can be resumed after charging.
- This product supports wifi to transfer data to cell phone and save it, it needs the cell phone to allow APP to use the relevant permissions before it can be realized.

合格证

QUALIFIED CERTIFICATE
型号: (MODEL)
检验员: (CHECKER)
出厂日期: (DATE)

PASS

智能眼镜 使用指南

注意事项


- 禁止在有水或潮湿的环境下充电;
- 请使用本产品配套的充电线充电;
- 本产品材料柔软, 请轻拿轻放, 严禁摔打。当发现产品有破损时, 请注意安全, 避免划伤身体。
- 本产品不可佩戴游泳或者浸泡于水中。

※ 本产品支持照相、录像功能, 严禁使用本产品进行偷拍等行为, 请严格遵守当地法律法规, 健康使用本产品。

外观说明



按键定义说明

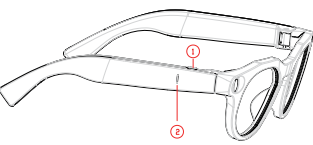

按键①:


A:关机状态下, 长按按键3秒开机。
B:开机状态下, 长按按键3秒可关机。
C:开机状态下, 长按8秒恢复出厂设置并重启(此操作会清空设备上的所有数据, 请谨慎使用)
D:开机状态下, 短按1次可照相, 照片会自动存储在产品的本地内存。可连接APP后导入到手机。
E:开机状态下, 长按2秒可录像, 录像过程中再短按一次结束本次录像, 拍摄的视频会自动存储在产品本地内存。可连接APP后导入到手机。
F:在开机状态下, 连续短按2次可录音, 录音过程中短按一次结束录音, 录音的文件会自动存储在产品的本地内存。可连接APP后导入到手机。
G:在开机状态下, 长按按键8秒会使产品强制重新启动, 进入则待连接状态。
H:当有电话进入时, 短按一次可接听来电, 长按1秒可拒接该次来电。

触摸区域②:

A:在播放音乐时, 连续单击触摸区域, 可开始播放/暂停播放。
B:在播放音乐时, 连续三击触摸区域, 切换上一首音乐。
C:在播放音乐时, 连续双击触摸区域, 切换下一首音乐。
D:在播放音乐时, 前滑调大音量, 后滑调小音量。

连接说明

- 本智能眼镜是单机产品, 许多功能须与手机连接后方可使用。
- 可在 Google Play 或者 iPhone 的 App Store 里搜索 "EYEVUE" 下载并安装到手机。
- 也可以扫描二维码, 选择对应系统版本下载。

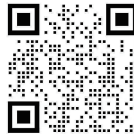

打开安装的APP, 根据提示完成注册

选择【首页】, 点击【连接设备】

选择搜索到的设备名称

听到叮咚声音, 连接成功

温馨提示

- 本产品支持拍照和录像, 但使用功耗相对较高, 在电量低于15%时, 设备将停用拍照和录像功能, 在电量低于15%时, 设备将暂停传输数据到手机, 充电后可恢复使用。
- 本产品支持wifi传输数据到手机并保存, 需要手机允许APP使用相关权限后方可实现。

合格证

QUALIFIED CERTIFICATE
型号: (MODEL)
检验员: (CHECKER)
出厂日期: (DATE)

PASS