


ZNP

AI Smart Translator

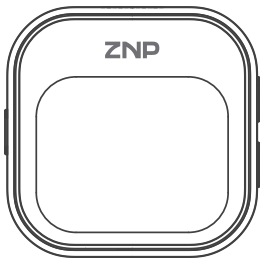

Quick Start Guide

ZNP Z05

Product Specifications

Product Name: ZNPAI Smart Translator

Model: ZNP Z05

Version: 6.0

Range: $\geq 10\text{m}$

Battery Capacity: 400 mAh

Rated Input Voltage: 5V $\approx$ 400 mA

Battery Type: Li-Polymer Battery, Standard Voltage: 3.7 V

Standby Time: About 500 H

Charging Time: About 1.5 H


Charging Port: Type-C Port

Our Story & Strengths

We spent 3 years challenging norms and building our exclusive AI model Saymi—to fix real regrets: lost ideas without WiFi, missed stories due to language, hidden worries over privacy. That's ZNP.

- Bluetooth + Saymi: Works without WiFi—Saymi responds anytime, anywhere.
- Saymi's 165 Languages: Millisecond switching + visual interaction—no communication barriers.
- Saymi's Local Operation: Solid privacy—no cloud data risks, all processing on-device. We never aimed for "smarter AI"—but a companion that helps you get through all inconveniences.

What's in the box

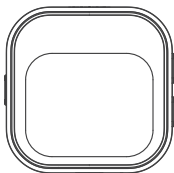

AI Smart Translator



Magnetic disc lanyard



Magnetic clip



Quick Start Guide



USB-C cable

Components



-----Display Screen




-----Power button




-----Volume +

-----Volume -

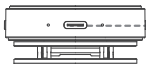

-----USB Type-C port



-----Speaker

Instructions

I. Power On

Press and hold the power button for about 5 seconds to turn on the device.

II. Power Off / Reboot / Factory Reset

After the device is powered on, press and hold the power button for about 2 seconds, tap the corresponding icon, and then tap Confirm to perform the operation.

III. Translation

1. On the device home screen, tap the translation icon, select your languages, and tap the  icon to begin translation.
2. Double-press the power button to enter the translation interface as well.
3. Long-press the upper-left button to directly enter the translation interface.

Note: Make sure to connect to the mobile app before translating.

IV. Offline Translation

When the device is powered on, swipe down, select "Offline Translation," choose your desired languages, and then tap the "" icon to enter the translation screen. Next, press and hold the icon under the target language to begin translating.

Note: Download the offline language packs in the app before using this feature.

V. Recording function (Saved recordings can be found in the APP.)

On the device home screen, tap the  icon to start recording.

VI. Volume


On the home screen, swipe down and choose Volume, or press the right button to adjust the volume.

VII. Screen Brightness /Screen Sleep Time

Once the device is powered on, swipe down and go to "Display" settings, where you can adjust the brightness, set the screen sleep time, and turn the "Always-On Display" feature on or off.

Display Screen Features

Translate Home Page

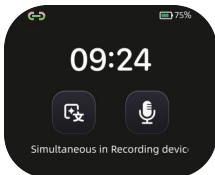

Language Selection



Simultaneous Interpretation



When connected to the app

Offline translation



In offline translation mode

Record




Tap to start recording.



Stop recording

Settings

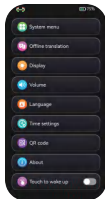


Tap any item to access it.

System Menu



Factory Reset / Restart
/ Power Off

Brightness / Sleep timer

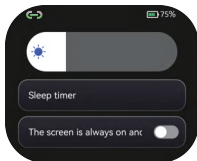

Connection status



Not connected to the phone's Bluetooth.



Connected to phone Bluetooth.



Connected to the phone via Bluetooth and to the app.

Installing Software



Android Download



ISO Download



Scan to Download the App


Notes:

1. After performing a factory reset, you need to manually delete the pairing record in the app and remove the device from the Bluetooth list on your phone, then re-establish the connection.
2. If the device interface freezes or becomes unresponsive, press and hold the multi-function button for 10 seconds to force a restart.

Software Connection and Usage

2 connection methods:



1. On the APP home page, tap Connect Device, then tap the device named "ZNP Z05" to connect your device.
2. Tap the scan icon in the upper right corner and scan the device QR code to connect.

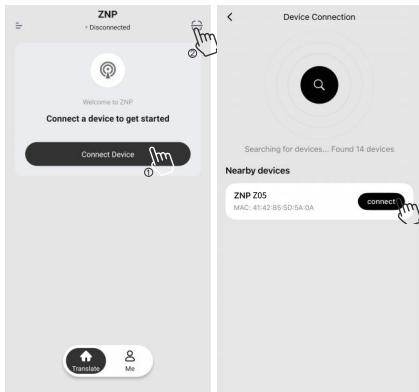

Connection Successful


Open the main interface of the app as shown below :

- Simultaneous interpretation
- Voice Notes
- Offline translation
- Conversation Translation
- Voice Cloning
- Camera translation
- Recorder
- Audio/Video Call

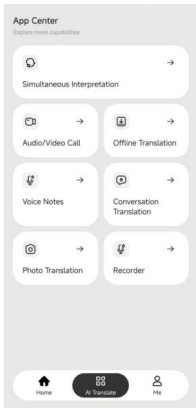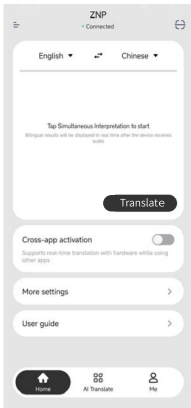



Voice Cloning

On the homepage, tap More Settings → select Sound → tap Clone My Voice → confirm recording. Complete and save the recording as prompted, then check your cloned voice. The cloned tone will be used for audio output during translation.

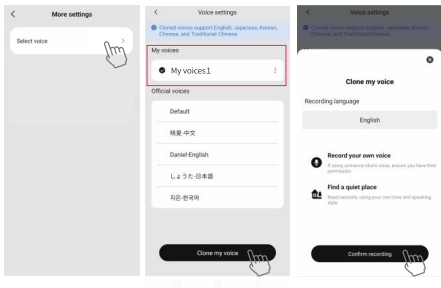


Conversation Translation

Tap to enter Conversation Translation, select your target language, and then tap your own language button to start the conversation. Each tap speaks one sentence, and the speaker will then output the translated audio.

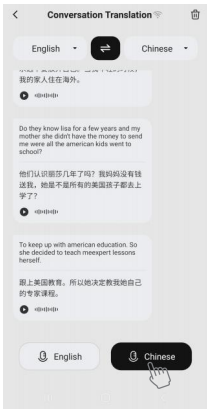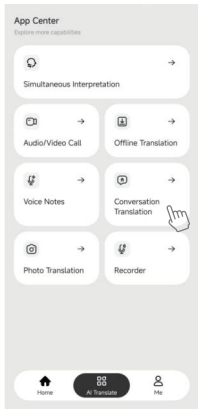


Simultaneous Translation

Tap Simultaneous Interpretation, select your target language, tap the  icon to start translation, tap the  icon to rotate the screen, tap  to flip the text, and tap  again to end translation.

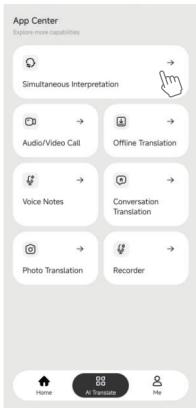


Voice Notes

Tap the  icon in the lower-right corner, select the voice to record, set a recording title, and confirm. Then tap the  icon below to start recording — the recorded voice will be displayed in real time. Check the box to save and end the recording. The recorded audio can be found in the recording list.

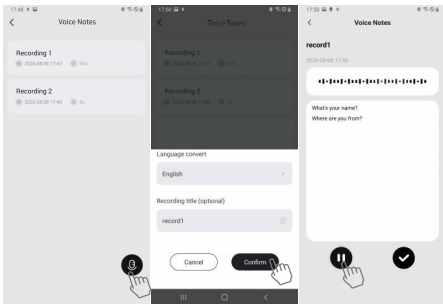


Camera Translate

First select the source language of the text, then choose your target language, and tap to translate via camera.

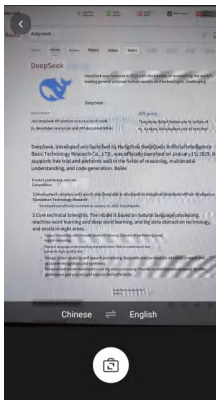


Offline translation

To use offline translation, download the offline language packs for both languages you need in the app. After downloading, the device supports offline translation between those languages.

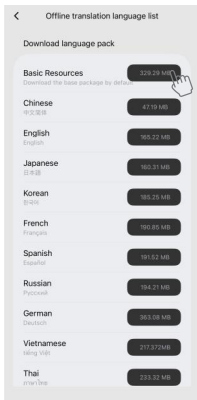


Recorder

Tap the "🎤" icon to start recording.
Tap again to end the conversation.
The recording can be found in the recording list in the APP.

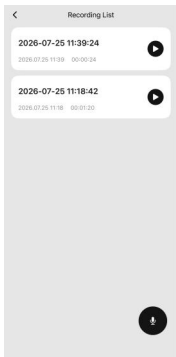

Audio/Video Translation

Pre-select your language and the other person's language, then tap Video Call or Audio Call to share with friends for real-time two-way translation.

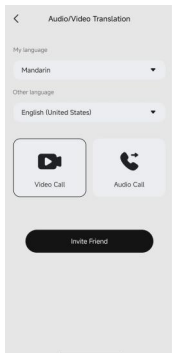

FCC ID: 2BTLR-Z05

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.



Scan to Download the App

Scannen, um die App herunterzuladen

Scansiona per scaricare l'app

Scannez pour télécharger l'application

Escanee para descargar la aplicación

