

Lenovo Smart Glasses T1



Enjoy the service
Lenovo helps you

Scan to
Enjoy Services
Claim Perks
Shop Worry-Free

Lenovo

Note: Images are for reference only; actual product may vary. This product requires use with a mobile phone or other smart device.

Use of the app requires acceptance of additional legal terms.

The words “联想” and “Lenovo” and the micro-logo are trademarks of Lenovo Group Limited. Other product or service names mentioned may be trademarks of Lenovo or other companies and are owned by their respective rights holders.

© 2025 Lenovo Group Limited and/or its licensors. All rights reserved.

Contents

Safety Information	2
Smart Glasses Overview	3-4
Using Smart Glasses	5-8
Product Specifications	9
Warranty Statement	10
Product Warranty Information	11
Product Usage Precautions	12-14
Warranty Card	15
Legal Notice	16-17

Safety Information

Before using this product, read the following safety instructions and follow all standard safety precautions. Any operation not in accordance with these instructions may result in damage to the product.



Warning

1. Do not place the device near heat sources, exposed flames, or other areas that may generate high temperatures.
2. Improper battery replacement may cause an explosion hazard.
3. Do not attempt to replace the internal rechargeable lithium-ion battery. Contact Lenovo Customer Support for genuine replacement.
4. If the product exhibits severe swelling, discontinue use immediately.
5. Do not crush the product or place it where it may fall.
6. Do not attempt to disassemble or modify the optional docking station battery. Doing so may cause battery explosion or leakage of battery fluid. Batteries not specified by Lenovo or those that have been disassembled or modified are not covered under warranty.
7. Use only adapters certified by CCC for charging.



Note

Important Safety Tips: Read this manual carefully before using the product and keep it in a safe place.

- The product meets the IP54 standard, which is based on laboratory test data. Avoid direct contact with water sources.
- This product is not resistant to steam. Do not use it in high-humidity environments such as bathing, showering, or saunas.
- If you feel abnormal heat while wearing the device during charging, remove it immediately and stop using it.
- If the device overheats or becomes unresponsive while not worn, disconnect the charging cable promptly to prevent damage.
- To avoid potential hearing damage, do not use at high volume for extended periods.
- Do not use this product during vigorous physical activity to prevent accidental injury.

Introduction to Smart Glasses


The smart glasses charging case packaging includes:




Smart Glasses
(Universal Smart Glasses Accessories)



Smart Glasses
(Charging Case)

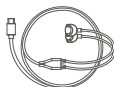

Magnetic
Charging Cable

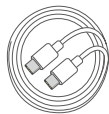

Type-C charging cable




Instruction Manual + Warranty Card
Actual appearance may vary

Note: This purchase includes only the smart glasses (frame) and does not include the smart glasses (charging case), Universal Smart Glasses Accessories, magnetic charging cable, Type-C charging cable, or other accessories.

Introduction to Smart Glasses


This product is a smart device in the form of eyewear, supporting calls, music playback, recording, and multiple functionalities, providing you with a comfortable all-day smart experience.

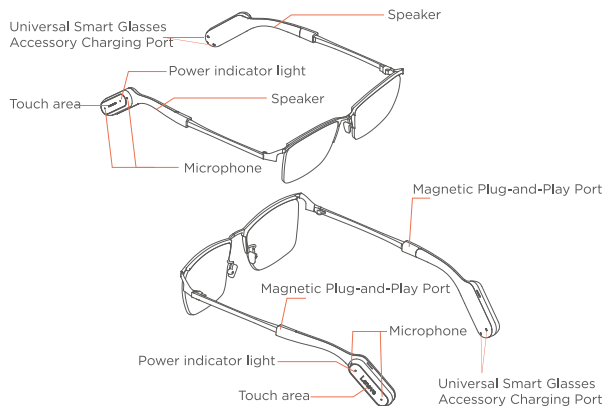

Using smart glasses

First-time use

When using the smart glasses for the first time, insert the smart glasses temple sleeves (accessory) or the smart glasses (Universal Smart Glasses) into the smart glasses frame (optical frame) fitted with prescription lenses, following the direction of the arrows.

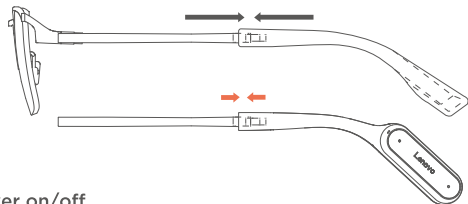


1. Power on/off

Power On: Press and hold for 2 seconds (when powered off)

Power Off: Press and hold for 3 seconds (when powered on); When Bluetooth is connected, pressing and holding will not power off

Note: Both left and right sides (Universal Smart Glasses Accessories) support this function

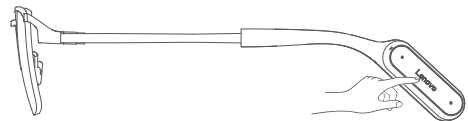

5


Using smart glasses

2. Smart Glasses (Universal Smart Glasses) Charging

Universal Smart Glasses Low Battery: When the voice prompt indicates low battery, it means the device has insufficient power. Please charge the device promptly.

Universal Smart Glasses Charging in the Charging Dock: When charging in the dock, a steady green light indicates the Universal Smart Glasses Accessories has completed charging.

Universal Smart Glasses Magnetic Cable Charging: When charging with the magnetic cable, the indicator light turning off indicates charging is complete.

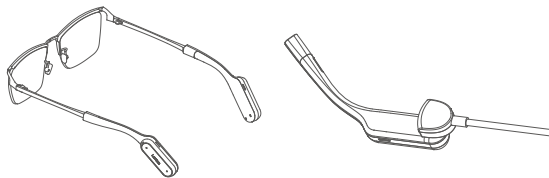

3. Connecting Devices

Download and install the Lenovo Health & Lifestyle app from your mobile app store. Open the Lenovo Health & Lifestyle app, log in with your Lenovo account, select Add Device, and follow the app prompts to complete pairing between your smart glasses and phone.



Lenovo Health Life

Download and install the Lenovo Health Life App to access interactive settings and additional features. Supports select Android and iOS devices for certain functionalities.

6

Using smart glasses

4. Control Smart Glasses

Answer/End Call: (Supported on both left and right sides)
Double-click: Answer call (during incoming call)
Press and hold for 1 second: Decline call (during incoming call)
Double-click: End call

Music Controls: (Supported on both left and right sides)
Single click: Play/Pause/Stop music
Double-click right side: Next track
Double-click left side: Previous track

Activate the built-in voice assistant on your phone
Triple-tap the left touch control once. Your phone will connect and activate the voice assistant even when not in a call.

Meeting Assistant: (Supported on both left and right sides)
Press and hold for 3 seconds to activate Meeting Assistant (when powered on). Headset prompt: Meeting Assistant is activated.

Call Volume Boost: (Supported on both left and right sides)
During a call, users can press and hold the left or right side of the earbuds for 2 seconds to enable or disable the call volume boost feature. (Upon activation or deactivation, a corresponding prompt tone will be heard: "Volume boosted" or "Boost disabled").

Note:
1. This feature is only available during calls, such as phone calls or WeChat voice calls. It cannot be used while listening to music, watching videos, or in other non-call states.

Note: For more details on features, please refer to the usage guide in the Lenovo Health & Wellness app.

Using smart glasses

2. This mode is specifically designed for noisy environments or when you feel the other person's voice is too soft. Its primary purpose is to ensure you can clearly hear the other person. This may result in some loss of audio quality. If you find the sound quality unacceptable after enabling this feature, you can turn it off immediately.

5. Smart Glasses (Charging Case Indicator Light) Status

Green light steady: When the robot is in the charging dock, a steady green light indicates the robot is fully charged.
Orange light steady: If the robot is in the charging dock, a steady orange light indicates the robot is charging.
White light steady: When the charging dock is opened, the white light illuminates, entering device pairing mode.

Bluetooth Connection Mode:

1. Open the smart glasses (charging case) and remove the smart glasses (Universal Smart Glasses Accessories).
2. Open Bluetooth settings on your phone or PC, search for and locate the smart glasses device name, such as: Lenovo Smart Glasses T1 or Lenovo Smart Glasses T1 Pro.
3. Tap the device name to connect. The smart glasses (Universal Smart Glasses Accessories) will voice prompt "Bluetooth connected." When Bluetooth disconnects, the Wan Jing Tong Smart Device will voice prompt "Bluetooth disconnected."

System

System reset

Reset the system in "My Apps - Settings." System reset will erase all local data on your device and restore it to its factory state. Please use this feature with caution.

Product Specifications

Product Name	Lenovo Smart Glasses
Product Model	T1
Protection Rating	IP54
Operating Temperature	5°C to 35°C
Battery Type	Lithium-ion Polymer Battery
Rated Input	5V= 500mA Smart Glasses (Charging Case)
	5V= 60mA Smart Glasses (Universal Smart Glasses Accessories)
Rated Power	0.3W Smart Glasses (Universal Smart Glasses Accessories)
	2.5W Smart Glasses (Charging Case)
Battery capacity	500mAh Smart Glasses (Charging Case)
	60mAh Smart Glasses (Universal Smart Glasses Accessories)
Bluetooth version	5.4

The wireless transmission equipment approval code is displayed on the housing nameplate.

Note: This manual is for reference only. Information contained herein is subject to change without notice. The manufacturer assumes no liability for any direct or indirect consequences resulting from modifications to this manual.

Warranty Statement

If the product fails or is damaged due to a manufacturing defect during normal use within the warranty period starting from your purchase date, and we confirm the defect, we will repair, replace, or refund the product free of charge as appropriate. Unless otherwise required by applicable law, replacement products or parts may not be new but will perform well and be at least functionally equivalent to the original product or part. The warranty period commences on the date of initial purchase, as evidenced by the invoice date. In the absence of a valid invoice, the warranty period begins thirty (30) days after the product's date of manufacture. If the invoice date is later than the actual delivery date, the warranty period starts from the actual delivery date. The warranty period shall commence no later than the sixtieth (60th) day following the product's factory date. Repaired or replaced products retain warranty coverage for the remaining warranty period, with a minimum of thirty (30) days. To request warranty service, contact the product seller or call the Lenovo Service Hotline and follow our instructions. When requesting warranty service, you must provide an accurate, complete, and clearly filled-out valid sales invoice.

The foregoing warranty does not apply to failures or damage resulting from: (a) misuse, abuse, or improper transportation, maintenance, or storage, including but not limited to use under inappropriate temperature, humidity, or other unsuitable environmental conditions; (b) events beyond our reasonable control, such as force majeure, accidents, network or power outages; (c) unauthorized repairs or modifications by non-Lenovo personnel; (d) any third-party products or services; (e) use of the product for purposes other than those specified or intended; (f) or use in any manner contrary to the product's instructions. Normal wear and tear, aging, scratches, abrasions, or issues caused by the use of paint solvents or other chemicals during product use are not covered by this warranty. This warranty is void if the original identification label is altered or destroyed. The integrity and completeness of the product and accompanying materials are not covered by this warranty. You should inspect the product upon receipt and raise any objections to discrepancies immediately.

This is our entire warranty for the product and applies only within the jurisdiction of Mainland China. This warranty gives you specific legal rights, and you may also have other rights under the law. Nothing in this document affects your consumer rights that cannot be excluded or limited by law.

Product Warranty Information

Product Name	Warranty Coverage	Component Name	Warranty Period (Months)	Warranty Service Types	Note
Lenovo Smart Glasses	Main Components	Universal Smart Glasses Charging Dock	12	Mail-in Repair	
	Random Data	Instruction Manual/Packaging/Software/Gift	N/A	Not applicable	

Notes and Explanations

- (1) This table does not constitute a description of product specifications and configurations. Actual product specifications and configurations shall prevail.
- (2) When returning products, please ensure they are properly packaged and cooperate with the logistics provider for inspection. We recommend using the original product packaging. If the returned product is not covered under warranty, we will contact you to arrange disposal according to your confirmed method. Please ensure your contact information is accurate and communication channels remain open. If, due to reasons attributable to you, a repaired or replaced product remains unreturned to you for more than two (2) months, you are deemed to have consented to our disposal of the product in an appropriate manner.

Important Notes for Product Use

Before using the equipment, please carefully read the following precautions. Adhering to these guidelines will help you maximize the equipment's performance, ensure safe operation, and avoid potential risks.

Product Protection Rating: This device complies with the IP54 standard, offering dust-resistant and splash-proof capabilities. Its effectiveness has been laboratory-tested and certified to meet the corresponding rating under the GB/T42808-2017 standard. Note that dust and splash resistance are not permanent and may diminish over time due to wear and tear from regular use.

Applicable Environmental Requirements:

- Avoid exposing the device and its accessories to rain or moisture. If the device or accessories accidentally get wet, wipe them dry promptly and place them in a well-ventilated, shaded area to dry completely. Do not reuse or recharge the device until it is fully dry.
- This product is not steam-proof. Do not use in high-humidity environments such as bathing, showering, or saunas. Operate the device within a temperature range of 5°C to 35°C (41°F to 95°F). Store the device and accessories within a temperature range of -20°C to 45°C (-4°F to 77°F). Extremely high or low temperatures may cause device deformation or malfunction.
- Do not place the device in high-temperature or high-humidity environments (e.g., saunas, vehicle dashboards) to prevent deformation or cracking.
- Do not use the device near heat sources such as radiators, heaters, or open flames.

Cleaning and Maintenance:

- Clean your glasses with a soft, dry cloth or a dedicated lens cleaning cloth. Avoid using alcohol-based, corrosive, or abrasive cleaners, as they may damage the lenses and electronic components.
- Avoid storing the device with metal objects that could cause scratches.
- To maintain the performance and appearance of your product, do not spray perfume directly onto the eyewear frame. Chemicals in perfume may react with the frame's surface materials. Excessive use may cause surface damage, affecting both the appearance and functionality of the eyewear.

Important Notes for Product Use

Charging Safety Guidelines:

- This product includes a charging cable and adapter. Please use the official charging equipment provided to ensure safety and optimal charging performance. If you experience discomfort due to temperature during charging, stop wearing the device immediately. If the device overheats or becomes unresponsive while not worn, disconnect the charging cable to prevent damage. When storing the product for extended periods, fully charge it, turn off the power, and place it in a cool, dry location. Charge it at least once every three months to avoid damage from deep discharge. It is recommended to maintain a minimum battery level of no less than 5%.

Battery Safety Guidelines:

- This product contains a built-in, non-removable battery. Incorrect battery replacement may cause explosion. Do not disassemble, strike, crush, or cut the battery. Avoid exposing the battery to sunlight, fire, or similar high-temperature environments. Do not place the battery in extremely low-pressure conditions, as this may cause the battery to explode or leak flammable liquids and gases.
- If the battery shows severe swelling, discontinue use immediately.
- If you suspect the battery may have been accidentally swallowed or inserted into any part of the body, seek immediate medical attention.

User Health and Safety Tips:

- To prevent hearing damage, avoid prolonged use of the device at high volume levels.
- When driving, use the device responsibly in accordance with relevant regulations to ensure safe operation.
- The skin-contact surfaces of this product are made from professional-grade, health-safe materials for secure wear. If skin discomfort or allergic reactions occur due to individual differences, discontinue use immediately and consult a physician.
- Playing music or other audio content through this product may reduce your awareness of external warning sounds. Use only in environments where safety is assured.

Equipment Maintenance and Operating Procedures:

- Do not block the speaker or microphone openings, and use the device correctly according to the instructions.

Important Notes for Product Use

- Do not use the device during vigorous physical activity to prevent accidental injury.
- The standard transparent lenses included with the product are demonstration lenses without prescription and are intended for temporary protection only. We recommend promptly replacing them with lenses suitable for your vision needs or plano lenses after purchase to avoid prolonged use of the demonstration lenses. For lens replacement, we advise visiting a professional eyewear store. Self-installation may cause device damage or malfunction. Do not disassemble or modify the device (including replacing the built-in battery) or its accessories without authorization, as doing so will void the warranty coverage for the device and accessories.

Other Notes:

This product is designed for everyday use and is not intended to protect eyes from mechanical injury. This device is not washable; do not directly rinse the glasses or subject them to ultrasonic cleaning. This product and its accessories may contain small parts. Keep the device out of reach of children to prevent accidental ingestion or other hazards.

Privacy Notice

1. Respect personal privacy

When using this product, please adhere to privacy protection principles and avoid unauthorized recording to prevent infringement of privacy rights.

2. Legal and Regulatory Compliance

The use of smart glasses may be subject to legal and regulatory restrictions in different countries and regions, particularly when involving functions such as audio recording and wireless communication. Please ensure compliance with local regulatory requirements.

3. Compliance Certification Requirements

This product has obtained relevant compliance certifications. However, additional regulatory requirements may apply in certain regions. Please familiarize yourself with and comply with local regulations before use.

4. Restrictions in Specific Situations

The use of smart glasses may be prohibited or restricted in certain locations (such as government agencies, courtrooms, examination halls, hospitals, changing rooms, aircraft cabins, etc.). Please strictly comply with relevant regulations to avoid unauthorized use.

Warranty Card

When purchasing products, please fill out the following information completely and clearly, and affix the seller's official seal to protect your legal rights and interests.

User Information	User Name		Email	
	Mailing Address			
	Contact Phone Number		Postal Code	
Product Information	Product Name		Product Barcode/Number/	
	Product Model		Batch Number	
Seller Information	Name			
	Address			
	Contact Phone Number		Postal Code	
	Date of Sale		Invoice Number	
Note	Note: (1) This form must be stamped and confirmed by the seller; (2) For products eligible under the relevant "three guarantees" regulations, this warranty card serves as the "three guarantees certificate"; (3) Repair records shall be based on the repair certificate issued by an authorized service provider. Please retain it securely after requesting service.			

Warranty Contact Information:

Service Hotline: 400-616-5546



Legal Notice

1. Before installing and using the product, please carefully read this document, especially the relevant safety instructions. Keep this document in a safe place for future reference.

2. The illustrations and functional descriptions in this document are provided for explanatory purposes only and are for reference only. Actual products shall prevail. Certain components, functions, and features mentioned herein are for illustrative purposes only and may apply only to specific product models. Unless explicitly stated otherwise, nothing in this document constitutes a description of specific product specifications or configurations. For product specifications and configurations, please refer to the relevant specification documents for this product or consult the product vendor. Product applications and content may be updated from time to time, and actual conditions may differ from those described herein.

3. The nominal storage capacity is a specification only; the actual usable capacity available to users is lower than the nominal value. The technical performance metrics mentioned are based on measurements taken under specific conditions. Metrics obtained in other operating environments may vary due to differences in settings and conditions.

4. Certain products (as specified in the product description) require network connectivity to enable all features and may need to be used in conjunction with smart phones or other smart devices. The software and internet services mentioned are subject to applicable licenses and/or service agreements. Using network features may consume data and incur service charges, which are billed by your network service provider according to their standard rates.

5. Certain network-based features of the product may be supported by third-party network services. Such third-party services, including their content, are not provided, warranted, or supported by Lenovo and may be terminated or modified at any time. Use of third-party services is subject to the terms of service and privacy policies of those third parties, which may differ from Lenovo's policies. Please carefully review these third-party terms before using related features and services. Third-party services and their content are not controlled by Lenovo, and Lenovo assumes no responsibility for them.

6. If you use software, peripherals, or accessories provided with this product on other devices, or use software, peripherals, or accessories on this product that are not recommended or permitted by this product's specification documents, you shall be solely responsible for their compatibility, reliability, and legality.

Legal Notice

7. Nothing in this document shall be construed as modifying Lenovo's product warranty policy.

8. This product is not designed for organ transplantation or other life support system applications, where product failure could result in personal injury or death.

9. The portions of this document attributable to the licensor (if any) are used under license. No person may, without prior written authorization from Lenovo, reproduce, transcribe, abridge, or compile any part or the entirety of this document into machine-readable format, store it in any retrievable system, transmit it over wired or wireless networks, or translate it into any language in any form.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product name, model name, and trade Mark is same as the report.