
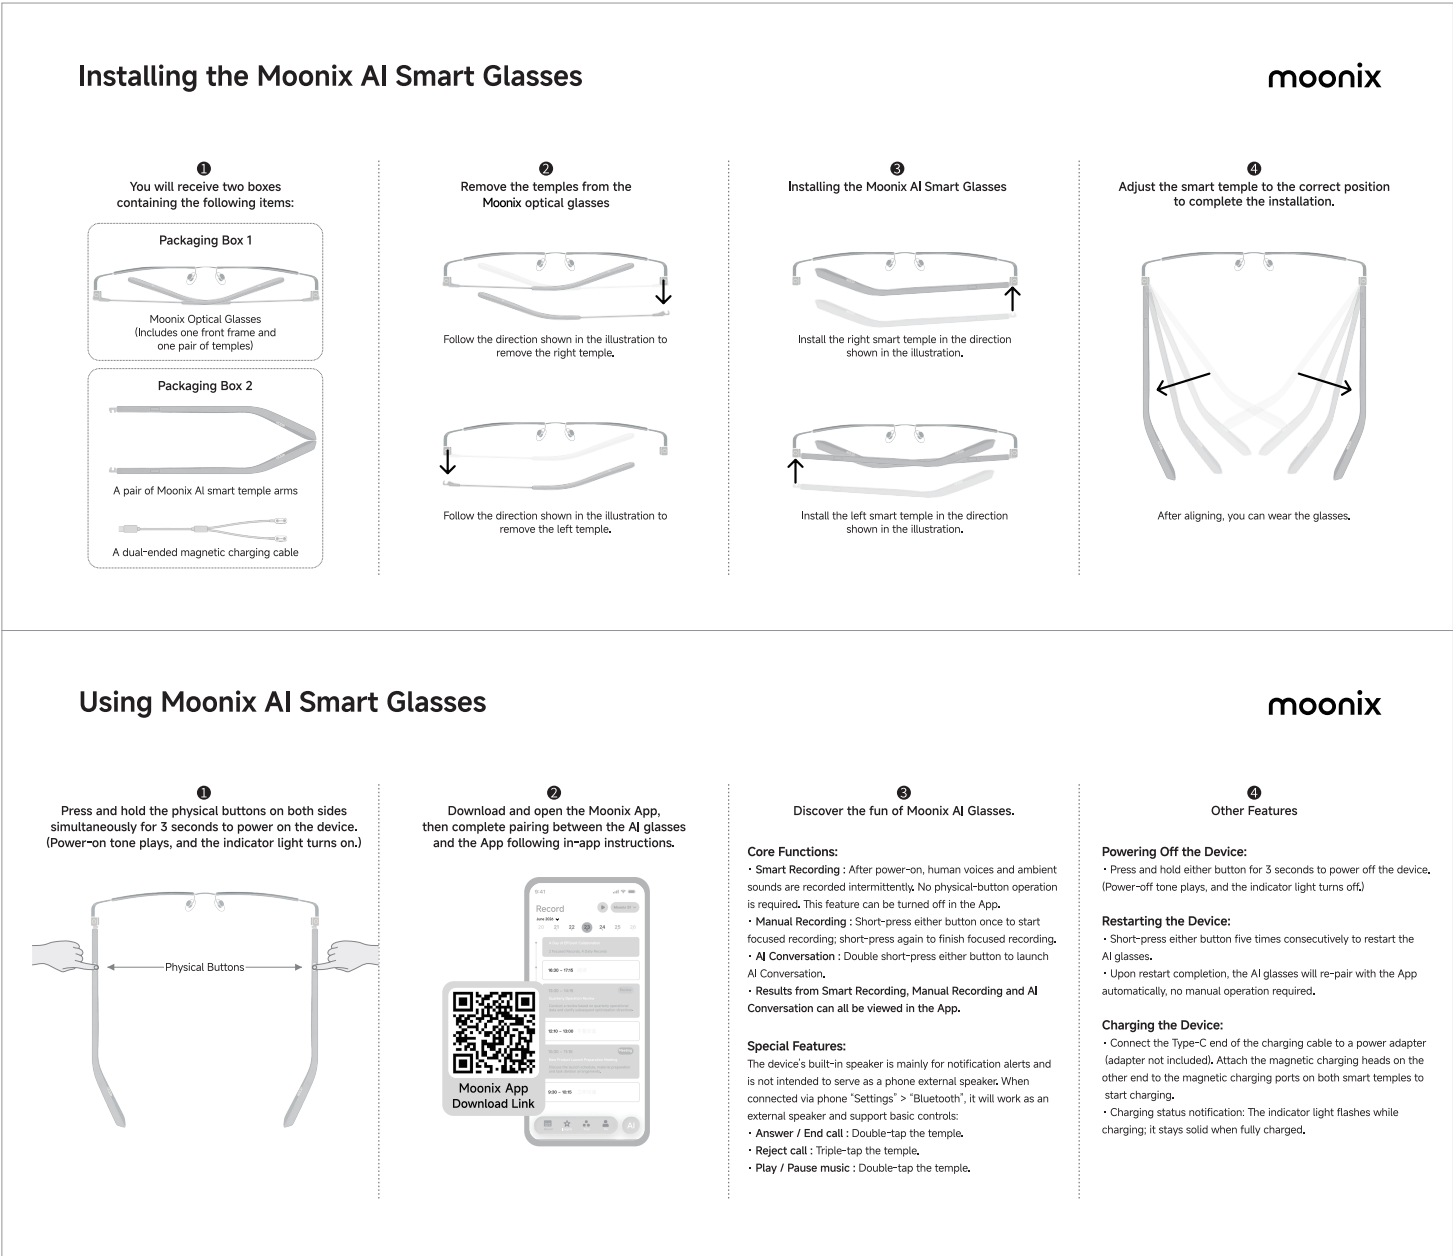



封底

封面

内页

内页

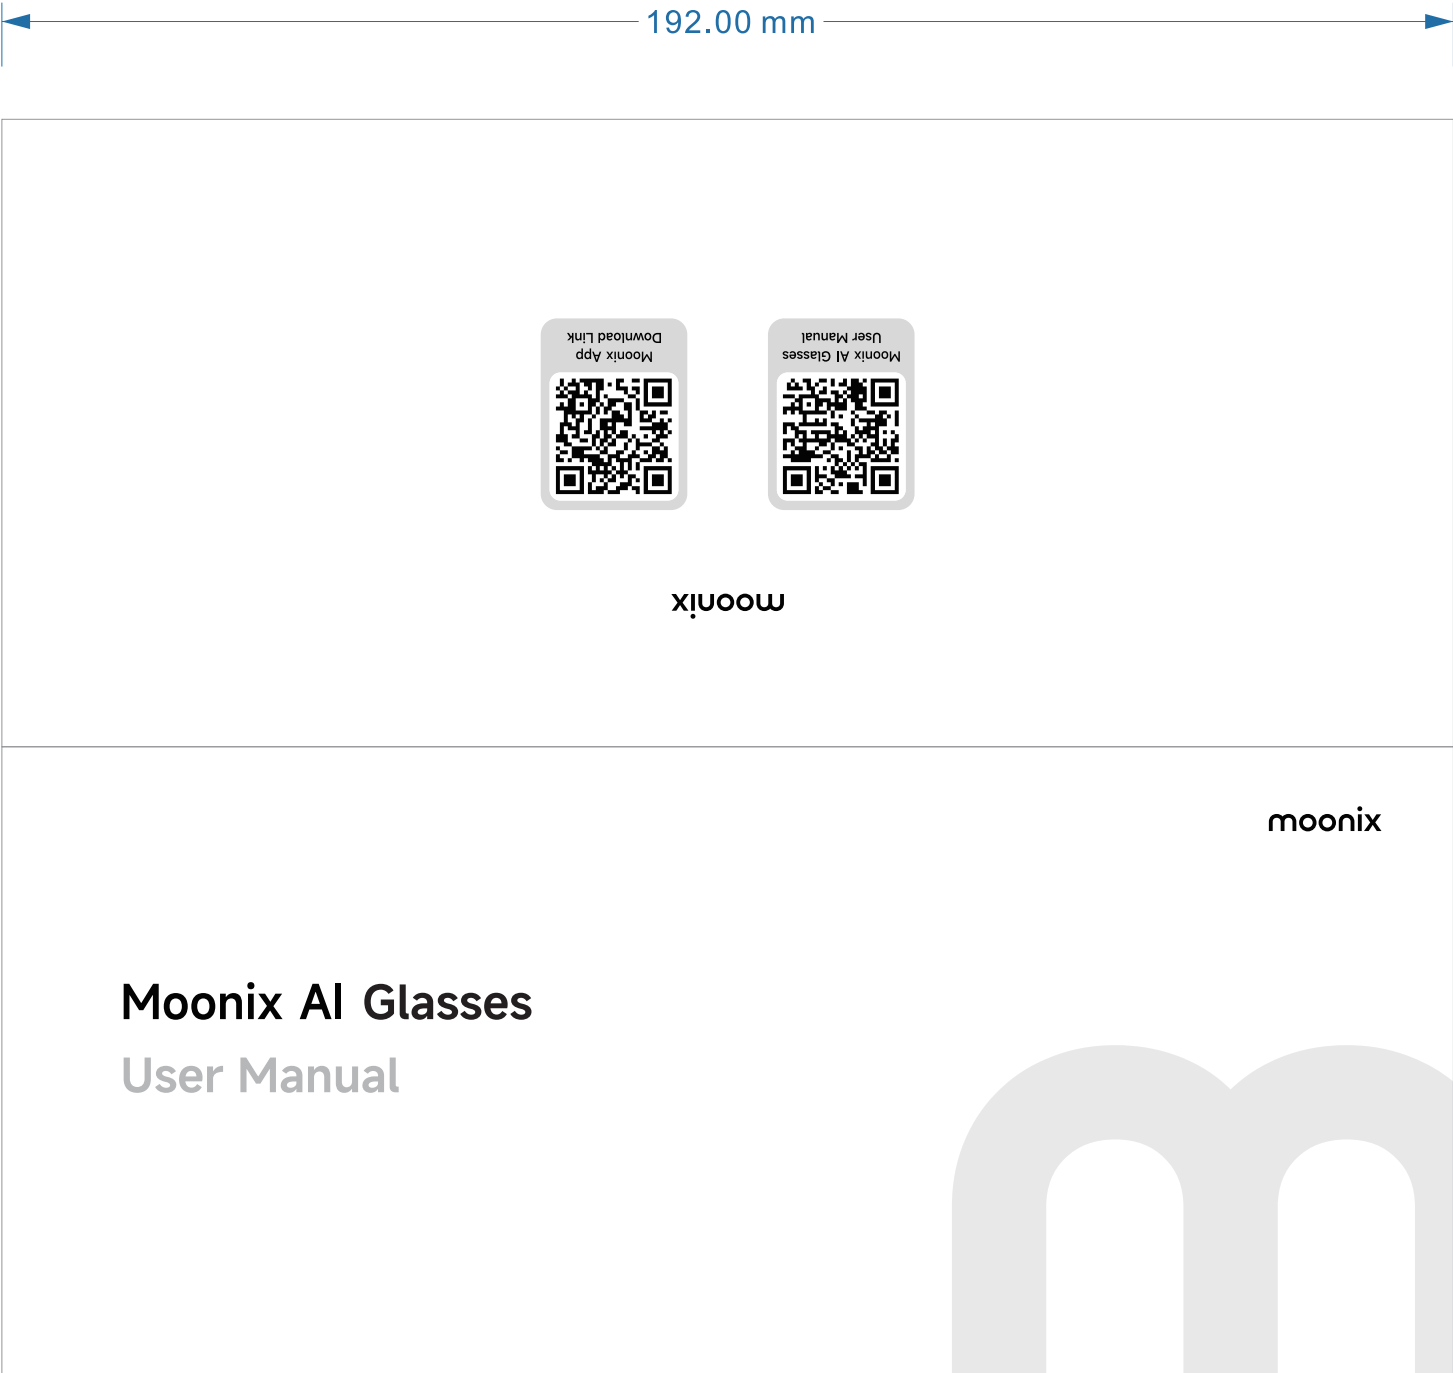

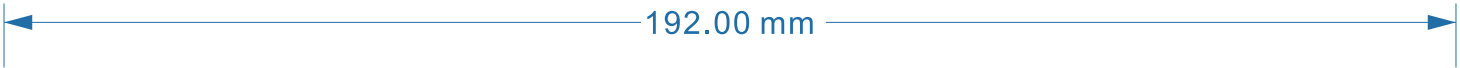

Important Note

Before using the Moonix AI Glasses, please read the 《 Moonix AI Glasses User Manual 》 available at moonix.cn/guide/aiglasses.

Lenses

- This product comes standard with blue-light-blocking zero-power plano lenses. They effectively filter harmful blue light and relieve dry eyes, eye irritation and visual fatigue caused by prolonged digital-screen use. The lenses can be easily removed, so you may take them to an optician's shop as a direct reference for lens size and shape when getting prescription lenses fitted.
- For lens replacement, please visit a professional optician's shop. Improper lens removal or installation may damage the device.
- Do not store the product together with metal objects that may cause scratches or abrasion.

Important Notes

- Do not disassemble, repair or modify this product for any reason. This may cause fire, electric breakdown or permanent damage to the product.
- Do not operate the device in environments with excessively low or high temperatures (below 0°C or above 45°C).
- Keep the product away from corrosive liquids and never submerge it in liquid.
- Do not expose the glasses to direct sunlight for a long time, as this may lead to deformation, aging or fracture.
- Keep the magnetic tip of the charging cable away from metal objects to prevent short-circuiting caused by attracted metal particles.

Usage Restrictions

- Please comply with applicable laws and regulations.
Do not use this product under the following conditions:
- Do not operate the device near gas stations, oil depots, chemical warehouses or other locations storing flammable, explosive substances or chemicals.
 - Do not use this device in hospital operating rooms, emergency rooms or intensive-care units. To avoid interfering with medical equipment, keep this device away from medical devices such as pacemakers, hearing aids and cochlear implants. Maintain a distance of more than 15cm between the device and a pacemaker.
 - If you intend to use this device near personal medical equipment, consult your physician and the equipment manufacturer.
 - Observe all safety warnings and regulations regarding the use of this device while driving.
 - Do not use the device outdoors during thunderstorms to avoid lightning-related hazards.
 - Do not make calls while the device is charging.
 - Do not charge the product in high-humidity areas such as bathrooms. Failure to comply may result in electric shock, personal injury, fire or charger damage.
 - Abide by laws and regulations that prohibit the use of this device in any restricted-use environment.

Batteries and Charging

- The lithium-ion battery inside Moonix AI Glasses must be serviced or recycled by Moonix or its authorized service providers. Do not disassemble it by yourself.
- Do not disassemble, strike, squeeze or cut the battery. Doing so may cause an explosion.
- Stop using the device immediately if the battery is severely swollen.

moonix

Warranty Policy

- This product comes with a 1-year limited hardware warranty starting from the date of purchase.
- Within the warranty period, you are entitled to the following three-guarantee services for non-human-induced performance failures:**
- Within 7 days upon receipt of goods: If the product suffers non-human-induced performance failures, you may opt for a full refund or a replacement with a product of the same model and specification.
 - Within 15 days upon receipt of goods: If the product suffers non-human-induced performance failures, you may opt for a replacement with a product of the same model and specification.
 - Within 1 year upon receipt of goods: If the product suffers non-human-induced performance failures, you may send the product back to the merchant for repair.
- The following situations are not covered by the three-guarantee services :**
- Unauthorized repair, misuse, or defacement/alteration of product labels and seals.- Expiry of the three-guarantee service validity period.
 - Damage caused by force-majeure events such as fire, flood or lightning strikes.
 - Product performance malfunctions resulting from human-caused factors.

Maintenance Record Items

Date of Submission for Repair	Problem Description	Inspection Date	Service Center	Maintenance Technician

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesiredoperation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

