

# BLAST CHILLER BASIC OPERATING INSTRUCTIONS


1



Hold down the “**START**” button for 3 seconds or until “**SELECT CYCLE**” appears on screen.


Note: If unit is in Defrost, wait until defrost is finished.

2

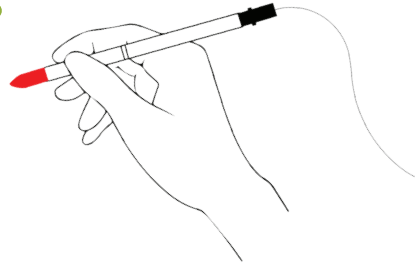

If this chill cycle is by temperature, you **MUST** insert probe into product.

3

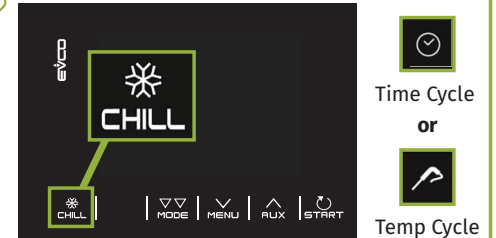

Ensure door is closed.

Press the “**CHILL**” button to toggle between the **clock icon** (by time) or **probe icon** (by temp).

4



To modify the temperature or time, use **arrows** to increase or decrease.

5



Press the “**MODE**” button to toggle between “**SOFT**” or “**HARD**” chill mode.

6



Hold down the “**START**” button to begin the chill cycle. **Blue flashing triangles** will display indicating the cycle is in progress.

NOTE: When the green icon appears, it indicates the cycle is complete



## CARE & MAINTENANCE

- Sanitize probe after each use.
  - Clean cabinet exterior/interior using only non-abrasive, non-chlorinated cleansers.
- For service contact Traulsen at (800) 825-8220.

For more information, please visit  
**[www.traulsen.com](http://www.traulsen.com)**

