


Ai睡眠眼罩
使用说明书



1 产品介绍

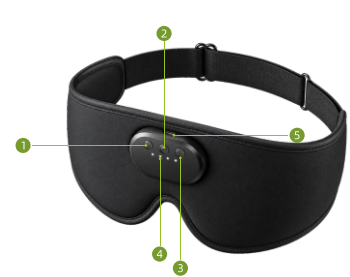

- 1 音量 “-” 键
- 2 开关机键
- 3 音量 “+” 键
- 4 指示灯
- 5 充电接口
- 6 心率指示灯

2 APP下载与连接

1.扫描二维码下载并根据提示安装APP



2.APP连接方式

设备开机后，打开手机蓝牙，进入APP点击添加设备，选择“Aisllly01”，扫描到对应设备直接点击即可连接。

3 按键定义

音量 “-” 键：
1.开机状态：单击--音量减小
2.音乐模式：长按3s--上一首

开关机键：
1.关机状态：长按3s--开机
2.开机状态：长按3s--关机
3.音乐模式：单击--音乐播放/暂停
4.开机状态：长按10s--机器复位重启


音量 “+” 键：
1.开机状态：单击--音量增加
2.音乐模式：长按3s--下一首



AI Sleep Eye Mask
User Manual



1 Product Introduction

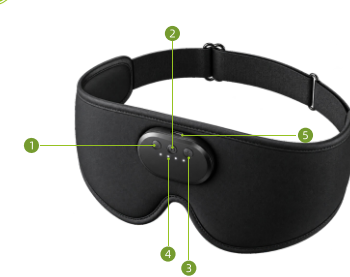

- 1 Volume “-” Key
- 2 Power Key
- 3 Volume “+” Key
- 4 Indicator Light
- 5 Charging Port
- 6 Heart Rate Indicator Light

2 APP Download & Connection

1.Scan the QR code to download and install the APP as prompted.



2.APP Connection Method

Power on the device, enable mobile Bluetooth, enter the APP and tap Add Device.Select “Aisllly01”, tap the matched detected device to connect directly.

3 Key Definition

Power Key:
1.Powered-off state:
Long press for 3s — Power on
2.Powered-on state:
Long press for 3s — Power off
3.Music mode:
Short press — Play/Pause music
4.Powered-on state:
Long press for 10s — Reset and restart the device

Volume “-” Key:
1.Powered-on state:
Short press — Decrease volume
2.Music mode:
Long press for 3s — Previous track

Volume “+” Key:
1.Powered-on state:
Short press — Increase volume
2.Music mode:
Long press for 3s — Next track



FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help important announcement

Radiation Exposure StatementThe device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.