


Appearance Explain



Charging diagram

Strictly follow the operation shown in the figure below:

1. Please align the magnetic charger to the contact on the back of the device for charging.
2. Plug the USB tap into the USB adapter (excluding in the packaging)
3. Do not use a battery adapter with a voltage exceeding 5V and an output current exceeding 1A for charging, otherwise it will cause charging failure and damage the magnetic charging cable or equipment.

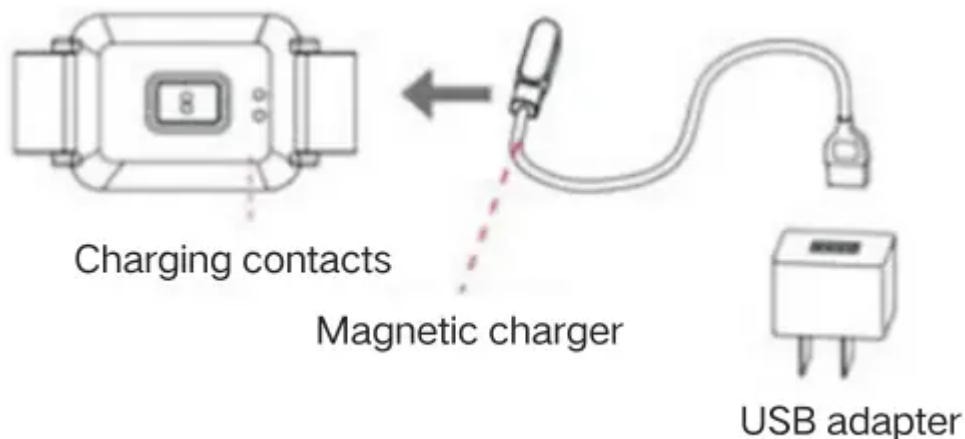

Functions Introduction



Bracelet Time Main Page: Show Bracelet Time, date, calories, etc.



Steps: record the current number of steps of the bracelet, Calories and distance



Sports Information: the bracelet shows the most recent movement information such as motion mode, time heart rate, etc.



Sleep: the bracelet records and shows the total sleep time you had last night, as well as deep sleep time, light sleep time. More detailed information analysis and data record can be viewed in the APP synchronously.



Weather information: the weather page will display current weather, air quality information, and conditions for tomorrow. This function works must connect to the APP, and the phone must open GPS positioning, and allow the APP to have access to the phone's location. If you disconnect or turn off your phone's GPS for a long time, the weather information will not be updated.



Message notification: the bracelet can receive phone calls, text messages, WeChat, QQ and other notifications and alerts on the phone, and the corresponding push project switch can be opened on the APP. This page can store the last 3 message records. Note that this function should be connected to the bracelet in the APP and the Settings should be completed according to the prompts. Apple's phone, when connected, have to select match in a pop-up match request.



Blood oxygen: Click the function icon to enter the function and start the measurement automatically, and the measurement result will be prompted after vibration; more detailed information analysis and data recording can be measured in the APP to view the record analysis



Exercise: long press in the exercise page, the corresponding sports mode can be selected for measurement. This product supports 8 sports modes such as walking, running, cycling and Jumping rope. The last exercise information can be displayed on the exercise page.



Heart rate: Click the function icon to enter the function and start measurement automatically, and the measurement result will be prompted after vibration; more detailed information analysis and data recording can be measured in the APP to view the record analysis or open heart rate monitoring in other settings.



Blood pressure: Click the function icon to enter the function and start the measurement automatically, and the measurement result will be prompted after vibration; more detailed information analysis and data recording can be measured in the APP to view the record analysis.



Settings: on this page, long press to select other function settings, including stopwatch/mute/brightness adjustment restore factory Settings/ shutdown.



Stopwatch: the clock can be started with a long press on the stopwatch page. Long press again to end the time.



Camera control: After connecting to the APP, click the camera function on the APP device page. The bracelet can be used as the remote control of the mobile phone camera and can be shaken to take pictures.



Music control: after connecting to the APP, the bracelet can control the play/pause of music player on the mobile phone. This function must open the mobile phone player before you can control on the smart bracelet.

Bracelet APP Installation

This product is a Bluetooth product, and many functions need to be connected to the matching APP before they can be used. After connecting the bracelet in the APP, you can use other functions, such as: bracelet time synchronization, call reminder, wake up, message content push, weather display, remote control camera, music control, etc. (Android & iOS do not directly connect and pair with the bracelet in the Bluetooth of the mobile phone. Scan the following QR code to download APP to connect. For iPhone, search for hero band in APP Store. Download




Connecting smart bracelet explain




Note: When the phone is connected to the bracelet, it needs to keep the Bluetooth of the phone open, and there is no other matching device in the Bluetooth of the phone. Don't connect your Android phone directly to your mobile phone in Bluetooth.

APP operation instructions

1. Enter the APP movement page and press your phone screen to pull down and refresh the bracelet data.

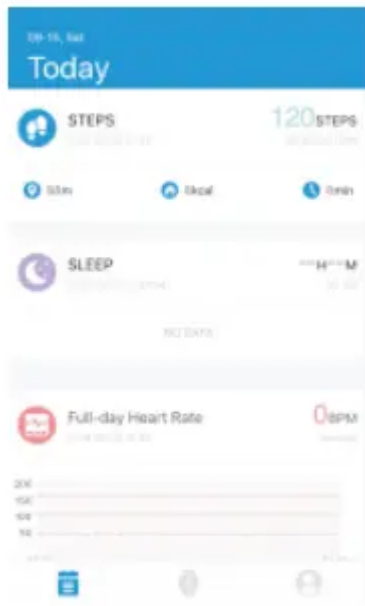

2. Click the steps, sleep and other blocks, and enter the analysis of the daily or recent exercise and sleep data.

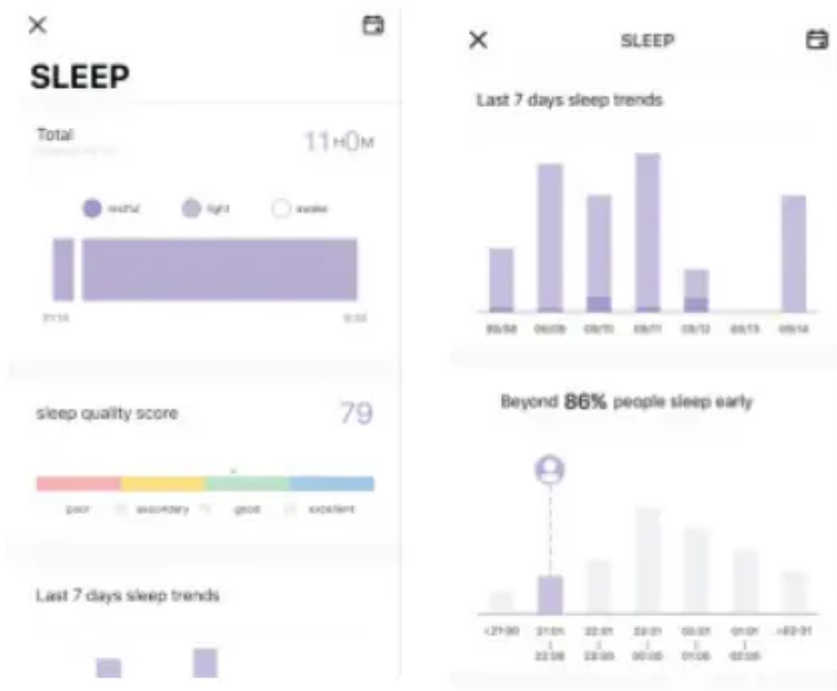

3. Click the exercise heart rate/blood pressure blocks to enter the data of the day or recent, or click the APP to measure the heart rate and blood pressure. The test data will be automatically saved to the phone.



Attention

1. Do not charge in condition of water stains.
2. This product is an electronic monitoring product, which is not used as medical treatment. The data is for reference only.
3. Don't wear this device when bathing or swimming for a long time.
4. Use the matching charging cable for charging.

Frequently Question And Answers

1. The bracelet cannot receive the reminder.

Android phone Settings:

- A: make sure the APP has an alert switch on.
- B: confirm whether the message can be displayed normally on the notification bar, and the notification push of the bracelet can be read Mobile phone notification message;

If there is no message in the notification bar, the bracelet will not receive the push.

(need find notification and status bar in mobile phone settings, and open WeChat, QQ, phone, SMS, Hero band III switch)

Apple system phone settings:

- A: make sure to select the allowed pairing when connecting the bracelet. can be checked in the phone Settings - bluetooth, if there is one at the backend of the connected device connected , indicating that a pairing has been made. If there is no in the backend 0, there is no pairing, reconnecting after unbind.
- B: open the phone settings -- click on the notification -- click WeChat, QQ, SMS, phone -- open the permission notice.

Displayed in the "notification center".

2. Android phones don't connect the bracelet.

- For android phones, please do not connect with the bracelet directly in the bluetooth of the phone.
- Please download the APP firstly.
- And go to the APP to search the device and connect.
- Restart your phone's bluetooth and bracelet if necessary.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.