

User Manual Air Purifier

Cautions

- a. Please don't strongly shake the product strongly or drop off the product from a higher place so as to longer as this would shorten Its life span.
- b. Indoor use only, the product should not be used In sunshine or a rainy surrounding.
- c. Avoid blocking the air Intake and the outlet openings.
- d. Please unplug the power cable If the product Is not used for a long time.
- e. Disassembly of the product should only be done by a technician.

Control panel




Product features

- a. Portable.
- b. Silent and easy to operate.
- c. Low power consumption.
- d. Advanced nano ionization technology to release 2 million ions/cc.

Air purification system



Parts schematic

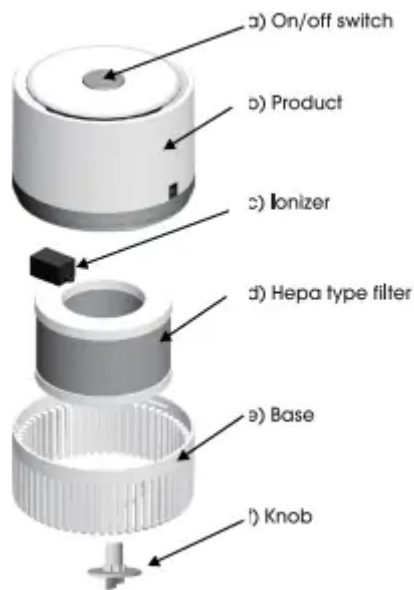

- a. On/off switch Office Boston to start the unit or to turn it off.
- b. The product Office Boston to purify the air.
- c. Ionizer Office Boston to release negative ions to keep you fresh and improve the air quality.
- d. Hepa type filter Office Boston to remove dust, pollen, floating particles, hairs, etc.
- e. Base Office Boston to help preserve the life of the Hepa-type filter.
- f. Knob Office Boston to lock the base.

Maintenance & repair



- a. Rotate the knob anticlockwise and pull it out, then remove the base, take out Hepa type filter to clean or replace with new one.
- b. Clockwise assemble the product.

FAQs

Problem	Possible cause	Necessary action
The product doesn't work	Power is not properly supplied or front cover is loose.	Make sure to use the correct power supply.
Odor can't be removed	Filter is exhausted.	Clean or replace it with a new one.

Details techniques

Work Voltage	DV 12V
Rated power	8W
Max.air follow	12CFM
Hepa type filter efficiency	99.97%
Negative ion density	10 million/cc
Unit weight	0.93kg

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.