

Visit www.wincous.com for manuals in English, French, & Spanish
Visite www.wincous.com para ver manuales en inglés, francés y español.
Visitez www.wincous.com pour les manuels en anglais, français et espagnol.

winco® KATTEX™

QUICK-SLICE FRENCH FRY CUTTER



HFC-250

HFC-375

HFC-500

*shown with optional
HFC-BK Wall Bracket



Warranty Service

To initiate warranty service contact:
equipservice@wincous.com or call: 973-295-3899

DO NOT send unit to WINCO without first contacting
our customer service department.

For California Customers

 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov

20200320

INTRODUCTION

Congratulations on the purchase of your KATTEX equipment. Please take the time to carefully read through this manual to ensure the equipment is operated and maintained properly, to ensure the best possible performance from this product for many years.

WINCO will not accept liability if:

- The instructions in this manual have not been followed correctly.
- Non-authorized personnel have tampered with the equipment.
- Non-original spare parts are used.
- The equipment has not been handled and cleaned correctly.
- There is any use damage to the unit.

SAFETY



WARNING: THE BLADES ARE VERY SHARP. PLEASE USE CAUTION WHEN HANDLING AND OPERATING THE EQUIPMENT AND KEEP HANDS AWAY FROM ALL CUTTING EDGES.



AVERTISSEMENT: TRÈS COUPANTES TRÈS COUPANTES. VEUILLEZ FAIRE PREUVE DE PRUDENCE LORSQUE VOUS MANIPULEZ ET UTILISEZ LA MACHINE ET GARDEZ LES MAINS ÉLOIGNÉES DE TOUS LES BORDS DE COUPE.



WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY, OR DEATH. READ THE INSTALLATION, OPERATION, AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.



AVERTISSEMENT: TOUTE INSTALLATION, RÉGLAGE, MODIFICATION, RÉPARATION OU ENTRETIEN INCORRECT PEUT OCCASIONNER DES DOMMAGES MATÉRIELS, DES BLESSURES GRAVES OU LA MORT. LIRE LES INTRUCTIONS D'INSTALLATION, D'UTILISATION ET D'ENTRETIEN ATTENTIVEMENT AVANT D'INSTALLER OU DE RÉPARER CET APPAREIL.



CAUTION: THESE MODELS ARE DESIGNED, BUILT, AND SOLD FOR COMMERCIAL USE ONLY. IF THESE MODELS ARE POSITIONED SO THE GENERAL PUBLIC CAN USE THE EQUIPMENT, MAKE SURE THAT CAUTION SIGNS, WARNINGS, AND OPERATING INSTRUCTIONS ARE CLEARLY POSTED NEAR EACH UNIT SO THAT ANYONE USING THE EQUIPMENT WILL USE IT CORRECTLY AND NOT INJURE THEMSELVES OR HARM THE EQUIPMENT.



ATTENTION: CES MODÈLES SONT CONÇUS, FABRIQUÉS, ET VENDUS POUR UN USAGE COMMERCIAL SEULEMENT. SI CES MODÈLES SONT PLACÉS POUR QUE LE GRAND PUBLIC PUISSE LES UTILISER, ASSUREZ-VOUS QUE LES CONSIGNES D'ATTENTION, D'AVERTISSEMENT, ET LES INSTRUCTIONS D'UTILISATION SOIENT CLAIREMENT AFFICHÉES PRÈS DE CHAQUE UNITÉ DE SORTE QUE N'IMPORTE QUEL UTILISATEUR DE L'APPAREIL L'EMPLOIE CORRECTEMENT ET NE SE BLESSE PAS OU N'ENDOMMAGE PAS L'APPAREIL.



WARNING: A FACTORY AUTHORIZED SERVICE PROVIDER SHOULD HANDLE ALL MAINTENANCE AND REPAIR. BEFORE DOING ANY MAINTENANCE OR REPAIR, FOLLOW SERVICE SET UP ARRANGEMENT.



AVERTISSEMENT: UN TECHNICIEN AUTORISÉ PAR L'USINE DEVRA EFFECTUER TOUT L'ENTRETIEN ET LES RÉPARATIONS. AVANT DE FAIRE TOUT ENTRETIEN OU RÉPARATION, VEUILLEZ CONTACTER WINCO.

SAFETY (CONT.)

To ensure safe installation and operation, please carefully read and understand the following statements.

Unless the operator is adequately trained and supervised there is a possibility of serious injury. Owners of this equipment bear the responsibility to make certain that this equipment is used properly and safely, and to strictly follow all of the instructions contained in this manual and the requirements of local, state or federal law.

Owners should not permit anyone to touch this equipment unless they are over 18 years old, are adequately trained and supervised, and have read and understood this manual.

Owners should also ensure that no customers, visitors or other unauthorized personnel come in contact with this equipment. It is the responsibility of the owner and the operator to remain alert to any hazards posed by the function of this equipment.

If there is ever uncertainty about a particular task or the proper method of operating this equipment, ask an experienced supervisor.

Note: Please remember that this manual and the warning labels do not replace the need to be alert, to properly train and supervise operators, and to use common sense when using this equipment.

PACKAGE CONTENTS

All KATTEX Quick-Slice French Fry Cutters come with the following:

- Assembled Quick-Slice French Fry Cutter (either HFC-250, HFC-375, or HFC-500)
- Mounting Screws
- Mounting Washers
- Operating Instruction Manual

WINCO® prides itself on quality and service, ensuring that at the time of packing, all products are supplied fully functional and free of damage. Should you find any damage as result of freight, please contact your WINCO® dealer immediately.

UNPACKING THE EQUIPMENT

Dispose of all packaging materials in an environmentally responsible manner.

1. Remove all packing materials and tape, as well as any protective plastic and cardboard from the unit.
2. Clean any glue residue left over from the plastic or tape.
3. Place the unit in the desired position and height.

NOTE: SAVE THE ORIGINAL BOX AND PACKING TO USE WHEN REPACKAGING THE EQUIPMENT FOR SHIPPING IF SERVICES ARE NEEDED.

PREPARATION


The Quick Slice French Fry Cutter can be mounted on a countertop or tabletop, or fixed wall-mounted or mounted via the wall bracket (sold separately). If tabletop portability is desired, the device may be mounted on a non-skid cutting board or secured directly to the tabletop for use.



WARNING: MOUNT FRENCH FRY CUTTER ON A STUD OR IN-WALL BLOCKING TO ENSURE UNIT WILL NOT PULL OUT OF THE WALL DURING USE. THE MOUNTING SCREWS PROVIDED ARE LONG ENOUGH TO BE ABLE TO PASS THROUGH DRYWALL, ETC., AND TO ENGAGE STURDY MATERIAL.


WALL MOUNT

1. Place the French Fry Cutter on the wall. Find a wall stud nearest the desired position and align one side of the mounting holes over the stud.
2. Mark four (4) hole locations and remove the French Fry Cutter.
3. Drill 5/32" diameter holes in these marked locations.
4. Align the French Fry Cutter with the holes and secure with washers and mounting screws.

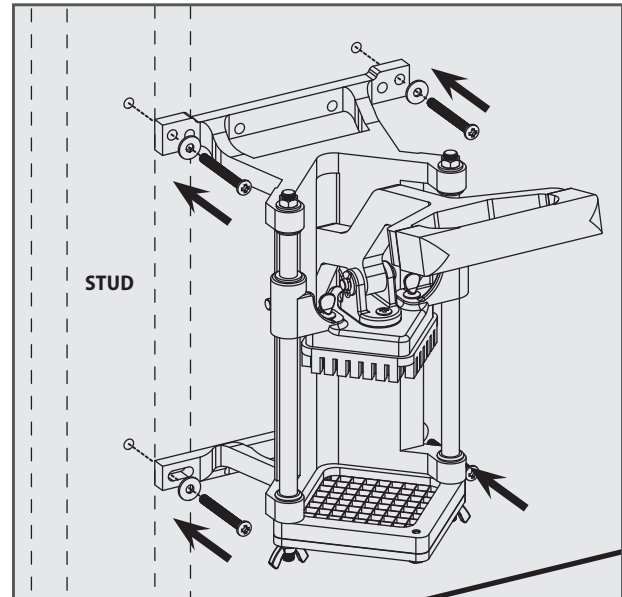

WALL MOUNT VIA WALL BRACKET (MODEL HFC-BK SOLD SEPARATELY)

1. Follow wall mount instructions for wall mount bracket.
2. Slide the French Fry Cutter into the wall mount bracket.

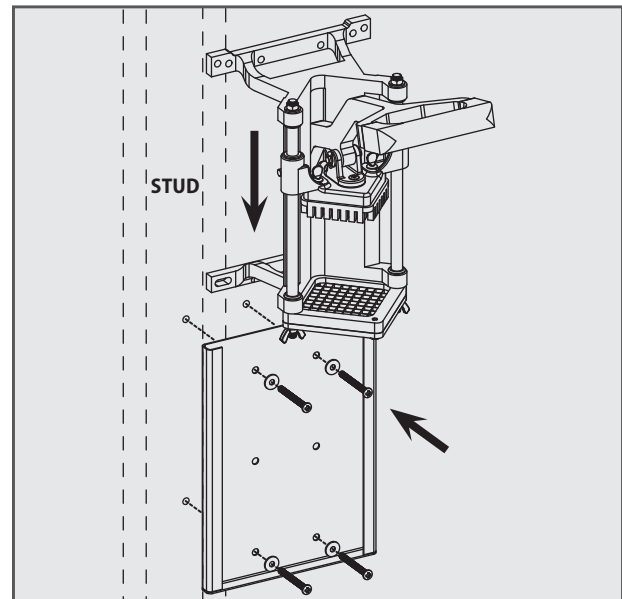


PREPARATION (CONT.)

TABLETOP MOUNT

1. Select a solid, sturdy table, surface, or cutting board. (Optional HFC-BK wall bracket may also be used)
2. Position the French Fry Cutter and mark four (4) hole locations for mounting.
3. Remove the French Fry Cutter and drill four (4) 5/32" diameter holes as marked.
4. Align the French Fry Cutter with the holes and secure with washers and mounting screws.

Note: If other fasteners (not included) are preferred, drill holes (1/4" diameter maximum) as necessary.

Note: For portability, instructions also apply if French Fry Cutter is to be mounted on a non-skid cutting board or secured directly to the tabletop for use.

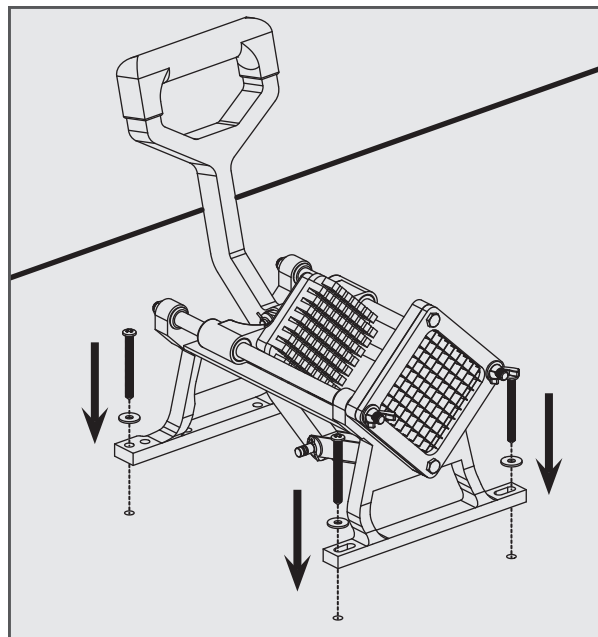

OPERATION

The Quick Slice French Fry Cutter can be used to slice a variety of produce, including potatoes, onions, celery, carrots, fruit, peppers, and tomatoes.

Note: Since the push block and blade block assemblies for different sized cuts are interchangeable, you may have more than one set available for use. Before starting, please ensure that the push block is the correct one to use for the desired cut size. Gently lower the push block onto the blade block assembly to ensure that the push block rests on the o-rings. If it does not, adjustments need to be made prior to operation.

1. Place prepared produce on the blade and holder assembly.

Tip: Place the cut surface against the blades.


Tip: Onions and tomatoes dice best if cut from top to bottom.

2. Remove hands and fingers from the cutting area.
3. With one quick motion, pull down on the lever to cut produce. Occasionally if the produce is very large or if it is positioned at an angle from the blades, this process may need to be repeated for a clean cut.



WARNING: DO NOT ATTEMPT TO CUT PRODUCE LARGER THAN THE OPENING OF THE BLADE BLOCK ASSEMBLY.

4. Carefully clean the device after cutting is complete, following the cleaning instructions.

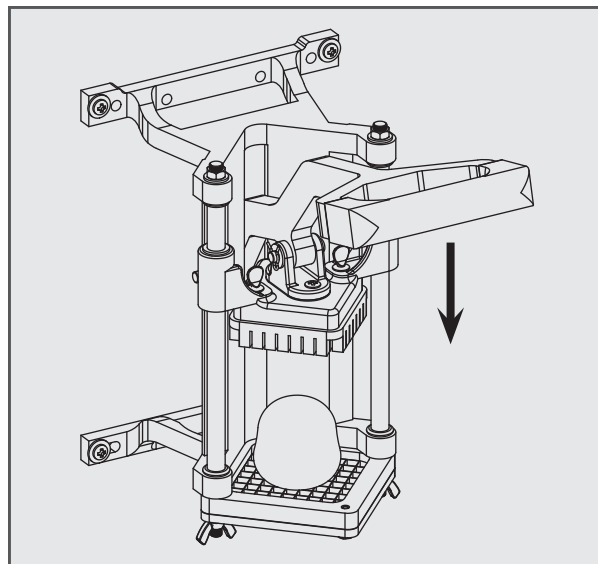

If the unit fails to properly operate during its first use, call Winco customer service at 973-295-3899 or email at equipservice@wincous.com.

DO NOT send unit to WINCO without first contacting our customer service department.

CLEANING

Cleaning of the device is important to assure optimal performance and longevity. Minimize the use of alkaline or acidic cleaners, as they may cause pitting and dulling of the finish.

1. To release the push block, remove the thumb screws.
2. To release the blade block assembly, remove the wing nuts and washers.





WARNING: THE BLADES ARE VERY SHARP. PLEASE USE CAUTION WHEN HANDLING

Note: The blades in the blade block assembly can also be disassembled for blade replacements of additional cleaning as required.

- a. Remove screws and the blade holder cover.
- b. Gently lift blades and the blade spacers from the blade holder.

3. Thoroughly wash/rinse/sanitize parts in warm soapy water, dry and carefully reassemble.



Note: Hand washing unit is recommended as washing in a commercial dishwasher will cause the all-aluminum parts to darken over time, which is normal, and does not affect the general operation of the unit.

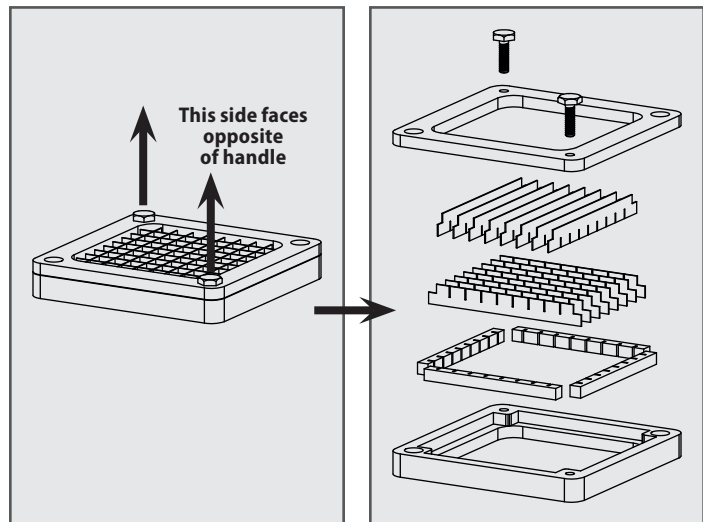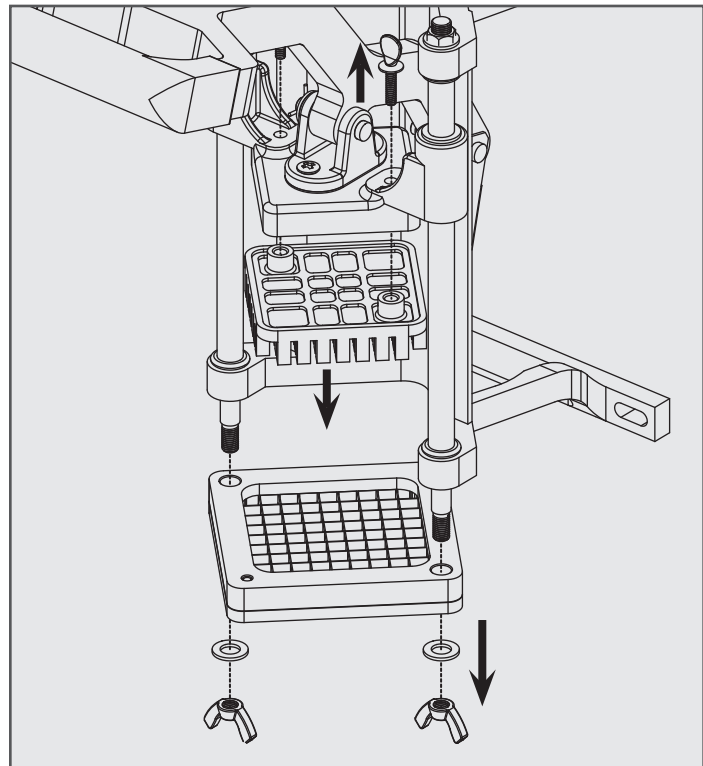

MAINTENANCE

As needed, lubricate the guide rods with mineral oil, food grade grease, or rub them with Paraffin. Do not lubricate with cooking oil as this will cause stickiness on the guide rods, inhibiting smooth movement.

PARTS LIST

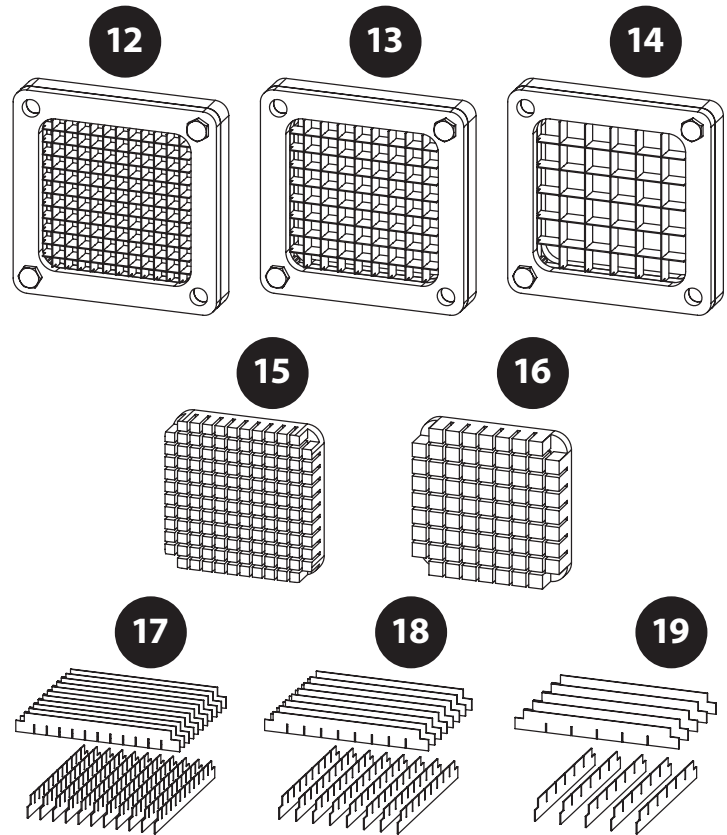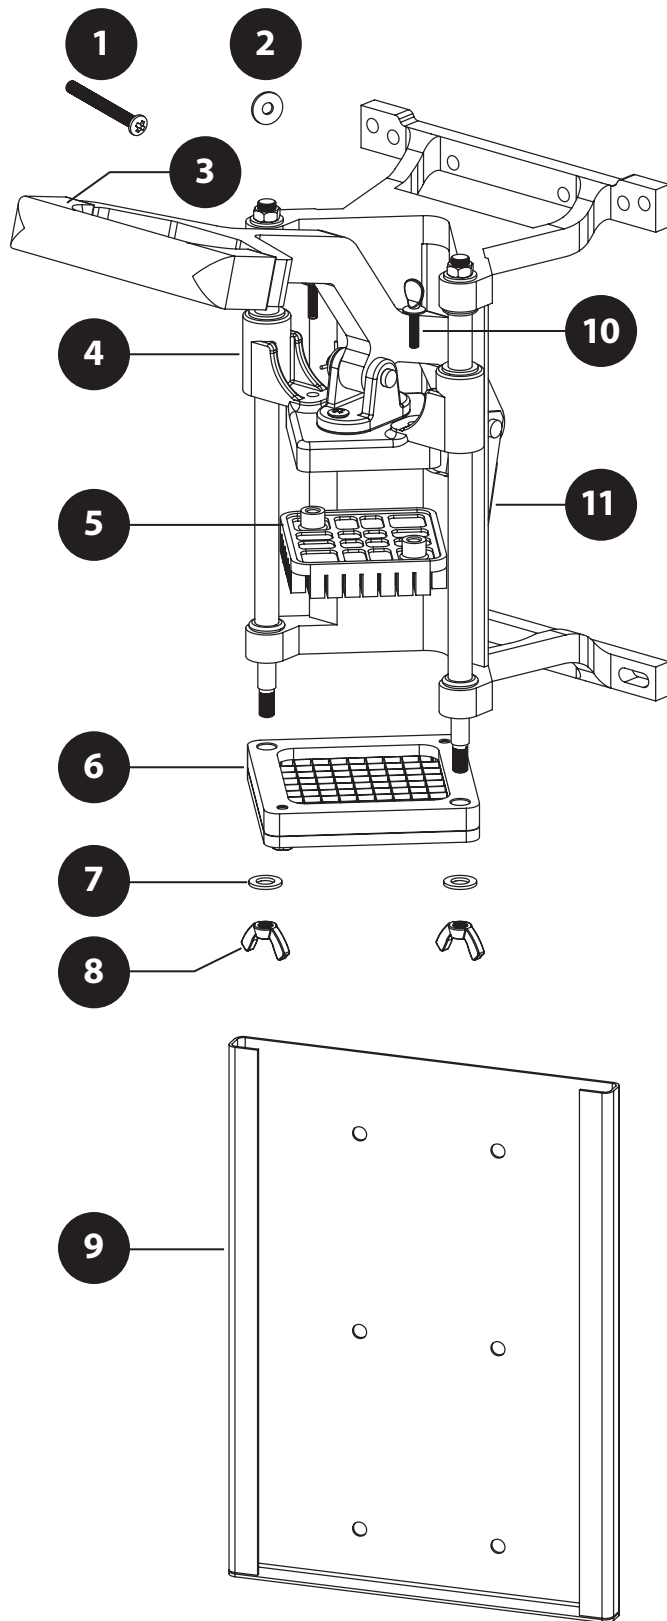

No.	Description	Part #	QTY
1	Mounting Screw		4
2	Mounting Washer		4
3	Handle		
4	Pusher Block Holder	HFC-PBH	1
5	Pusher Block		1
6	Blade Assembly Block		1
7	Blade Block Washer		2
8	Wing Nuts		2
9	Wall Bracket for HFC-Series	HFC-BK	1
10	Thumb Screw		2
11	French Fry Cutter Base		1
12	1/4" Cut Blade Assembly Block	HFC-250B	1
13	3/8" Cut Blade Assembly Block	HFC-375B	1
14	1/2" Cut Blade Assembly Block	HFC-500B	1
15	Pusher Block for 1/4" & 1/2" Cut Blade	HFC-250K	1
16	Pusher Block for 3/8" Cut Blade	HFC-375K	1
17	1/4" Cut Replacement Blade	HFC-250R	1
18	3/8" Cut Replacement Blade	HFC-375R	1
19	1/2" Cut Replacement Blade	HFC-500R	1

Contact factory for parts not listed

WARRANTY

NOTE: WARRANTY DOES NOT COVER THE PUSHER BLOCKS AND BLADE ASSEMBLY BLOCKS (PLUS PARTS).

WINCO warrants to the original purchaser of new equipment and non-electrical food preparation products (other than blades), when installed in accordance with our instructions within North America and subjected to normal use, is free from defects in material or workmanship for a period of 1 year. The labor warranty is one year from original installation or 18 months from actual factory shipment date, whichever date occurs first.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. WINCO EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY OR EXPRESSED OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

WINCO'S OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS EXPRESSLY LIMITED TO REPAIRING AND REPLACING EQUIPMENT THAT PROVES TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP WITHIN THE APPLICABLE WARRANTY PERIOD.

IN NO EVENT SHALL WINCO BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES TO BUYER OR ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, LOSS OF PROPERTY, PERSONAL INJURY, LOSS OF BUSINESS OR PROFITS OR OTHER ECONOMIC LOSSES, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER IN NEGLIGENCE, WARRANTY, STRICT LIABILITY, OR OTHERWISE.

This warranty is given only to the first purchaser from a retail dealer. No warranty is given to subsequent transferees. Warranty does not cover product failures caused by: failure to maintain, neglect, abuse, damage due to excess water, fire, normal wear, improper set up and use. Periodic maintenance is not covered. This warranty is not in force until such time as a properly completed and digitally signed Installation/Warranty Registration has been received by WINCO within 30 days from the date of installation.

WARRANTY SERVICE

To initiate warranty service contact: equipservice@wincous.com or call: 973-295-3899

DO NOT send unit to WINCO® without first contacting our customer service department. Please provide or have the following information available:

- Model Number
- Date of Purchase
- Purchase Dealer
- Operator / Installation Contact Information
- Business Name & Business Address
- Contact Name & Contact Telephone Number

REGISTER ONLINE AT:

<http://www.wincous.com>

Proof of purchase is required to extend warranty more than 1 year from date of shipment from the factory.

THE FOREGOING WARRANTY PROVISIONS ARE A COMPLETE AND EXCLUSIVE STATEMENT BETWEEN THE BUYER AND SELLER. WINCO® NEITHER ASSUMES NOR AUTHORIZES ANY PERSONS TO ASSUME FOR IT ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SAID EQUIPMENT.

Examples of items not covered under warranty, but not limited to just these items:

1. Acts of God, fire, water damage, burglary, accident, theft.
2. Freight damage.
3. Improper installation or alteration of equipment.
4. Use of generic or after-market parts.
5. Repairs made by anyone other than a WINCO® designated service provider.
6. Lubrication.
7. Expendable wear parts, adjustable feet, blown fuses, lamps, etc.
8. Cleaning of equipment.
9. Misuse or abuse.

Warranty voided if:

1. Product is altered by user
2. Serial number plate is removed
3. Product is installed in a prison or any correctional facility.