



## **INSTALLATION AND OPERATING INSTRUCTIONS for all Hydrocarbon VBB Back Bar Refrigerator Models**



809-262A Rev. A. 03/10/2026  
3779 CHAMPION BLVD, WINSTON-SALEM, NC 27105  
Phone: (888) 845-9800 | Fax: (800) 253-5168 | Web: [victoryrefrigeration.com](http://victoryrefrigeration.com)

**SEE BACK COVER FOR  
WARRANTY REGISTRATION**



## WELCOME

Thank you for purchasing a Victory cabinet. This series has passed our strict quality control inspection and meets the high standards set by Victory Refrigeration! You have made a quality investment that with proper maintenance will give you many years of reliable service!

Please read the following installation and maintenance instructions before installing or using your unit.

### Important Information

- PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING, IF RECOMMENDED PROCEDURES ARE NOT FOLLOWED, WARRANTY CLAIMS MAY BE DENIED.
- Your warranty registration information is located with this manual. Please complete the card and submit it to Victory Refrigeration within TEN days of installation.

Failure to properly register equipment may limit or void the warranty.

- Victory Refrigeration reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions, or replacements for previously purchased equipment.

|                                              |    |
|----------------------------------------------|----|
| Safety .....                                 | 3  |
| Important Information .....                  | 4  |
| Product Information .....                    | 5  |
| Clearance and Placement .....                | 9  |
| Unpacking and Set Up .....                   | 10 |
| Shelf Installation.....                      | 11 |
| Sliding Doors, assembly .....                | 12 |
| Keg installation .....                       | 14 |
| Electrical .....                             | 15 |
| Using The Unit - Danfoss Controller.....     | 16 |
| Sequence of Operations Refrigerator.....     | 17 |
| Using The Unit - Eliwell Controller .....    | 21 |
| Sequence of Operations Refrigerator.....     | 22 |
| Cleaning and Maintenance .....               | 25 |
| Condenser Cleaning.....                      | 26 |
| Methods For Cleaning Stainless Steel.....    | 27 |
| Help .....                                   | 28 |
| For The Service Tech - R290 .....            | 29 |
| For The Service Tech - Wiring Diagrams ..... | 30 |
| Limited Warranty .....                       | 32 |
| Limited Warranty (continued) .....           | 33 |

## SAFETY

This appliance has been designed with your safety in mind. It has many features to keep you from being harmed. However, safe operation and maintenance are your responsibilities. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance..



### Use: When using this unit, please:

- **Move it carefully.** If on casters be sure the casters do NOT run over the power cord.
- **Lock** the casters when in use.
- **Seek help.** This machine is heavy! Be sure to move with enough help to avoid tipping or dropping the cabinet.
- **Prevent children from playing in or on the cabinet.** Persons unable to use this product must be prevented access.
- **Follow all instructions.** There are many safety labels and directions on the unit. Heed them.
- **Watch your fingers.** There may be pinch points near the door hinges.



## Maintenance

### Do NOT:

- Clean a frozen evaporator with a sharp object
- Clean a dirty condenser with a sharp object.
- Store gasoline, kerosene or any other flammable material near the cabinet.

### Do ALWAYS

- Use a Victory recommended technician certified to repair R290 equipment.
- Use ONLY Victory factory service parts. Use of non OEM parts can be dangerous because of the design changes needed to safely use R290.

## Important Information to Add

Record the model number, serial number and the date of installation here for future reference. The model and serial numbers are on the unit's serial number dataplate, which is located on the left inside wall.

|                      |  |
|----------------------|--|
| Model Number         |  |
| Serial Number        |  |
| Date of Installation |  |
| Purchased From       |  |



Observe the **Caution** and **Warning** notices. They are indicators of important safety information. Keep this manual for future reference.

## IMPORTANT INFORMATION

This unit is intended to be used in a commercial application. That includes bars and restaurants.

If installed in a residence some commercial service companies may not be able to service it on site.


The manufacturer has designed and produced this machine with the finest in materials. The manufacturer assumes no liability for units that have been altered in any way. Alterations or part substitutions will void the warranty.

### Limitations

The machine is designed for use indoors in a controlled environment. It must be kept dry, not overheated or subjected to excessive cold. May only be connected to a dedicated electrical circuit. Extension cords are not permitted.

|               | Minimum | Maximum |
|---------------|---------|---------|
| Voltage       | 103.5   | 126.5   |
| Room Air Temp | 60° F   | 100° F  |

**Air Flow, all models regardless of section, door count or door material.**

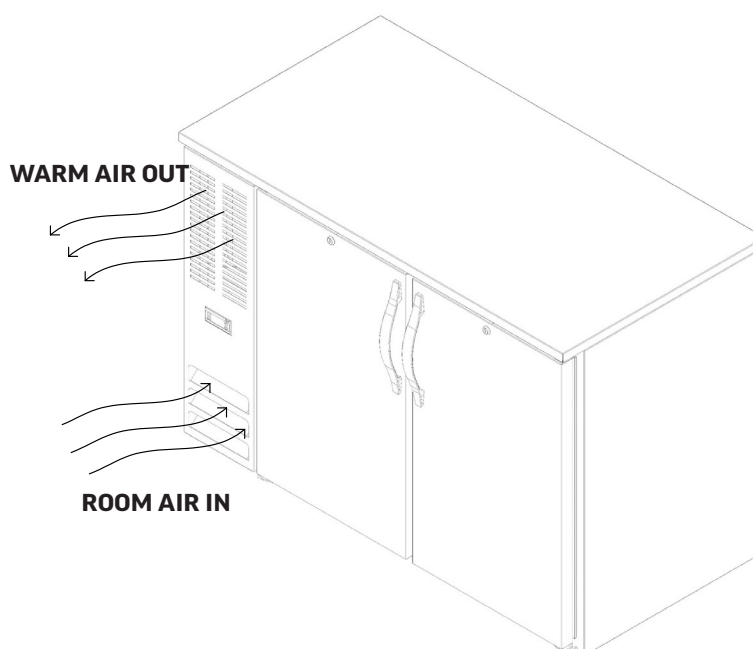

### Agency Approvals

These marks appear on the dataplate or serial tag, located in the inside of the left wall. The dataplate also contains the model and serial numbers as well as electrical requirements.



## PRODUCT INFORMATION

| Model                              | Cabinet Dimensions<br>w x d x h (Inches) | Door<br>Count | Glass or<br>Solid Door | Full Load<br>Amps | Power Cord<br>Plug (NEMA) | Refrigerant Type /<br>Charge (g) /Charge (oz) |                    |
|------------------------------------|------------------------------------------|---------------|------------------------|-------------------|---------------------------|-----------------------------------------------|--------------------|
| STANDARD DEPTH UNITS               |                                          |               |                        |                   |                           |                                               |                    |
| VBB36HC                            | 36 X 30 1/8 X 34                         |               | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |
| VBB36HC-G                          | 36 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| VBB48HC                            | 48 X 30 1/8 X 34                         | 2             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |                    |
| VBB48HC-G                          | 48 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| VBB58HC                            | 58 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |
| VBB58HC-G                          | 58 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| VBB68HC                            | 68 X 30 1/8 X 34                         | Solid         |                        |                   |                           |                                               |                    |
| VBB68HC-G                          | 68 X 29 11/16 X 34                       | Glass         |                        |                   |                           |                                               |                    |
| VBB72HC                            | 72 X 30 1/8 X 34                         | 3             | Solid                  |                   |                           |                                               |                    |
| VBB72HC-G                          | 72 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| VBB78HC                            | 78 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |
| VBB78HC-G                          | 78 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| VBB94HC                            | 94 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |
| VBB94HC-G                          | 94 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |
| SLIDING GLASS DOORS                |                                          |               |                        |                   |                           |                                               |                    |
| VBB48HC-GS                         | 48 X 29 1/4 X 34                         | 2             | Glass                  | 3.0               | 5-15P                     |                                               | R-290 / 55 / 1.94  |
| VBB58HC-GS                         | 58 X 29 1/4 X 34                         |               |                        | 3.3               |                           |                                               | R-290 / 115 / 4.05 |
| VBB72HC-GS                         | 72 X 29 1/2 X 34                         | 3             |                        |                   |                           |                                               |                    |
| PASS THRU                          |                                          |               |                        |                   |                           |                                               |                    |
| VBB48HC-PT                         | 48 X 33 9/16 X 34                        | 4             | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |
| VBB48HC-G-PT                       | 48 X 32 3/4 X 34                         |               | Glass                  |                   |                           |                                               |                    |
| VBB72HC-PT                         | 72 X 33 9/16 X 34                        | 6             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |                    |
| VBB72HC-G-PT                       | 72 X 32 3/4 X 34                         |               | Glass                  |                   |                           |                                               |                    |
| PASS THRU WITH SLIDING GLASS DOORS |                                          |               |                        |                   |                           |                                               |                    |
| VBB48HC-GS-PT                      | 48 X 31 7/8 X 34                         | 4             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |
| VBB72HC-GS-PT                      | 72 X 31 7/8 X 34                         | 6             |                        | 3.3               |                           | R-290 / 115 / 4.05                            |                    |

*Height includes casters.*

| Model                              | Cabinet Dimensions<br>w x d x h (Inches) | Door<br>Count | Glass or<br>Solid Door | Full Load<br>Amps | Power Cord<br>Plug (NEMA) | Refrigerant Type /<br>Charge (g) /Charge (oz) |                    |                    |
|------------------------------------|------------------------------------------|---------------|------------------------|-------------------|---------------------------|-----------------------------------------------|--------------------|--------------------|
| SHALLOW DEPTH UNITS                |                                          |               |                        |                   |                           |                                               |                    |                    |
| VBBN36HC                           | 36 X 26 1/8 X 34                         |               | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |                    |
| VBBN36HC-G                         | 36 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN48HC                           | 48 X 26 1/8 X 34                         | 2             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |                    |                    |
| VBBN48HC-G                         | 48 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN58HC                           | 58 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |                    |
| VBBN58HC-G                         | 58 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN68HC                           | 68 X 26 1/8 X 34                         | 3             | Solid                  |                   |                           |                                               | 3.3                | R-290 / 115 / 4.05 |
| VBBN68HC-G                         | 68 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN72HC                           | 72 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |                    |
| VBBN72HC-G                         | 72 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN78HC                           | 78 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |                    |                    |
| VBBN78HC-G                         | 78 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN94HC                           | 94 X 26 1/8 X 34                         |               | Solid                  | 3.3               | 5-15P                     | R-290 / 115 / 4.05                            |                    |                    |
| VBBN94HC-G                         | 94 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |                    |                    |
| SLIDING GLASS DOORS                |                                          |               |                        |                   |                           |                                               |                    |                    |
| VBBN48HC-GS                        | 48 X 25 1/4 X 34                         | 2             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |                    |
| VBBN58HC-GS                        | 58 X 25 1/4 X 34                         |               |                        | 3                 |                           | 3.3                                           | R-290 / 115 / 4.05 |                    |
| VBBN72HC-GS                        | 72 X 25 1/4 X 34                         |               |                        |                   |                           |                                               |                    |                    |
| PASS THRU                          |                                          |               |                        |                   |                           |                                               |                    |                    |
| VBBN48HC-PT                        | 48 X 29 9/16 X 34                        | 4             | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |                    |
| VBBN48HC-G-PT                      | 48 X 28 3/4 X 34                         |               | Glass                  |                   |                           |                                               |                    |                    |
| VBBN72HC-PT                        | 72 X 29 9/16 X 34                        | 6             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |                    |                    |
| VBBN72HC-G-PT                      | 72 X 28 3/4 X 34                         |               | Glass                  |                   |                           |                                               |                    |                    |
| PASS THRU WITH SLIDING GLASS DOORS |                                          |               |                        |                   |                           |                                               |                    |                    |
| VBBN48HC-GS-PT                     | 48 X 27 7/8 X 34                         | 4             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |                    |                    |
| VBBN72HC-GS-PT                     | 72 X 27 7/8 X 34                         | 6             |                        | 3.3               |                           | R-290 / 115 / 4.05                            |                    |                    |

*Height includes casters.*

| Model                              | Cabinet Dimensions<br>w x d x h (Inches) | Door<br>Count | Glass or<br>Solid Door | Full Load<br>Amps | Power Cord<br>Plug (NEMA) | Refrigerant Type /<br>Charge (g) /Charge (oz) |
|------------------------------------|------------------------------------------|---------------|------------------------|-------------------|---------------------------|-----------------------------------------------|
| STANDARD DEPTH FOOD GRADE UNITS    |                                          |               |                        |                   |                           |                                               |
| VBB36HC-F                          | 36 X 30 1/8 X 34                         |               | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBB36HC-FG                         | 36 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBB48HC-F                          | 48 X 30 1/8 X 34                         | 2             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |
| VBB48HC-FG                         | 48 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBB58HC-F                          | 58 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBB58HC-FG                         | 58 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBB68HC-F                          | 68 X 30 1/8 X 34                         | Solid         |                        |                   |                           |                                               |
| VBB68HC-FG                         | 68 X 29 11/16 X 34                       | Glass         |                        |                   |                           |                                               |
| VBB72HC-F                          | 72 X 30 1/8 X 34                         | 3             | Solid                  |                   |                           |                                               |
| VBB72HC-FG                         | 72 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBB78HC-F                          | 78 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBB78HC-FG                         | 78 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBB94HC-F                          | 94 X 30 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBB94HC-FG                         | 94 X 29 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| SLIDING GLASS DOORS                |                                          |               |                        |                   |                           |                                               |
| VBB48HC-F-GS                       | 48 X 29 1/4 X 34                         | 2             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBB58HC-F-GS                       | 58 X 29 1/4 X 34                         |               |                        | 3.3               |                           | R-290 / 115 / 4.05                            |
| VBB72HC-F-GS                       | 72 X 29 1/2 X 34                         | 3             |                        |                   |                           |                                               |
| PASS THRU                          |                                          |               |                        |                   |                           |                                               |
| VBB48HC-F-PT                       | 48 X 33 9/16 X 34                        | 4             | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBB48HC-FG-PT                      | 48 X 32 3/4 X 34                         |               | Glass                  |                   |                           |                                               |
| VBB72HC-F-PT                       | 72 X 33 9/16 X 34                        | 6             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |
| VBB72HC-FG-PT                      | 72 X 32 3/4 X 34                         |               | Glass                  |                   |                           |                                               |
| PASS THRU WITH SLIDING GLASS DOORS |                                          |               |                        |                   |                           |                                               |
| VBB48HC-F-GS-PT                    | 48 X 31 7/8 X 34                         | 4             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBB72HC-F-GS-PT                    | 72 X 31 7/8 X 34                         | 6             |                        | 3.3               |                           | R-290 / 115 / 4.05                            |

Height includes casters.

| Model                              | Cabinet Dimensions<br>w x d x h (Inches) | Door<br>Count | Glass or<br>Solid Door | Full Load<br>Amps | Power Cord<br>Plug (NEMA) | Refrigerant Type /<br>Charge (g) /Charge (oz) |
|------------------------------------|------------------------------------------|---------------|------------------------|-------------------|---------------------------|-----------------------------------------------|
| SHALLOW DEPTH FOOD GRADE UNITS     |                                          |               |                        |                   |                           |                                               |
| VBBN36HC-F                         | 36 X 26 1/8 X 34                         |               | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBBN36HC-FG                        | 36 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN48HC-F                         | 48 X 26 1/8 X 34                         | 2             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |
| VBBN48HC-FG                        | 48 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN58HC-F                         | 58 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBBN58HC-FG                        | 58 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN68HC-F                         | 68 X 26 1/8 X 34                         | 3             | Solid                  |                   |                           |                                               |
| VBBN68HC-FG                        | 68 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN72HC-F                         | 72 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBBN72HC-FG                        | 72 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN78HC-F                         | 78 X 26 1/8 X 34                         |               | Solid                  |                   |                           |                                               |
| VBBN78HC-FG                        | 78 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| VBBN94HC-F                         | 94 X 26 1/8 X 34                         |               | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBBN94HC-FG                        | 94 X 25 11/16 X 34                       |               | Glass                  |                   |                           |                                               |
| SLIDING GLASS DOORS                |                                          |               |                        |                   |                           |                                               |
| VBBN48HC-F-GS                      | 48 X 25 1/4 X 34                         | 2             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBBN58HC-F-GS                      | 58 X 25 1/4 X 34                         |               |                        | 3                 |                           | 3.3                                           |
| VBBN72HC-F-GS                      | 72 X 25 1/4 X 34                         |               |                        |                   |                           |                                               |
| PASS THRU                          |                                          |               |                        |                   |                           |                                               |
| VBBN48HC-F-PT                      | 48 X 29 9/16 X 34                        | 4             | Solid                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBBN48HC-FG-PT                     | 48 X 28 3/4 X 34                         |               | Glass                  |                   |                           |                                               |
| VBBN72HC-F-PT                      | 72 X 29 9/16 X 34                        | 6             | Solid                  | 3.3               |                           | R-290 / 115 / 4.05                            |
| VBBN72HC-FG-PT                     | 72 X 28 3/4 X 34                         |               | Glass                  |                   |                           |                                               |
| PASS THRU WITH SLIDING GLASS DOORS |                                          |               |                        |                   |                           |                                               |
| VBBN48HC-F-GS-PT                   | 48 X 27 7/8 X 34                         | 4             | Glass                  | 3.0               | 5-15P                     | R-290 / 55 / 1.94                             |
| VBBN72HC-F-GS-PT                   | 72 X 27 7/8 X 34                         | 6             |                        | 3.3               |                           | R-290 / 115 / 4.05                            |

*Height includes casters.*

- All models will maintain product temperature between 36 and 38 degrees F. at the factory setting of 38.0°F.
- Units are available in Stainless Steel (-S) or Black (-B) exteriors.
- Models with right side compressor location (-ALT) are available, and must be specified at time of order
- All models are 115 volts, 60 Hz AC.
- ALWAYS REFERENCE YOUR EQUIPMENT DATA PLATE AMPS, REFRIGERANT AND REFRIGERANT CHARGE FOR THE MOST UP TO DATE AND ACCURATE VALUES
- There are no access valves on the refrigeration system.

## CLEARANCE AND PLACEMENT



### Placement

Consider the following when selecting a location for your Refrigerator:

#### Clearance:

- **None required at top, bottom, back or sides.**

**Floor Load:** the floor on which the Refrigerator is located must be even and level, free from vibrations, and strong enough to support the combined weights of the unit and maximum product load.

**Ventilation:** Grille area at front must be free and clear of any object or wall.

**Power Outlet:** The installation of this appliance requires a dedicated power outlet located within the length of the unit's power cord and be accessible for the purpose to disconnect power.

## UNPACKING AND SET UP

Carefully inspect the shipping carton for damage. This is the only time that shipping damage may be claimed. If damage is suspected, open the carton immediately and, if there is damage, retain the carton and contact the shipper to make a claim. Do NOT contact the manufacturer.

### Uncrating

Tools Needed:  $\frac{3}{4}$ " box wrench, adjustable wrench, level, flat head screw driver, and box cutter.

1. Remove the cardboard top capping, all clear tape, and all staples including those at the bottom of the cardboard carton and skid.
2. Start from the top of the carton. Using the box cutter, carefully make one continuous cut to the bottom of the skid. Remove cardboard carton and discard.

*Note: additional clear plastic protective wrap is applied directly to any product with a glass door.*

3. Move unit as close to final position as possible before removing the skid.

*Note: The skid must be removed before the casters or legs can be attached.*

**Do NOT tip unit on its front or sides. If tipped onto the back, unit must not be started for 3 hours.**

### Skid Removal and Caster Attachment

Tip the unit forward and remove the skid.



1. Remove the shipping bolts using the  $\frac{3}{4}$ " box wrench while cabinet is held in one direction. Repeat the process while the cabinet is held in the opposite direction.
2. None of the threads on the leg or caster stem should be visible once screwed in.
3. Tilt the cabinet in one direction approximately 8" and block it securely with pieces of 2x4 lumber or other suitable material.
4. Thread the stem casters or legs into the  $\frac{1}{2}$ " -13 holes in

### Leveling:

Cabinets must be leveled when installed. Level should be measured on the headrail.

Failure to level your cabinet may result in door not sealing, closing correctly, or condensed water draining not draining properly.

For cabinets with legs, rotate the foot of the leg with an adjustable wrench to achieve desired height for leveling.

For cabinets with casters, leveling can be achieved by

the bottom of the cabinet. Tighten by hand as much as possible. Some models may already have levelers installed. If so, then the levelers will need to first be removed and discarded.

5. Once the caster or leg cannot be turned any further, use a  $\frac{3}{4}$  inch wrench to tighten the nut in between the mounting plate and the wheel of the caster until snug.
6. Repeat this procedure with unit secured in the opposite direction so as to access the remaining legs/casters/levelers.
7. If plate casters or legs are installed instead of stem casters or legs, then repeat step 3 above and secure the plate with either #14 AB screws, or  $\frac{1}{4}$ -20 screws, depending upon which are required.
8. If levelers are employed, then repeat step 3 above and thread the leveler in place. Then repeat step 6.

placing large washers in between the  $\frac{1}{2}$ " stud and the holes located on the bottom of the case.


**Do NOT loosen casters to level the cabinet.** Casters MUST be tightly secured to cabinet for full strength.



Install or attach any accessories that will be used  
Remove any plastic covering the stainless steel.

## SHELF INSTALLATION

1. Determine the proper location for the shelf clips. The reference numbers on the pilaster can serve as a guide to ensure all clips are properly located.
2. Insert the top tab of the shelf clip into the desired hole of the pilaster. The retaining tab **MUST** be facing up as shown.
3. Rotate the clip downwards and insert the bottom tab into the matching hole in the pilaster. The clip may need to be squeezed slightly during installation.
4. Install all remaining clips.
5. Install shelves onto clips with the product retention bar facing up. Be careful not to dislodge clips during installation.
6. Place shelves so that the retaining tab on the clip captures the shelf as shown.
7. Confirm that the shelf is resting on **ALL** 4 clips and that the clips are securely attached to the pilasters.
8. Improper shelf clip installation could cause the shelf and / or the product on it to fall, resulting in damage to the unit and possible bodily injury.
9. Do **NOT** overload the shelves. The unit is designed to use all shelves that are supplied in an equally spaced manner. Contact Victory customer service if fewer shelves or a different configuration to ensure shelf overloading will not occur.

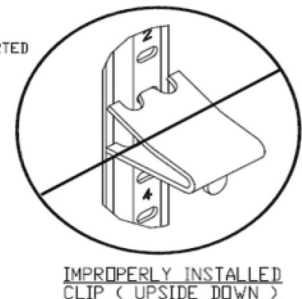


## SLIDING DOORS, ASSEMBLY

### Leveling

**Figure 2a**



**Figure 2b**

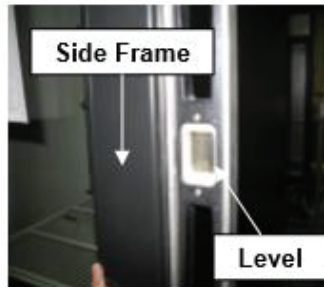

1. To insure proper operation, the cabinet must be level.
2. Level the cabinet, see page
3. Verify the level condition by putting a level on the header (figure 2a) and side frame (figure 2b) of the door assembly.

### Door Removal and Installation

**Figure 3a**



**Figure 3b**



**Figure 3c**



**Figure 3d**



1. Each door can be removed for cleaning and maintenance.
2. To remove a door, lift it up off the track and pull the bottom of the door away from the cabinet. Upwards pressure must be maintained (figure 3a) while pulling the door bottom.
3. Once the bottom of the door has cleared the track, pull the door slowly away from the self closing device as it retracts and away from the cabinet (figure 3b).
4. To install a door, simultaneously lift and rotate the door.
5. While lifting, insert the upper corner of the door into the upper door track so that the torpedo is placed against that corner of the door (figure 3c).
6. Push the self closing device with the door until the door becomes horizontal, then pivot the door down onto the lower frame track (figure 3d) and allow the door to rest on the sil track.
7. Check for proper operation.

Figure 4a



Figure 4b



Figure 4c

## ADJUSTING SPRING TENSION

1. Adjust the spring tension if the door(s) do not fully close.
2. First, remove the door that does not fully close.
3. After removal of the door, remove the spring installation screw (figure 4a), and slide the nylon spring pillar over one notch toward the handle side of the door (figure 4b & 4c), so that it increases the tension in the spring.
4. Reinstall the nylon spring screw in the new location.
5. Replace the door and check for proper alignment and operation with the new tension setting.
6. Repeat this for each door that requires adjustment.

## CLEANING

Door frames should be cleaned with a solution of mild soap and water. Do not use caustic soap or abrasive cleaners, since these might damage the finish.

If stainless steel roller track surfaces become discolored, scrub by rubbing along the length of the track. Do not use steel wool.

Clean glass surfaces with a standard glass cleaning solution.

## TROUBLESHOOTING

If doors do NOT operate properly, check for the following:

1. Minimum of 1/32" of CLEARANCE between the vertical gaskets on the COLD SIDE doors and the horizontal frame gaskets located at the header and sill of the frame in between the doors.
2. Self-closing device (a.k.a. "Torpedo") is properly located on edge of door and is not "pinched" or "bound" between the top of the door and the frame, and that torpedo operates smoothly.

3. Sash covers on doors are properly snapped into place and have NOT slipped down, and are NOT dragging on the sill track of the frame or rubbing the frame header.
4. Self-closing spring is properly attached to its nylon retaining pillar in the frame header C-channel and is not kinked in any way.
5. Door is sitting on its wheels, the wheels are properly aligned on the stainless steel roller track, and the door moves freely back and forth.
6. Door is not bowed in or out from top to bottom causing doors to rub on frame or frame gaskets.
7. Cabinet is relatively level (within approximately 3/16" of level across the full width of the frame).
8. Sill tracks with stainless steel roller track covers are properly snapped into place and are not bowed up or down across the width of the frame.

If installed doors do NOT close fully after above checks are complete, then consider increasing the tension on the self-closing spring(s) by:

1. Removing door(s) that are not closing properly.
2. Removing spring installation screw and sliding nylon spring pillar over one notch so that it increases the tension in the spring when it is at rest. Reinstall the nylon spring screw in this new location.
3. Reinstall the door(s).
4. Check for proper operation of doors with increased spring tension.

If installed doors still do NOT close fully after above checks and adjustments, then install stronger spring(s):

1. Verify that the sill track is fully engaged (snapped) into the channel over the sill track's entire length.
2. Verify that the frame seals are fully seated in the frame. If the seals are not fully seated, they could interfere with the movement of the door.
3. Verify that the frame was not bowed during installation. If the frame is bowed, contact Victory Technical Service.

If installed doors still do NOT close fully after all of the above checks, contact Victory Technical Service.

## KEG INSTALLATION

**Safety First!** If in doubt about how to handle the CO2 system contact your dealer/distributor

### How to Install a CO2 Regulator and Replace an Empty CO2 Cylinder

1. Shut off gas pressure to dispenser by closing the Cylinder Valve and the Shut off Valve.
2. Loosen the Adjustment Nut (counter-clockwise) and then unscrew the Adjustment Screw (counter-clockwise) as far out as it will go to put the regulator in the 'Off' position.
3. Remove the regulator from the cylinder by loosening the Gold Regulator Nut.
4. Remove the dust cap from the new cylinder and attach the regulator to the new cylinder with the Gold Regulator Nut. Make sure all sealing washers are in place before connecting.
5. Open the Cylinder Valve all of the way. This is important because the cylinder valve seals in two places.
6. Screw the Adjustment Screw counterclockwise until the required pressure is reached on the Pressure Gauge.
7. Open the Shut Off Valve



### How to tap a keg with a Sanke device.

1. Connect the line from the pressure source to the Female MFL Fitting using a hose clamp.
2. Align the Sanke Coupler with the lugs in the beer keg and insert.
3. Turn the Sanke Coupler  $\frac{1}{4}$  turn clockwise until tight in the keg.
4. Rotate the Handle down  $90^\circ$  to assure the gas ports in the keg are fully opened.
5. Open the pressure source

## ELECTRICAL

This is a cord-connected unit, and must be connected to its own **dedicated** power supply. Check the dataplate on the machine to confirm the voltage and per the dataplate use the correct fuses or HACR circuit breakers.

---

*Note: Do not connect to GFI / GFCI outlets. Connection to that type of outlet can result in product loss due to unsafe cabinet temperature when GFI device trips from moisture.*

---

### Power Cord

This 115 volt model is equipped with a cord and 5-15P plug.

If the power cord becomes damaged, it must be replaced with the identical cord.

### Follow All National and Local Codes

This unit must be grounded. Do not use extension cords and do not disable or by-pass ground prong on electrical plug.

### Initial Start Up

Plug the power cord into the proper power supply.

The cabinet will soon begin to blow warm air out, and cool air will flow from the inside blower.

The cabinet temperature has been set at the factory and should not need adjustment, however if it was changed, the standard setting is 38° F.

### Cautions

Care must be taken whenever moving or servicing the unit. The refrigerant is contained in a sealed system, but if released it may be flammable.

## USING THE UNIT WITH DANFOSS CONTROLLER

Operation is simple, just keep it connected to the correct power supply and the refrigerator will maintain the internal temperature it has been set to. Keep the doors and / or drawers closed as much as possible to avoid unnecessary run time.

**NOTE:** Once the unit has been started and reaches proper storage temperatures, it may be loaded with product. No provision is made in the cabinets to quickly pull a keg of beer down to temperature. Best results are obtained when a pre-chilled keg is used. Otherwise it can take several hours to reduce the keg to the desired temperature.

The controller displays the current internal temperature.

Adjusting the set temperature lower will NOT cause the system to lower the temperature faster. When on, the refrigeration system is always operating at maximum.

The temperature was set at the factory at 38° F, but you can adjust it to your own selected temperature. 30

seconds after adjustment, the display automatically reverts to showing the current temperature.

The Refrigerator will automatically defrost as needed, there is no set time for defrost. Push and immediately release the "melting" or defrost button for a manual defrost.

**Note:** Holding the defrost button in too long will shut the controller off.

The internal fan will be on when the compressor is on and when the doors are closed.

The compressor and condenser fan motor will only be on when the controller senses an increase in internal cabinet temperature passed the set point.

If equipped with glass doors, holding the SC button in will turn the cabinet light on or off.



In most cases the only thing displayed will be the cabinet temperature. When something other than normal operation has occurred, a message will be shown.


| Message Displayed  | Why                            | What to do                                                |
|--------------------|--------------------------------|-----------------------------------------------------------|
| dEF                | Unit is defrosting             | Nothing. Normal operation.                                |
| Hi                 | Cabinet temperature too warm   | Confirm doors or drawers are closed.                      |
| dOr                | Door is open                   | Close door, if message does not change, call for service. |
| LEA                | Compressor run time too long   | Check doors closed. If yes, call for service.             |
| E01, E02, E03, E04 | Sensor unplugged or has failed | Call for service.                                         |

## SEQUENCE OF OPERATIONS REFRIGERATOR

The refrigerator operates based on the air temperature measured by the probe located at the return air.

|                | ON                                                                                                               |                                                                                         | OFF                                                                                              |                                                                                         |
|----------------|------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| COMPONENT      | OPERATION                                                                                                        | CONTROLLER ACTION                                                                       | OPERATION                                                                                        | CONTROLLER ACTION                                                                       |
| COMPRESSOR     | Compressor turns on when the air temperature at the probe is above the sum of the set point +2                   | The Compressor Contact is energized                                                     | Compressor turns off when the air temperature at probe is equal to or less than the set point -2 | The Compressor Contact is de-energized                                                  |
|                |                                                                                                                  | (ERC 112 – Terminal #1)                                                                 |                                                                                                  | (ERC 112 – Terminal #1)                                                                 |
| CONDENSER FAN  | The Condenser Fan turns on when the Compressor is running                                                        | The Condenser Fan is wired directly to the Compressor, not through the controller       | The Condenser Fan turns off when the Compressor is not running                                   | The Condenser Fan is wired directly to the Compressor, not through the controller       |
| EVAPORATOR FAN | The Evaporator Fan runs continuously in refrigerators. When the unit is plugged in, the Evaporator Fan will run. | The Evaporator Fan is connected directly to incoming power, not through the controller. | The Evaporator Fan runs continuously. When the unit is plugged in, The Evaporator Fan will run.  | The Evaporator Fan is connected directly to incoming power, not through the controller. |
| LIGHT          | The light will turn on when the (sc) is pressed (or when the door is opened with solid doors)                    | The Light Contact is energized                                                          | The light will turn off when the (sc) is pressed (or when the door is closed with solid doors)   | The Light Contact is de-energized                                                       |
|                |                                                                                                                  | (ERC 112 – Terminal #4)                                                                 |                                                                                                  | (ERC 112 – Terminal #4)                                                                 |

| Condition                            | Compressor | Condenser Fan | Evaporator Fan | Lights    |
|--------------------------------------|------------|---------------|----------------|-----------|
| Cabinet Temp > Set point + 2         | ON         | ON            | ON             | ON or OFF |
| Cabinet Temperature <= Set point - 2 | OFF        | OFF           | ON             | ON or OFF |
| Defrost                              | OFF        | OFF           | ON             | ON or OFF |

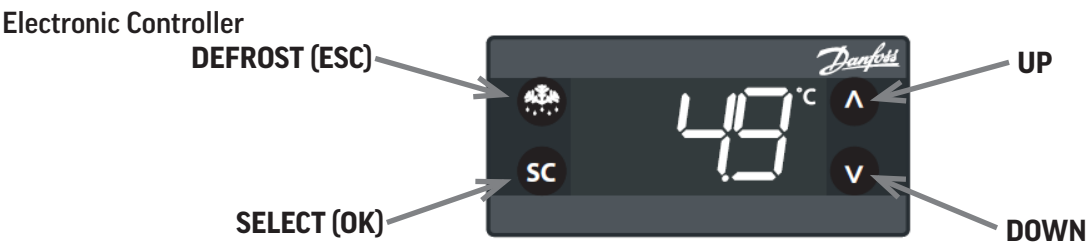

Control Panel Display

|  |             |                |  |                |                                         |
|--|-------------|----------------|--|----------------|-----------------------------------------|
|  | Defrost LED |                |  | Alarm LED      |                                         |
|  | On fixed:   | Defrost active |  | On fixed:      | ALARM Present                           |
|  | Off:        | Defrost is off |  | Flashing:      | ALARM Silenced                          |
|  | Fan LED     |                |  | Compressor LED |                                         |
|  | On fixed:   | Fan active     |  | On fixed:      | Compressor active                       |
|  | Off:        | Fan Off        |  | Flashing:      | Delay, protection or activation blocked |
|  |             |                |  | Off:           | No Alarm                                |

**NOTE:** When switched on, the instrument panel performs a lamp test for a few seconds.

Keyboard Functions

*Note: When the controller is in a Standby Mode, a blue dot will be displayed as shown here. To switch out of Standby Mode, push and hold the Defrost button until the display reads ON.*



|                                                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p><b>UP</b></p> <p>Quick press and release</p> <ul style="list-style-type: none"> <li>Increases Set Point</li> </ul> <p>Long press and release</p> <ul style="list-style-type: none"> <li>Increases display brightness</li> </ul> |  <p><b>DOWN</b></p> <p>Quick press and release</p> <ul style="list-style-type: none"> <li>Decreases Set Point</li> </ul> <p>Long press and release</p> <ul style="list-style-type: none"> <li>Decreases display brightness</li> </ul> |  <p><b>DEFROST (ESC)</b></p> <p>Quick press and release</p> <ul style="list-style-type: none"> <li>Activates manual defrost</li> </ul> <p>Long press and release</p> <ul style="list-style-type: none"> <li>Controller enter stand-by mode</li> </ul> |  <p><b>SET (ENTER)</b></p> <p>Quick press and release</p> <ul style="list-style-type: none"> <li>Toggles lights on/off</li> </ul> <p>Long press and release</p> <ul style="list-style-type: none"> <li>Toggles display °F/°C</li> </ul> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

## Control Panel Connections

**Current temperature**

1.  The display shows the current temperature

**Flashing temperature setpoint**

2.  Press: UP/DOWN to adjust setup

3.  After 30 seconds, the display automatically reverts to showing the current temperature

The alarm condition is always signaled by the alarm icon .

Press any button to silence the alarm, the relative icon will continue flashing.

| Alarm Code | Trigger                                                  | Automatic Clearance | Outputs                                                                                     | Comments                            |
|------------|----------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------|-------------------------------------|
| "Hi"       | Air temperature is higher than "ALA->Hat" for "ALA->Htd" | User configured     | Blink "Hi" with the highest temperature; If configured: cut in alarm relay, beep the buzzer | High temperature alarm              |
| "Lo"       | Air temperature is lower than "LAT" for "Ltd"            | User configured     | Blink "Lo" with the lowest temperature. If configured: cut in alarm relay, beep the buzzer  | Low temperature alarm               |
| "Con"      | Condenser temperature is too high or too low             | User configured     | Blink "Con". If configured: cut in alarm relay, beep the buzzer                             | Condenser alarm                     |
| "dor"      | Door open for more than                                  | Always              | Blink "dor". If configured: cut in alarm relay, beep the buzzer                             | Door open alarm                     |
| "uHi"      | Line voltage is higher than "Cop->uHi"                   | Always              | Blink "uHi". If configured: cut in alarm relay, beep the buzzer                             | High voltage alarm                  |
| "uLi"      | Line voltage is higher than "Cop->uLi"                   | Always              | Blink "uLo". If configured: cut in alarm relay, beep the buzzer.                            | Low voltage alarm                   |
| "LEA"      | Compressor continuous running for more than "ALA->LEA"   | Always              | Blink "LEA". If configured: cut in alarm relay, beep the buzzer                             | Leakage alarm                       |
| "E01"      | "S1" error                                               | Always              | Blink "E01 ". If configured: cut in alarm relay, beep the buzzer                            | "S1" sensor failure (short or open) |
| "E02"      | "S1" error                                               | Always              | Blink "E02". If configured: cut in alarm relay, beep the buzzer                             | "S2" sensor failure (short or open) |
| "E03"      | "S1" error                                               | Always              | Blink "E03 ". If configured: cut in alarm relay, beep the buzzer                            | "S3" sensor failure (short or open) |
| "E04"      | "S1" error                                               | Always              | Blink "E04 ". If configured: cut in alarm relay, beep the buzzer                            | "S4" sensor failure (short or open) |

How to Acknowledge Alarms:

**NOTE:** If alarm exclusion times are in progress (ALA folder of the parameter table), the alarm is not signaled.

1.



The alarm code flashing alternately with the temperature and the alarm symbol is displayed



Press any button to acknowledge

2.



After the acknowledge the temperature is displayed and the alarm symbol remains shown

## USING THE UNIT WITH ELIWELL CONTROLLER

Operation is simple, just keep it connected to the correct power supply and the refrigerator will maintain the internal temperature it has been set to. Keep the doors and / or drawers closed as much as possible to avoid unnecessary run time.

**NOTE:** Once the unit has been started and reaches proper storage temperatures, it may be loaded with product. No provision is made in the cabinets to quickly pull a keg of beer down to temperature. Best results are obtained when a pre-chilled keg is used. Otherwise it can take several hours to reduce the keg to the desired temperature.

The controller displays the current internal temperature.

Adjusting the set temperature lower will NOT cause the system to lower the temperature faster. When on, the refrigeration system is always operating at maximum.

The temperature was set at the factory at 38° F, but you can adjust it to your own selected temperature. 30 seconds after adjustment, the display automatically reverts to showing the current temperature.

The Refrigerator will automatically defrost as needed, there is no set time for defrost. Push and immediately release the "melting" or defrost button for a manual defrost.

The internal fan will be on when the compressor is on and when the doors are closed.

The compressor and condenser fan motor will only be on when the controller senses an increase in internal cabinet temperature passed the set point.

If equipped with glass doors, holding the SC button in will turn the cabinet light on or off.



In most cases the only thing displayed will be the cabinet temperature. When something other than normal operation has occurred, a message will be shown.

| Message Displayed | Why                            | What to do                                                |
|-------------------|--------------------------------|-----------------------------------------------------------|
| dEF               | Unit is defrosting             | Nothing. Normal operation.                                |
| AH1               | Cabinet temperature too warm   | Confirm doors or drawers are closed.                      |
| OPd               | Door is open                   | Close door, if message does not change, call for service. |
| E1, E2, E3, E4    | Sensor unplugged or has failed | Call for service.                                         |

## SEQUENCE OF OPERATIONS REFRIGERATOR

|               | ON                                                                                                   |                                                                                   | OFF                                                                                                   |                                                                                   |
|---------------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| COMPONENT     | OPERATION                                                                                            | CONTROLLER ACTION                                                                 | OPERATION                                                                                             | CONTROLLER ACTION                                                                 |
| COMPRESSOR    | Compressor turns on when the air temperature at the probe is above the sum of the set point + 4      | The Compressor Contact is energized                                               | Compressor turns off when the air temperature at probe is equal to or less than the set point         | The Compressor Contact is de-energized                                            |
|               |                                                                                                      | (EW+978 - Terminal #1)                                                            |                                                                                                       | (EW+978 - Terminal #1)                                                            |
| CONDENSER FAN | The Condenser Fan turns on when the Compressor is running                                            | The Condenser Fan is wired directly to the Compressor, not through the controller | The Condenser Fan turns off when the Compressor is not running                                        | The Condenser Fan is wired directly to the Compressor, not through the controller |
| EVAP FAN      | The Evaporator Fan turns on when the unit is powered on.                                             | The Evaporator Fan is wired to constant power                                     | The Evaporator Fan turns off when the unit is unplugged or put into standby.                          | The Evaporator Fan is wired to constant power                                     |
|               |                                                                                                      | Some models will be wired to the fan relay (EW+978 - Terminal #3)                 |                                                                                                       | Some models will be wired to the fan relay (EW+978 - Terminal #3)                 |
| LIGHT         | The light will turn on when the down button is pressed (or when the door is opened with solid doors) | The Light Contact is energized                                                    | The light will turn off when the down button is pressed (or when the door is closed with solid doors) | The Light Contact is de-energized                                                 |
|               |                                                                                                      | (Ew+978 – Terminal #2)                                                            |                                                                                                       | (Ew+978 – Terminal #2)                                                            |

| Condition                            | Compressor | Condenser Fan | Evaporator Fan | Lights    |
|--------------------------------------|------------|---------------|----------------|-----------|
| Cabinet Temp > Set point + 4         | ON         | ON            | ON             | ON or OFF |
| Cabinet Temperature <= Set point - 4 | OFF        | OFF           | ON             | ON or OFF |
| Defrost                              | OFF        | OFF           | ON             | ON or OFF |



**Controller Symbols**

|           |                                                                                                                                                  |            |                                                                                         |
|-----------|--------------------------------------------------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------|
|           | <b>Reduced SET / Economy</b><br>Permanently on: Energy Saving Mode<br>Flashing: Reduced Set Mode<br>Quick Flashing: Access to level 2 parameters | <b>AUX</b> | <b>AUX</b><br>Permanently on: Aux Active<br>Flashing: Deep Cooling Cycle Active         |
|           | <b>Compressor</b><br>Permanently On: Compressor Active<br>Flashing: Delay, protection or blocked start-up                                        |            | <b>Defrost</b><br>Permanently on: Defrost Active<br>Flashing: Manual or D.I. activation |
|           | <b>Alarm</b><br>Permanently on: Alarm Active<br>Flashing: Alarm Acknowledged                                                                     |            | <b>Fan</b><br>Permanently on: Fans Active                                               |
| <b>°C</b> | <b>Celsius</b><br>Permanently On: °C Setting                                                                                                     | <b>°F</b>  | <b>Fahrenheit</b><br>Permanently on: °F Setting                                         |

**Controller Buttons**

|  |                                                                                                                                                                                                                                                   |  |                                                                                                                                                                                                                                                                                       |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Up</b><br>Press and release <ul style="list-style-type: none"> <li>Scrolls through menu items</li> <li>Increases Values</li> </ul> Press for at least 5 seconds <ul style="list-style-type: none"> <li>Activates the manual defrost</li> </ul> |  | <b>Stand-by</b><br>Press and release <ul style="list-style-type: none"> <li>Returns to the previous menu level</li> <li>Confirm parameter value</li> </ul> Press for at least 5 seconds <ul style="list-style-type: none"> <li>Activates the stand-by function</li> </ul>             |
|  | <b>Down</b><br>Press and release <ul style="list-style-type: none"> <li>Scrolls through menu items</li> <li>Decreases values</li> </ul> Press for at least 5 seconds <ul style="list-style-type: none"> <li>Turn light on/off</li> </ul>          |  | <b>Set (Enter)</b><br>Press and release <ul style="list-style-type: none"> <li>Displays alarms</li> <li>Opens the machine status menu</li> </ul> Press for at least 5 seconds <ul style="list-style-type: none"> <li>Opens the programming menu</li> <li>Confirms commands</li> </ul> |

Alarms are always indicated by the buzzer (if present) and the alarm icon. To switch off the buzzer, press and release any key, the relative icon will continue to flash.

**NOTE:** If alarm exclusion times have been set (see AL folder in the parameters table), the alarm will not be signaled.

| Alarm Code | Trigger                          | Automatic Clearance | Outputs                                                                     | Comments                             |
|------------|----------------------------------|---------------------|-----------------------------------------------------------------------------|--------------------------------------|
| "AH1"      | Pb1 probe HIGH Temperature alarm | User configured     | Label AH1 displayed alternately with the actual value read by the probe Pb1 | High temperature alarm               |
| "AL1"      | Pb1 probe LOW Temperature alarm  | User                | Label AL1 displayed alternately with the actual value read by the probe Pb1 | Low temperature alarm                |
| "OPd"      | Door open for more than          | Always              | Label OPd displayed alternately with the actual value read by probe Pb1     | Door open alarm                      |
| "E1"       | "E1" error                       | Always              | Blink "E1". If configured: cut in alarm relay, beep the buzzer              | "PB1" sensor failure (short or open) |
| "E2"       | "E2" error                       | Always              | Blink "E2". If configured: cut in alarm relay, beep the buzzer              | "PB2" sensor failure (short or open) |
| "E3"       | "E3" error                       | Always              | Blink "E3 ". If configured: cut in alarm relay, beep the buzzer             | "PB3" sensor failure (short or open) |
| "E4"       | "E4" error                       | Always              | Blink "E4 ". If configured: cut in alarm relay, beep the buzzer             | "PB4" sensor failure (short or open) |

## CLEANING AND MAINTENANCE

### Cleaning Schedule:

| Cabinet         | Condenser coil     | Gaskets                                                       | Routine maintenance |
|-----------------|--------------------|---------------------------------------------------------------|---------------------|
| Daily wipe down | Quarterly cleaning | Daily inspection, check that hinges are tight to the cabinet. | Annually            |
| Weekly interior |                    |                                                               |                     |

### Daily Exterior Cleaning

It is much easier to clean on a regular basis than to have to remove stains once they have built up.

1. Wash with a clean sponge and a mild detergent that does not contain chlorine.
2. Rinse with clean water.
3. Dry with a soft cloth.
4. Polish with a soft cloth, wiping with the grain.
5. Wipe weekly with stainless steel cleaner.

### Weekly Interior Cleaning

1. Remove all food, food related items and shelves. Store the food at a safe temperature.
2. Disconnect power to the unit (unplug it or switch the breaker off).
3. Remove all loose food particles from the inside walls, floor, door liner and ceiling.
4. Scrub all interior surfaces and door gaskets with a warm (100°F to 110°F) detergent solution and a soft scrub brush.
5. Rinse with clean water and allow to air dry.
6. Return the shelves to the unit and secure them.
7. Restore power.
8. Return food to the unit when it has reached a safe temperature.

### Condensate Drainage and Cleaning

For VBB models the condensate drains into a pan located just below the condensing compartment grille.


### Faucet Cleaning

The faucet should be cleaned weekly. Disassemble with the provided spanner wrench clean with hot water and detergent. It is recommended to follow the dispenser system cleaning guidelines found in the Draught Quality Manual which can be found at, <https://www.brewersassociation.org/educational-publications/draught-beer-quality-manual/>

## CONDENSER CLEANING

The condenser coil is located right behind the front grille on top of the cabinet. It should be inspected once a month and cleaned as required.

1. Remove power from the unit.

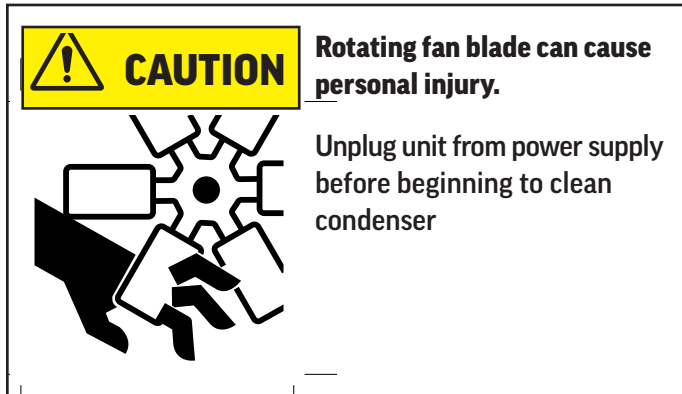

2. Vacuum clean all surfaces of the condenser.
3. Some coils will have an extreme layer of dirt, dust and grease covering the exterior. This should be removed with a wire brush, industrial vacuum or low pressure clean water before attempting to wash with coil cleaner.
4. Make sure no fins are bent or damaged in the process. If there are bent fins, carefully straighten them so that air can flow through the coils. Failure to keep the condenser coil clean will lead to poor performance, excessive power consumption and compressor failure and may result in loss of property. Failure to keep the condenser coil clean may void the limited warranty.

### Chemical Cleaning

1. Remove power from the unit.
2. A chemical condenser cleaning can be extremely messy so it is good practice to take the unit to a low traffic area or outside to do the cleaning whenever possible.
3. Remove cover grille.
4. Slide out condensing assembly if necessary.
5. Using the directions on the coil cleaning container, mix the cleaner and water into your sprayer.
6. Starting at the top with the tip about 6 inches away, begin spraying down the coil.
7. Spray side to side then go down to the next section of the coil. Repeat this until the coil is saturated.
8. Allow cleaner to soak into the dirty coil for a few minutes and then begin to rinse the coil.
9. Clean with a SMALL amount of water pressure. Too much pressure could cause the protective fins to fold over further blocking air flow through the coil.
10. Repeat this process as needed.
11. Let the unit dry off for a few minutes and replace the grille cover.

## METHODS FOR CLEANING STAINLESS STEEL

| Cleaning Needed                                                                                           | Cleaning Agent                                                                                                                                                                                                                                                                                                                                                                              | Method of Application                                                                                                                                                                                                                                                                                             | Affect on Finish                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Smears and fingerprints                                                                                   | Areal 20, Lac-O-Nu, Lumin Wash<br>O'Cedar Cream Polish, Stainless<br>Shine.                                                                                                                                                                                                                                                                                                                 | Rub with cloth as directed<br>on the package.                                                                                                                                                                                                                                                                     | Satisfactory for use on all<br>finishes.<br>Provides barrier film to<br>minimize prints.                                                |
| Stubborn Spots and<br>Stains, Baked-On<br>Splatter, and Other<br>Light Discolorations                     | Allchem Concentrated Cleaner.                                                                                                                                                                                                                                                                                                                                                               | Apply with damp sponge or<br>cloth.<br>Rub with damp cloth.                                                                                                                                                                                                                                                       | Use in direction of polish lines<br>on No. 4 (polished) finish. May<br>scratch No.<br>2 (mill) and Nos. 7 and 8<br>(polished) finishes. |
|                                                                                                           | Samae, Twinkle or Cameo Copper<br>Cleaner                                                                                                                                                                                                                                                                                                                                                   | Rub with damp cloth.                                                                                                                                                                                                                                                                                              |                                                                                                                                         |
|                                                                                                           | Grade FFF Italian pumice, whiting,<br>or talc.                                                                                                                                                                                                                                                                                                                                              | Rub with dry cloth.                                                                                                                                                                                                                                                                                               |                                                                                                                                         |
|                                                                                                           | Liquid NuSteel<br>Paste NuSteel or DuBois Temp.<br>Copper's Stainless Steel Cleaner<br>Revere Stainless Cleaner<br>Household cleansers, such as<br>Old Dutch, Lighthouse, Sunbrite,<br>Wyandotte, Bab-O, Gold Dust,<br>Sapolio, Bon Ami, Ajax, or Comet<br>Grade F Italian Pumice, Steel<br>Bright, Lumin Cleaner, Zud,<br>Restore, Sta-Clean, or Highlite.<br>Penny-Brite or Copper-Brite. | Use small amount of cleaner.<br>Rub with dry cloth using a<br>small amount of cleaner.<br>Apply with damp sponge or<br>cloth.<br>Rub with a damp cloth. May<br>contain chlorine bleaches.<br>Rinse<br>thoroughly after use.<br>Rub with a damp cloth.<br>Rub with a dry cloth using a<br>small amount of cleaner. |                                                                                                                                         |
| Heat tint or<br>discoloration                                                                             | Penny-Brite or Copper-Brite.<br>Past NuSteel, DuBois Temp,<br>or Tarnite. Revere Stainless Steel<br>Cleaner. Allen Polish, Steel Bright,<br>Tenacious Deposits,<br>Rusty Discolorations,<br>Industrial<br>Atmospheric Stains Wyandotte,<br>Bab-O or Zud.                                                                                                                                    | Rub with a dry cloth.<br>Rub with a dry cloth or stain-<br>less steel wool.<br>Apply with damp sponge or<br>cloth.<br>Rub with a damp cloth.                                                                                                                                                                      |                                                                                                                                         |
| Burnt-On Foods and<br>Grease Fatty Acids,<br>Milkstone (where<br>swabbing or rubbing<br>is not practical) | Easy-Off, De-Grease-It, 4 to 6%<br>hot solution of such agents as<br>trisodium phosphate or sodium<br>tripolyphosphate or 5 to 15% caustic<br>soda solution                                                                                                                                                                                                                                 | Apply generous coating. Allow<br>to stand for 10-15 minutes.<br>Rinse.<br>Repeated application may be<br>necessary.                                                                                                                                                                                               | Excellent removal, satisfactory<br>for use on all finishes.                                                                             |
| Tenacious Deposits,<br>Rusty Discolorations,<br>Industrial<br>Atmospheric Stains                          | Oakite No. 33, Dilac Texo 12, Texo NY,<br>Flash-Klenz, Caddy Cleaner,<br>Turco Scale 4368 or Permag 57.                                                                                                                                                                                                                                                                                     | Swab and soak with clean<br>cloth.<br>Let stand 15 minutes or more<br>according to directions on<br>package, then rinse and dry.                                                                                                                                                                                  | Satisfactory for use on all<br>finishes                                                                                                 |
| Hard Water Spots<br>and Scale                                                                             | Vinegar.<br>5% oxalic acid, 5% sulfamic acid, 5 to<br>10% phosphoric acid, or Dilac, Oakite<br>No. 33, Texo 12, Texo N.Y.                                                                                                                                                                                                                                                                   | Swab or wipe with cloth. Rinse<br>with water and dry.<br>Swab or soak with cloth. Let<br>stand 10-15 minutes. Always<br>follow with neutralizer rinse,<br>and dry.                                                                                                                                                | Satisfactory for all finishes.<br>Satisfactory for all finishes.<br>Effective on tenacious deposits<br>or where scale<br>has built up.  |

## HELP

| Trouble Diagnosis for the User                           |                                                                                              |                                                                                                                          |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Malfunction                                              | Possible Cause                                                                               | Likely Solution                                                                                                          |
| No cooling - unit is silent                              | Unit not plugged in.<br>Fuse or circuit breaker tripped.<br>Power cord plug loose in outlet. | Connect to proper voltage circuit Replace fuse or reset breaker.<br>Check outlet for loose connection, replace as needed |
| Unit cools but seems to be on all the time               | Dirty condenser                                                                              | Clean condenser                                                                                                          |
| Space temperature too high                               | Dirty condenser<br>Evaporator iced over Unit in high temperature environment                 | Clean condenser Defrost evaporator<br>Reduce temperature of room                                                         |
| Space temperature too low                                | Temperature control                                                                          | Adjust or replace control                                                                                                |
| Trouble Diagnosis for the Technician                     |                                                                                              |                                                                                                                          |
| No cooling - compressor does not hum                     | Temp control stuck in open position                                                          | Replace temp control.                                                                                                    |
| No cooling - compressor hums but does not start          | Low voltage to unit.<br>Compressor starting system failure                                   | Check voltage, correct as needed. Check start relay and start capacitor. See next step.                                  |
| No cooling - compressor starts but shuts off             | Compressor start relay failure Compressor start capacitor failure                            | Replace relay. Replace capacitor.                                                                                        |
| No cooling - compressor cycles on and off                | Overheating weak overload                                                                    | Clean condenser, check fan motor and blade. Check refrigerant charge. Replace overload.                                  |
| Unit cools, but is slow to pull cabinet temperature down | Evaporator fan not turning                                                                   | Check fan(s), on multiple fan units one fan may be turning slowly and will need to be replaced.                          |
| Unit cools but turns on and off frequently               | No product in cabinet. Temperature control defective Refrigeration issue                     | Fill cabinet Replace control<br>Have system checked                                                                      |
| Makes excessive noise                                    | Tubing rattle Loose parts<br>Bent or broken fan blade Noisy fan motor                        | Check tubing for routing Check for loose components Replace fan blade<br>Replace fan motor                               |

## FOR THE SERVICE TECH - R290

Refrigeration service should only be attempted by a trained trade professional certified to work on R290 systems.

### Here are some critical service items.

This list does not qualify anyone to service the unit. It is a reminder and checklist for the service tech. Keep these in mind for **R290 service**:

- Wire nuts are **NOT** to be used when changing an electrical part.
- The switches in this product are sealed, **only exact replacements** may be used.
- The process tubes are to be used for service access.
- Cut out (with tubing cutter) refrigeration components that are to be replaced. Do **NOT** un-braze.
- Because R290 can be vented into the air during service, the venting **MUST** be in an area free from flame or spark. It must be near an open window or door.
- A sign noting service of a system containing propane must be attached to the unit during refrigeration service.
- A combustible gas leak detector must be used to inform anyone in the area when propane is present in the air.

### Other Information:

**Evacuation:** It is critical that a refrigeration system be leak free and internally dry. A thorough evacuation with a good vacuum pump with a micron gauge attached is the only way to ensure that the system is dry and ready for a charge of refrigerant.

**Charging:** The system is critically charged and the proper type and amount **MUST** be weighed in.

**Overcharge symptoms:** Unit will cool properly but the suction line temperature will be unusually cold. Compressor run time will be longer than normal.

**Undercharge symptoms:** Long run time, poor cooling and a hot compressor dome are the main symptoms of an undercharge.

## FOR THE SERVICE TECH - WIRING DIAGRAM - DANFOSS CONTROLLER



## FOR THE SERVICE TECH - WIRING DIAGRAM - ELIWELL CONTROLLER



## LIMITED WARRANTY

### Warranty (Continental USA & Canada Only)

### SEVEN (7) YEAR PARTS, LABOR, AND COMPRESSOR LIMITED WARRANTY

Victory® Refrigeration (Victory) warrants to the original purchaser of Victory branded equipment, that such equipment is free from defects in material and workmanship, under normal use, proper maintenance and service as indicated by Victory's installation and operation instructions, for a period of SEVEN (7) years from the date of installation, or eighty-seven (87) months from the date of shipment from the manufacturer, whichever is earlier. In addition, Victory® Refrigeration (Victory) warrants the hermetically/semi-hermetically sealed compressor (part only) for SEVEN (7) years; not to exceed eighty-seven (87) months from the date of shipment from Victory, provided upon receipt of the compressor, manufacturer examination shows the sealed compressor to be defective. This warranty does not cover freight for the replacement compressor or freight for return of the failed compressor. Also, this compressor-part only warranty does NOT apply to any electrical controls, condenser, evaporator, fan motors, overload switch, starting relay, capacitors, temperature control, filter/drier, accumulator, refrigeration tubing, wiring harness, labor charges, or supplies which are covered by the standard warranty above.

\*Units shipped after 07/1/2024. Previous warranty applies to units shipped prior.

### Exceptions:

- Warranty does not apply for units installed in a Residential application. Units are intended for Commercial use only.
- Blast Chillers carry a 3 year parts and labor warranty; 2 additional years for the compressor.

Normal wear type parts, such as light bulbs/lamps, gaskets, fuses, batteries, blast chiller/freeze probes, thermostat or electronic controller calibration and/or adjustment, and any normal maintenance items as outlined in the Owner's Manual, adjustment of door mechanisms or freight damage are not covered by this warranty. For this warranty, the original purchaser shall be deemed to mean the individual or company for whom the product was originally installed.

Proof of purchase must be supplied to Victory to validate the warranty. This warranty is valid only if equipment is properly installed, and started-up as outlined in the Owner's Manual.

Units that utilize variable speed compressor technology can experience nuisance tripping on Class A GFCI outlets which have a trip limit of 4 mA to 6 mA. To avoid this issue in a location that requires GFCI circuit protection, Beverage Air & Victory recommends using a HUBBELL Model Number GFRST83W 20A Heavy Duty Hospital Grade Self-Test GFCI Receptacle.

Removal or alteration of the serial/ data plate from equipment shall be deemed to release Victory from all warranty obligations or any other obligations, expressed or implied. The warranty does not cover installation, start-up, normal maintenance, food loss, or other consequential damage, and it excludes components that are removable without tools. Our obligation under this warranty shall be limited to repairing or replacing, including labor, any part of such product, which proves defective.

Victory reserves the right to examine any product claimed to be defective. The labor warranty shall be for self-contained units only and for standard straight time, which is defined as normal service rate time, for service performed during normal working hours. Any service requested outside of a servicer's normal working hours will be covered under this warranty at the normal rate and any additional overtime rate will be the responsibility of the equipment purchaser. Victory shall not be responsible for any costs incurred if the work is performed by other than Victory's authorized service personnel. Reimbursement claims for parts and/or labor service costs must be made in writing. Model, cabinet serial number and installation location must be shown on the claim. A receipted bill from the servicing agency must accompany the claim, together with full details of the service problems, diagnosis and work performed. Victory reserves sole discretion whether further documentation on a claim is to be submitted. Any part determined to be defective in the product should be returned to the company within thirty (30) days under the terms of this warranty and must be accompanied by a record of the cabinet model, serial number, with a return material authorization number (RMA#) issued by Victory.

## LIMITED WARRANTY (CONTINUED)

Special installation/applications, including remote locations, are limited in coverage by this warranty. Any installation that requires extra work, and/or travel, to gain access to the unit for service is the sole responsibility of the equipment purchaser. Improper operation resulting from factors, including but not limited to, improper or negligent cleaning and maintenance, low voltage conditions, inadequate wiring, outdoor use and accidental damage are not manufacturing defects and are strictly the responsibility of the purchaser.

Except Blast Chillers, a product is designed for maintaining temperature and not bringing food to a desired temperature, so cannot be held responsible for this function under warranty.

Units must be in conditioned environments or warranty will be void.

Condenser coils must be cleaned at regular intervals. Failure to do so can cause compressor malfunction and will void warranty. Although cleaning requirements vary in accordance with the operation of various products, Victory recommends a minimum monthly cleaning.

**NOTE: NO CLAIMS CAN BE MADE AGAINST THESE WARRANTIES FOR SPOILAGE OF PRODUCTS, LOSS OF SALES OR CONSEQUENTIAL DAMAGES. THE FOREGOING WARRANTIES ARE EXPRESSLY GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, AND WE NEITHER ASSUME, NOR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR US, ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THE SALE OF SAID REFRIGERATION UNITS OR ANY PARTS THEREOF.**

These warranties shall not be assignable and shall be honored only in so far as the original purchaser.

These warranties do not apply outside the limits of the USA and Canada, nor do they apply to any part that has been subject to misuse, neglect, alteration, accident, or to any damage caused by transportation, flood, fire, acts of terrorism, or acts of God.

## LIMITATION OF LIABILITY:

Victory or its affiliates shall not be liable for any indirect, incidental, special or consequential damages, or losses of a commercial nature arising out of malfunctioning equipment or its parts or components thereof, because of defects in material or workmanship. In no event shall Victory be liable for a sum more than the purchase price of the item.

**THE ORIGINAL OWNER'S SOLE AND EXCLUSIVE REMEDY AND VICTORY'S SOLE AND EXCLUSIVE LIABILITY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT OF PARTS OR COMPONENTS CONTAINED IN THE EQUIPMENT IDENTIFIED ABOVE WHICH UNDER NORMAL USE AND SERVICE MALFUNCTION AS A RESULT OF DEFECTS IN MATERIAL OR WORKMANSHIP, SUBJECT TO THE APPLICABLE PROVISIONS AND LIMITATIONS STATED ABOVE.**

07/2024

## Warranty Registration

Register your product online at **Victory.com/parts-service** or fill out and mail the form below.

Cabinet Model Number: \_\_\_\_\_ Date Of Installation: \_\_\_\_\_

Cabinet Serial Number: \_\_\_\_\_

### Location Of Product

Business Name: \_\_\_\_\_

Business Street: \_\_\_\_\_

Business City: \_\_\_\_\_ State: \_\_\_\_\_ Postal Code: \_\_\_\_\_

**Mail to:** Victory, 3779 Champion Blvd, Winston-Salem, NC 27105

Rev. 03/26