



Replacement Instructions For SU-P-208 High Limit Switch




Top View




Bottom View

**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

TOOLS REQUIRED: Philips Head Screw Driver

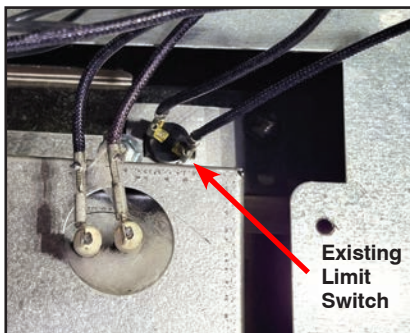

Units Prior To 2022

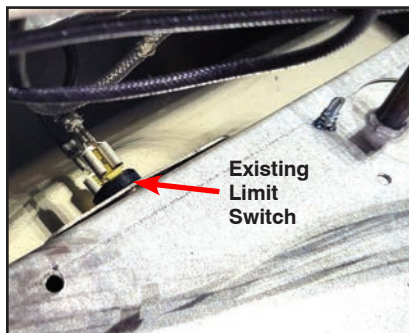


Units Built January - May 1, 2022



STEP 1:

Unplug or turn off the breaker powering the unit.
Disconnect the wiring from existing High Limit Switch.

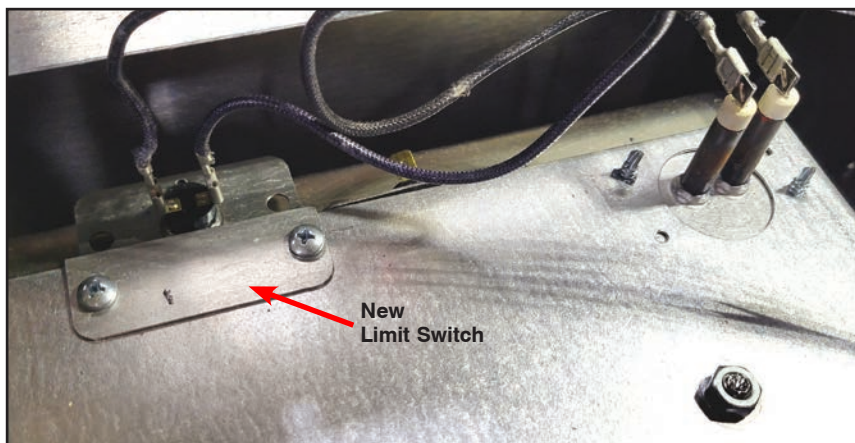

STEP 2:

Connect the wiring to the new High Limit Switch. Using the #10 sheet metal screws, install the mounting to the element pan as shown.



Hauppauge, New York 11788

**For Further Assistance
Contact Customer Service at:**

800-645-3166

or

customer@advancetabco.com

©ADVANCE TABCO JUNE 2022