



# BEVERAGE-AIR®

## **INSTALLATION AND OPERATING INSTRUCTIONS** **for all** **PFI, PFD, and PFT Freezer Models**



809-214A Rev. C. 02/09/2026

3779 CHAMPION BLVD, WINSTON-SALEM, NC 27105

Phone: (888) 845-9800 | Fax: (800) 253-5168 | Web: [beverage-air.com](http://beverage-air.com)

**SEE BACK COVER FOR  
WARRANTY REGISTRATION**



WELCOME

Thank you for purchasing a Beverage-Air cabinet. This series has passed our strict quality control inspection and meets the high standards set by Beverage-Air! You have made a quality investment that with proper maintenance will give you many years of reliable service!

Please read the following installation and maintenance instructions before installing or using your unit.

Important Information

- PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR USING, IF RECOMMENDED PROCEDURES ARE NOT FOLLOWED, WARRANTY CLAIMS MAY BE DENIED.
- Your warranty registration information is located with this manual. Please complete the card and submit it to Beverage-Air within TEN days of installation. Failure to properly register equipment may limit or void the warranty.
- Beverage-Air reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions, or replacements for previously purchased equipment.

Safety . . . . . 3

Important Information . . . . . 5

Product Information . . . . . 6

Clearance and Placement . . . . . 7

Unpacking and Set Up . . . . . 8

Shelf Installation . . . . . 9

Electrical . . . . . 10

Using The Unit. . . . . 11

    Sequence of Operations Freezer . . . . . 12

Cleaning and Maintenance . . . . . 16

Condenser Cleaning. . . . . 17

Methods For Cleaning Stainless Steel. . . . . 18

Help . . . . . 19

For The Service Tech - R290 . . . . . 20

For The Service Tech - Wiring Diagram . . . . . 21

Limited Warranty . . . . . 22

Limited Warranty (continued) . . . . . 23



## SAFETY

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance



### Use: When using this unit, please:

- **Move it carefully.** If on casters be sure the casters do NOT run over the power cord.
- **Lock** the casters when in use.
- **Seek help.** This machine is heavy! Be sure to move with enough help to avoid tipping or dropping the cabinet.
- **Prevent children from playing in or on the cabinet.** Persons unable to use this product must be prevented access.
- **Follow all instructions.** There are many safety labels and directions on the unit. Heed them.
- **Watch your fingers.** There may be pinch points near the door hinges.



## Maintenance

### Do NOT:

- Clean a frozen evaporator with a sharp object
- Clean a dirty condenser with a sharp object.
- Store gasoline, kerosene or any other flammable material near the cabinet.

### Do ALWAYS

- Use a Beverage-Air recommended technician certified to repair R290 equipment.
- Use ONLY Beverage-Air factory service parts. Use of non OEM parts can be dangerous because of the design changes needed to safely use R290.

## Important Information to Add

Record the model number, serial number and the date of installation here for future reference. The model and serial numbers are on the unit's serial number dataplate, which is located on the left inside wall.

|                      |  |
|----------------------|--|
| Model Number         |  |
| Serial Number        |  |
| Date of Installation |  |
| Purchased From       |  |



Observe the **Caution** and **Warning** notices. They are indicators of important safety information. Keep this manual for future reference.

### SAFETY



**CAUTION:** If it is necessary to move the cabinet after removal from the skid, remove all doors and carefully push the unit at a point of no more than 36" from the bottom to avoid damage.





## IMPORTANT INFORMATION

This unit is intended to be used in a commercial application. That includes bars and restaurants.

If installed in a residence some commercial service companies may not be able to service it on site.


The manufacturer has designed and produced this machine with the finest in materials. The manufacturer assumes no liability for units that have been altered in any way. Alterations or part substitutions will void the warranty.

### Limitations

The machine is designed for use indoors in a controlled environment. It must be kept dry, not overheated or subjected to excessive cold. May only be connected to a dedicated electrical circuit. Extension cords are not permitted.

|               | Minimum | Maximum |
|---------------|---------|---------|
| Voltage       | 103.5   | 126.5   |
| Room Air Temp | 60° F   | 100° F  |

### Air Flow, All Models regardless of section, door count or door material.

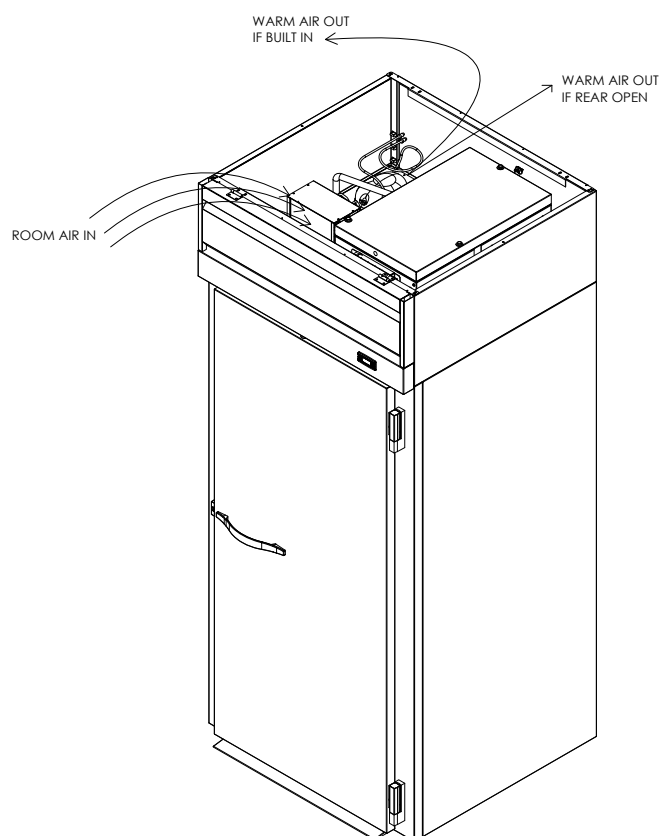

### Agency Approvals

These marks appear on the dataplate or serial tag, located in the inside of the left wall. The dataplate also contains the model and serial numbers as well as electrical requirements.




## PRODUCT INFORMATION

| Model                       | Cabinet Dimensions<br>w x d x h (Inches) | Door<br>Size | Door<br>Type | Full<br>Load<br>Amps | Power Cord<br>Plug (NEMA) | Refrigerant Type /<br>Charge g / Charge oz |
|-----------------------------|------------------------------------------|--------------|--------------|----------------------|---------------------------|--------------------------------------------|
| PASS THRU MODELS            |                                          |              |              |                      |                           |                                            |
| PFD1HC-1AS                  | 26 1/2 X 38 3/8 X 84 1/8                 | Full         | Solid        | 9.1                  | 5-15P                     | R-290/130 /4.59                            |
| PFD1HC-1AHS                 | 26 1/2 X 38 3/8 X 84 1/8                 | Half         | Solid        |                      |                           |                                            |
| PFD1HC-1BG                  | 26 1/2 X 33 5/8 X 84 1/8                 | Full         | Glass        | 10.5                 |                           |                                            |
| PFD1HC-1BHG                 | 26 1/2 X 36 X 84 1/8                     | Half         | Glass        |                      |                           |                                            |
| PFD2HC-1AS                  | 52 1/8 X 38 1/2 X 84 1/8                 | Full         | Solid        | 13.9                 | 5-20P                     |                                            |
| PFD2HC-1AHS                 | 52 1/8 X 38 1/2 X 84 1/8                 | Half         | Solid        |                      |                           |                                            |
| PFD2HC-1BG                  | 52 1/8 X 35 7/8 X 84 1/8                 | Full         | Glass        |                      |                           |                                            |
| PFD2HC-1BHG                 | 52 1/8 X 36 1/8 X 84 1/8                 | Half         | Glass        |                      |                           |                                            |
| ROLL IN MODELS              |                                          |              |              |                      |                           |                                            |
| PFI1HC-1AS                  | 36 1/2 x 36 1/8 x 84 3/8                 | Full         | Solid        | 9.1                  | 5-15P                     | R-290/130 /4.59                            |
| PFI2HC-1AS                  | 68 7/8 x 36 1/4 x 84 3/8                 | Full         | Solid        | 13.9                 | 5-20P                     |                                            |
| PFI3HC-1AS                  | 68 7/8 X 36 1/4 X 84 3/8                 | Full         | Solid        |                      |                           | 5-15P                                      |
| ROLL IN EXTRA TALL MODELS   |                                          |              |              |                      |                           |                                            |
| PFI1XTHC-1AS                | 36 1/2 X 36 1/8 X 89 7/8                 | Full         | Solid        | 9.1                  | 5-15P                     | R-290/130 /4.59                            |
| PFI2XTHC-1AS                | 68 7/8 X 36 1/4 X 89 7/8                 | Full         | Solid        | 13.9                 | 5-20P                     | R-290/130 /4.59**X2                        |
| ROLL THRU MODELS            |                                          |              |              |                      |                           |                                            |
| PFT1HC-1AS                  | 36 1/2 X 39 3/4 X 84 3/8                 | Full         | Solid        | 10.5                 | 5-15P                     | R-290/130 /4.59                            |
| PFT2HC-1AS                  | 68 7/8 X 39 7/8 X 84 3/8                 | Full         | Solid        | 13.9                 | 5-20P                     | R-290/130 /4.59**X2                        |
| ROLL THRU EXTRA TALL MODELS |                                          |              |              |                      |                           |                                            |
| PFT1XTHC-1AS                | 36 1/2 X 39 3/4 X 89 7/8                 | Full         | Solid        | 10.5                 | 5-15P                     | R-290/130 /4.59                            |
| PFT2XTHC-1AS                | 68 7/8 X 39 15/16 X 90                   | Full         | Solid        | 13.9                 | 5-20P                     | R-290/130 /4.59**X2                        |

- As shipped, all models are set to 0°F., maintaining the cabinet temperature between 2.5°F and -2.5°F.
- All models can be field adjusted to a product temperature as low as -10°F.
- \*\*X2 means 2 systems.
- ALWAYS REFERENCE YOUR EQUIPMENT DATA PLATE AMPS, REFRIGERANT AND REFRIGERANT CHARGE FOR THE MOST UP TO DATE AND ACCURATE VALUES.
- There are no access valves on the refrigeration system.

## CLEARANCE AND PLACEMENT

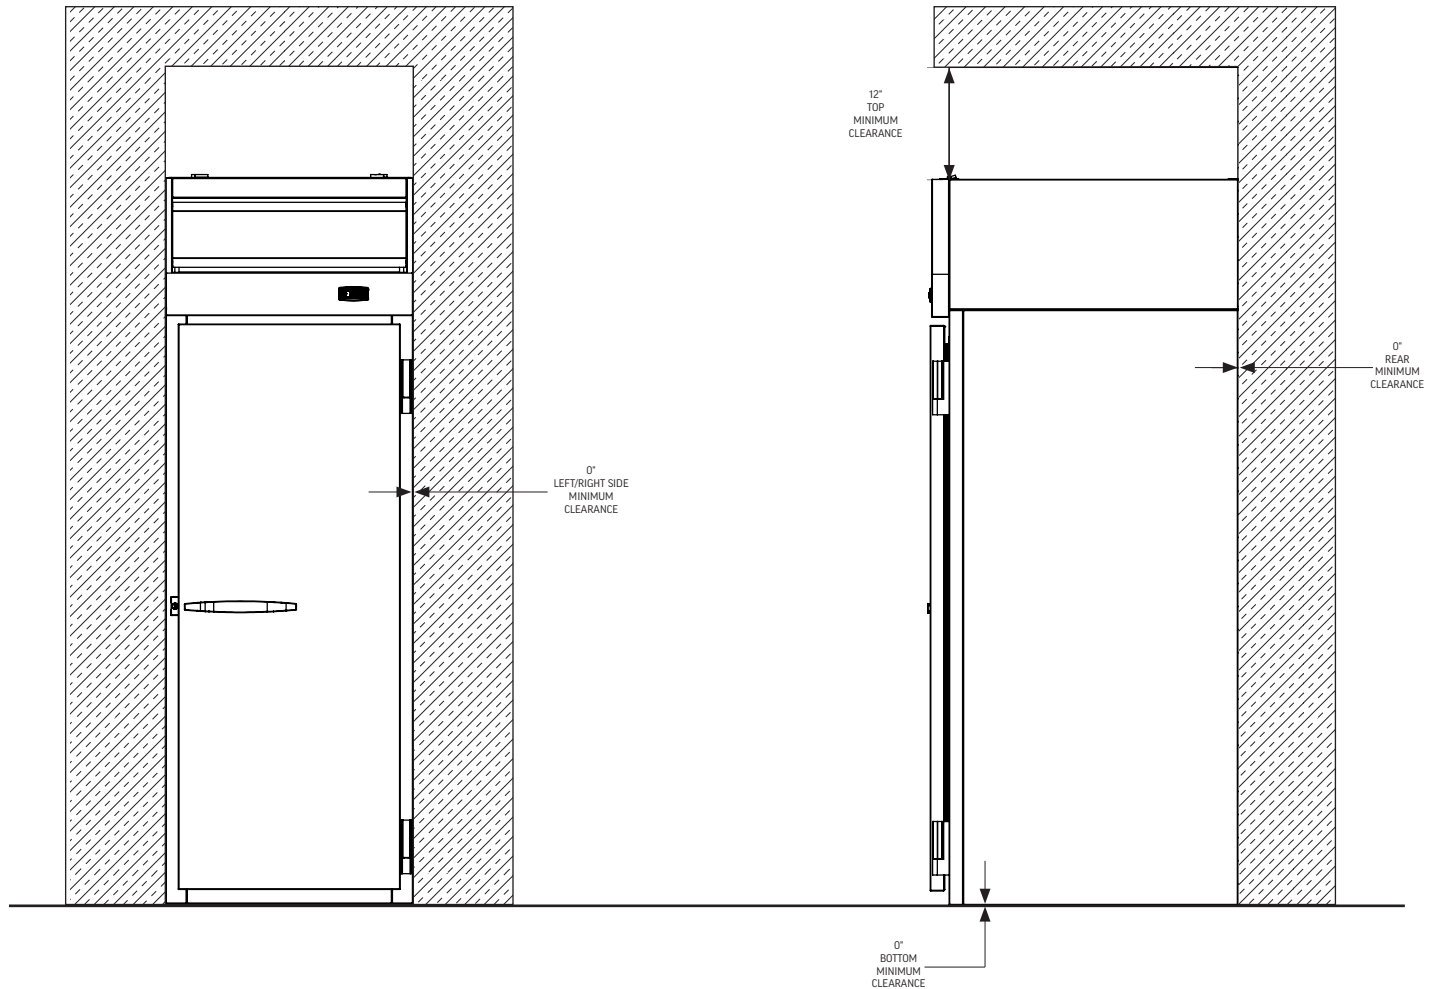

### Placement

Consider the following when selecting a location for your Refrigerator:

#### Clearance:

- 12 in. at the top
- 0 in. at the rear
- 0 in. at the left side
- 0 in. at the right side

**Floor Load:** the floor on which the Refrigerator is located must be even and level, free from vibrations, and strong enough to support the combined weights of the unit and maximum product load.

**Ventilation:** Grille area at front must be free and clear of any object or wall.

**Power Outlet:** The installation of this appliance requires a dedicated power outlet located within the length of the unit's power cord and be accessible for the purpose to disconnect power

## UNPACKING AND SET UP

Carefully inspect the shipping carton for damage. This is the only time that shipping damage may be claimed. If damage is suspected, open the carton immediately and, if there is damage, retain the carton and contact the shipper to make a claim. Do NOT contact the manufacturer.

### Uncrating

Tools Needed:  $\frac{3}{4}$ " box wrench, adjustable wrench, level, flat head screw driver, and box cutter.

1. Cut the stretch wrap along a corner post and remove the cardboard top capping and the corner posts.
2. Discard stretch wrap and any cardboard that will not be recycled.

*Note: additional clear plastic protective wrap is applied directly to any product with a glass door.*

3. Move unit as close to final position as possible before removing the skid.

*Note: The skid must be removed before the casters or legs can be attached.*

### Leveling:

Cabinets must be leveled when installed. Level should be measured on the headrail.

Install or attach any accessories that will be used  
Remove any plastic covering the stainless steel.

**Do NOT tip unit on its front or sides. If tipped onto the back, unit must not be started for 3 hours.**

### Skid Removal





Tip the unit forward and remove the skid.



1. Remove the shipping bolts using the  $\frac{3}{4}$ " box wrench while cabinet is held in one direction.
2. Repeat the process while the cabinet is held in the opposite direction.

## SHELF INSTALLATION

1. Determine the proper location for the shelf clips. The reference numbers on the pilaster can serve as a guide to ensure all clips are properly located.
2. Insert the top tab of the shelf clip into the desired hole of the pilaster. The retaining tab **MUST** be facing up as shown.
3. Rotate the clip downwards and insert the bottom tab into the matching hole in the pilaster. The clip may need to be squeezed slightly during installation.
4. Install all remaining clips.
5. Install shelves onto clips with the product retention bar facing up. Be careful not to dislodge clips during installation.
6. Place shelves so that the retaining tab on the clip captures the shelf as shown.
7. Confirm that the shelf is resting on **ALL 4** clips and that the clips are securely attached to the pilasters.
8. Improper shelf clip installation could cause the shelf and / or the product on it to fall, resulting in damage to the unit and possible bodily injury.
9. Do **NOT** overload the shelves. The unit is designed to use all shelves that are supplied in an equally spaced manner. Contact Beverage-Air customer service if fewer shelves or a different configuration to ensure shelf overloading will not occur.

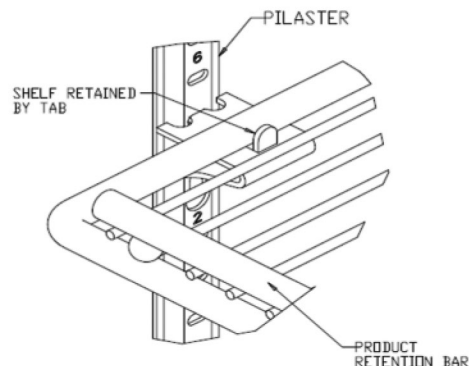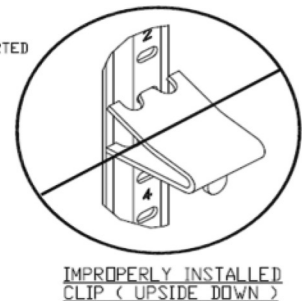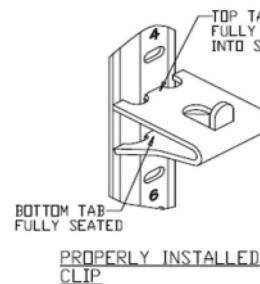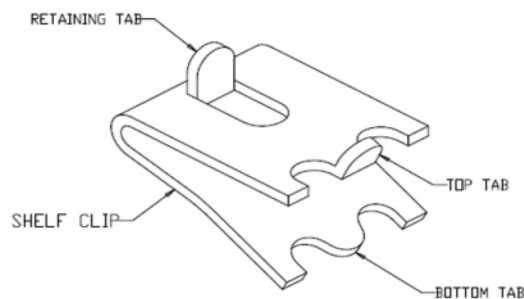


## ELECTRICAL

This is a cord-connected unit, and must be connected to its own **dedicated** power supply. Check the dataplate on the machine to confirm the voltage and per the dataplate use the correct fuses or HACR circuit breakers.

### Power Cord

This 115 volt model is equipped with a cord and either a 5-15P or 5-20P plug.

If the power cord becomes damaged, it must be replaced with the identical cord.

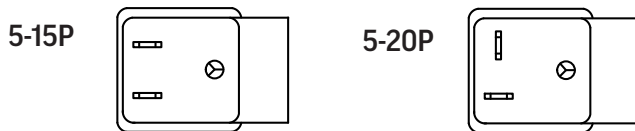

### GFCI

Units that utilize variable speed compressor technology can experience nuisance tripping on Class A GFCI outlets which have a trip limit of 4 to 6 mA. To avoid this issue in a location that requires GFCI circuit protection, Beverage-Air recommends using either an Eaton, SGF20, or HUBBELL Model Number GFRST83W 20A Heavy Duty Hospital Grade Self-Test GFCI Receptacle.

### Follow All National and Local Codes

This unit must be grounded. Do not use extension cords and do not disable or by-pass ground prong on electrical plug.

### Initial Start Up

Plug the power cord into the proper power supply.

The cabinet will soon begin to blow warm air out of the top area, and cool air will flow from the inside blower.

The cabinet temperature has been set at the factory and should not need adjustment, however if it was changed, the standard setting is 0° F.

### Cautions

Care must be taken whenever moving or servicing the unit. The refrigerant is contained in a sealed system, but if released it may be flammable.

After the cabinet has been installed, leveled, and cleaned as described above, refer to the following checklist:

- Check for proper electrical hook-up.
- Cabinet **MUST NOT SHARE A RECEPTACLE** with another piece of equipment
- Check that all clearances are in line with the aforementioned guidelines.
- Check that cabinet is level.

\* **NOTE:** Once the unit has been started and reaches proper storage temperatures, it may be loaded with product. For proper energy efficiency and airflow we recommend a minimum 1" clearance between product and side walls, 4" clearance between product and ceiling, and 1" clearance from the bottom of the unit.

## USING THE UNIT

Operation is simple, just keep it connected to the correct power supply and the freezer will maintain the internal temperature it has been set to. Keep the doors and / or drawers closed as much as possible to avoid unnecessary run time.

The controller displays the current internal temperature.

Adjusting the set temperature lower will NOT cause the system to lower the temperature faster. When on, the refrigeration system is always operating at maximum.

For best results, make certain the unit remains powered and has achieved the desired set point before loading it with product. Pull down time will vary depending upon the type of unit and ambient conditions. Freshly cooked product, or otherwise warm product placed into the appliance will also increase the pull down time significantly since this model is designed for storage and not for rapid pull down.

The temperature was set at the factory at 0° F, but you can adjust it to your own selected temperature. 30 seconds after adjustment, the display automatically reverts to showing the current temperature.

The freezer will automatically defrost as needed, there is no set time for defrost. Push and immediately release the "melting" or defrost button for a manual defrost.

*Note: Holding the defrost button in too long will shut the controller off.*

The internal fan will be on when the compressor is on and when the doors are closed.

The compressor and condenser fan motor will only be on when the controller senses an increase in internal cabinet temperature passed the set point.

If equipped with glass doors, holding the SC button in will turn the cabinet light on or off.



In most cases the only thing displayed will be the cabinet temperature. When something other than normal operation has occurred, a message will be shown.

| Message Displayed  | Why                            | What to do                                                |
|--------------------|--------------------------------|-----------------------------------------------------------|
| dEF                | Unit is defrosting             | Nothing. Normal operation.                                |
| H <sub>i</sub>     | Cabinet temperature too warm   | Confirm doors or drawers are closed.                      |
| dOr                | Door is open                   | Close door, if message does not change, call for service. |
| LER                | Compressor run time too long   | Check doors closed. If yes, call for service.             |
| E01, E02, E03, E04 | Sensor unplugged or has failed | Call for service.                                         |

## SEQUENCE OF OPERATIONS FREEZER

The freezer operates based on the air temperature measured by the probe located at the return air.

|                   | ON                                                                                                                                                                           |                                                                                   | OFF                                                                                                                                                                           |                                                                                   |
|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| COMPONENT         | OPERATION                                                                                                                                                                    | CONTROLLER ACTION                                                                 | OPERATION                                                                                                                                                                     | CONTROLLER ACTION                                                                 |
| COMPRESSOR        | Compressor turns on when the air temperature at the probe is above the sum of the set point + 2.5                                                                            | The Compressor Contact is energized                                               | Compressor turns off when the air temperature at probe is equal to or less than the set point - 2.5                                                                           | The Compressor Contact is de-energized                                            |
|                   |                                                                                                                                                                              | (ERC 112 - Terminal #1)                                                           |                                                                                                                                                                               | (ERC 112 - Terminal #1)                                                           |
| CONDENSER FAN     | The Condenser Fan turns on when the Compressor is running                                                                                                                    | The Condenser Fan is wired directly to the Compressor, not through the controller | The Condenser Fan turns off when the Compressor is not running                                                                                                                | The Condenser Fan is wired directly to the Compressor, not through the controller |
| EVAPORATOR FAN    | The Evaporator Fan turns on when the Compressor is running and the doors are closed.                                                                                         | The Evaporator Fan is wired to the Fan Contact                                    | The Evaporator Fan turns off when the Compressor is not running, and when door is opened while Compressor is running                                                          | The Evaporator Fan is wired to the Fan Contact                                    |
|                   |                                                                                                                                                                              | (ERC 112 - Terminal #5)                                                           |                                                                                                                                                                               | (ERC 112 - Terminal #5)                                                           |
| DEFROST HEATER    | The Defrost Heater will activate on cumulative Compressor runtime of 6 hours, and when temperature drops too low                                                             | The Defrost Heater Contact is energized                                           | When either the defrost is not scheduled or the temperature at defrost probe has reached the defrost termination temperature.                                                 | The Defrost Heater Contact is de-energized                                        |
|                   |                                                                                                                                                                              | (ERC 112 - Terminal #6)                                                           |                                                                                                                                                                               | (ERC 112 - Terminal #6)                                                           |
| FACE/DOOR HEATERS | The Face & Door Heaters turn on when the Compressor is running                                                                                                               | The Door/Face Heater are wired to the Compressor Contact                          | The Face & Door Heaters turn off when the Compressor is not running                                                                                                           | The Door/Face Heater are wired to the Compressor Contact                          |
|                   |                                                                                                                                                                              | (ERC 112 - Terminal #1)                                                           |                                                                                                                                                                               | (ERC 112 - Terminal #1)                                                           |
| LIGHT             | The light will turn on when the  is pressed (or when the door is opened with solid doors) | The Light Contact is energized                                                    | The light will turn off when the  is pressed (or when the door is closed with solid doors) | The Light Contact is de-energized                                                 |
|                   |                                                                                                                                                                              | (ERC 112 - Terminal #4)                                                           |                                                                                                                                                                               | (ERC 112 - Terminal #4)                                                           |

| Condition                              | Compressor | Condenser Fan | Evaporator Fan | Defrost Heater | Face/Door Heater | Drain Heater | Lights    |
|----------------------------------------|------------|---------------|----------------|----------------|------------------|--------------|-----------|
| Cabinet Temp > Set point + 2.5         | ON         | ON            | ON             | OFF            | ON               | ON           | ON or OFF |
| Cabinet Temperature <= Set point - 2.5 | OFF        | OFF           | OFF            | OFF            | OFF              | ON           | ON or OFF |
| Defrost                                | OFF        | OFF           | OFF            | ON             | OFF              | ON           | ON or OFF |



Electronic Controller



Control Panel Display


|  |             |                |  |                |                                         |
|--|-------------|----------------|--|----------------|-----------------------------------------|
|  | Defrost LED |                |  | Alarm LED      |                                         |
|  | On fixed:   | Defrost active |  | On fixed:      | ALARM Present                           |
|  | Off:        | Defrost is off |  | Flashing:      | ALARM Silenced                          |
|  | Fan LED     |                |  | Compressor LED |                                         |
|  | On fixed:   | Fan active     |  | On fixed:      | Compressor active                       |
|  | Off:        | Fan Off        |  | Flashing:      | Delay, protection or activation blocked |
|  |             |                |  | Off:           | No Alarm                                |

NOTE: When switched on, the instrument panel performs a lamp test for a few seconds.


Keyboard Functions

|                                                                                                                                                                                                                  |                                                                                                                                                                                                                    |                                                                                                                                                                                                                                    |                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>UP</b><br>Quick press and release <ul style="list-style-type: none"><li>Increases Set Point</li></ul> Long press and release <ul style="list-style-type: none"><li>Increases display brightness</li></ul> | <br><b>DOWN</b><br>Quick press and release <ul style="list-style-type: none"><li>Decreases Set Point</li></ul> Long press and release <ul style="list-style-type: none"><li>Decreases display brightness</li></ul> | <br><b>DEFROST (ESC)</b><br>Quick press and release <ul style="list-style-type: none"><li>Activates manual defrost</li></ul> Long press and release <ul style="list-style-type: none"><li>Controller enter stand-by mode</li></ul> | <br><b>SET (ENTER)</b><br>Quick press and release <ul style="list-style-type: none"><li>Toggles lights on/off</li></ul> Long press and release <ul style="list-style-type: none"><li>Toggles display °F/°C</li></ul> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Note: When the controller is in a Standby Mode, a blue dot will be displayed as shown here. To switch out of Standby Mode, push and hold the Defrost button until the display reads ON.

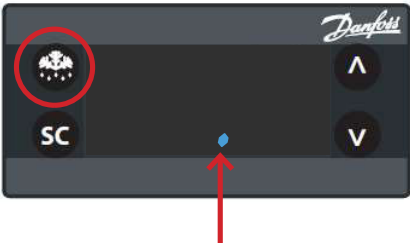

CONTROL PANEL CONNECTIONS

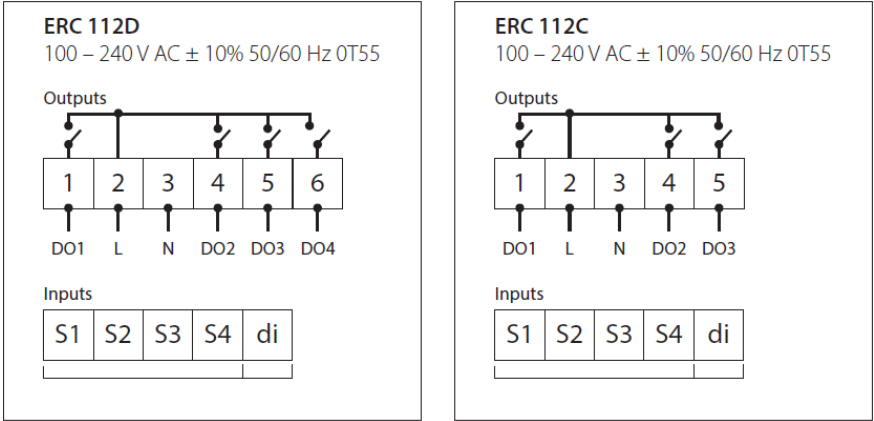

Changing the Set point

**Current temperature**

1.  The display shows the current temperature

**Flashing temperature setpoint**

2.  Press: UP/DOWN to adjust setup

3.  After 30 seconds, the display automatically reverts to showing the current temperature



The alarm condition is always signaled by the alarm icon .


Press any button to silence the alarm, the relative icon will continue flashing.

| Alarm Code | Trigger                                                  | Automatic Clearance | Outputs                                                                                     | Comments                            |
|------------|----------------------------------------------------------|---------------------|---------------------------------------------------------------------------------------------|-------------------------------------|
| "Hi"       | Air temperature is higher than "ALA->Hat" for "ALA->Htd" | User configured     | Blink "Hi" with the highest temperature; If configured: cut in alarm relay, beep the buzzer | High temperature alarm              |
| "Lo"       | Air temperature is lower than "LAT" for "Ltd"            | User configured     | Blink "Lo" with the lowest temperature. If configured: cut in alarm relay, beep the buzzer  | Low temperature alarm               |
| "Con"      | Condenser temperature is too high or too low             | User configured     | Blink "Con". If configured: cut in alarm relay, beep the buzzer                             | Condenser alarm                     |
| "dor"      | Door open for more than                                  | Always              | Blink "dor". If configured: cut in alarm relay, beep the buzzer                             | Door open alarm                     |
| "uHi"      | Line voltage is higher than "Cop->uHi"                   | Always              | Blink "uHi". If configured: cut in alarm relay, beep the buzzer                             | High voltage alarm                  |
| "uLi"      | Line voltage is higher than "Cop->uLi"                   | Always              | Blink "uLo". If configured: cut in alarm relay, beep the buzzer.                            | Low voltage alarm                   |
| "LEA"      | Compressor continuous running for more than "ALA->LEA"   | Always              | Blink "LEA". If configured: cut in alarm relay, beep the buzzer                             | Leakage alarm                       |
| "E01"      | "S1" error                                               | Always              | Blink "E01". If configured: cut in alarm relay, beep the buzzer                             | "S1" sensor failure (short or open) |
| "E02"      | "S1" error                                               | Always              | Blink "E02". If configured: cut in alarm relay, beep the buzzer                             | "S2" sensor failure (short or open) |
| "E03"      | "S1" error                                               | Always              | Blink "E03". If configured: cut in alarm relay, beep the buzzer                             | "S3" sensor failure (short or open) |
| "E04"      | "S1" error                                               | Always              | Blink "E04". If configured: cut in alarm relay, beep the buzzer                             | "S4" sensor failure (short or open) |

## How to Acknowledge Alarms:

**NOTE:** If alarm exclusion times are in progress (ALA folder of the parameter table), the alarm is not signaled.

1.

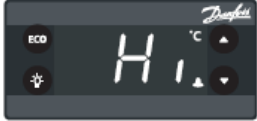

The alarm code flashing alternately with the temperature and the alarm symbol is displayed



Press any button to acknowledge

2.



After the acknowledge the temperature is displayed and the alarm symbol remains shown

CLEANING AND MAINTENANCE

| Cleaning Schedule: |                    |                                                               |                     |
|--------------------|--------------------|---------------------------------------------------------------|---------------------|
| Cabinet            | Condenser coil     | Gaskets                                                       | Routine maintenance |
| Daily wipe down    | Quarterly cleaning | Daily inspection, check that hinges are tight to the cabinet. | Annually            |
| Weekly interior    |                    |                                                               |                     |

Daily Exterior Cleaning

It is much easier to clean on a regular basis than to have to remove stains once they have built up.

1. Wash with a clean sponge and a mild detergent that does not contain chlorine.

2. Rinse with clean water.

3. Dry with a soft cloth.
4. Polish with a soft cloth, wiping with the grain.

5. Wipe weekly with stainless steel cleaner.

Weekly Interior Cleaning

1. Remove all food, food related items and shelves. Store the food at a safe temperature.

2. Disconnect power to the unit (unplug it or switch the breaker off).

3. Remove all loose food particles from the inside walls, floor, door liner and ceiling.

4. Scrub all interior surfaces and door gaskets with a warm (100°F to 110°F) detergent solution and a soft
- scrub brush.

5. Rinse with clean water and allow to air dry.

6. Return the shelves to the unit and secure them.

7. Restore power.

8. Return food to the unit when it has reached a safe temperature.




## CONDENSER CLEANING

Keeping the condenser coil clean is critical to efficient operation.

1. Unplug unit from power supply.



**Rotating fan blade can cause personal injury.**

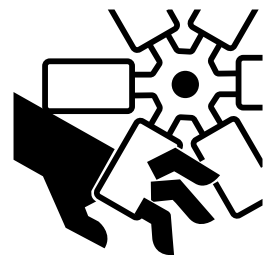

Unplug unit from power supply before beginning to clean condenser

2. Remove two Phillips head screws from the top corners of the front panel.
3. Lift upwards on the front panel to remove
4. Examine condenser surface, if dusty, brush and vacuum the dust and lint from the surface of the coil. Brush up and down to avoid damaging the fins. Use care to not disturb the wires connected to the controller.

*Note: If the coil is greasy, the coil will need to be cleaned with coil cleaner and that should be left to an experienced technician.*

5. Return panel to unit.
6. To reinstall the front panel line up the keeper screws behind the panel and firmly pull downwards
7. Reinstall the Phillips head screws at the top corners.

*Note: Air filters are not recommended as they restrict the flow of cooling air.*

Remove Screws



Push Panel Up to Release From Screw Heads Behind Panel

Condenser Surface



## METHODS FOR CLEANING STAINLESS STEEL

| Cleaning Needed                                                                                           | Cleaning Agent                                                                                                                                                                                                                                                                                                                                                                              | Method of Application                                                                                                                                                                                                                                                                                             | Affect on Finish                                                                                                                        |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Smears and fingerprints                                                                                   | Areal 20, Lac-O-Nu, Lumin Wash<br>O'Cedar Cream Polish, Stainless<br>Shine.                                                                                                                                                                                                                                                                                                                 | Rub with cloth as directed<br>on the package.                                                                                                                                                                                                                                                                     | Satisfactory for use on all<br>finishes.<br>Provides barrier film to<br>minimize prints.                                                |
| Stubborn Spots and<br>Stains, Baked-On<br>Splatter, and Other<br>Light Discolorations                     | Allchem Concentrated Cleaner.                                                                                                                                                                                                                                                                                                                                                               | Apply with damp sponge or<br>cloth.<br>Rub with damp cloth.                                                                                                                                                                                                                                                       | Use in direction of polish lines<br>on No. 4 (polished) finish. May<br>scratch No.<br>2 (mill) and Nos. 7 and 8<br>(polished) finishes. |
|                                                                                                           | Samae, Twinkle or Cameo Copper<br>Cleaner                                                                                                                                                                                                                                                                                                                                                   | Rub with damp cloth.                                                                                                                                                                                                                                                                                              |                                                                                                                                         |
|                                                                                                           | Grade FFF Italian pumice, whiting,<br>or talc.                                                                                                                                                                                                                                                                                                                                              | Rub with dry cloth.                                                                                                                                                                                                                                                                                               |                                                                                                                                         |
|                                                                                                           | Liquid NuSteel<br>Paste NuSteel or DuBois Temp.<br>Copper's Stainless Steel Cleaner<br>Revere Stainless Cleaner<br>Household cleansers, such as<br>Old Dutch, Lighthouse, Sunbrite,<br>Wyandotte, Bab-O, Gold Dust,<br>Sapolio, Bon Ami, Ajax, or Comet<br>Grade F Italian Pumice, Steel<br>Bright, Lumin Cleaner, Zud,<br>Restore, Sta-Clean, or Highlite.<br>Penny-Brite or Copper-Brite. | Use small amount of cleaner.<br>Rub with dry cloth using a<br>small amount of cleaner.<br>Apply with damp sponge or<br>cloth.<br>Rub with a damp cloth. May<br>contain chlorine bleaches.<br>Rinse<br>thoroughly after use.<br>Rub with a damp cloth.<br>Rub with a dry cloth using a<br>small amount of cleaner. |                                                                                                                                         |
| Heat tint or<br>discoloration                                                                             | Penny-Brite or Copper-Brite.<br>Past NuSteel, DuBois Temp,<br>or Tarnite. Revere Stainless Steel<br>Cleaner. Allen Polish, Steel Bright,<br>Tenacious Deposits,<br>Rusty Discolorations,<br>Industrial<br>Atmospheric Stains Wyandotte,<br>Bab-O or Zud.                                                                                                                                    | Rub with a dry cloth.<br>Rub with a dry cloth or stain-<br>less steel wool.<br>Apply with damp sponge or<br>cloth.<br>Rub with a damp cloth.                                                                                                                                                                      |                                                                                                                                         |
| Burnt-On Foods and<br>Grease Fatty Acids,<br>Milkstone (where<br>swabbing or rubbing<br>is not practical) | Easy-Off, De-Grease-It, 4 to 6%<br>hot solution of such agents as<br>trisodium phosphate or sodium<br>tripolyphosphate or 5 to 15% caustic<br>soda solution                                                                                                                                                                                                                                 | Apply generous coating. Allow<br>to stand for 10-15 minutes.<br>Rinse.<br>Repeated application may be<br>necessary.                                                                                                                                                                                               | Excellent removal, satisfactory<br>for use on all finishes.                                                                             |
| Tenacious Deposits,<br>Rusty Discolorations,<br>Industrial<br>Atmospheric Stains                          | Oakite No. 33, Dilac Texo 12, Texo NY,<br>Flash-Klenz, Caddy Cleaner,<br>Turco Scale 4368 or Permag 57.                                                                                                                                                                                                                                                                                     | Swab and soak with clean<br>cloth.<br>Let stand 15 minutes or more<br>according to directions on<br>package, then rinse and dry.                                                                                                                                                                                  | Satisfactory for use on all<br>finishes                                                                                                 |
| Hard Water Spots<br>and Scale                                                                             | Vinegar.<br>5% oxalic acid, 5% sulfamic acid, 5 to<br>10% phosphoric acid, or Dilac, Oakite<br>No. 33, Texo 12, Texo N.Y.                                                                                                                                                                                                                                                                   | Swab or wipe with cloth. Rinse<br>with water and dry.<br>Swab or soak with cloth. Let<br>stand 10-15 minutes. Always<br>follow with neutralizer rinse,<br>and dry.                                                                                                                                                | Satisfactory for all finishes.<br>Satisfactory for all finishes.<br>Effective on tenacious deposits<br>or where scale<br>has built up.  |

## HELP

| Trouble Diagnosis for the User                           |                                                                                              |                                                                                                                          |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Malfunction                                              | Possible Cause                                                                               | Likely Solution                                                                                                          |
| No cooling - unit is silent                              | Unit not plugged in.<br>Fuse or circuit breaker tripped.<br>Power cord plug loose in outlet. | Connect to proper voltage circuit Replace fuse or reset breaker.<br>Check outlet for loose connection, replace as needed |
| Unit cools but seems to be on all the time               | Dirty condenser                                                                              | Clean condenser                                                                                                          |
| Space temperature too high                               | Dirty condenser<br>Evaporator iced over Unit in high temperature environment                 | Clean condenser Defrost evaporator<br>Reduce temperature of room                                                         |
| Space temperature too low                                | Temperature control                                                                          | Adjust or replace control                                                                                                |
| Trouble Diagnosis for the Technician                     |                                                                                              |                                                                                                                          |
| No cooling - compressor does not hum                     | Temp control stuck in open position                                                          | Replace temp control.                                                                                                    |
| No cooling - compressor hums but does not start          | Low voltage to unit.<br>Compressor starting system failure                                   | Check voltage, correct as needed. Check start relay and start capacitor. See next step.                                  |
| No cooling - compressor starts but shuts off             | Compressor start relay failure Compressor start capacitor failure                            | Replace relay. Replace capacitor.                                                                                        |
| No cooling - compressor cycles on and off                | Overheating weak overload                                                                    | Clean condenser, check fan motor and blade. Check refrigerant charge. Replace overload.                                  |
| Unit cools, but is slow to pull cabinet temperature down | Evaporator fan not turning                                                                   | Check fan(s), on multiple fan units one fan may be turning slowly and will need to be replaced.                          |
| Unit cools but turns on and off frequently               | No product in cabinet. Temperature control defective Refrigeration issue                     | Fill cabinet Replace control<br>Have system checked                                                                      |
| Makes excessive noise                                    | Tubing rattle Loose parts<br>Bent or broken fan blade Noisy fan motor                        | Check tubing for routing Check for loose components Replace fan blade<br>Replace fan motor                               |

## FOR THE SERVICE TECH - R290

Refrigeration service should only be attempted by a trained trade professional certified to work on R290 systems.

### Here are some critical service items.

This list does not qualify anyone to service the unit. It is a reminder and checklist for the service tech. Keep these in mind for **R290 service**:

- Wire nuts are **NOT** to be used when changing an electrical part.
- The switches in this product are sealed, **only exact replacements** may be used.
- The process tubes are to be used for service access.
- Cut out (with tubing cutter) refrigeration components that are to be replaced. Do **NOT** un-braze.
- Because R290 can be vented into the air during service, the venting **MUST** be in an area free from flame or spark. It must also be in a well ventilated area, with a nearby open window or door.
- A sign noting service of a system containing propane must be attached to the unit during refrigeration service.
- A combustible gas leak detector must be used to inform anyone in the area when propane is present in the air.

### Other Information:

**Evacuation:** It is critical that a refrigeration system be leak free and internally dry. A thorough evacuation with a good vacuum pump with a micron gauge attached is the only way to ensure that the system is dry and ready for a charge of refrigerant.


**Charging:** The system is critically charged and the proper type and amount **MUST** be weighed in.

**Overcharge symptoms:** Unit will cool properly but the suction line temperature will be unusually cold. Compressor run time will be longer than normal.


**Undercharge symptoms:** Long run time, poor cooling and a hot compressor dome are the main symptoms of an undercharge.



## FOR THE SERVICE TECH - WIRING DIAGRAM

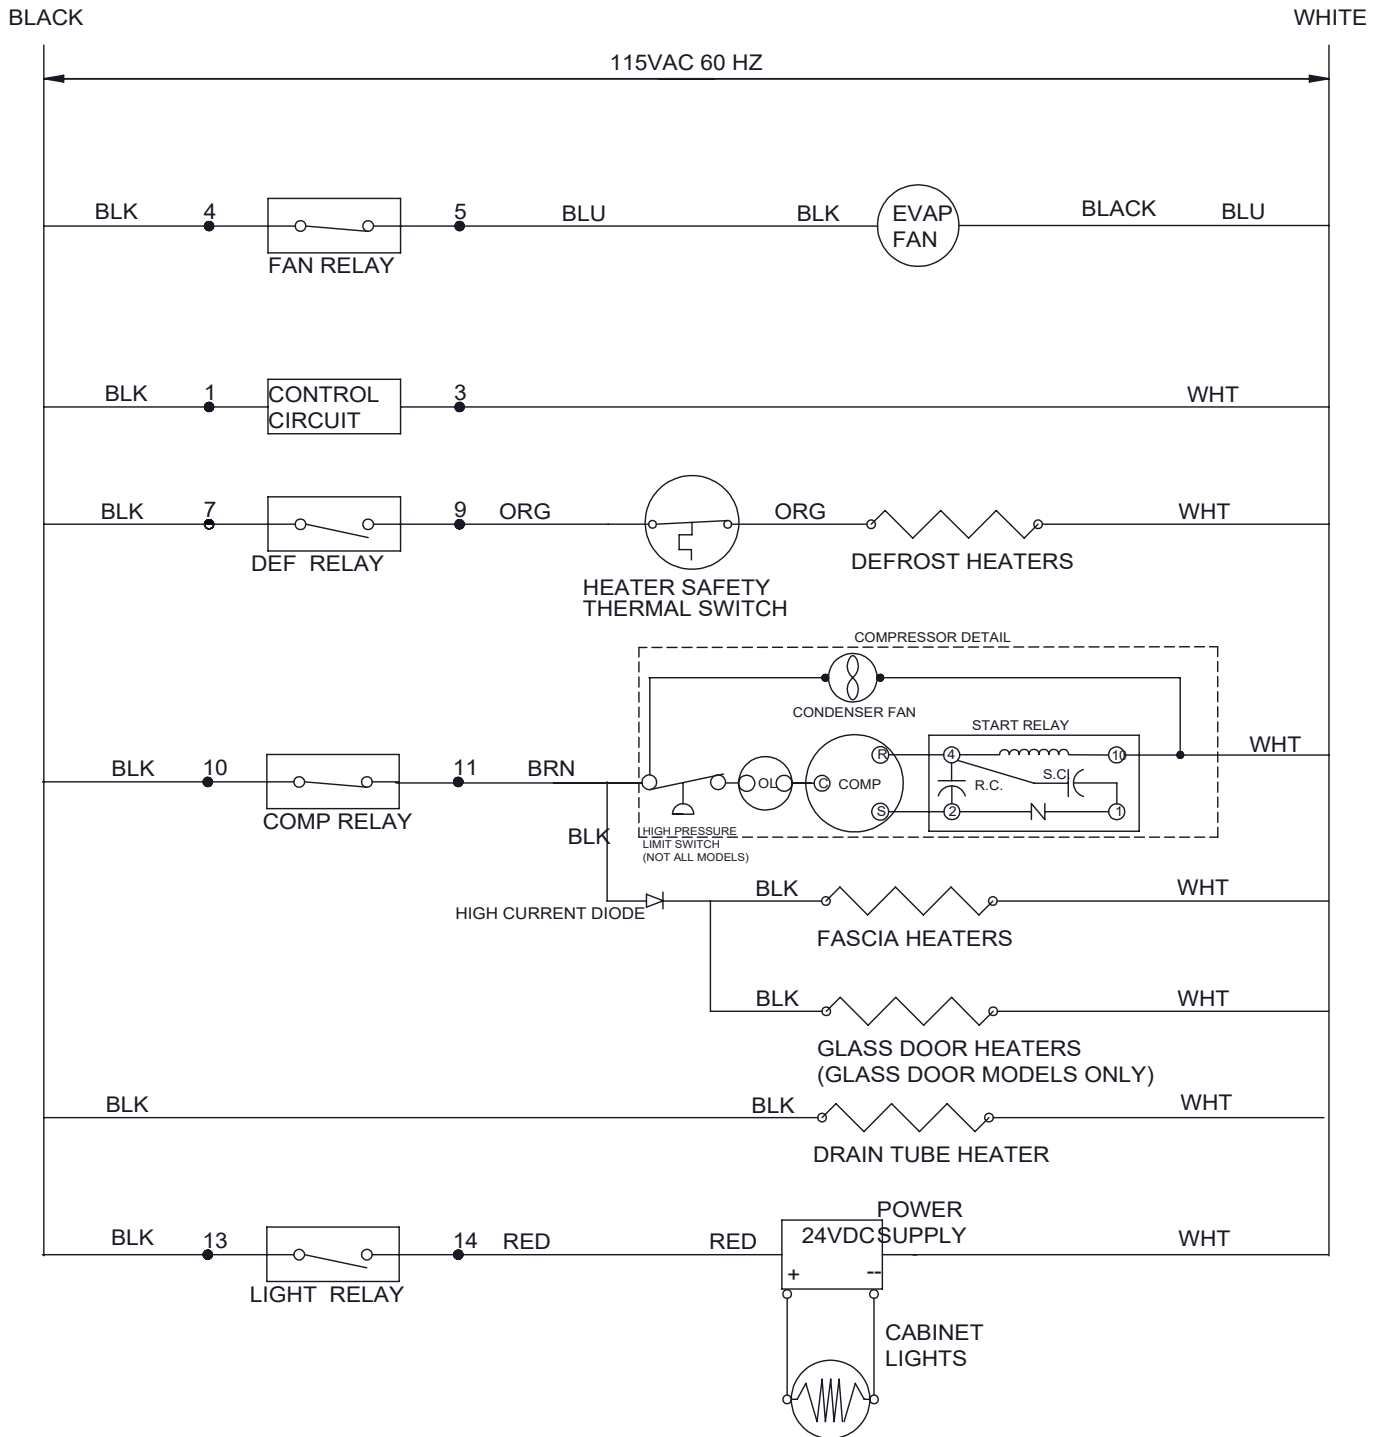


REPLACEMENT PARTS - PFD1HC-1AS PASS-THRU CABINET

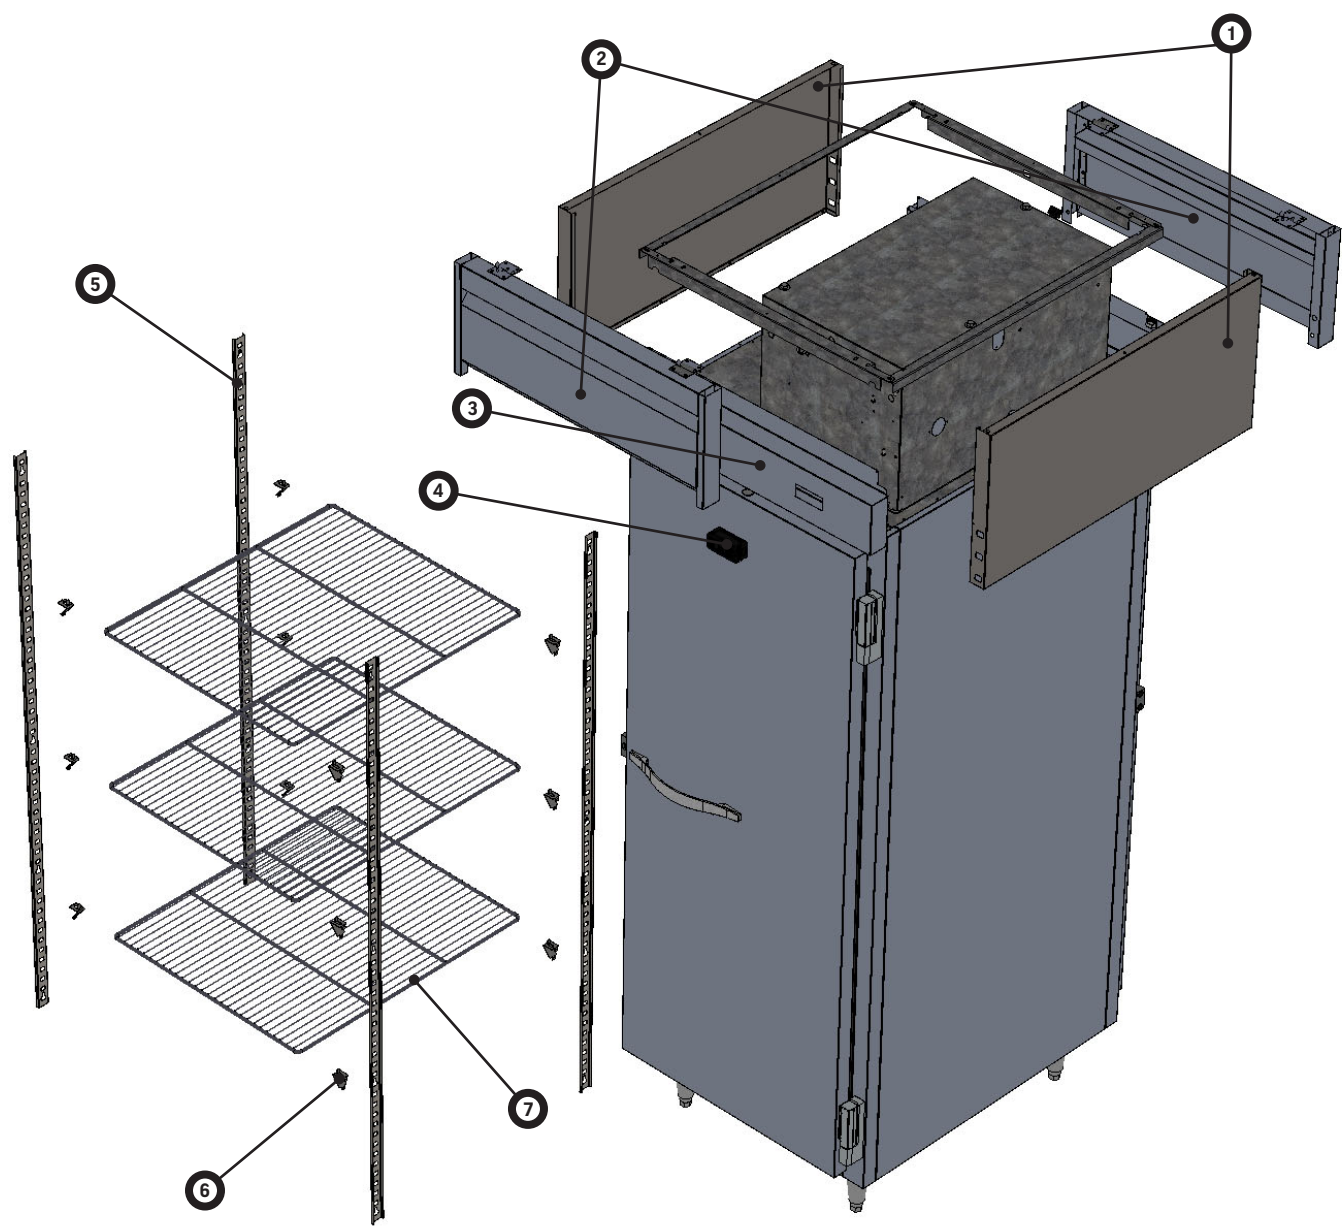


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (4)             |
| 6 |  | SHELF SUPPORT CLIPS (12) |
| 7 |  | SHELF (3)                |




REPLACEMENT PARTS - PFD1HC-1AS ASSEMBLIES

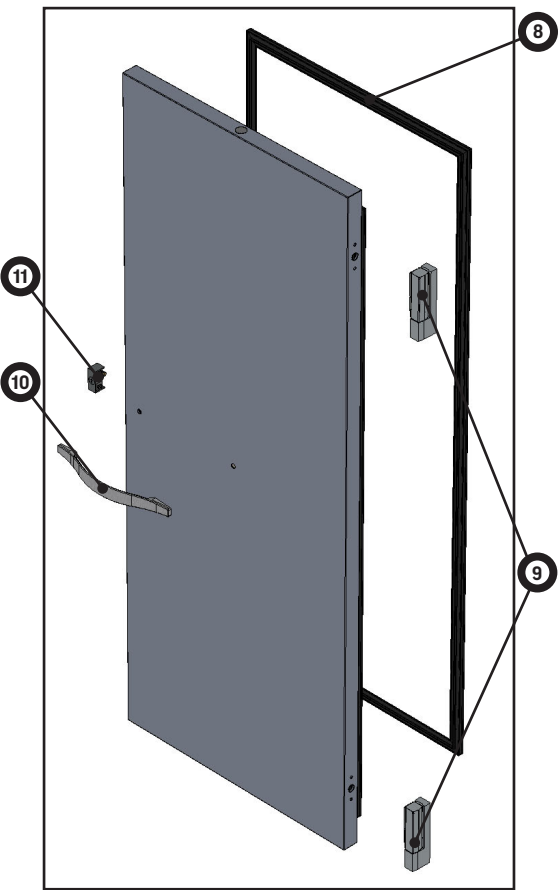

| DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
|-------------------------------------------|-------|-----------------------------------------|
| 8                                         |       | DOOR GASKET (1)                         |
| 9                                         |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                        | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                        |       | LOCK (1)                                |
| LEG KIT (PART # )                         |       |                                         |
| 12                                        | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

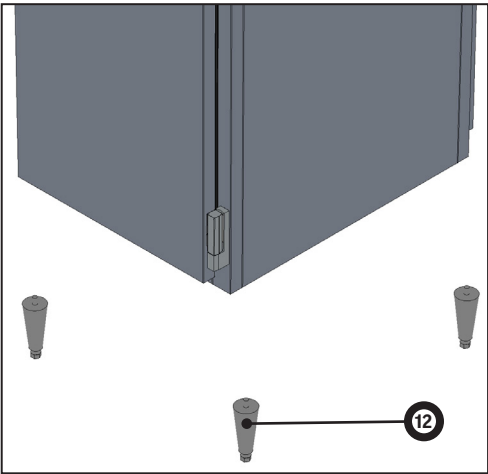


REPLACEMENT PARTS - PFD1HC-1AHS PASS-THRU CABINET

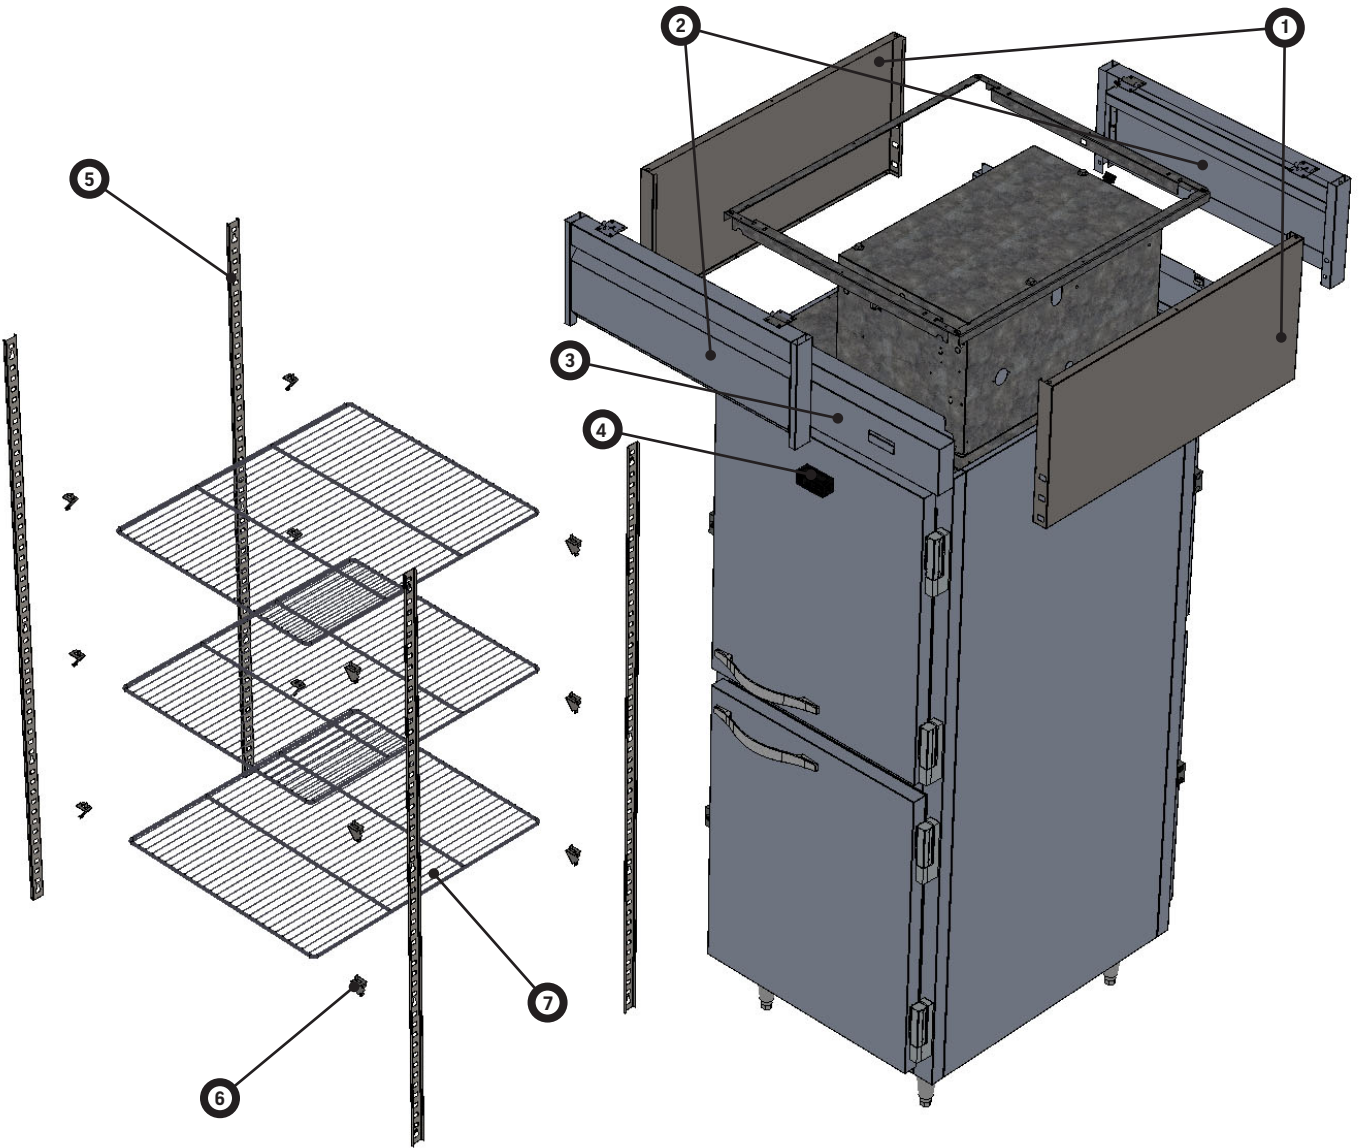


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (4)             |
| 6 |  | SHELF SUPPORT CLIPS (12) |
| 7 |  | SHELF (3)                |




REPLACEMENT PARTS - PFD1HC-1AHS ASSEMBLIES

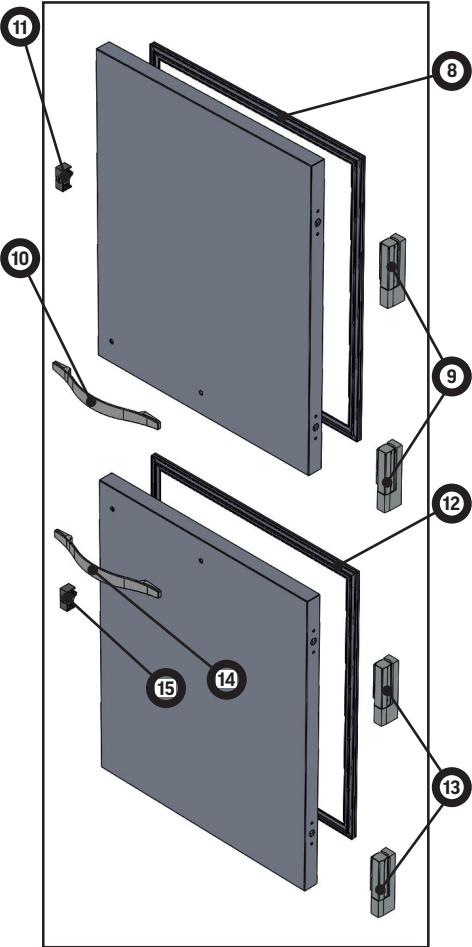

| TOP DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )    |       |                                         |
|--------------------------------------------------|-------|-----------------------------------------|
| 8                                                |       | DOOR GASKET (1)                         |
| 9                                                |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                               | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                               |       | LOCK (1)                                |
| BOTTOM DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
| 12                                               |       | DOOR GASKET (1)                         |
| 13                                               |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 14                                               | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 15                                               |       | LOCK (1)                                |
| LEG KIT (PART # )                                |       |                                         |
| 16                                               | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

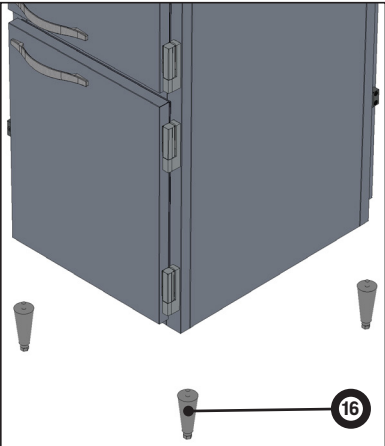


## REPLACEMENT PARTS - PFD1HC-1BG PASS-THRU CABINET

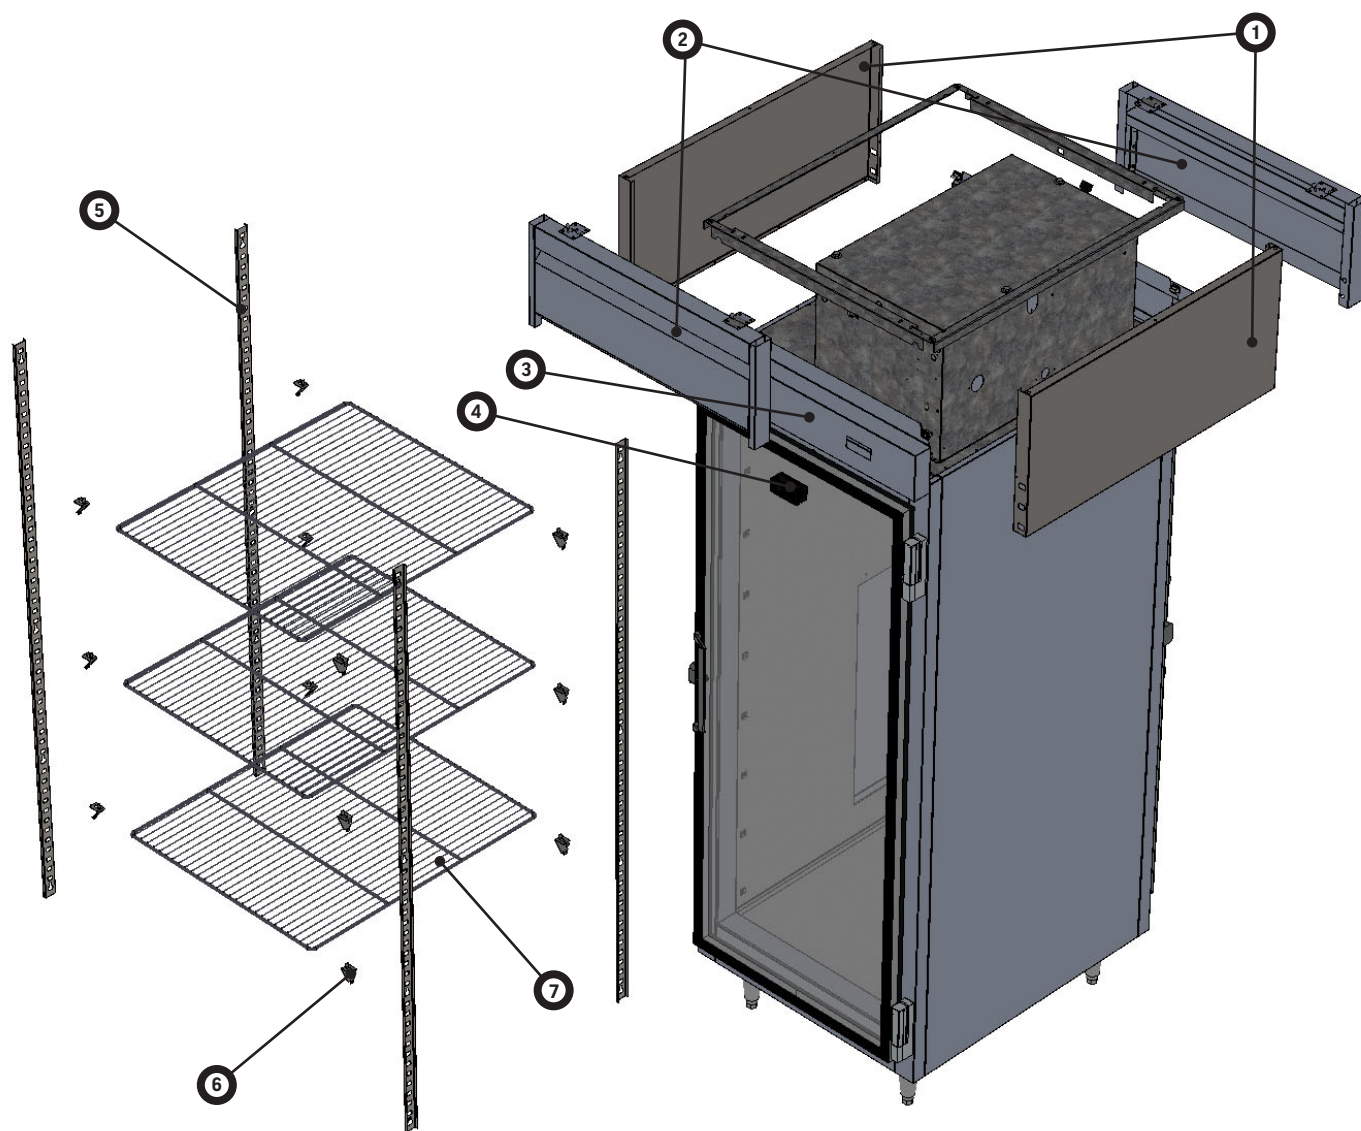


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (4)             |
| 6 |  | SHELF SUPPORT CLIPS (12) |
| 7 |  | SHELF (3)                |

REPLACEMENT PARTS - PFD1HC-1BG ASSEMBLIES

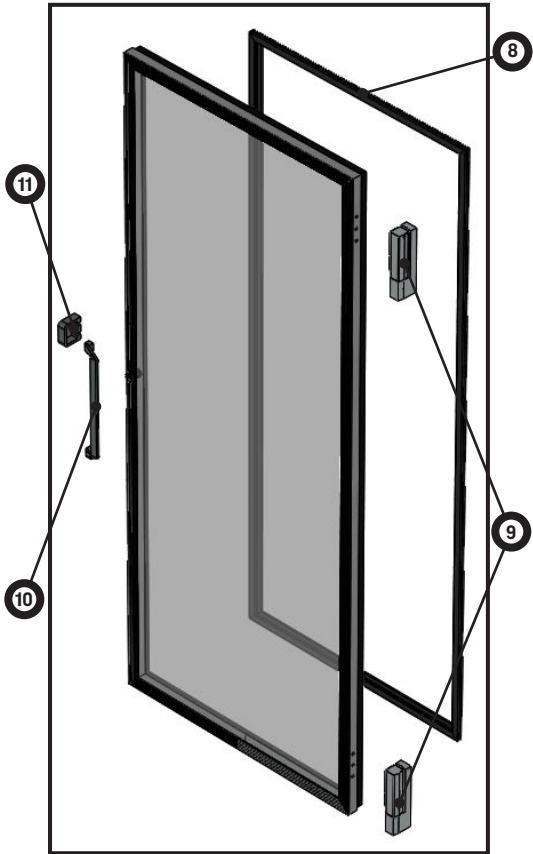


| DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
|-------------------------------------------|-------|-----------------------------------------|
| 8                                         |       | DOOR GASKET (1)                         |
| 9                                         |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                        | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                        |       | LOCK (1)                                |
| LEG KIT (PART # )                         |       |                                         |
| 12                                        | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

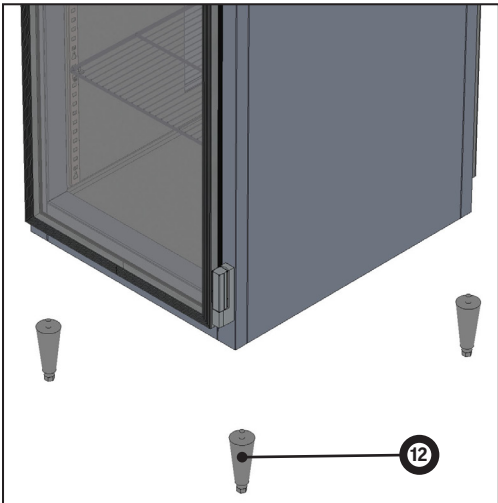




## REPLACEMENT PARTS - PFD1HC-1BHG PASS-THRU CABINET

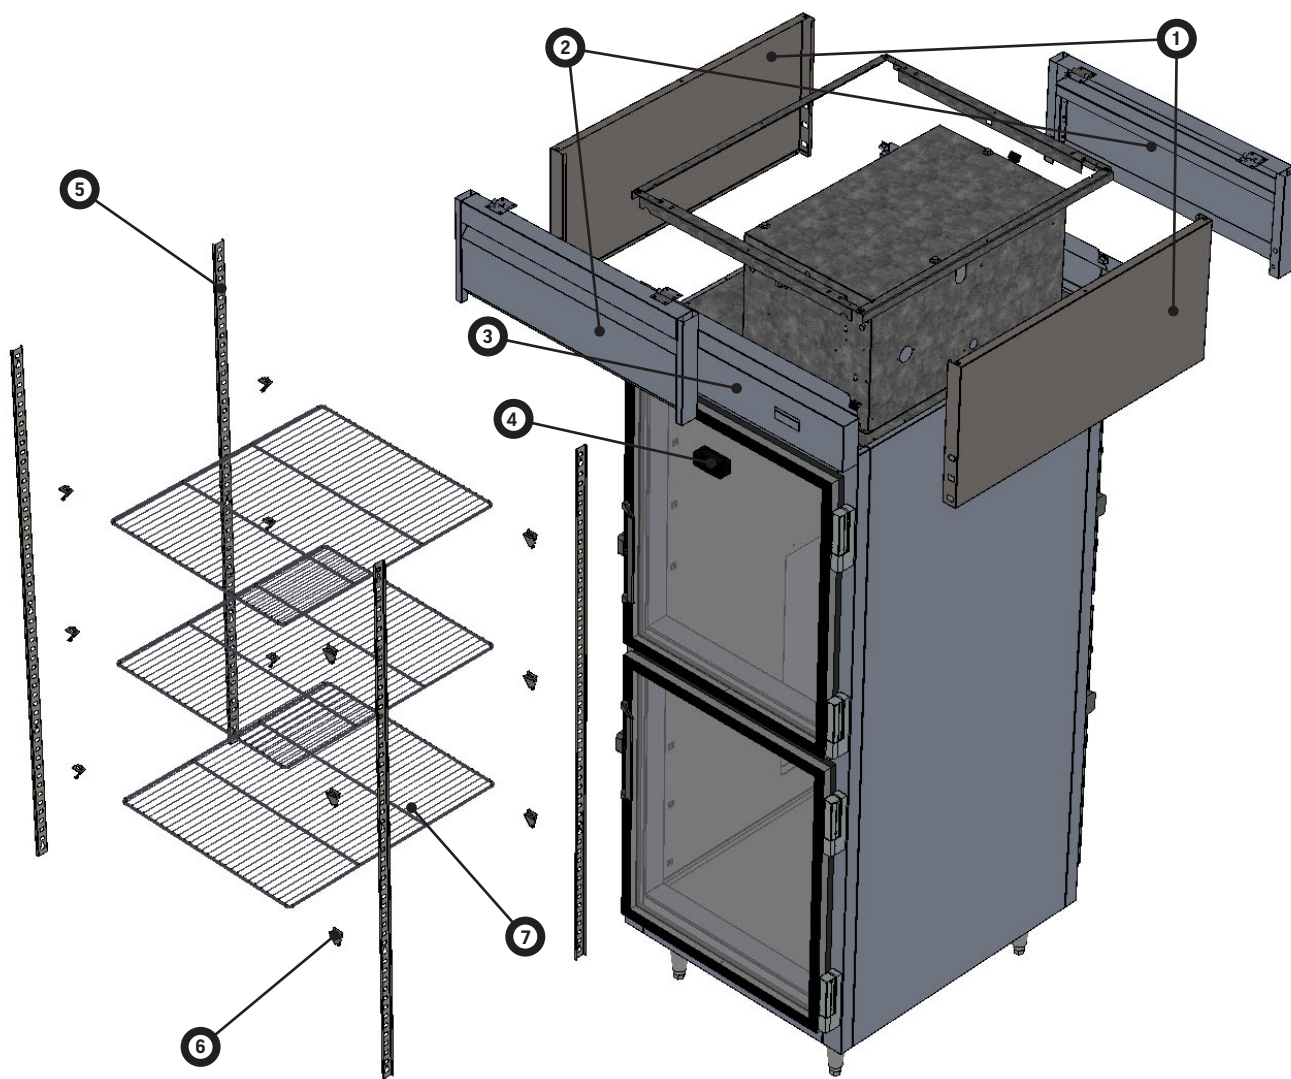


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (4)             |
| 6 |  | SHELF SUPPORT CLIPS (12) |
| 7 |  | SHELF (3)                |




REPLACEMENT PARTS - PFD1HC-1BHG ASSEMBLIES

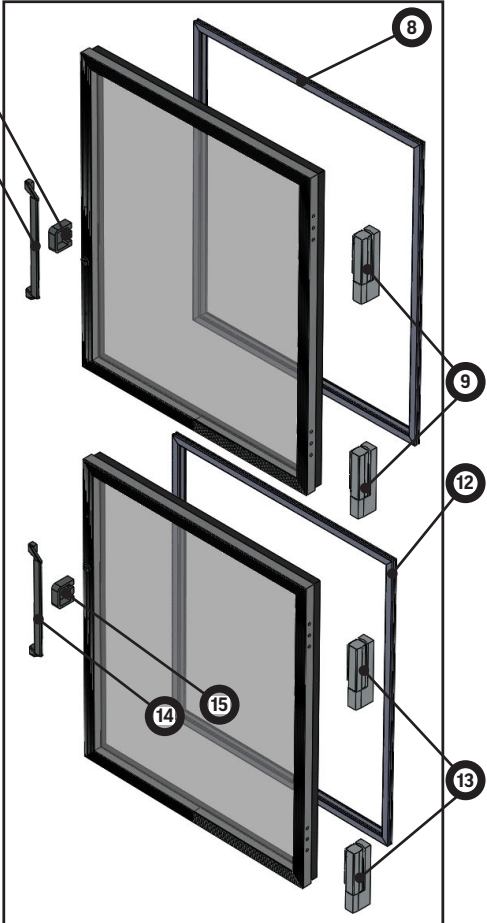

| TOP DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )  |       |                                         |
|------------------------------------------------|-------|-----------------------------------------|
| 8                                              |       | DOOR GASKET (1)                         |
| 9                                              |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                             |       | LOCK (1)                                |
| BOTTOM DOOR ASSEMBLY 1 FRONT, 1 REAR (PART # ) |       |                                         |
| 12                                             |       | DOOR GASKET (1)                         |
| 13                                             |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 14                                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 15                                             |       | LOCK (1)                                |
| LEG KIT (PART # )                              |       |                                         |
| 16                                             | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

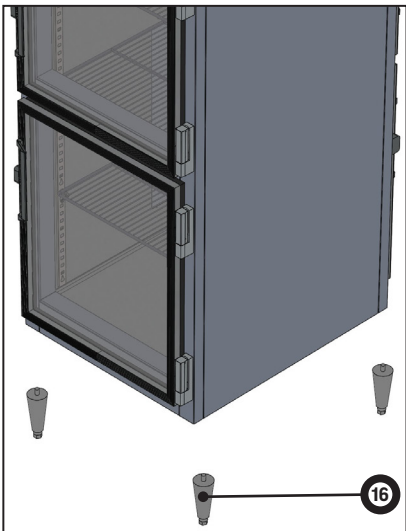


## REPLACEMENT PARTS - PFD2HC-1AS PASS-THRU CABINET

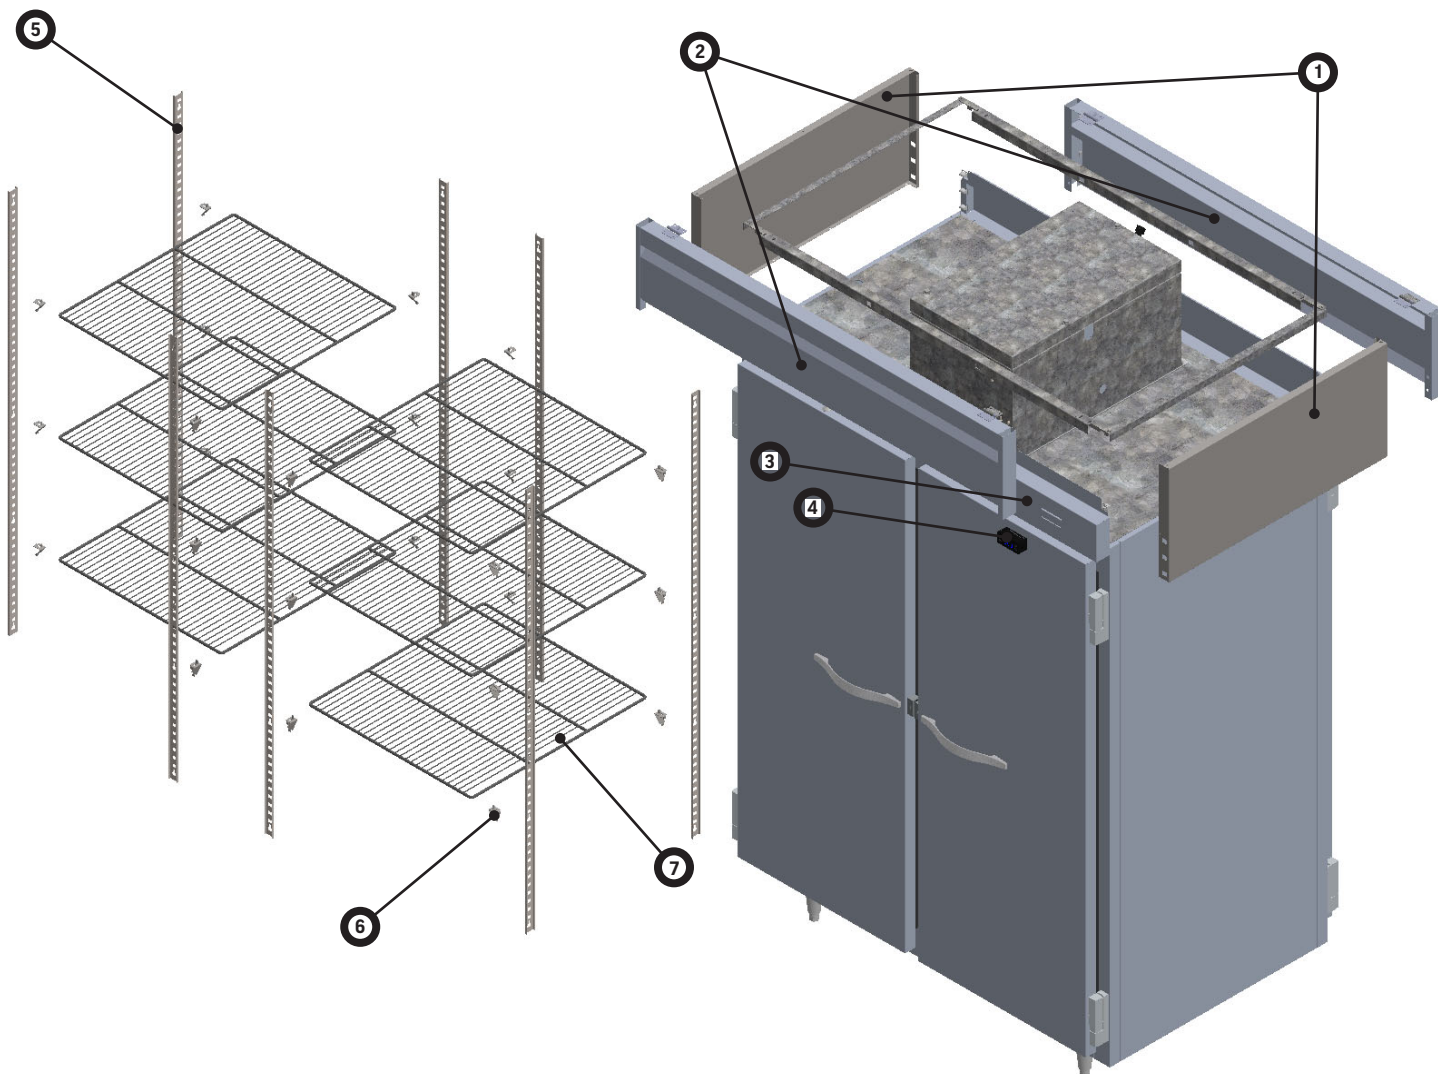


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (8)             |
| 6 |  | SHELF SUPPORT CLIPS (24) |
| 7 |  | SHELF (6)                |


REPLACEMENT PARTS - PFD2HC-1AS ASSEMBLIES

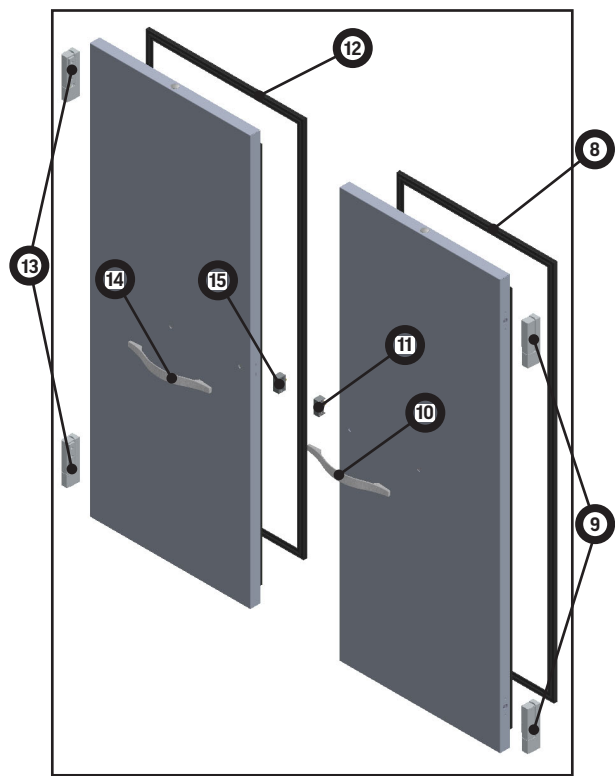

| RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
|-------------------------------------------------|-------|-----------------------------------------|
| 8                                               |       | DOOR GASKET (1)                         |
| 9                                               |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                              | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                              |       | LOCK (1)                                |
| LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )  |       |                                         |
| 12                                              |       | DOOR GASKET (1)                         |
| 13                                              |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 14                                              | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 15                                              |       | LOCK (1)                                |
| LEG KIT (PART # )                               |       |                                         |
| 16                                              | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

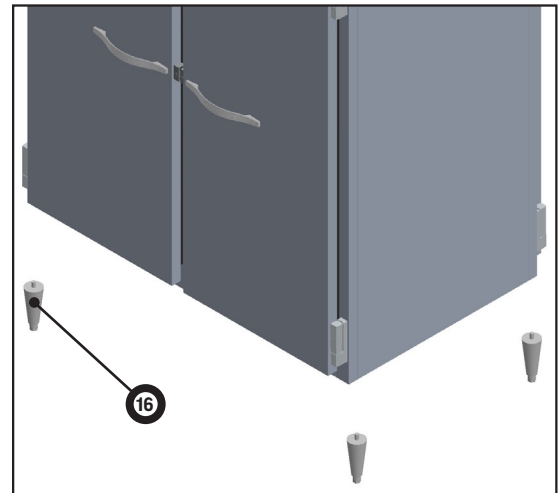


## REPLACEMENT PARTS - PFD2HC-1AHS PASS-THRU CABINET

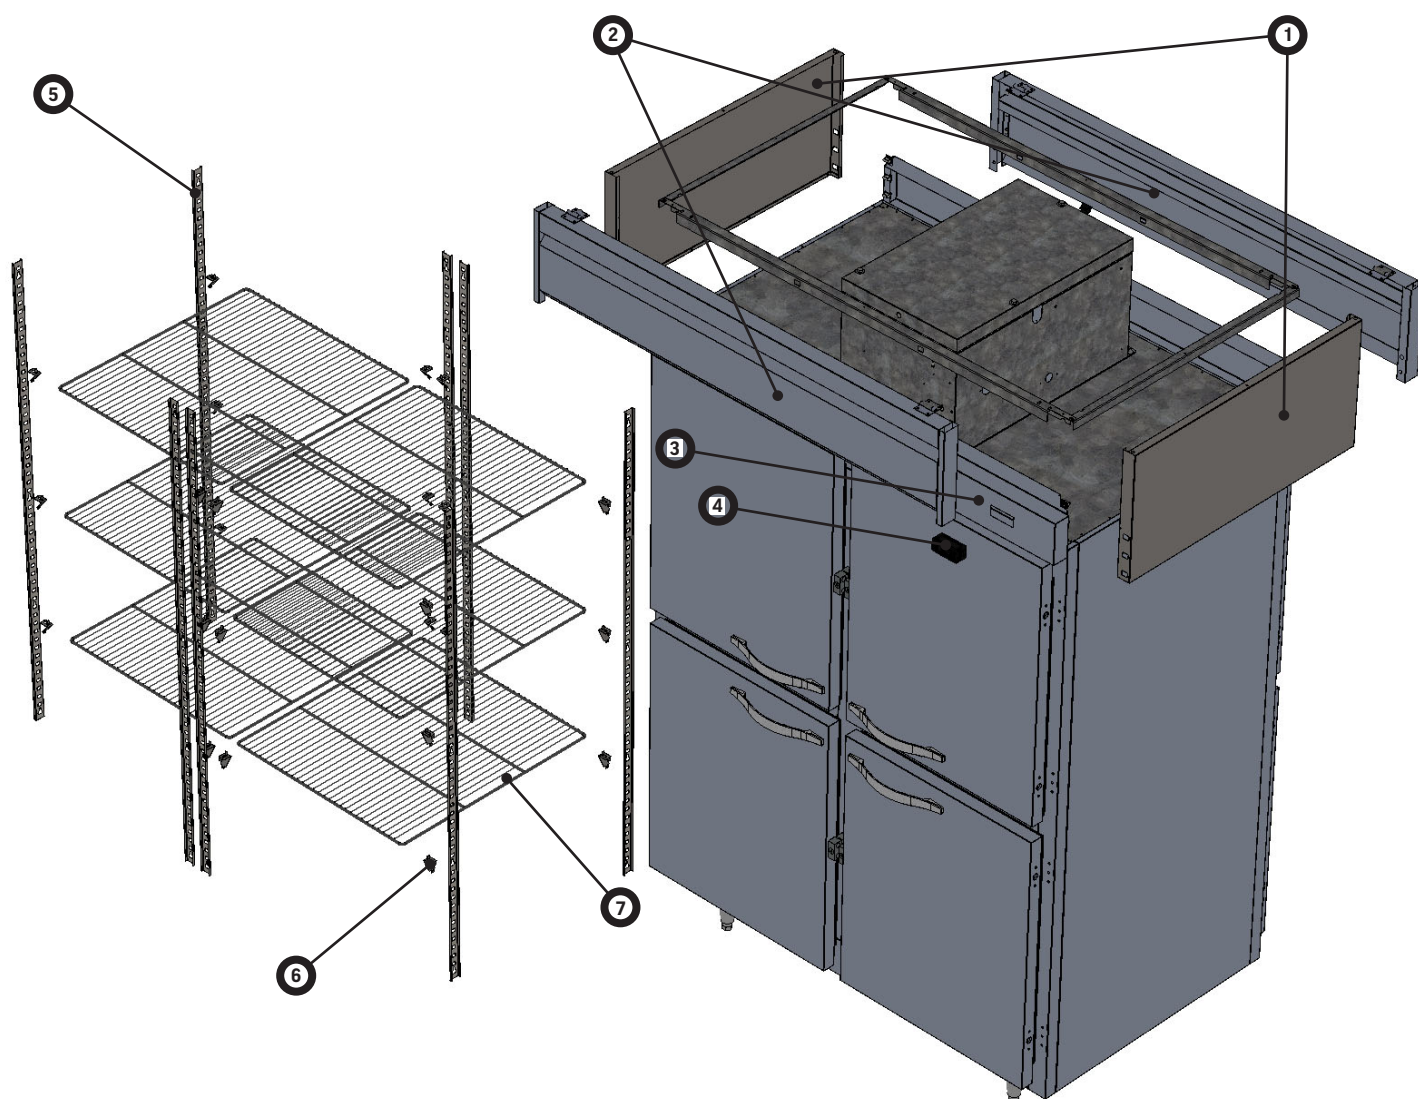


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (8)             |
| 6 |  | SHELF SUPPORT CLIPS (24) |
| 7 |  | SHELF (6)                |

REPLACEMENT PARTS - PFD2HC-1AHS ASSEMBLIES

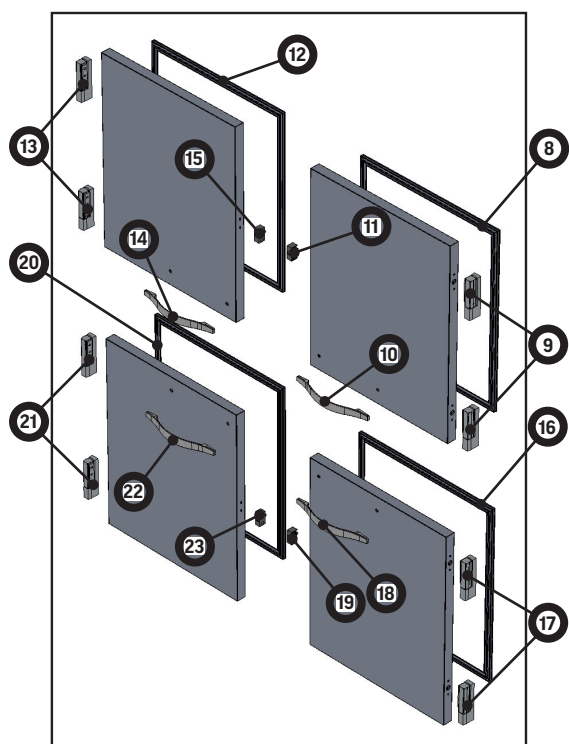


| TOP RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )    |       |                                         |
|--------------------------------------------------------|-------|-----------------------------------------|
| 8                                                      |       | DOOR GASKET (1)                         |
| 9                                                      |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 11                                                     |       | LOCK (1)                                |
| TOP LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )     |       |                                         |
| 12                                                     |       | DOOR GASKET (1)                         |
| 13                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 14                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 15                                                     |       | LOCK (1)                                |
| BOTTOM RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
| 16                                                     |       | DOOR GASKET (1)                         |
| 17                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 18                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 19                                                     |       | LOCK (1)                                |
| BOTTOM LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )  |       |                                         |
| 20                                                     |       | DOOR GASKET (1)                         |
| 21                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 22                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 23                                                     |       | LOCK (1)                                |
| LEG KIT (PART # )                                      |       |                                         |
| 24                                                     | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

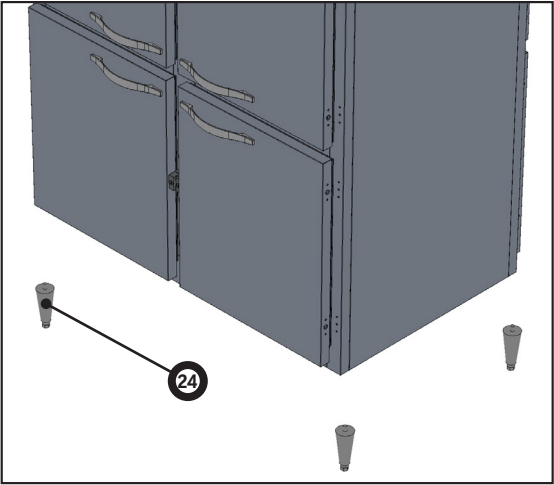




## REPLACEMENT PARTS - PFD2HC-1BG PASS-THRU CABINET

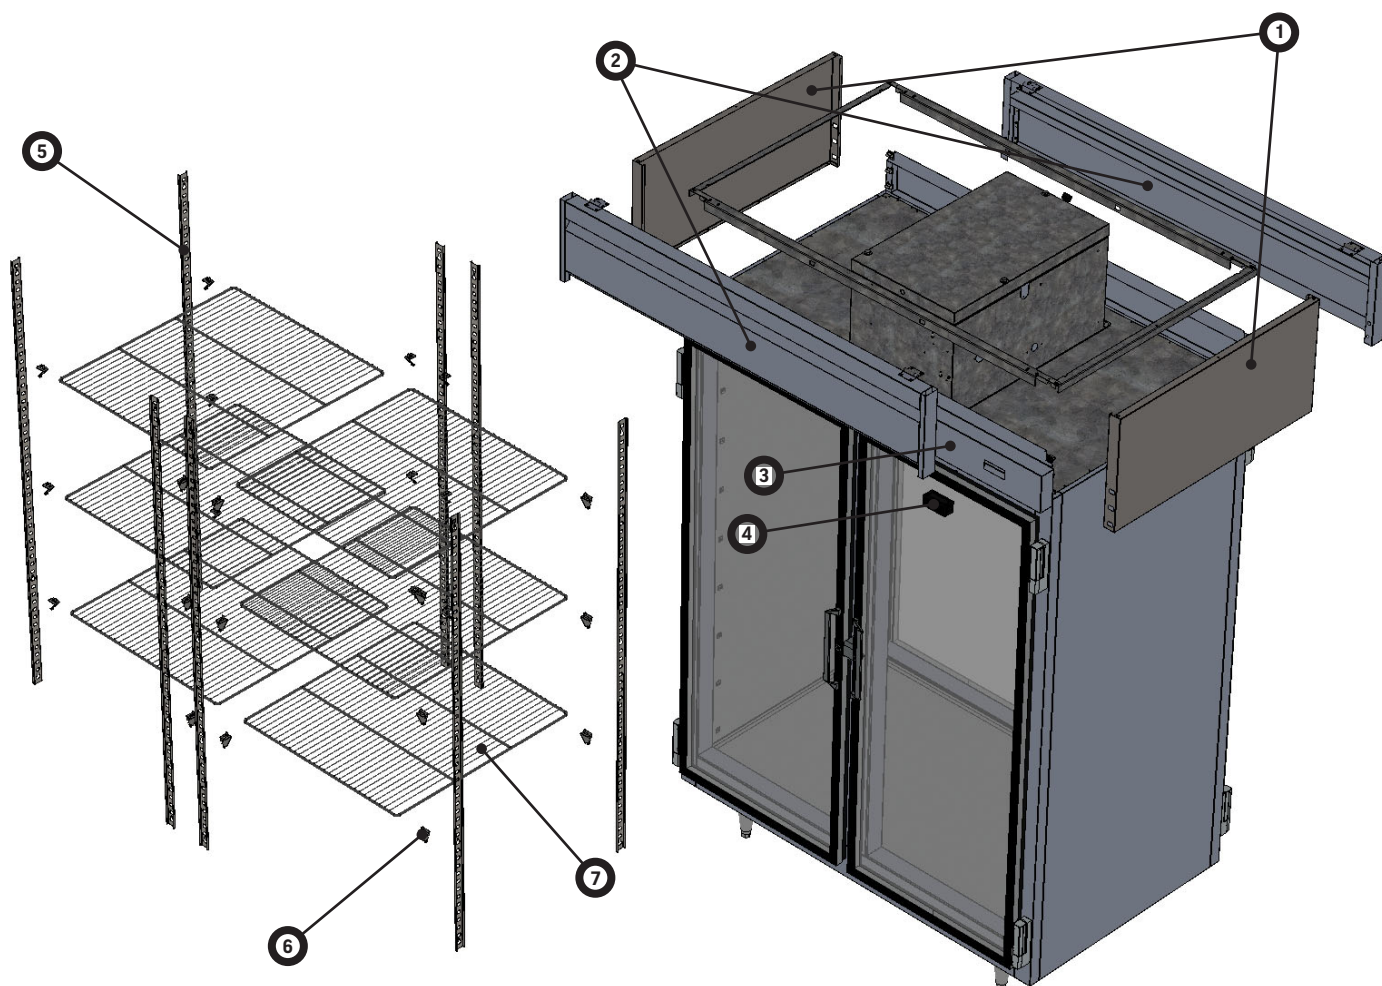


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (8)             |
| 6 |  | SHELF SUPPORT CLIPS (24) |
| 7 |  | SHELF (6)                |


REPLACEMENT PARTS - PFD2HC-1BG ASSEMBLIES

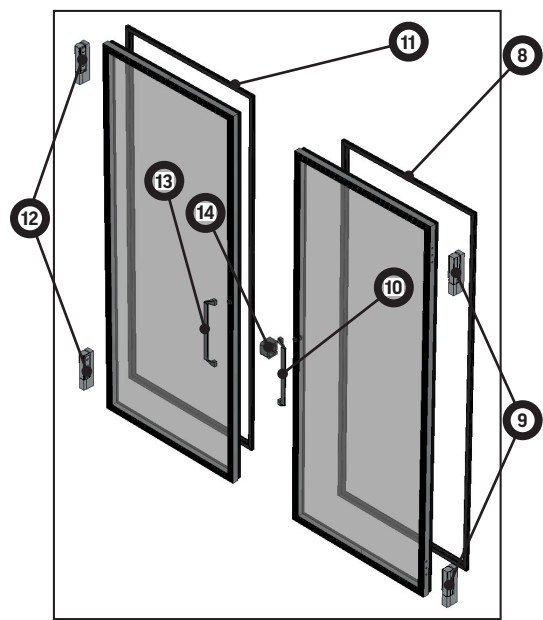

| RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
|-------------------------------------------------|-------|-----------------------------------------|
| 8                                               |       | DOOR GASKET (1)                         |
| 9                                               |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                              | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )  |       |                                         |
| 11                                              |       | DOOR GASKET (1)                         |
| 12                                              |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 13                                              | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 14                                              |       | DOUBLE LOCK (1)                         |
| LEG KIT (PART # )                               |       |                                         |
| 15                                              | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

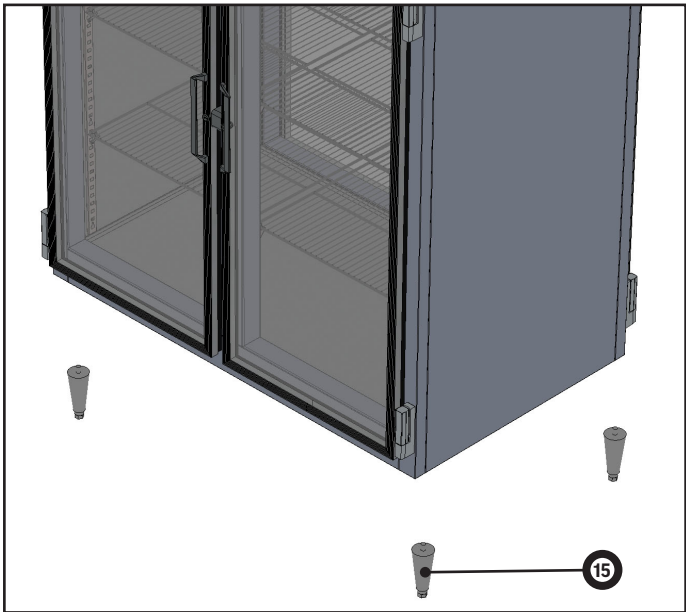


## REPLACEMENT PARTS - PFD2HC-1BHG PASS-THRU CABINET

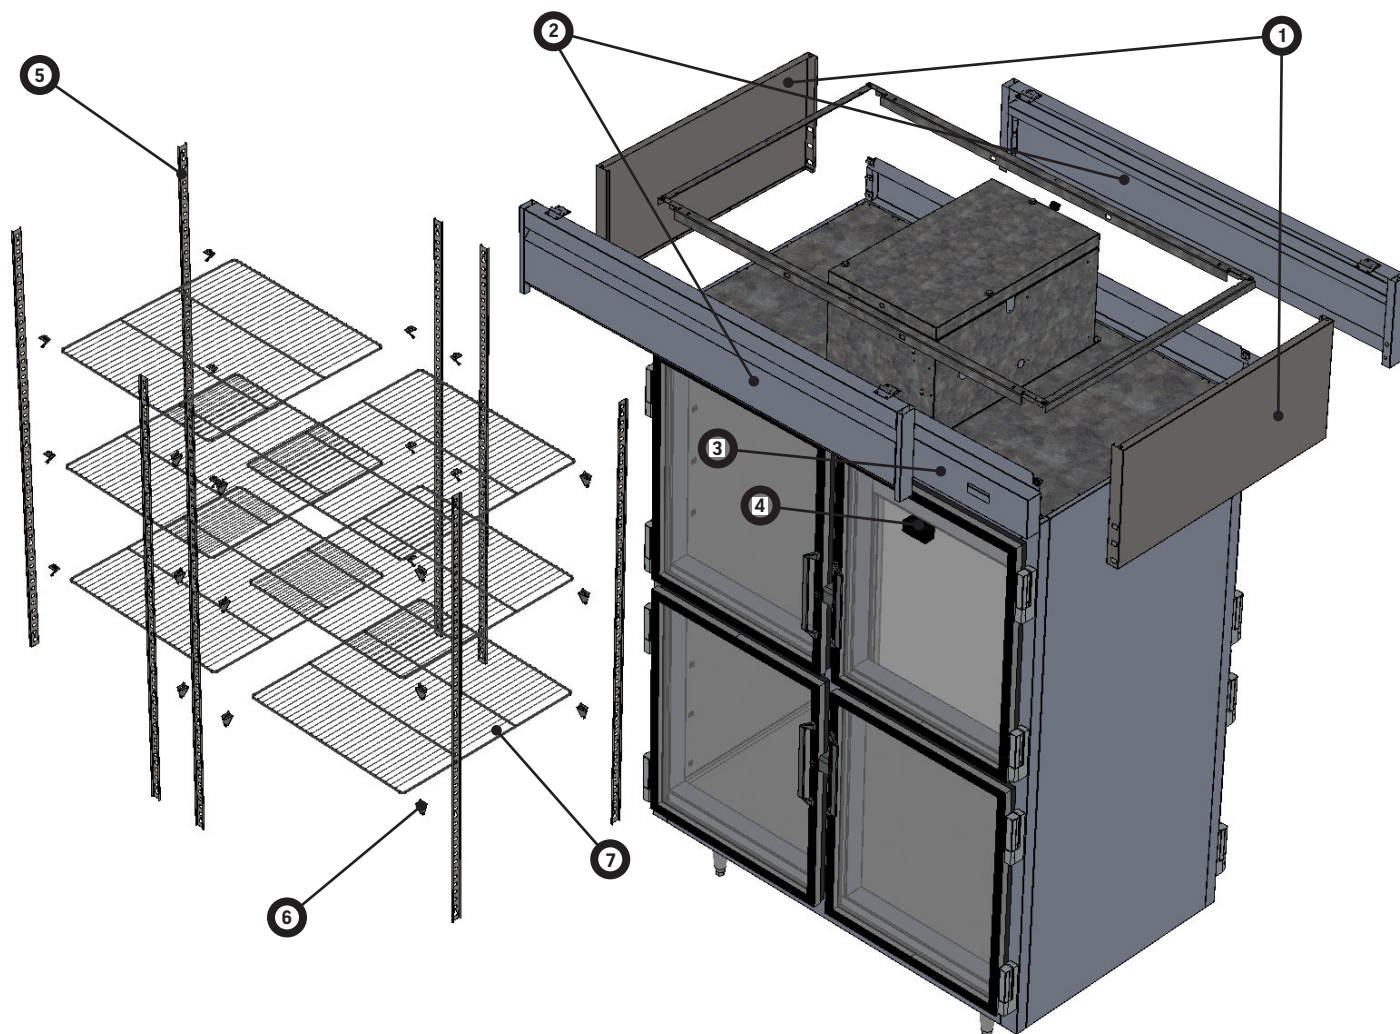


|   |  |                          |
|---|--|--------------------------|
| 1 |  | SHELL END TOP (2)        |
| 2 |  | TOP GRILLE ASSY (2)      |
| 3 |  | INSTRUMENT PANEL (1)     |
| 4 |  | DANFOSS CONTROLLER (1)   |
| 5 |  | PILASTER (8)             |
| 6 |  | SHELF SUPPORT CLIPS (24) |
| 7 |  | SHELF (6)                |




REPLACEMENT PARTS - PFD2HC-1BHG ASSEMBLIES

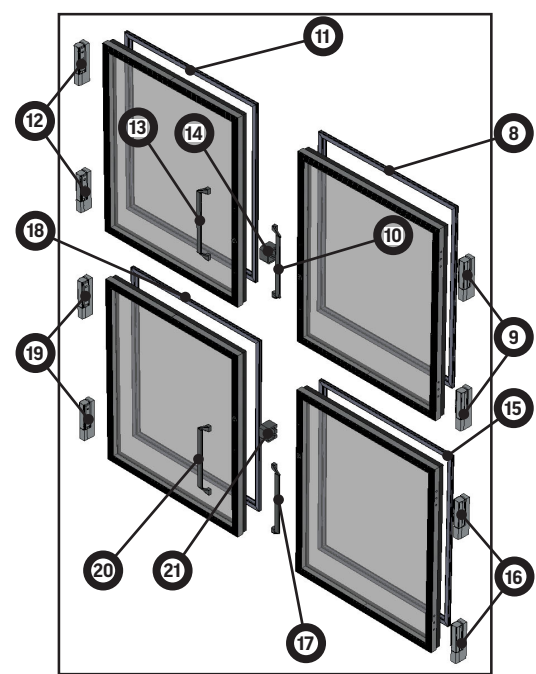

|                                                        |       |                                         |
|--------------------------------------------------------|-------|-----------------------------------------|
| TOP RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )    |       |                                         |
| 8                                                      |       | DOOR GASKET (1)                         |
| 9                                                      |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 10                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| TOP LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )     |       |                                         |
| 11                                                     |       | DOOR GASKET (1)                         |
| 12                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 13                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 14                                                     |       | LOCK (1)                                |
| BOTTOM RIGHT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # ) |       |                                         |
| 15                                                     |       | DOOR GASKET (1)                         |
| 16                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 17                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| BOTTOM LEFT DOOR ASSEMBLY - 1 FRONT, 1 REAR (PART # )  |       |                                         |
| 18                                                     |       | DOOR GASKET (1)                         |
| 19                                                     |       | RETAIL HINGE KIT - LIFTOFF (1)          |
| 20                                                     | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1)   |
| 21                                                     |       | LOCK (1)                                |
| LEG KIT (PART # )                                      |       |                                         |
| 22                                                     | ----- | 6" STEEL LEGS - NOT SOLD SEPARATELY (4) |

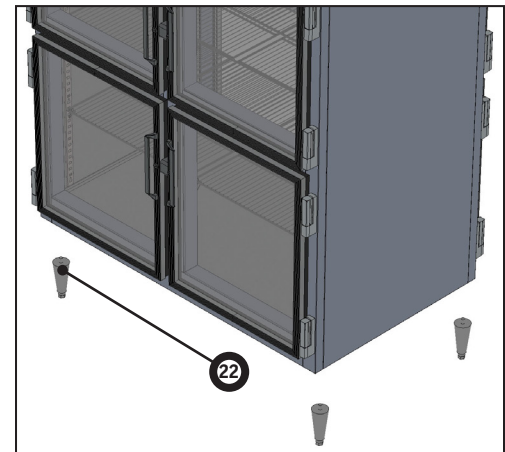



REPLACEMENT PARTS - PFI1HC-1AS ROLL IN UNITS

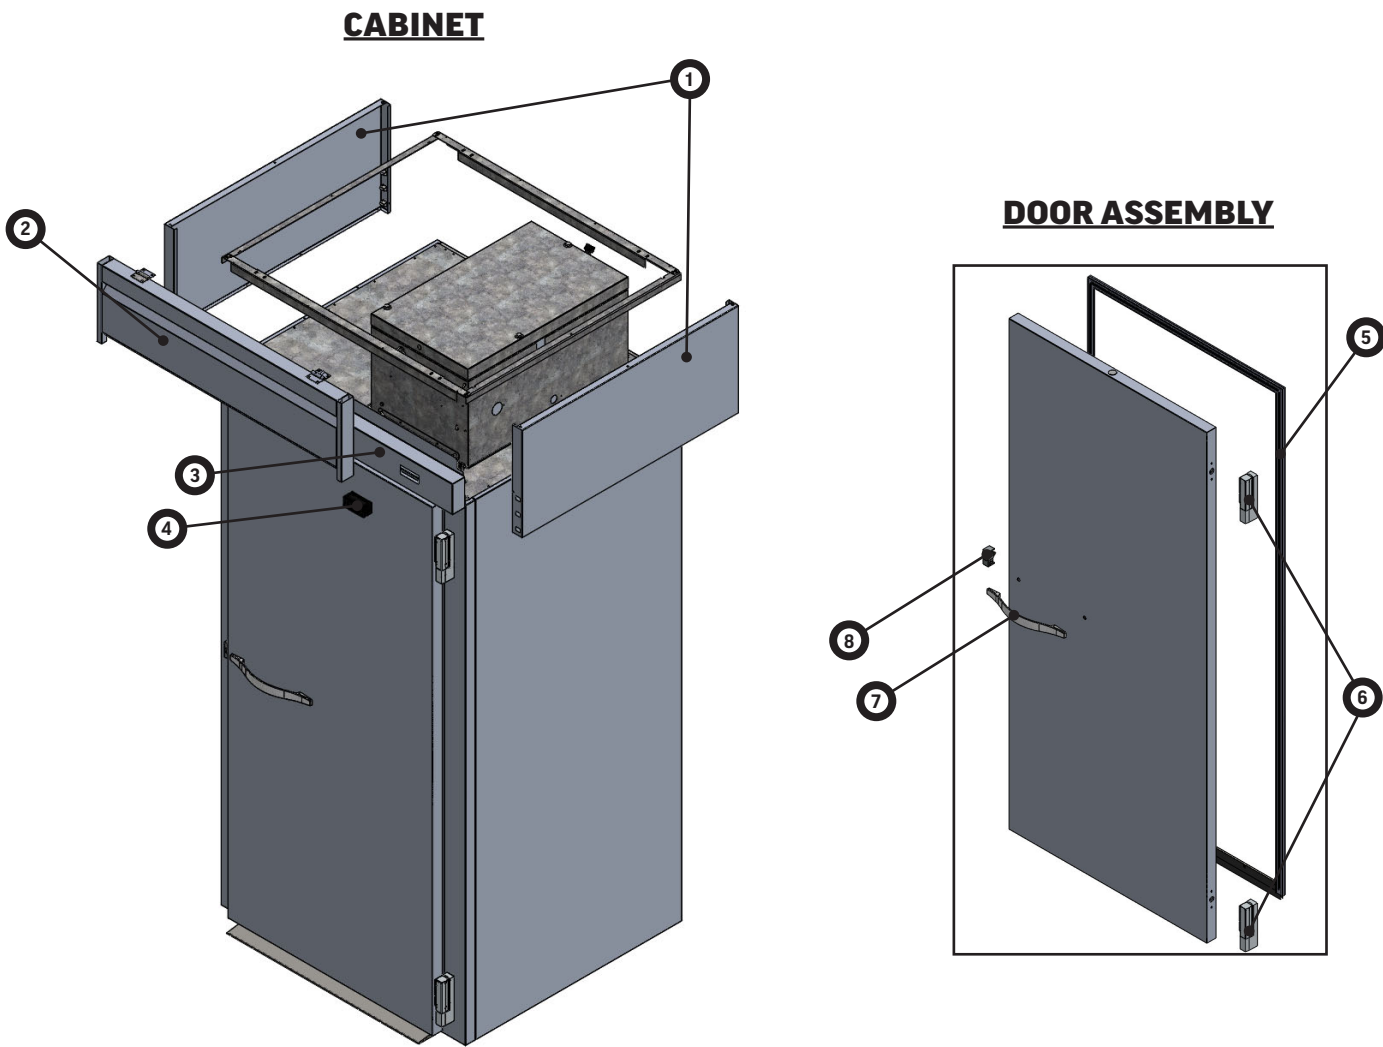

|                   |       |                                       |
|-------------------|-------|---------------------------------------|
| 1                 |       | SHELL END TOP (2)                     |
| 2                 |       | TOP GRILLE ASSY (1)                   |
| 3                 |       | INSTRUMENT PANEL (1)                  |
| 4                 |       | DANFOSS CONTROLLER (1)                |
| DOOR ASSEMBLY (1) |       |                                       |
| 5                 |       | DOOR GASKET (1)                       |
| 6                 |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                 | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                 |       | LOCK (1)                              |




REPLACEMENT PARTS - PFI2HC-1AS ROLL IN UNITS

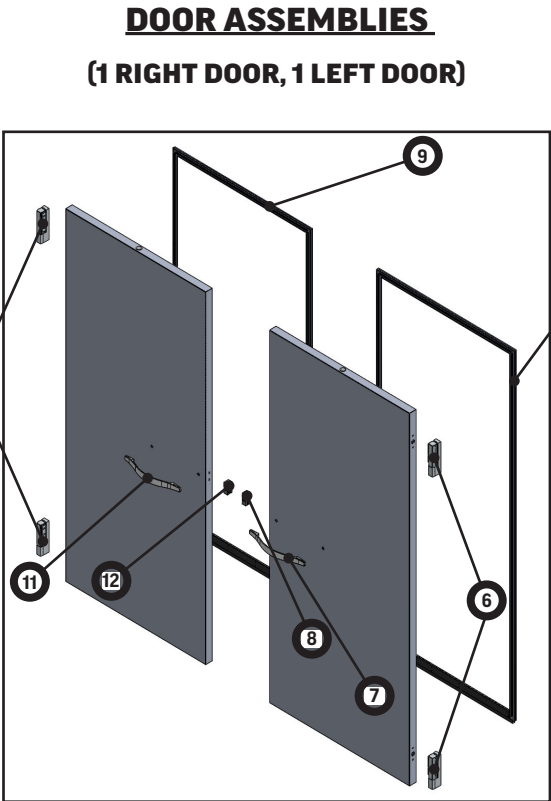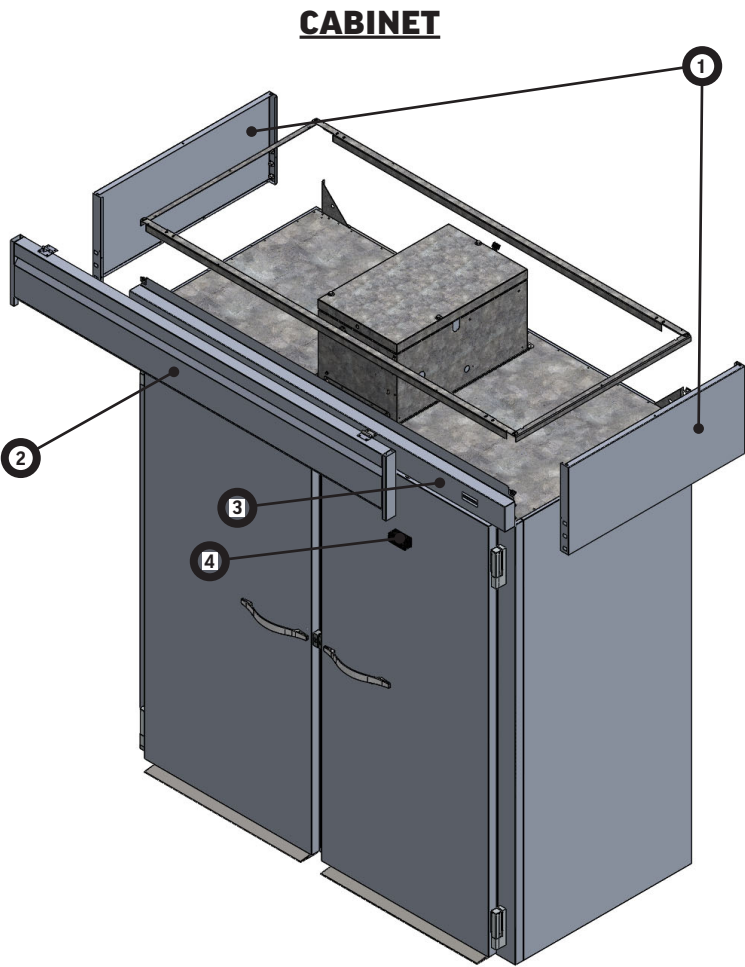

|                               |       |                                       |
|-------------------------------|-------|---------------------------------------|
| 1                             |       | SHELL END TOP (2)                     |
| 2                             |       | TOP GRILLE ASSY (1)                   |
| 3                             |       | INSTRUMENT PANEL (1)                  |
| 4                             |       | DANFOSS CONTROLLER (1)                |
| RIGHT DOOR ASSEMBLY (PART # ) |       |                                       |
| 5                             |       | DOOR GASKET (1)                       |
| 6                             |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                             |       | LOCK (1)                              |
| LEFT DOOR ASSEMBLY (PART # )  |       |                                       |
| 9                             |       | DOOR GASKET (1)                       |
| 10                            |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 11                            | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 12                            |       | LOCK (1)                              |




REPLACEMENT PARTS - PFI1XTHC-1AS EXTRA TALL ROLL IN UNITS

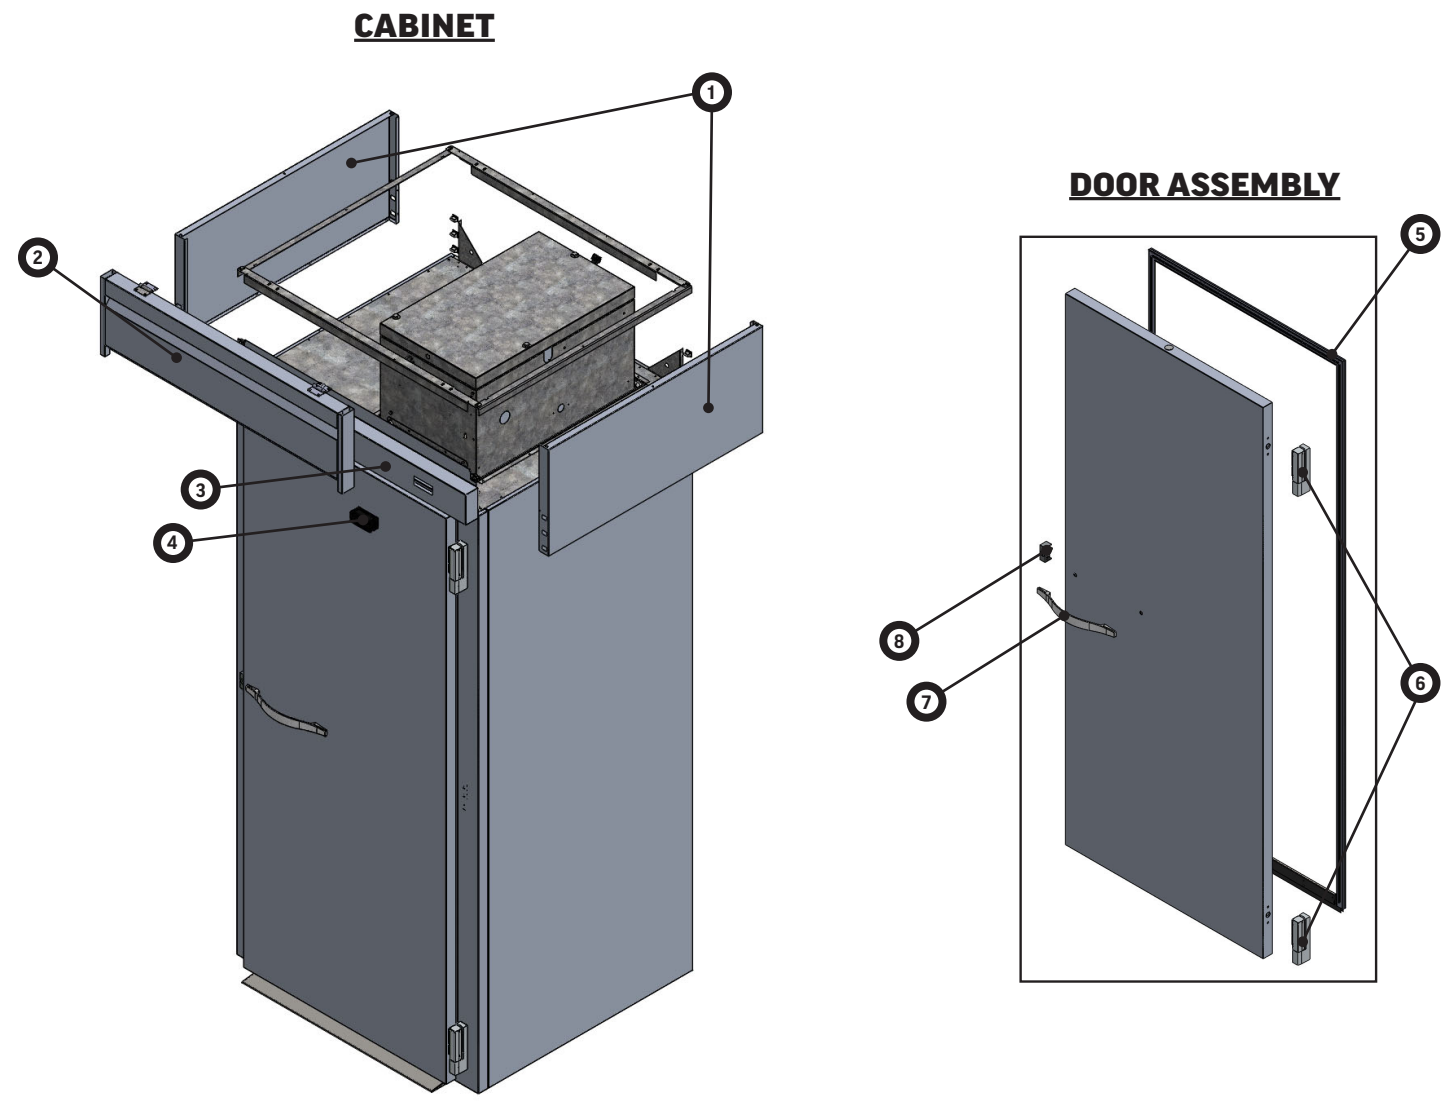

|                   |       |                                       |
|-------------------|-------|---------------------------------------|
| 1                 |       | SHELL END TOP (2)                     |
| 2                 |       | TOP GRILLE ASSY (1)                   |
| 3                 |       | INSTRUMENT PANEL (1)                  |
| 4                 |       | DANFOSS CONTROLLER (1)                |
| DOOR ASSEMBLY (1) |       |                                       |
| 5                 |       | DOOR GASKET (1)                       |
| 6                 |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                 | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                 |       | LOCK (1)                              |





REPLACEMENT PARTS - PFI2XTHC-1AS EXTRA TALL ROLL IN UNITS

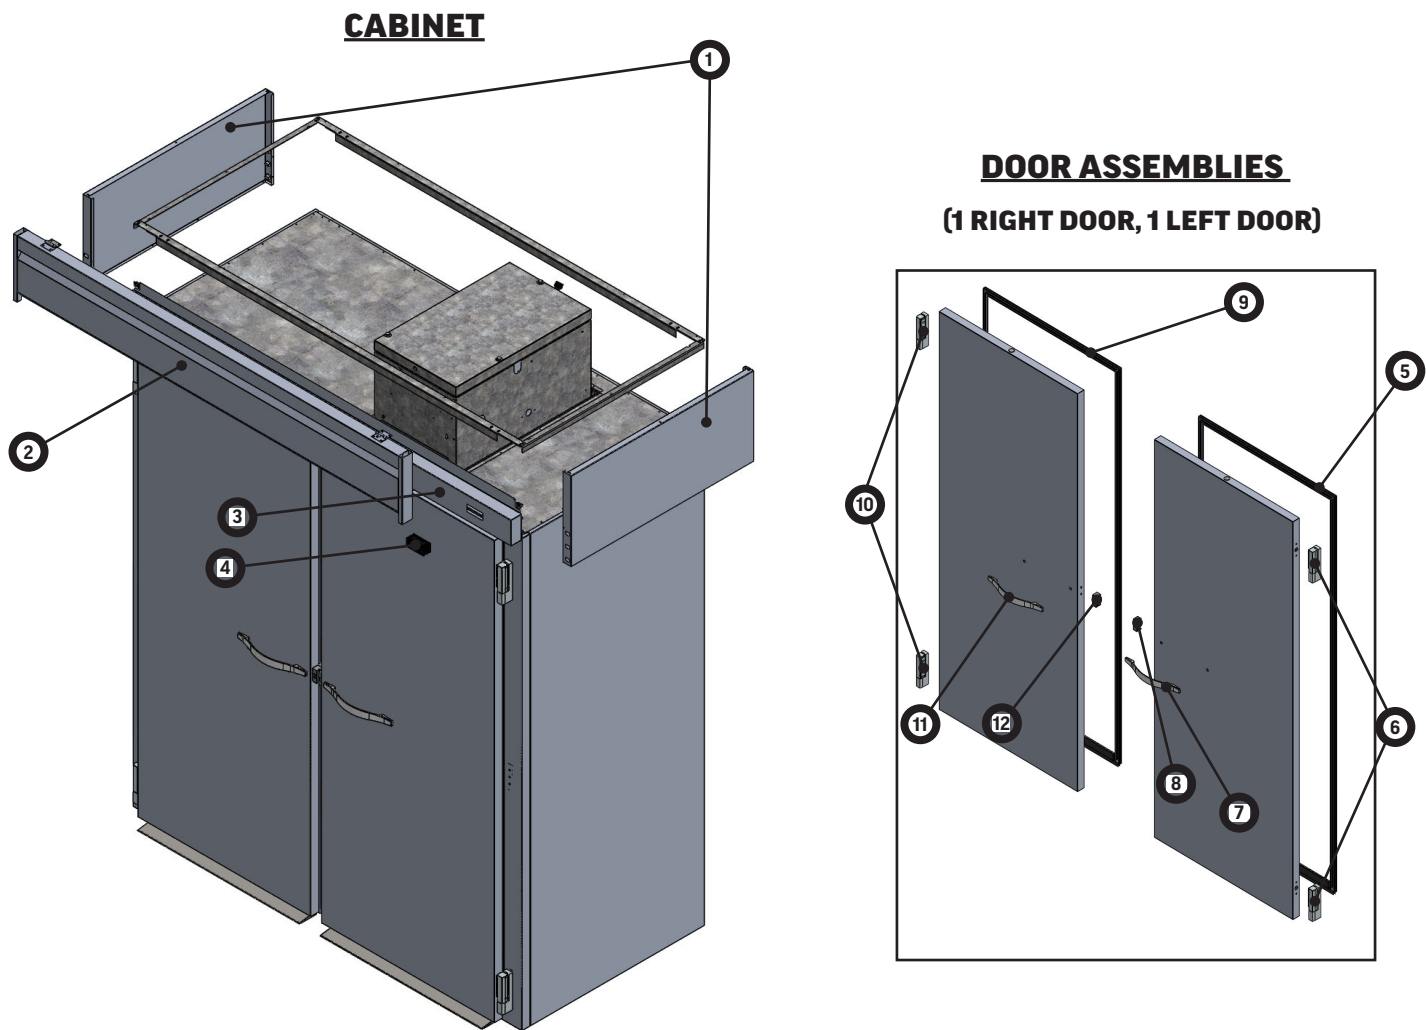

|                               |       |                                       |
|-------------------------------|-------|---------------------------------------|
| 1                             |       | SHELL END TOP (2)                     |
| 2                             |       | TOP GRILLE ASSY (1)                   |
| 3                             |       | INSTRUMENT PANEL (1)                  |
| 4                             |       | DANFOSS CONTROLLER (1)                |
| RIGHT DOOR ASSEMBLY (PART # ) |       |                                       |
| 5                             |       | DOOR GASKET (1)                       |
| 6                             |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                             |       | LOCK (1)                              |
| LEFT DOOR ASSEMBLY (PART # )  |       |                                       |
| 9                             |       | DOOR GASKET (1)                       |
| 10                            |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 11                            | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 12                            |       | LOCK (1)                              |



REPLACEMENT PARTS - PFT1HC-1AS ROLL THRU UNITS

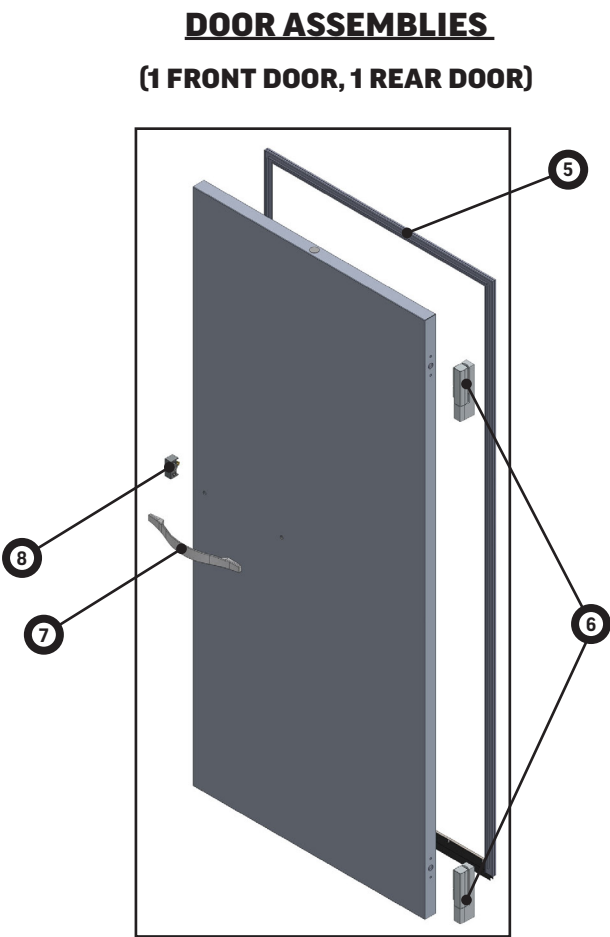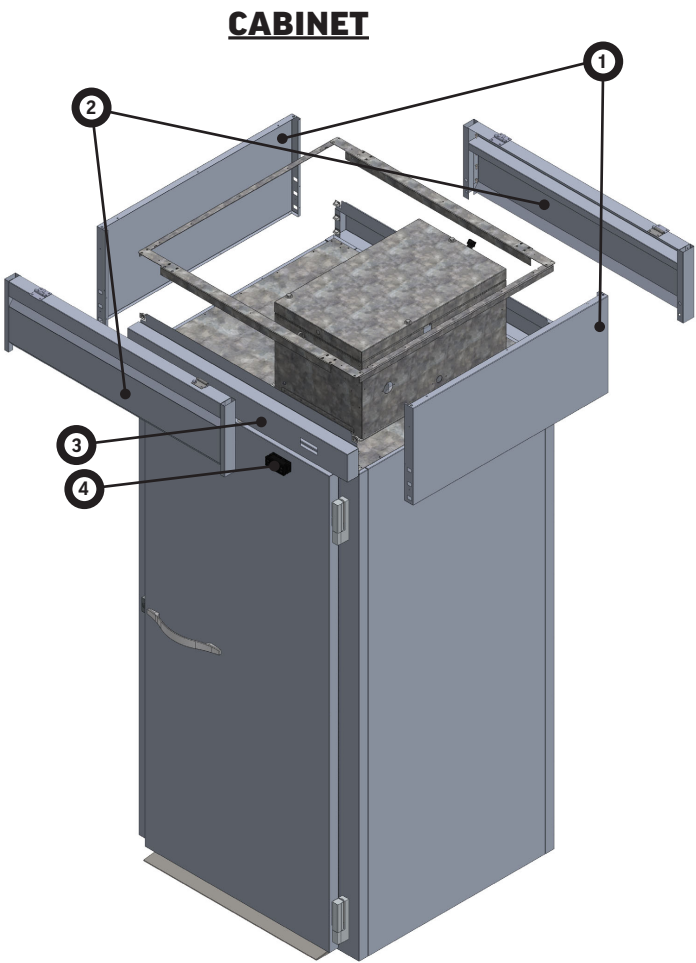


|                   |       |                                       |
|-------------------|-------|---------------------------------------|
| 1                 |       | SHELL END TOP (2)                     |
| 2                 |       | TOP GRILLE ASSY (1)                   |
| 3                 |       | INSTRUMENT PANEL (1)                  |
| 4                 |       | DANFOSS CONTROLLER (1)                |
| DOOR ASSEMBLY (1) |       |                                       |
| 5                 |       | DOOR GASKET (1)                       |
| 6                 |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                 | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                 |       | LOCK (1)                              |



## REPLACEMENT PARTS - PFT2HC-1AS ROLL THRU UNITS


### CABINET

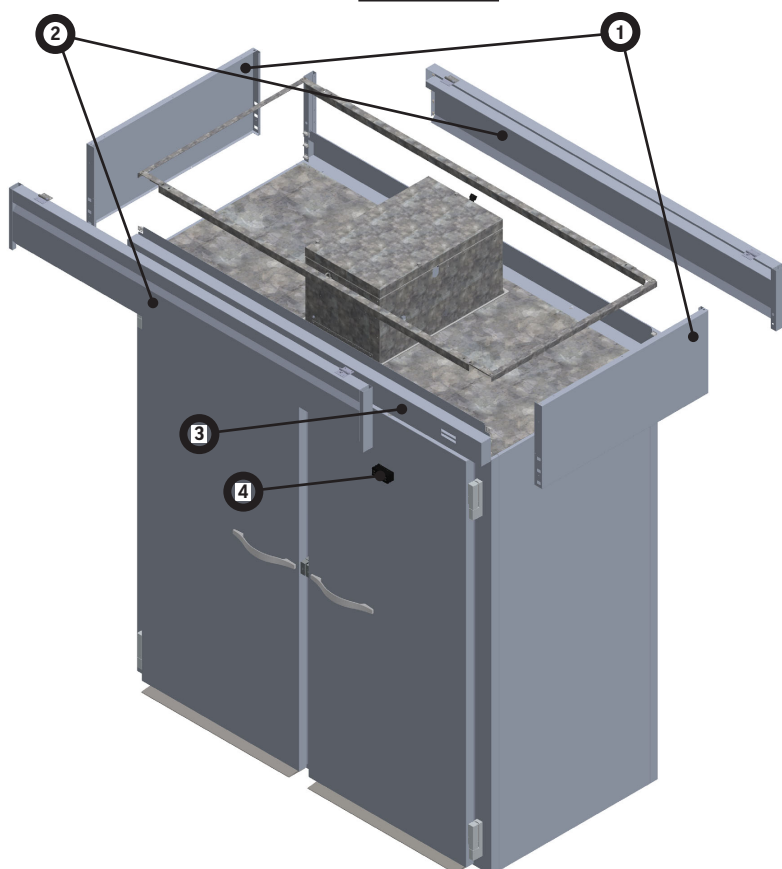

### DOOR ASSEMBLIES

1 SET ON FRONT (1 RIGHT DOOR, 1 LEFT DOOR)



1 SET ON REAR (1 RIGHT DOOR, 1 LEFT DOOR)

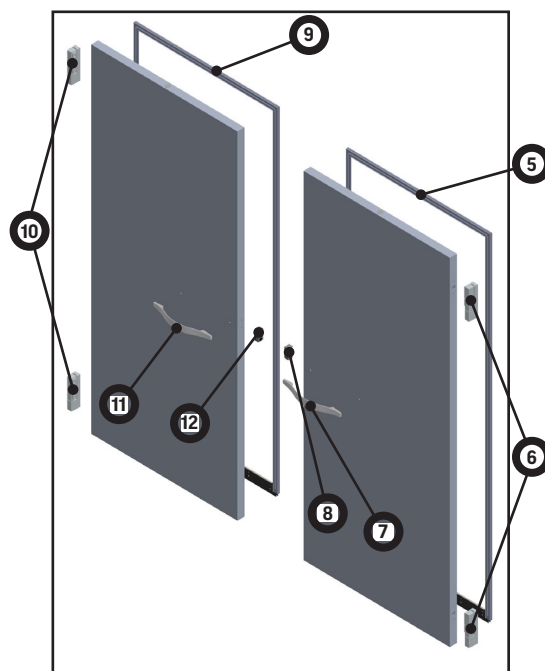

|                               |       |                                       |
|-------------------------------|-------|---------------------------------------|
| 1                             |       | SHELL END TOP (2)                     |
| 2                             |       | TOP GRILLE ASSY (1)                   |
| 3                             |       | INSTRUMENT PANEL (1)                  |
| 4                             |       | DANFOSS CONTROLLER (1)                |
| RIGHT DOOR ASSEMBLY (PART # ) |       |                                       |
| 5                             |       | DOOR GASKET (1)                       |
| 6                             |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                             |       | LOCK (1)                              |
| LEFT DOOR ASSEMBLY (PART # )  |       |                                       |
| 9                             |       | DOOR GASKET (1)                       |
| 10                            |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 11                            | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 12                            |       | LOCK (1)                              |




REPLACEMENT PARTS - PFT1XTHC-1AS ROLL THRU UNITS

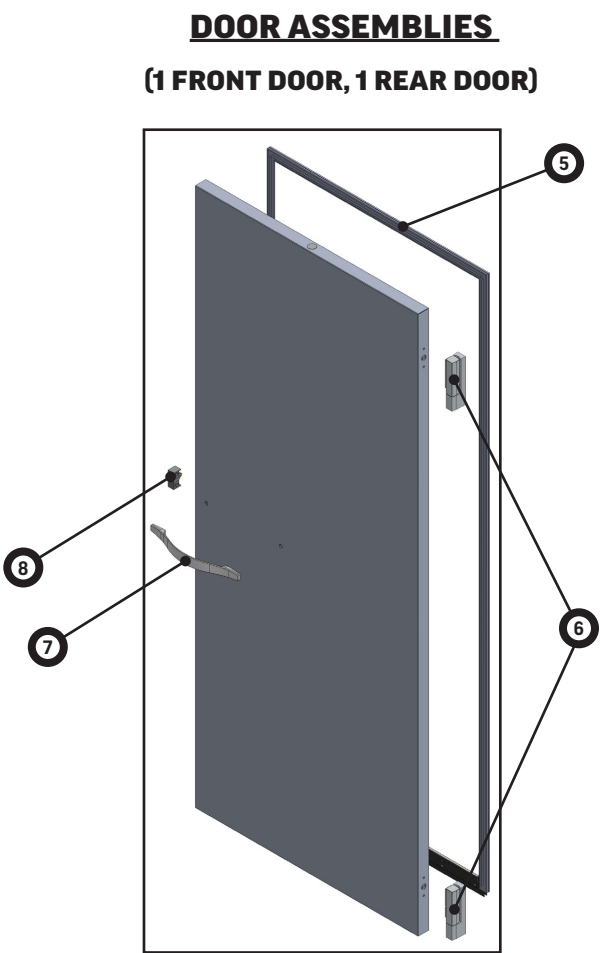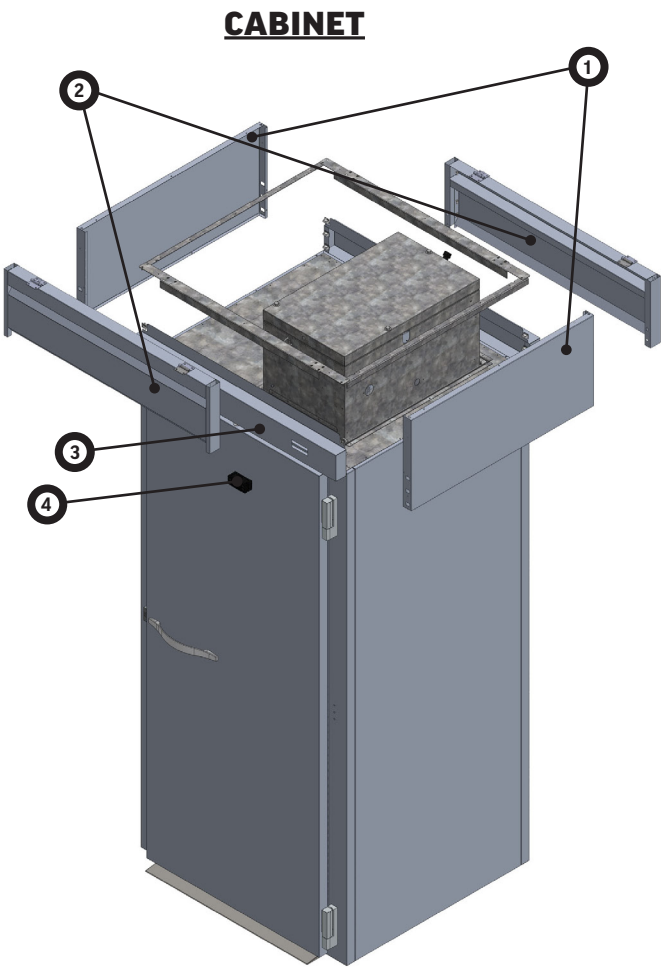

|                   |       |                                       |
|-------------------|-------|---------------------------------------|
| 1                 |       | SHELL END TOP (2)                     |
| 2                 |       | TOP GRILLE ASSY (1)                   |
| 3                 |       | INSTRUMENT PANEL (1)                  |
| 4                 |       | DANFOSS CONTROLLER (1)                |
| DOOR ASSEMBLY (1) |       |                                       |
| 5                 |       | DOOR GASKET (1)                       |
| 6                 |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                 | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                 |       | LOCK (1)                              |




REPLACEMENT PARTS - PFT2XTHC-1AS ROLL THRU UNITS

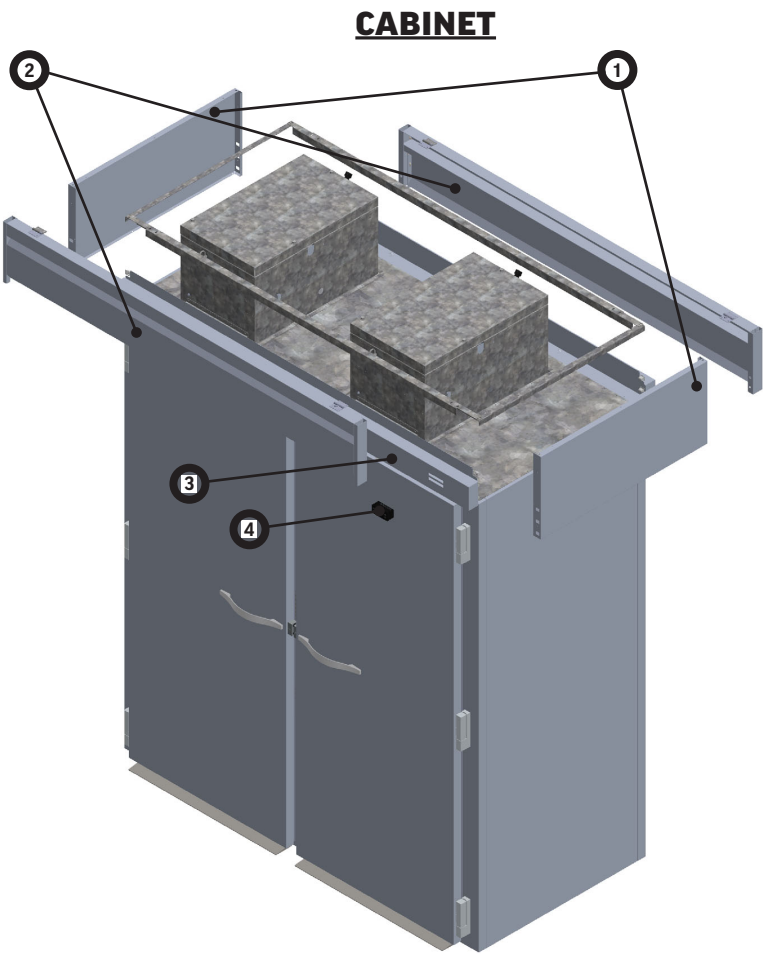

**DOOR ASSEMBLIES**

1 SET ON FRONT (1 RIGHT DOOR, 1 LEFT DOOR)


1 SET ON REAR (1 RIGHT DOOR, 1 LEFT DOOR)

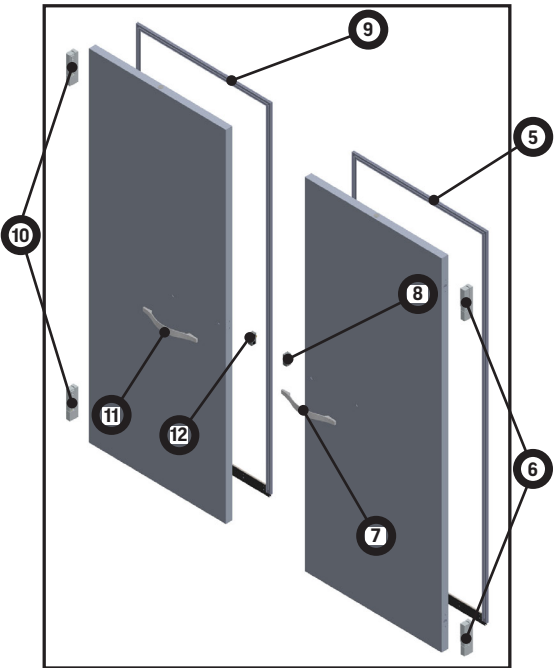

|                               |       |                                       |
|-------------------------------|-------|---------------------------------------|
| 1                             |       | SHELL END TOP (2)                     |
| 2                             |       | TOP GRILLE ASSY (1)                   |
| 3                             |       | INSTRUMENT PANEL (1)                  |
| 4                             |       | DANFOSS CONTROLLER (1)                |
| RIGHT DOOR ASSEMBLY (PART # ) |       |                                       |
| 5                             |       | DOOR GASKET (1)                       |
| 6                             |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 7                             | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 8                             |       | LOCK (1)                              |
| LEFT DOOR ASSEMBLY (PART # )  |       |                                       |
| 9                             |       | DOOR GASKET (1)                       |
| 10                            |       | RETAIL HINGE KIT - LIFTOFF (1)        |
| 11                            | ----- | DOOR HANDLE - NOT SOLD SEPARATELY (1) |
| 12                            |       | LOCK (1)                              |



REPLACEMENT PARTS REFRIGERATION SYSTEM - ALL MODELS  
(PFD3HC-1BG AND PFD3HC-1BHG HAVE TWO SYSTEMS)

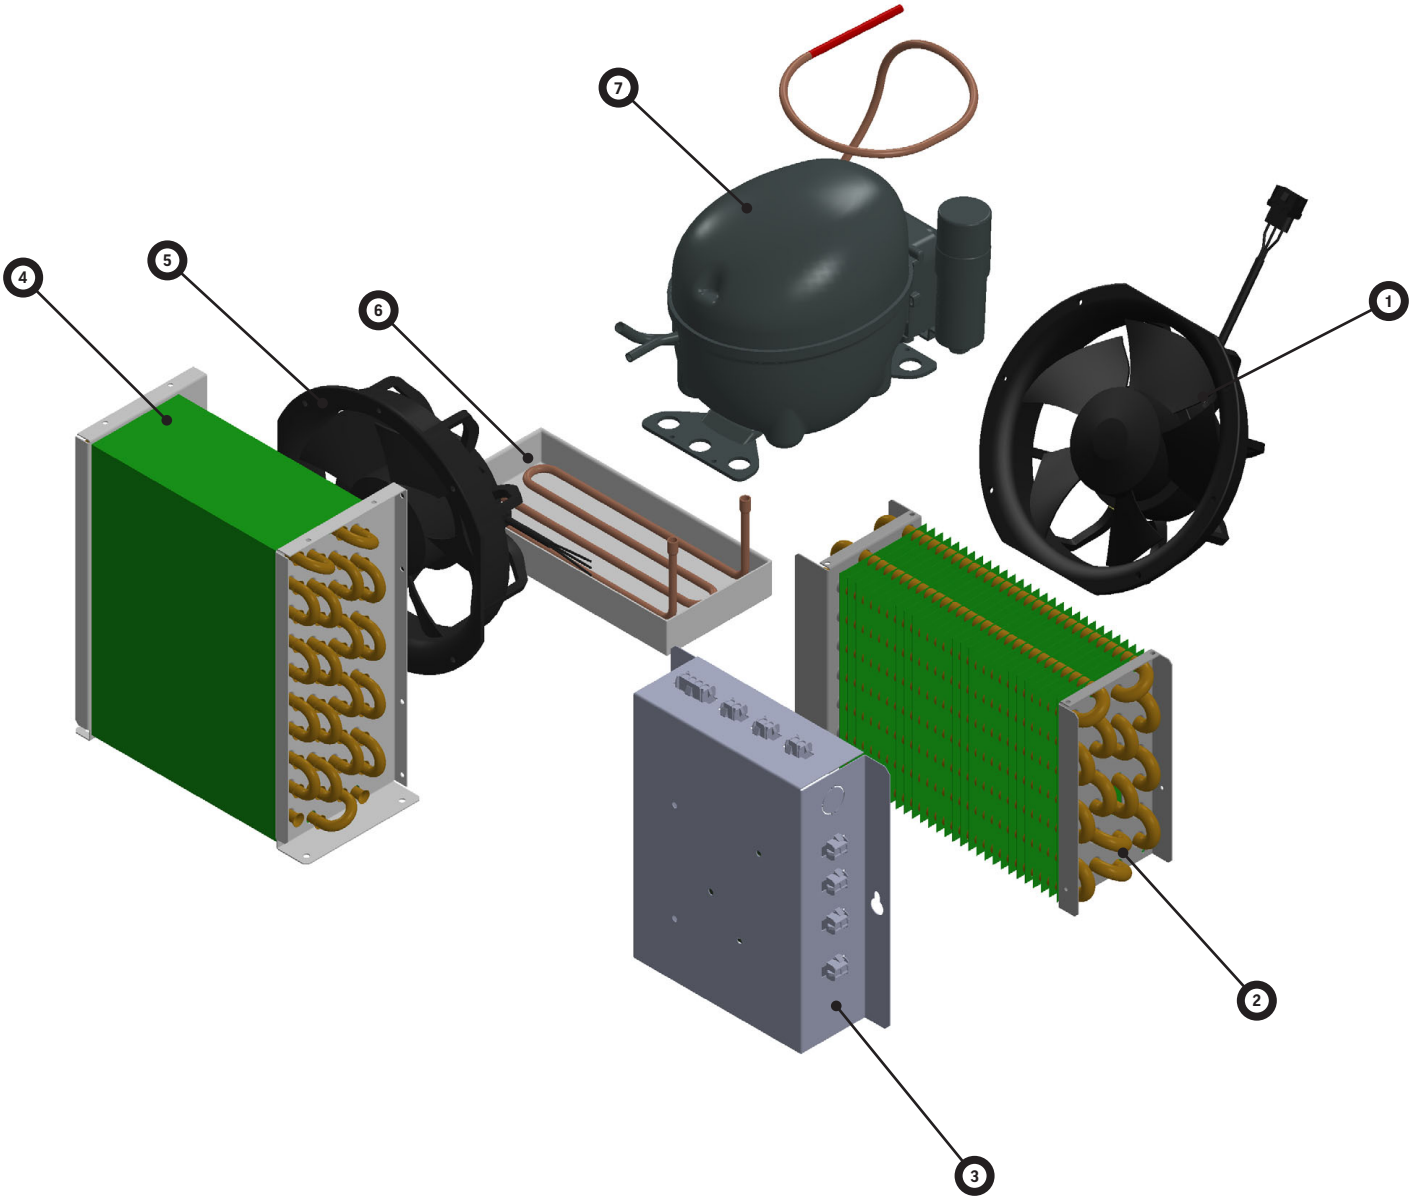

| REFRIGERATION SYSTEM COMPONENTS |       |                                               |
|---------------------------------|-------|-----------------------------------------------|
| (PART# RV102359-2)              |       |                                               |
| 1                               | ----- | EVAP FAN (1) - PART NOT SOLD SEPARATELY       |
| 2                               | ----- | EVAP COIL (1) - PART NOT SOLD SEPARATELY      |
| 3                               | ----- | JUNCTION BOX (1) PART NOT SOLD SEPARATELY     |
| 4                               | ----- | CONDENSER COIL (1) - PART NOT SOLD SEPARATELY |
| 5                               | ----- | CONDENSER FAN (1) - PART NOT SOLD SEPARATELY  |
| 6                               | ----- | CONDENSATE PAN (1) - PART NOT SOLD SEPARATELY |
| 7                               | ----- | COMPRESSOR (1) - PART NOT SOLD SEPARATELY     |



## LIMITED WARRANTY

### WARRANTY (Warranty valid in USA and Canada)

### SEVEN (7) YEAR PARTS, LABOR AND COMPRESSOR WARRANTY:

Beverage-Air Corporation warrants to the original purchaser of Beverage-Air branded equipment, including all parts thereof, that such equipment is free from defects in material and workmanship, under normal use, with proper maintenance, and service as indicated by Beverage-Air installation and operation instructions, for a period of SEVEN (7) years from the date of installation, or eighty-eight (88) months from the date of shipment from the manufacturer, whichever is earlier (units shipped from July 1, 2024 are eligible for 7-year warranty). In addition, Beverage-Air warrants the hermetically/semi-hermetically sealed compressor (part only) for SEVEN (7) years; not to exceed eighty-eight (88) months from the date of shipment from Beverage-Air, provided upon receipt of the compressor, manufacturer examination shows the sealed compressor to be defective. This warranty does not cover freight for the replacement compressor or freight for the return of the failed compressor.

\* Units shipped after 07/01/2024. Previous warranty applies to units shipped prior.

### EXCEPTIONS:

- CT96 and CF3 models carry a ONE (1) year parts and labor warranty, limited to fifteen (15) months from date of shipment from Beverage-Air. These are excluded from additional compressor warranty.
- SR/SF (Slate) models carry a TWO (2) year parts and labor warranty, limited to twenty-seven (27) months from date of shipment from Beverage-Air.
- BZ, VM, CDR, DPCR, MT and Blast Chillers carry a THREE (3) year parts and labor warranty; additional TWO (2) years compressor part only.
- Units installed in Residential applications will be not covered under this warranty. Units are intended for Commercial use only.

Also, this compressor-part only warranty does NOT apply to any electrical controls, condenser, evaporator, fan motors, overload switch, starting relay, capacitors, temperature control, filter/drier, accumulator, refrigeration tubing, wiring harness, labor charges, or supplies which are covered by the warranty above.

Note: 3rd party extended warranties are not covered by this warranty statement.

Normal wear parts, as deemed by Beverage-Air, such as but not exclusive to, light bulbs/lamps and gaskets are not covered by this warranty. For the purpose of this warranty, the original purchaser shall be deemed to mean the individual or company for who the product was originally installed.

Units that utilize variable speed compressor technology can experience nuisance tripping on Class A GFCI outlets which have a trip limit of 4 mA to 6 mA. To avoid this issue in a location that requires GFCI circuit protection, Beverage-Air & Victory recommends using a HUBBELL Model Number GFRST83W 20A Heavy Duty Hospital Grade Self-Test GFCI Receptacle. Nuisance tripping not covered under warranty.

Our obligation under this warranty shall be limited to repairing or replacing, including labor, any part of such product, which proves thus defective. Beverage-Air reserves the right to examine any product claimed to be defective and request photos of the unit prior to dispatching service. Moisture or water damage is not covered under warranty. If service is deemed non-warranty, Beverage-Air reserves the right to bill the end user for service.

The labor warranty shall be for self-contained units only and for standard straight time, which is defined as normal service rate time, for service performed during normal working hours. All warranty labor will be covered at standard time. Any service requested outside of a servicer's normal working hours including weekends and any additional overtime will be at the responsibility of the equipment purchaser. Any part or accessory determined to be defective in the product should be returned to the company within thirty (30) days under the terms of this warranty and must be accompanied by a record of the cabinet model, serial number, and identified with a return material authorization number (RMA#) issued by the manufacturer.

**Special installation/applications, including remote locations, are limited in coverage by this warranty. Any installation that requires extra work, and/or travel, to gain access to the unit for service is the sole responsibility of the equipment purchaser.**

Improper operation resulting from factors, including but not limited to, improper or negligent cleaning and maintenance, improper installation, low voltage conditions, inadequate wiring, outdoor use (unless otherwise specified) and accidental damage are not manufacturing defects and are strictly the responsibility of the purchaser.

**LIMITED WARRANTY (CONT'D)**

With the exception of Blast Chillers, the product is designed for maintaining temperature and not bringing food to a desired temperature and therefore cannot be held responsible for this function under warranty. Units must be in a conditioned environment or warranty will be void. Non-standard use of unit can also be subject to reduced or voided warranty.

Condensing coils must be cleaned at regular intervals as a part of preventative maintenance for optimal performance. Failure to do so is subject to a voided warranty. Although cleaning requirements vary in accordance with operation of various products, Beverage-Air recommends a minimum monthly cleaning.

**NO CLAIMS CAN BE MADE AGAINST THIS WARRANTY FOR SPOILAGE OF FOOD, PRODUCTS, LOSS OF SALES OR CONSEQUENTIAL DAMAGES.**

THE FOREGOING WARRANTIES ARE EXPRESSLY GIVEN IN LIEU OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED, ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, AND WE NEITHER ASSUME, NOR AUTHORIZE ANY OTHER PERSON TO ASSUME FOR US, ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THE SALE OF SAID REFRIGERATION UNITS OR ANY PARTS THERE OF.

This warranty shall not be assignable and shall be honored only in so far as the original purchaser. This warranty does not apply outside the limits of the United States of America and Canada, nor does it apply to any part that has been subject to misuse, neglect, alteration, accident, or to any damage caused by transportation, flood, fire, acts of terrorism, or acts of God.

**LIMITATION OF LIABILITY:**

Beverage-Air Corporation or their affiliates shall not be liable for any indirect, incidental, special or consequential damages, or losses of a commercial nature arising out of malfunction equipment or its parts components thereof, as a result of defects in material or workmanship.

THE ORIGINAL OWNER'S SOLE AND EXCLUSIVE REMEDY AND BEVERAGE-AIR'S SOLE AND EXCLUSIVE LIABILITY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT OF PARTS OR COMPONENTS CONTAINED IN THE EQUIPMENT IDENTIFIED ABOVE WHICH UNDER NORMAL USE AND SERVICE MALFUNCTION AS A RESULT OF DEFECTS IN MATERIAL OR WORKMANSHIP, SUBJECT TO THE APPLICABLE PROVISIONS AND LIMITATIONS STATED ABOVE.

Note: Additional Terms and Conditions of sale may apply. Notice: Specifications are subject to change without notice. Contact Beverage-Air for specific model agency approval. All prices are ex-works Brookville, PA. July 1, 2024

## Warranty Registration

Register your product online at [beverage-air.com/parts-service](http://beverage-air.com/parts-service) or fill out and mail the form below.

Cabinet Model Number: \_\_\_\_\_ Date Of Installation: \_\_\_\_\_

Cabinet Serial Number: \_\_\_\_\_

### Location Of Product

Business Name: \_\_\_\_\_

Business Street: \_\_\_\_\_

Business City: \_\_\_\_\_ State: \_\_\_\_\_ Postal Code: \_\_\_\_\_

**Mail to:** Beverage-Air, 3779 Champion Blvd, Winston-Salem, NC 27105

Rev. 02/26