

STEP 5:

Install Top Shelf (to desired height) and tighten Set Screws (**Figure 5**).

Figure 5



STEP 6:

NSF installations require head of Set Screws to be filled with an approved Silicone Sealant (**Figure 6**).

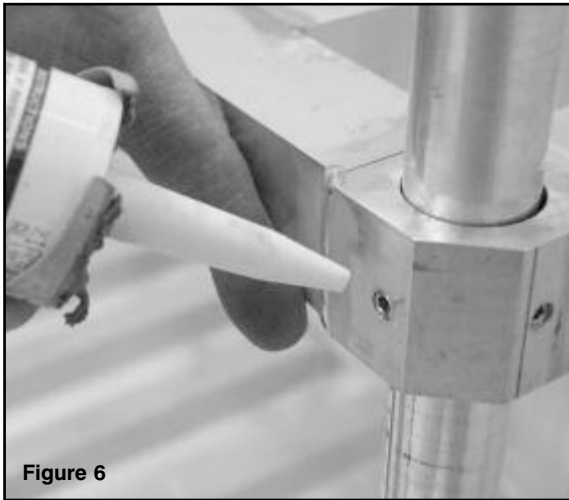


Figure 6



Edgewood, New York 11717-8380

3/06



Installation Instructions for KEG RACKS



**CHECK FOR CONCEALED DAMAGE
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

Keg Racks manufactured by **ADVANCE TABCO®** are designed and constructed for keg storage. Applications may include storage of other products.

NOTE: Top shelf IS NOT to be used for keg storage. **ADVANCE TABCO®** does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

KEG RACK CONTENTS INCLUDE:

Quantity	Parts Description
(1)	Top Shelf (Note: Top Shelf has 4 horizontal bars)
(2)	Lower Shelves
(4)	Posts
(24)	5/16-24" x 3/8" Set Screws

TOOLS REQUIRED: 7/32" Allen Wrench
Rubber Mallet
Tape Measure

STEP 1:

Pre-install all Set Screws using a 7/32" Allen Wrench (**Figure 1**).

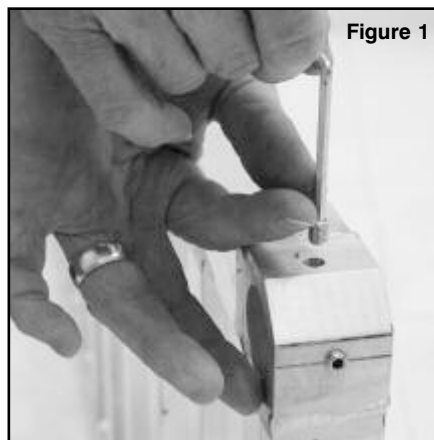


Figure 1

STEP 2:

Using a tape measure, mark desired shelf heights on all Posts. (**Figure 2**).

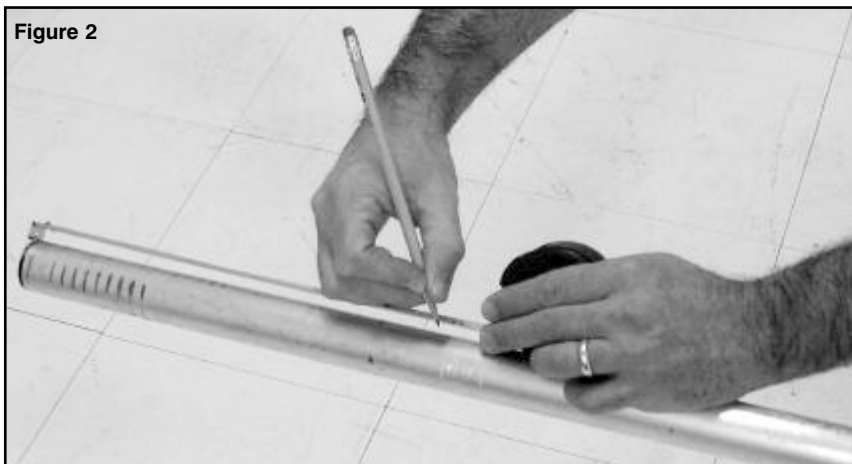


Figure 2

STEP 3:

Slide Tubular Posts into one Lower Shelf (to desired height) and tighten Set Screws. (**Figure 3**). Slide second Lower Shelf onto posts (to desired height) & tighten Set Screws.

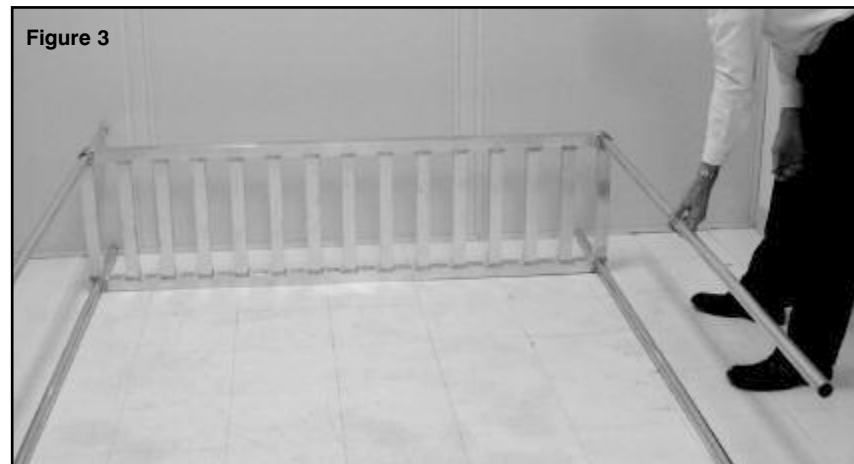


Figure 3

STEP 4: INSTALLING OPTIONAL KR-1 REAR KEG STRAP

(If a Rear Keg Strap is not being used, proceed go to **STEP 5**)

Install optional Rear Keg Strap at desired height between lower shelves and tighten Set Screws (**Figure 4**).

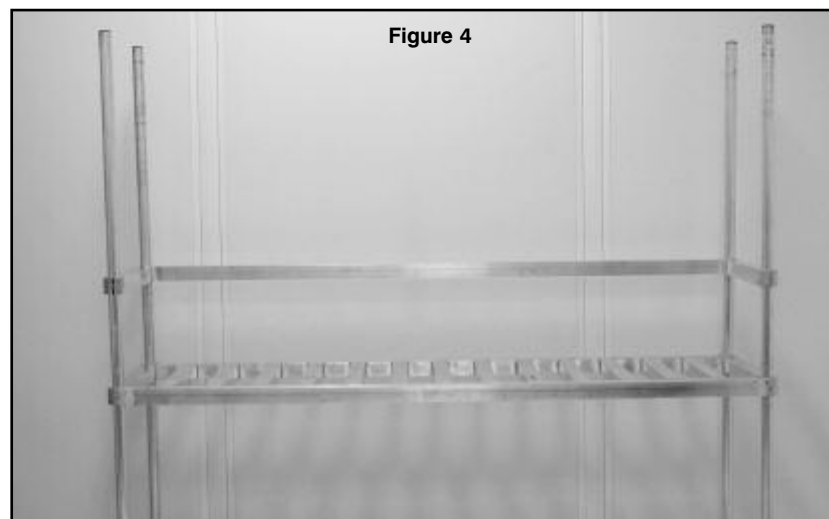


Figure 4

Continued >>