


kinetik
WELLBEING



COMFORT COOLING FAN

Instruction Manual

SKU ww-600

CONTENTS

Brand Story	3
Introduction	4
Getting to Know	5
Features	5
Box Includes	5
How to Guide	6
Care & Maintenance	7
Specification	8
Warnings	9
Support	10

BRAND STORY


At Kinetik Wellbeing we are driven by the belief that everyone deserves to take control of their health from the comfort of their own home. Designed with simplicity in mind, our clinically validated devices empower you to proactively monitor and manage your long-term health journey.

We created our Women's Wellness range to empower and support women through every stage of life, addressing everything from menstrual discomfort to menopausal symptoms.

INTRODUCTION

Introducing the Kinetik Wellbeing Comfort Cooling Fan, designed to empower women experiencing menopausal symptoms.

Whether you're at home or on the go, this stylish fan is your convenient companion for managing unpredictable hot flashes. Choose from three fan speeds to suit your needs, whether

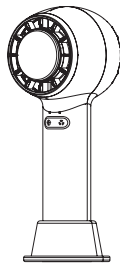


you're seeking a quiet breeze during a night sweat or rapid cooling during an intense flush.

The built-in cooling plate provides targeted relief to further help with hot flashes as well as nausea and headaches. Its soothing, numbing effect helps ease discomfort and helps improve focus,

reducing brain fog so you can stay sharp and in control.

GETTING TO KNOW YOUR COMFORT COOLING FAN

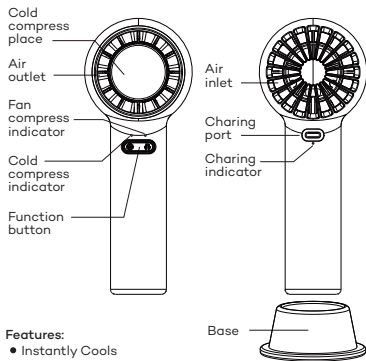

Features:

- Instantly Cools
- 3 Fan Speeds
- Rechargeable
- Portable
- Effective for Hot
- Flushes

Box Includes:

- Fan with Cooling Plate
- Base
- USB-C Charging Cable
- Manual

HOW TO GUIDE

Using the Fan

- Press the button with the fan symbol, the blue light above will turn on automatically to show it's working.
- This fan offers 3 fan settings, click the button again to increase the speed to the second setting and again for the third setting. After being pressed four times the fan will switch off.

Using the Cooling Plate

- Press the button with the cool snowflake symbol, the white light above it will switch on automatically to show it's working.
- Press the button again to switch this function off.

Charging

- Place the Fan with Cooling Plate into its holder.
- Plug the USB-C side into its charging port which can be found on the back.


HOW TO GUIDE


- Plug the USB side into an appropriate plug and power socket.
- When the power outlet is turned on the red light will turn on the Fan with Cooling Plate to show it's charging. The red light will switch off when it is fully charged, this will take around 3 hours.

CARE & MAINTENANCE

- Do not immerse the device in water or liquid.
- Do not drop device.
- Do not use any chemical to clean the device.
- When needed clean the device with a slightly damp cloth and wipe dry.

SPECIFICATION

Product Name : Comfort Cooling Fan
 Product Model : WW-600
 Input voltage: DC 5V 
 Input current: 800mA (±20%)
 Battery voltage: 3.7V
 Battery power: 8.14W
 Battery capacity: 2200mAh
 Material: ABS/movement alloy/stainless handle/electronic components
 Charging time: about 3 hours
 Working time: 1.5-8 hours
 Product size: 65x71x170mm
 Product weigh: 200g
 Executive standard: GB4706.2-2005
 GB4706.48-2009
 Quality control: qualified products
 Place of origin: China



WARNING

- Do not put the device near or in a fire source.
- Keep this device away from children and pets.
- Ensure you use a charger with an output of 5V/1A and use the standard Type-C charging cable.
- Do not put your fingers or any hard objects into the air inlet/outlet.
- If any abnormalities occur during use, stop using the device immediately.
- Do not immerse device in water or liquid.
- Do not drop device.
- Do not disassemble the device.
- If the device swells, discontinue use immediately.
- Ensure you are dry before use.
- The device should not be disposed of in household waste, it should be disposed of at a recycling station for environmental protection.

SUPPORT

Please feel free to contact us at:



+44 (0) 1483 937 967



customercare@kinetikwellbeing.com



www.kinetikwellbeing.com



Kinetik Medical Devices Ltd
Unit 11, Perrywood Business Park
Honeycrook Lane
Salfords, Redhill
RH1 5JQ
United Kingdom



Share Info GmbH
Heerdter Lohweg 83,
40549 Düsseldorf