


3 Ways to Unlock


1. Fingerprint

Place your finger on the scanner. When it lights green, turn the knob clockwise.

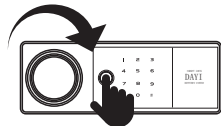


2. Passcode

Enter your code and press #, then turn the knob clockwise.

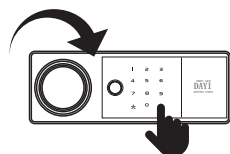

3. Use the Backup Key

Insert the key and turn it 90° counterclockwise, then turn the knob to open.



Please Note: The backup key is intended only for initial setup or if fingerprint/passcode access fails.

Always store your backup keys in a separate, secure location — never inside the safe.

Alarm Features

Unauthorized Entry Alarm

- After 3 wrong passcode attempts, a loud alarm sounds for 20 seconds.
- Enter your correct passcode to stop it.

Vibration Alarm

- Press and hold * for 3 seconds to turn on.
- If the safe is shaken or hit, the alarm triggers.

Note: This mode is off by default and must be activated each time.

Need Help? We're here to assist.

Email us at dayi_service@outlook.com for support.

Mute Mode

- Mute **ON**: Hold the 1 key for 3 seconds.
- Mute **OFF**: Hold the 1 key for 3 seconds.

Low Battery Warning


If you hear beeps when opening the safe, replace the batteries soon.

How To Install Foot Pads?



1. Remove the stickers from the foot pads.
2. Attach the foot pads to the bottom of the safe.

Bolt Safe to Wall (Recommended)

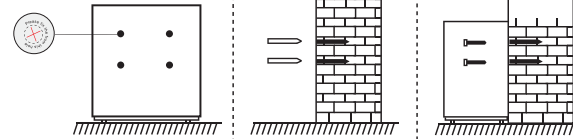

1. Place safe in desired spot and open the door.
2. Mark holes through the 4 mounting points inside.
3. Move safe aside and drill holes at marks.
4. Reposition safe, insert expansion bolts, and tighten securely.

Need Help? We're here to assist.

Email us at dayi_service@outlook.com for support.


Thank you for choosing DAYI.

For a secure home and peace of mind.

DAYI

Biometric Fingerprint Safe User Manual v1.0




Model: DF-25 Plus2

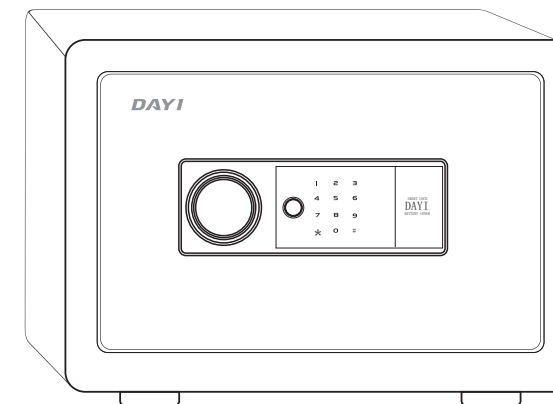

⚠ IMPORTANT

1. Never lock your backup keys or backup battery box inside the safe.
2. Always test your fingerprint and passcode multiple times before storing valuables.
3. For assistance, contact us directly at:
✉ dayi_service@outlook.com
Most issues can be resolved quickly.

Product Overview

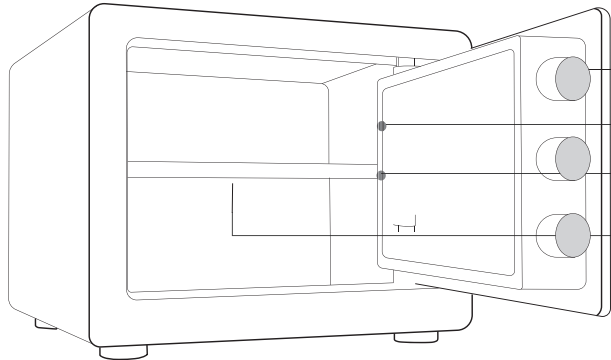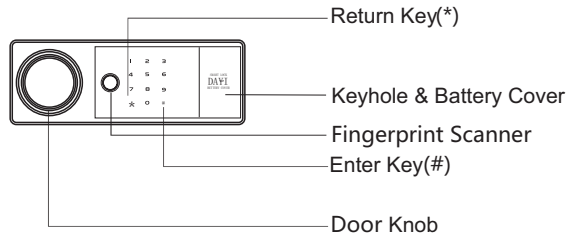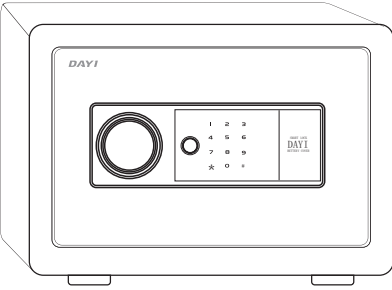


DAYI PLUS2 | Video Tutorial



GETSUPPORT PLUS2 Series

Need Help? We're here to assist.
Email us at dayi_service@outlook.com for support.

What's Included?

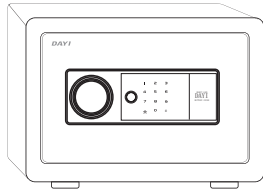

Safe Box x 1



User Manual x 1




Backup Keys x 2



Backup Battery Box x 1



Foot Pads x 4




Expansion Bolts x 4

First-Time Setup


1. Open the Safe

- Open the right edge of the cover.
- Insert a backup key and turn it 90° counterclockwise.
- Turn the knob clockwise to open.

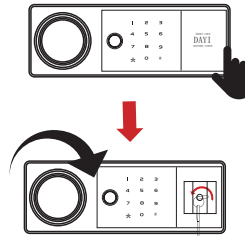

2. Install Batteries

- Insert 4 AAA alkaline batteries as shown.

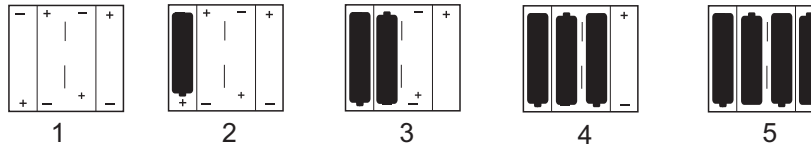


! Battery Guidelines:

- Use alkaline batteries only (do not use rechargeable or other types).
- Do not mix old/new batteries or different battery types.

Step 1: Add a Fingerprint

1. With the door open, press **the Red Setting Button** inside.
2. Place your finger on the scanner—repeat 5 times until you hear a long beep and see a green light.
3. You can store up to 25 fingerprints.

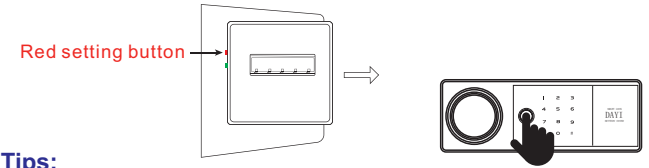

Fingerprint Tips:


- Place your finger flat and cover the whole scanner.
- Clean, dry fingers work best.
- Avoid using injured or scarred fingers.
- The scanner may be less responsive in cold environments.

⚠ Important Notice:

Before first use, any fingerprint can open the safe.
It is strongly recommended to set up your own fingerprints immediately.

Step 2: Set a Passcode

1. With the door open, press **the Green Setting Button** inside.
2. Enter a 3–8 digit code, then press #.
3. A green light and long beep confirm it's set.

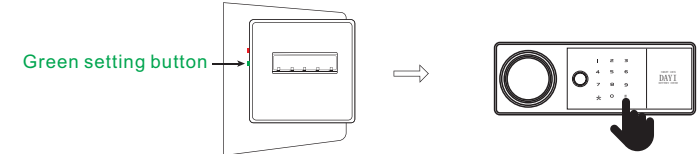

Note:

- Default passcode is `123456`.
- Only one passcode can be set.
- Test your new passcode several times before use.

Restore Factory Settings

- Open the door and hold **the Green Setting Button** for **6 seconds**.
- The scanner light will turn green with a long beep.
- This clears all fingerprints and resets the passcode to `123456`.

Note: If you encounter setup failures or any other errors, it is strongly recommended to restore the factory settings.