



CARE 1 PRO

HEADPHONES REIMAGINED



WIRELESS HEADPHONES

User Manual




The future, is the most interesting waiting.

ENGLISH


Dear Customer:
Thank you for purchasing DOQAU CARE 1 PRO Bluetooth headphones, we hope you will enjoy them!

Package includes

DOQAU Headphone x1 Pc AUX Cable x1 Pc Charging Cable x1 Pc
Storage Pouch x1 Pc User Manual x 1 Pc

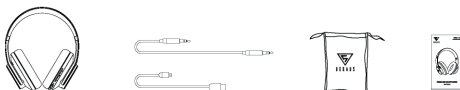

Headphones Controls

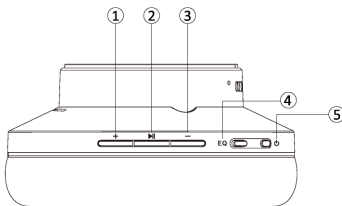

- ① Volume Up: Connected with one Bluetooth device, press once to increase the volume. Press and hold for 3 seconds to increase the volume quickly.
- ② Multifunction Button: Connected with one Bluetooth device, press once to play/pause; Press and hold for 3 seconds: Activate Siri or other voice assistant software
In playback state: quickly press twice—next song, quickly press three times—previous song;
Incoming call: press once to answer, press and hold for 3 seconds to reject;
Outgoing call: press once to cancel;
press and hold for 3 seconds to choose the call hearing and talking via cellphone or DOQAU headphones
- ③ Volume Down: Connected with one Bluetooth device, press once to decrease the volume. Press and hold for 3 seconds to decrease the volume quickly.
- ④ EQ Button: press once to switch between EQ modes, and you can hear the voice prompt. (Note: press and hold the EQ button for seconds will clear the headphone pairing list from all devices and the headphones are ready to connect)
- ⑤ Power On/Off: when the headphones are off, press and hold for 2 seconds to power on; when on, press and hold for 2 seconds to power off.


Specifications:

Bluetooth Version: 5.3 Speaker: φ 40MM
Battery: 3.7V,1000 mAh Signal to noise ratio: >92dB
Playtime: Up to 90 hours Total Harmonic Distortion: ≤ 3%
Stand by: up to 10000 hours Input power: DC 5V (>500 mA)
Distance: up to 20 meters(66 feet) Charging time: < 2.5 hours
Output power: 20 mW x2 (32Ω)
Bluetooth Operation Frequency: 2402-2480 MHz

3 Sound Effects, you choose the one you like

Press once EQ, the sound effect shifts to another one once you hear sound prompt (total 3 different effects)

- 1. Normal sound effect (the treble, middle and bass equal)
- 2. Bass sound effect (super bass)
- 3. High definition sound effect (voice clear)

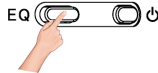

Note: this headphone will remember the sound effect you enjoyed last time once you power on again.

Bluetooth pairing, start to enjoy music:

- 1. CARE 1 PRO headphones will automatically enter into Bluetooth pairing mode after they are powered on- white light flashes;
- 2. Turn on the Bluetooth of your device, as cell-phone, ipad, PC or else, search and select “DOQAU CARE 1 PRO” from the list of Bluetooth devices. The bluetooth PIN is 0000 if there is necessary to enter.
- 3. Once paired successfully, the white Led light will blink 2 times in 5 seconds, and then you can enjoy music.

Simultaneously connect to two Bluetooth devices

This headphones is able to connect to two Bluetooth devices simultaneously to provide a more convenient user experience.

Step 1: Connect the headphones with the first device and then turn off the Bluetooth feature on the first device.

Step 2: On the second device, go to settings-Bluetooth, find “DOQAU CARE 1 PRO” and click to connect.

Step 3: Turn on Bluetooth of the first device and reconnect “DOQAU CARE 1 PRO”

Then the headphones will build a connection with two devices simultaneously, you can change the headphones connection between the two device back and forth.

Switch between two connected devices:

- 1. Pause audio on your first mobile device.
- 2. Play audio on your second mobile device.

Note: You can only play audio from one device at a time.

Wired connection via aux cable, enjoy music endlessly:

Connect the one end of the audio cable into the 3.5mm jack of headphone and other end to your laptop, mobile phone, mp3/4, CD player to play music file from AUX in, without using battery power. Button controls on the headphones are disabled in the wired connection mode.

Note: Inserting the aux cable into the 3.5mm jack will deactivate the Bluetooth wireless connection and the headphones are powered off.


Power management, power off automatically:

- 1. No pairing: power off automatically after 10 minutes;

Charging:

*Do not use the adaptor without safety certification, not rated 5V. (The headphone is designed with power protection circuit. The headphone will stop charging to protect the battery and itself if use the adaptor unmatched.)

- 1. Power-on state: charge the product immediately when low battery is prompted.
- 2. When the Bluetooth icon on the mobile phone indicates that the battery is low, please charge the headphone as soon as possible.
- 3. The red led light is on when charging. The white led light is on which indicates that the battery is fully charged.

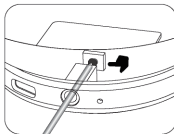

Reset:

The reset button is located in the AUX jack. When the Bluetooth of the headset fails to work normally under certain circumstances, the system needs to be restarted for activation. You can use a small needle to reach into the AUX jack and press the reset button. (If the battery is exhausted, charge it first)

Note: When the status light glows solid white due to the lost pairing with devices, you must reset the headphones to initialize the headphones to the factory settings.

FAQ:

- 1. Q: How to pair with a smartphone via Bluetooth ?
A: Press the On/Off button for 2 seconds, the LED indicator will flash white. Turn Bluetooth on your device, search and select “DOQAU CARE 1 PRO” from the list of Bluetooth devices. Once paired successfully, the white light flashes 2 times every 5 seconds.
- 2. Q: What is the bluetooth version?
A: The DOQAU CARE 1 PRO Bluetooth headset built-in the latest technology Bluetooth chip, Bluetooth version 5.3.
- 3. Q: Can it be connected with laptop,iPad?
A: The headphones can be compatible with any Bluetooth enabled devices, including smartphone, laptop and iPad, etc.
- 4. Q: Can it make phone calls via headphones wirelessly?
A: Yes, DOQAU CARE 1 PRO headphones are with built-in mic which can deliver clear hands-free calls.
- 5. Q: How long can be used for one time after fully charged? What about the stand-by time ?
A: DOQAU CARE 1 PRO headphones are with 1000 mAh battery. After fully charged, they can be used for up to 90 hours and up to 10000 hours stand-by time

▲ safety Instructions:

- 1. Please fully charge the headphones before first time using.
- 2. Please charge the headphones at least once every 3 months to keep battery in good condition.
- 3. To protect your hearing, please do not use the headphones long time with too high volume.
- 4. Free from extreme temperature, humidity and dust.
- 5. Do NOT make unauthorized alterations to the headphones.
- 6. Do NOT expose the headphones to rain, liquids or moisture.



MADE IN CHINA

IC ID:28095-CARE1 FCC ID: 2AU5M-CARE1

Website: <https://www.doqaus.com>
Email: support@doqaus.com



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.