


Multifunctional makeup mirror

Model: SY-W02301

I、Function key definitions:

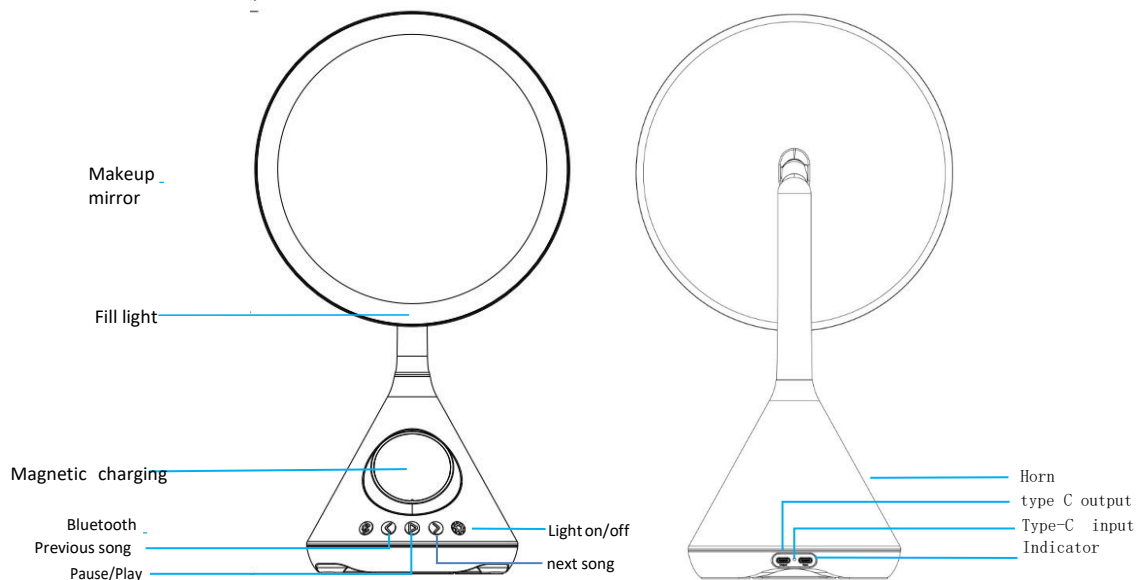

2. Operating Manual:

1. Power supply:

Insert the USB end of the charging cable into the power adapter, insert the Type-C port into this product, the indicator light flashes twice and goes off to enter standby mode.

2 Indicator of charging status

Charging: Blue light on constantly,

Full: The blue light goes out

FOD: Rapid flashing

3 Output power:

3.1 Magnetic phone wireless charging supports 15W (Max).

3.2 USB-C supports wired output of 5W (Max).

4. Bluetooth functionality

4.1 Key Functions: 5 keys, Bluetooth key, Pause/Play, Track Down, Track Up, Light on/Off key.

4.2 Press the Bluetooth button briefly, prompt tone to enter Bluetooth mode, first pairing Bluetooth name: (W02301) There is a prompt tone after successful pairing.

4.3 Press the pause/Play button briefly to switch between pause/play,

4.4 Press the up track button briefly to play the previous track, and press it long to reduce the volume

4.5 Press the down button briefly to play the next track and press it long to increase the volume

5. Light control

5.1 Press the light on/off button briefly to turn on or off the fill light. Press the light on/off button briefly to change three brightness levels: high, medium, and low.

6 Notes:

Special note: If you require Bluetooth, wireless charger and lights to work simultaneously, be sure

to use a PD30W or higher power adapter; When powered by 5V voltage, the wireless charger only supports 5W load and light operation.

6.1 Do not squeeze or bump.

6.2 Do not disassemble it by yourself or throw it into fire or water to avoid short circuit and leakage.

6.3 Do not use the wireless charger in extremely hot, humid or corrosive environments to avoid damaging the circuit and causing leakage.

6.4 Do not place too close to magnetic cards (ID cards, bank cards, etc.) with magnetic strips or chips to avoid causing the cards to fail.

6.5 Keep a distance of more than 20CM between implanted medical devices (pacemakers, cochlear implants, etc.) and wireless chargers to avoid potential interference with medical devices.

6.5 Keep a close eye on children to ensure they do not play with wireless chargers as toys to avoid unnecessary accidents.

6.6 Keep the wireless charger and receiver device away from water and other liquids.

6.7 If you need to clean the charger, make sure it is disconnected from the power supply.

6.8 Use the ambient temperature at: 0-45 ° C.

6.9 Ambient humidity should be maintained at 20-85% (40 ° C).

* The pictures in the instruction manual are for illustration purposes only. The final product is subject to the actual item.

* Contents: bare machine, charging cable, instruction manual.

* Power adapter not included. Please purchase or use a specified adapter if needed.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- **Reorient or relocate the receiving antenna.**
- **Increase the separation between the equipment and receiver.**
- **Connect the equipment into an outlet on a circuit different from that to which the**

receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body

7. Specifications:

Input: 9V  4A V2  3A

Output power 1: Phone 15W (MAX)

Output power 2: USB-C 5V  1A (MAX)

Charging efficiency: $\geq 73\%$

Transmission distance: 2 to 5mm

Wireless charging operating frequency: 110-205KHz

Speaker power: 5W

Product size: 408.7*229*153.7mm