


ZNP

AI Smart Translator

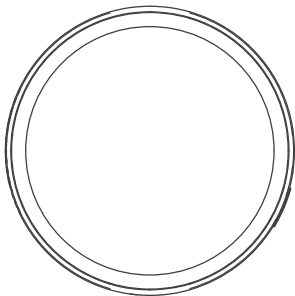

Quick Start Guide

ZNP Z06

Product Specifications

Product Name: ZNP AI Smart Translator

Model: ZNP Z06

Version: 6.0

Range: $\geq 10\text{m}$

Battery Capacity: 400mAh

Rated Input Voltage: 5V $\approx$ 400mA

Battery Type: Li-Polymer Battery, Standard Voltage: 3.7V

Standby Time: About 500H

Charging Time: About 1.5H


Charging Port: Type-C Port

Our Story & Strengths

We spent 3 years challenging norms and building our exclusive AI model Saymi—to fix real regrets: lost ideas without WiFi, missed stories due to language, hidden worries over privacy. That's ZNP.

- Bluetooth + Saymi: Works without WiFi—Saymi responds anytime, anywhere.
- Saymi's 165 Languages: Millisecond switching + visual interaction—no communication barriers.
- Saymi's Local Operation: Solid privacy—no cloud data risks, all processing on-device. We never aimed for "smarter AI"—but a companion that helps you get through all inconveniences.

What's in the box

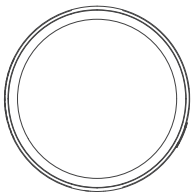

AI Smart Translator



Lanyard



Magnetic ring




Quick Start Guide



USB-C cable

Components

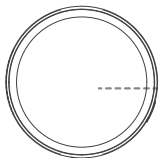

Display Screen




Lanyard Loop



Mic Port

Power Button

USB Type-C port



Speaker

Instructions

I. Power On

Press and hold the power button for about 5 seconds to turn on the device.

II. Power Off / Reboot / Factory Reset

With the device powered on, press the power button for about 3 seconds, select "System Menu," choose the corresponding icon, and tap Confirm to execute the action.

III. Translation

There are 3 ways to start translation:

1. On the device home screen, tap the translation icon, select your languages, and tap the  icon to begin translation.
2. On the wallpaper screen, swipe upward, select your languages, and tap the  icon to begin translation.
3. Double-press the multi-function button on the device, select your languages, and tap the  icon to begin translation.

IV. Offline Translation

Press and hold the multi-function button for 3 seconds, select Offline Translation, choose your languages, then tap the  icon to enter the translation screen. Then press and hold the  icon below the corresponding language to start translating.

Note: To enable offline translation, you need to download the corresponding offline language packs in the app first.

V. Screen Brightness / Volume

Swipe down from the top of the home screen to access the controls for screen brightness and volume.

VI. Switch Wallpaper / Delete Wallpaper / Multi-Image Wallpaper

Swipe left or right on the home screen to switch the wallpaper. Press and hold for 2 seconds to bring up the delete wallpaper option; tap Confirm to delete the wallpaper. (The default system wallpaper cannot be deleted. The device supports up to 4 custom wallpapers and 1 multi-image wallpaper. If you exceed this limit, the new one will automatically replace the oldest.)

VII. Screen Sleep Time

Press and hold the multi-function button for about 3 seconds, select "Display," and you can then set the screen sleep time and enable or

Installing Software



Android Download



ISO Download



Scan to Download the App



Notes:

1. After performing a factory reset, you need to manually delete the pairing record in the app and remove the device from the Bluetooth list on your phone, then re-establish the connection.
2. If the device interface freezes or becomes unresponsive, press and hold the multi-function button for 10 seconds to force a restart.

Software Connection and Usage

2 connection methods:


1. On the APP home page, tap Connect Device, then tap the device named "ZNP Z06" to connect your device.
2. Tap the scan icon in the upper right corner and scan the device QR code to connect.

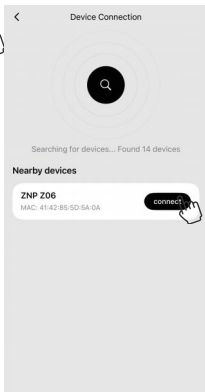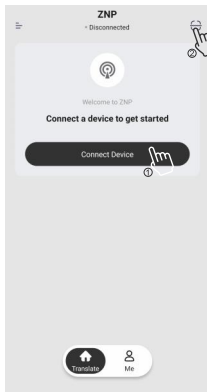

Connection Successful



Access the main app interface as shown below:

- Simultaneous interpretation
- Camera translation
- Offline translation
- Personalized wallpaper

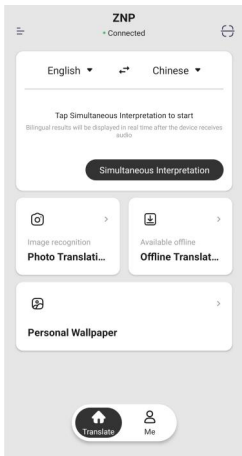


Simultaneous Translation

Tap "Real-time Translation", choose your target language, and begin translating. Tap again to end the conversation.

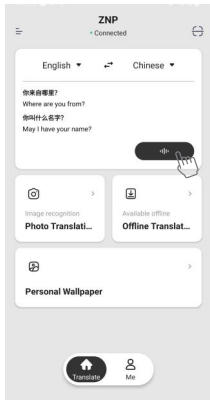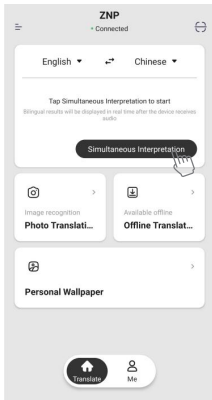


Camera Translate

First select the source language of the text, then choose your target language, and tap to translate via camera.

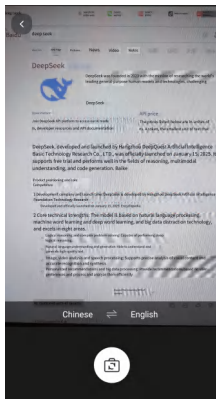



Offline translation

To use offline translation, download the offline language packs for both languages you need in the app. After downloading, the device supports offline translation between those languages.

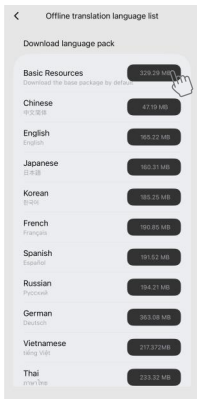

Custom Wallpapers

1. Online Wallpaper: Select your favorite themes. Tap "Upload".
2. Single Image: Tap "+" to choose from the album/file manager. Stickers are also available for image editing. Tap "Upload" to proceed. (Up to 5 historical images can be saved.)
3. Multiple Images: Tap "+" to choose 5 images from the album/file manager. You can also select the playback duration for each image in the carousel. Tap "Upload" to proceed. (Up to 5 multiple-image AVI files can be saved.)

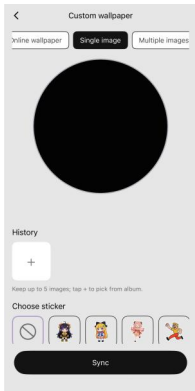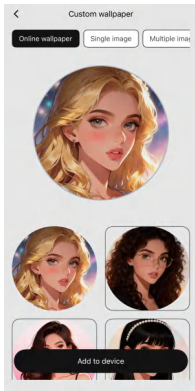

Display Screen Features

Translate Home Page



Language Selection



Simultaneous Interpretation



When connected to the app



In offline translation mode

Settings



Tap any item to access it.

System Menu



Factory Reset / Restart
/ Power Off


Lock Screen Sleep Time



If you select and save "Always On," the screen will not turn off.

After selecting the time, the screen will turn off after that duration.

Brightness / Volume Adjustment

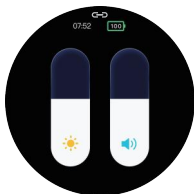

Bluetooth icon status:

 Disconnect

 Connected to phone Bluetooth.

 Connected to the phone via Bluetooth and to the app.

The volume can only be adjusted on the phone when connected to the app.

FCC ID: 2BTLR-Z06

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.