


DOUBLE CYLINDER FOOT PUMP

25996 - 4435 INSTRUCTIONS

- Use foot pump on a flat surface to prevent excessive twisting of frame.
- Unscrew tyre valve cap, push connector firmly onto the tyre valve and then secure by depressing the thumb lock
- For efficient pumping action, place foot centrally on the foot plate and use full strokes on the pump.
- Ensure that the air hose is neither stretched nor kinked during pumping.
- After inflation, lift the thumb lock and release the connector quickly from the tyre valve.
- Replace tyre valve cap.
- Always store with frame clip applied. Store carefully, particularly if stored in the car.
- Every 3 months lubricate pivot points with light oil and apply a few drops through the holes in the bottom of the cylinder. Several pumping strokes will be required to distribute the oil.



Note: The gauge on this footpump is intended as a guide only.

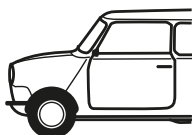

CARS, MOTORCYCLES AND BICYCLES WITH SCHRADER TYPE VALVES

Push connector firmly onto the tyre valve & then secure by depressing the thumb lock on the connector- (A).

THUMB LOCK
CONNECTOR

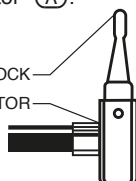


INFLATABLES AND SPORTS BALLS

For inflatables, use the plastic adaptor; simply press connector onto top of plastic adaptor and secure by depressing the thumb lock onto the connector- (B).



For sports balls, use the needle valve.



NEEDLE VALVE



PLASTIC ADAPTOR

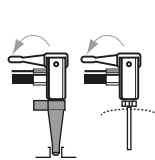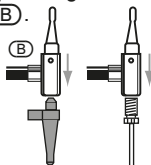

BICYCLES

For bicycles with Woods valves, screw adaptor firmly onto the Woods valve, then push connector onto adaptor and secure by depressing the thumb lock onto the connector- (C).

