

SETTING UP YOUR OVEN

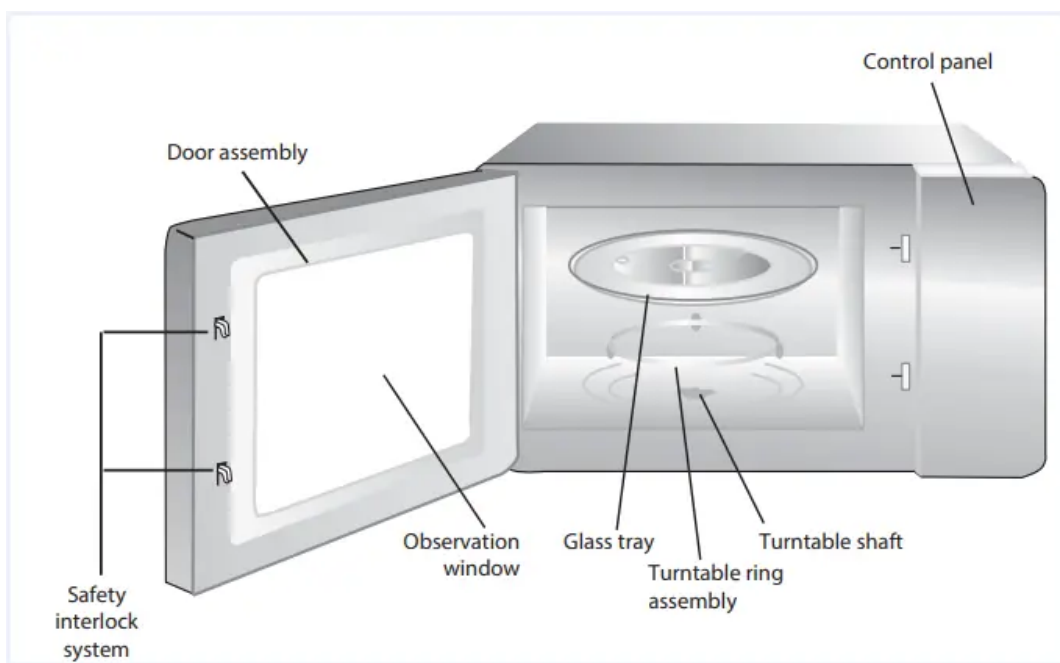
NAMES OF OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

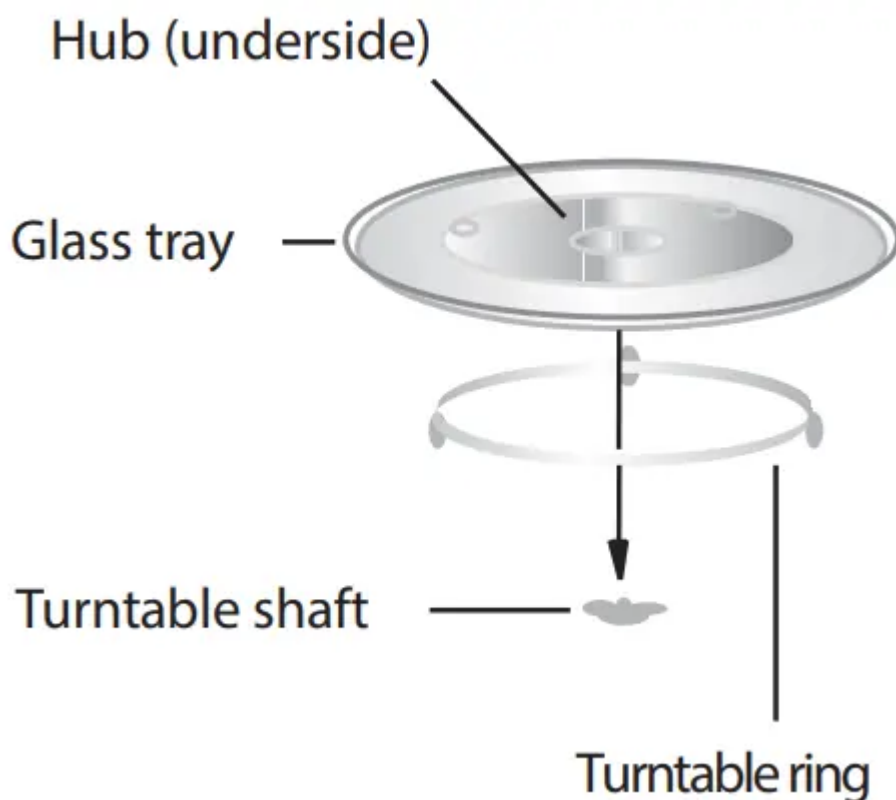
Glass tray : 1

Turntable ring assembly :1

Instruction Manual : 1



Turntable Installation



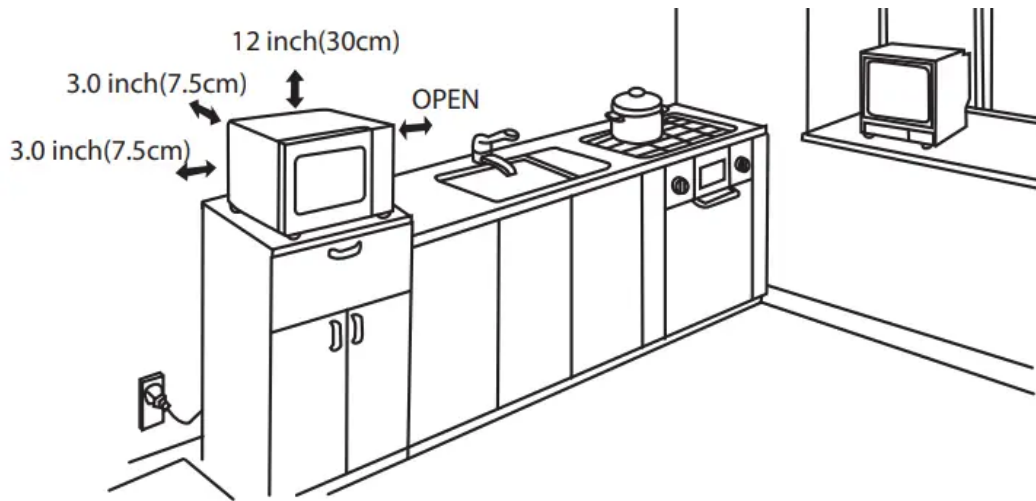
- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.

COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged. Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.



A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open.

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.
- (3) Blocking the intake and/or outlet openings can damage the oven.
- (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

OPERATION

1. POWER LEVELS

Ten power levels are available

Prior to cooking, press Power Level and "PL10" will display. Then press number pads to select a different power level. Please refer to page 1 "MICROWAVE COOK" for detailed power level setting.

| | | | | | | | | | | |
|---------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Level | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
| Power | 100% | 90% | 80% | 70% | 60% | 50% | 40% | 30% | 20% | 10% |
| Display | PL10 | PL9 | PL8 | PL7 | PL6 | PL5 | PL4 | PL3 | PL2 | PL1 |

2. CLOCK SETTING

When the microwave oven is plugged into an outlet, "0:00" will display.

- a. Press Clock once, "00:00" will appear in the display.

b. Press the number pads to enter the current clock time. For example, if the time is now 10:12, press " 1, 0, 1, 2 " in order.


c. Press Clock to finish clock setting, " : " will flash and the numbers will appear as a clock time in the display

3. KITCHEN TIMER

a. Press Timer once, "00:00" will appear in the display.

b. Press the number pads to enter the time amount. The maximum amount of time that can be entered is 99 minutes, 99 seconds.



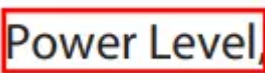
c. Press  to confirm setting, and the timer will start to count down.

d. When the time arrives, the oven will beep 5 times.


4. MICROWAVE COOK

a. Press Cook Time , "00:00" will appear in the display.

b. Press number pads to enter the cooking time. The maximum cooking time is 99 minutes, 99 seconds.

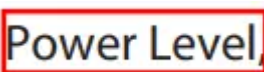
c. Press  , PL10 will flash. Press number pads 0 through 9 to select a different power level if desired. See the POWER LEVEL table above.




d. Press  to start cooking. The remaining cooking time will display. Example : To cook the food with 50% microwave power for 15 minutes.

- Press Cook Time , "00:00" will display.

- Press "1, 5, 0, 0" in order for 15:00 to appear in the display.

- Press  once , then press "5" to select 50% microwave power.



- Press  to start cooking. Buzzer sounds once. The remaining cooking time will display.


5. ONE TOUCH START

a. Instant cooking at 100% power level and 1 to 3 minutes cooking time can be started

by pressing number pads 1 to 3. Press  to increase the cooking time by 30 seconds with each press. The maximum cooking time is 99 minutes, 99 seconds.

b. Instant cooking at 100% power level and 30 seconds cooking time can be started



by pressing . Each repeated press will increase cooking time by 30 seconds. The maximum cooking time is 99 minutes, 99 seconds.

6. WEIGHT DEFROST FUNCTION




a. Press  once, "WEIGHT" will display.


b. Press number pads to input weight to be defrosted. Input the weight range between 0.1 to 6.0 lbs.

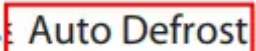
c. If the weight input is not between 0.1 to 6.0lbs, the input will be invalid. A beep will sound and the unit will not work until valid numbers are entered.



d. Press  to start defrosting and the cooking time remaining will be displayed.

7. TIME DEFROST



a. Press  twice, "TIME" will appear in the display.

b. Press the number pads to input the defrost time. The time arrange is 00:01-99:99.

c. The default microwave power is power level 3.




d. Press  to start defro cooking. And the remaining defrost time will display

8. POPCORN


a. Press Popcorn, "1.75" will appear in the display.



b. Press Popcorn two more times to choose the weight, "3.0" and "3.5" will display in order.






c. Press  to cook. The remaining time will display. Oven beeps 5 times when cooking finish.

9. Sensor Cooking

a. In waiting state, press the relevant menu key in the sensor cook, put the food in the oven.  "REHEAT", "PIZZA", "FRZ. VEG" POTATO" and "MEAT" will display


twice in turn. The  and the  will be lighted.


b. Press "" to start sensor reheat function and no need to set time. The "" and the "" will flash. If the sensor receive the humidity signal, the buzzer will sound 2 beeps, and the remaining time will display. Or the screen will show "S-01", "S-02"... "S-05".

Sensor Cook Chart

| Menu | Weight | Initial Temp. | Additional Instructions |
|------------------|----------------------------------|---------------------|---|
| S-01 Reheat | 8~12 Oz | 5 degrees | Reheat food is dinner plate. When sensor time finish, Cooking time counts down. Now you can mix it and then continue reheating. |
| S-02 Pizza | 6~12 Oz (170~340g) | minus 18 degrees | If the weight is over 12 OZ, please set the additional cooking time manually. |
| S-03 Frz. Veg | 4~16Oz (110~450g) | Room Temp. | All pieces should be the same size. Wash thoroughly, add 15ml water per 125g vegetables, and cover with a lid or vented plastic wrap. When cooking time counts down. Press " STOP/CANCEL " to pause and open the oven door to mix and then continue to cook. |
| S-04 Potato | 1~4 Units (6~8Oz each one) | Room Temp. | Pierce each potato with a fork 6 times around it's surface. Place potatoes around the edge of a paper-towel-lined turntable. Do not cover. If additional time is needed, continue to cook manually. Please let stand for 5 minutes in the oven after finishing to avoid burning. |
| S-05 Meat | 8~24 Oz (225~680g) | 5 degrees | Break apart in glass bowl or colander. Cover with lid or vented plastic wrap. Juices should be clear when done, Drain. When cooking time counts down. Press "STOP/CANCEL" to pause and open the oven door to mix and then continue to cook. |

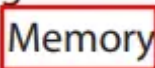
Sensor Reheat Menu

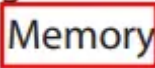
a. In waiting states, and put the food into the microwave oven. Press "" "S-01" is displayed.


b. Press "" to start sensor reheat function and no need to set time.

c. The sensor will sound twice when the steaming was be emanated. The surplus time will displays, the buzzer will sound 5 beeps when finishing and the oven will turn back to the waiting states.

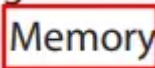
10. MEMORY FUNCTION

a. Press  to program and choose up to three cooking procedures. Each procedure will be indicated by 1, 2 or 3 in the display.

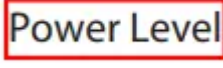
b. Press  until your desired procedure number appears in the display.



Press  to begin it. A maximum of two cooking stages can be set for each procedure.

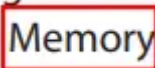
c. To program a procedure, follow the steps listed below. Example: Cook food at 80% Power Level for 3 minutes and 20 seconds; save as memory 2.

- Press  twice; screen displays 2.

- Press Cook Time , then press "3" , "2" and "0" in order.

- Press  once, then press "8" for "PL 8" to display.

- Press  to save the procedure. Oven beeps once. Or press  twice directly to save and start cooking.

- To choose the procedure from the memory list, press  twice.

Screen will display "2". Press  to run procedure.

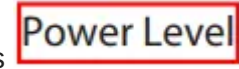
11. Multi-Stage Cooking

At most 2 stages can be set for cooking. If one stage is Defrost, it will automatically set to be the first stage.

EXAMPLE: 80% Power Level for 5 minutes followed by 60% Power Level for 10 minutes; saved as memory 3.


a. Press  3 times, screen displays 3.

b. Press Cook Time, then press "5" , "0" and "0" to set first stage cook time.

c. Press  once, then press "8" to choose 80% first stage cooking power.

d. Press Cook Time again, then press "1" , "0" , "0" and "0" to set second stage cook time.

e. Press **Power Level** again, then press "6" to choose 60% second stage cooking power.

f. Press  to immediately start multi-stage cooking.


g. To choose the procedure from the memory list, press **Memory** three times.

Screen will display "3"; press  to run procedure.

12. TURN ON/OFF THE BUZZER SOUND

It is default that the buzzer sounds is open. In waiting state, long pressing on number 8 for 3 seconds, it sounds a long beep, turns off the sound. When the sounds turn on, long pressing on 8 f or 3 seconds, it sounds a long beep and the sound turn off. All the buttons has no beep when they are pressed, including the ending cooking sounds is turn off too.

13. ENERGY SAVER MODE


a. In standby mode, press the "" once (less than 3 seconds to avoid starting the child lock function) to enter the Energy Saver mode.


b. In child-locked mode, press the "" once (less than 3 seconds) and release to enter the Energy Saver Mode.

c. Above operation is the only way to start the Energy Saver mode.

d. The Energy Saver mode works only if the door is closed.

14. LOCK FUNCTION FOR CHILDREN

Lock: In waiting state, press "" for 3 seconds, there will be a long "beep" denoting the entering into the children-lock state; meanwhile, oven will display "LOCKED". 2 seconds later, the screen will display " L " and the current time, if the

clock has been set. Lock quitting: In locked state, press "" for 3 seconds, there will be a long "beep" denoting that lock is released.

15. INQUIRING FUNCTION

a. In cooking state, press " CLOCK ", the screen will display clock for three seconds, if the clock has been set.

b. In the microwave cooking state, press "**Power Level**" to inquire microwave power level, and the current microwave power will be displayed. After three seconds, the oven will turn back to the previous state. In multi-stage state, the inquiring way can be done by the same way as above.

16. COOKING END REMINDING FUNCTION

When the cooking is over, the buzzer will sound 5 "beep" to alert user the cooking is finished. The screen displays " FINISH".

TROUBLESHOOTING



| TROUBLE | Possible Cause | Possible Remedy |
|-----------------------|---|---|
| Oven will not start | <ul style="list-style-type: none"> a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set. | <ul style="list-style-type: none"> a. Plug into the outlet. b. Close the door and try again. c. Check instructions |
| Arcing or sparking | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with wet towel. |
| Unevenly cooked foods | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food. |
| Overcooked foods | Cooking time, power level is not suitable. | Use correct cooking time, power level. |
| Undercooked foods | <ul style="list-style-type: none"> a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable. | <ul style="list-style-type: none"> a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level. |

| | | |
|---|---|--|
| Improper defrosting | <p>a. Materials to be avoided in microwave oven were used.</p> <p>b. Cooking time, power level is not suitable.</p> <p>c. Food is not turned or stirred.</p> | <p>a. Use microwave-safe cookware only.</p> <p>b. Use correct cooking time, power level.</p> <p>c. Turn or stir food</p> |
| Sensor cooked foods not properly cooked | <p>a. Cover or lid on food not vented.</p> <p>b. Door opened before sensor-detected cooking time appears in display</p> | <p>a. Cover or lid over food must contain vent hole for escaping steam.</p> <p>b. Do not open door to stir or turn food before sensor-detected cooking time appears in display</p> |
| E-5 | <p>a. Frequency converter works abnormally.</p> <p>b. The Interlocking circuit works abnormally (the microswitch fails to be pressed in the right place).</p> <p>c. The magnetron is damaged.</p> <p>d. The signal line for communication between frequency converter and computer board becomes loose.</p> <p>e. The harness terminal of the microwave relay on the computer board becomes loose. To diagnose this fault, it's necessary to observe the microwave working for at least 1 minute.</p> | Please contact the after-sale service, contact number: 855-204-5313. |
| E-6 | Frequency converter or magnetron tube works abnormally. | Please contact the after-sale service, contact number: 855-204-5313. |

Warning



This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

