


# remote control manual Model: ASK-R001

## 1.Key Function Description (as shown in the illustration)

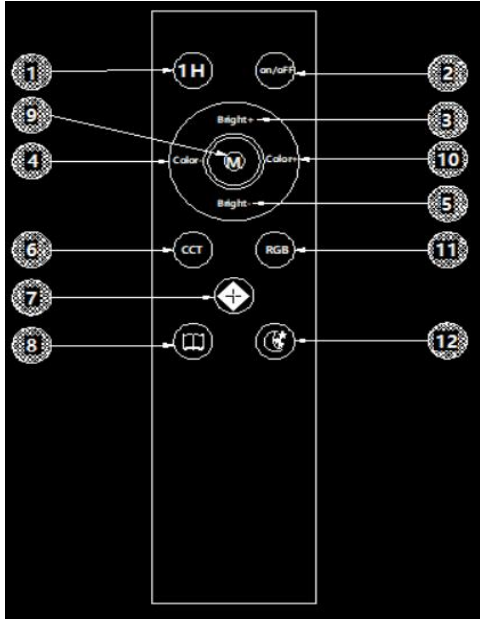

## 2.Remote Controller Parameter Description

Item	Parameter	Remarks
Operating Voltage	3.0V	2x1.5VAAA (7#) Batteries
Transmission Frequency	433MHz	
Modulation Method	OOK/ASK	
Transmitting Power	(-10DB)	Per actual measurement
Standby Current	1uA	
Remote Control Distance	20-30M	Open space
Dimensions	117x38x14.6mm	
Remote Controller Name	4-Key RGEWY Floor Lamp Remote	

### 3. Instructions for Use

#### 3.1: Pairing Function (Key No. 2 in the figure)

Within 1 minute after power-on, long press the power key (Key 2 in the figure). The light blinks three times to indicate successful pairing.

#### 3.2: Clear Code Function

After power-on, long press Key 1. The fixture blinks 3 times to indicate successful code clearing.

#### 3.3: Function Description

(Key 1 in the figure) After turning on the light, pressing this key activates the 1-hour timer function. The timer can be canceled by turning the light off or cutting off the power in any mode.

(Key 2 in the figure) Master power switch, also used for pairing.

(Key 3 in the figure) In CCT mode, increases light brightness. Long press for stepless brightness increase; short press for stepwise brightness increase: 10% – 20% – 30% – 40% – 50% – 60% – 70% – 80% – 90% – 100%.

(Key 4 in the figure) In CCT mode, adjusts light color temperature (warmth). Long press for stepless decrease; short press for stepwise decrease.

(Key 5 in the figure) In CCT mode, decreases light brightness. Long press for stepless decrease; short press for stepwise brightness

decrease: 100% – 90% – 80% – 70% – 60% – 50% – 40% – 30% – 20% – 10%.

(Key 6 in the figure)CCT Mode: Press once to turn on, simultaneously activating the dimming and color adjustment mode (Keys 3, 4, 5, and 10 are used for CCT mode). Press again to turn off.

(Key 7 in the figure)Extreme Light Mode: Press once to turn on and activate the extreme light (starlight effect), press again to turn off.

(Key 8 in the figure)CCT Reading Mode: 4000K, 100% brightness.

(Key 9 in the figure)CCT Color Temperature Cycling Mode: Cycles through 3000K – 4000K – 5000K – 6000K.

(Key 10 in the figure)In CCT mode, adjusts light color temperature (warmth). Long press for stepless decrease; short press for stepwise decrease.

(Key 11 in the figure)RGB Mode: Press once to turn on (activating RGB mode, motor rotation, and water ripple effects). Rotation speed is not adjustable. Press again to close.

(Key 12 in the figure)CCT Night Light Mode: 2700K, 10% brightness.

### 3.4: Touch Functions

1. Switch between CCT Mode and RGB Mode
2. In CCT mode: Short press to switch between 3 fixed color temperatures; Long press for stepless color temperature adjustment.; In RGB mode: Short press to select fixed colors (Red, Yellow, Green, Cyan, White, Blue, Purple); Long press for stepless brightness adjustment.
3. In CCT mode: Short press for stepwise dimming (25%–50%–75%–100%); Long press for stepless brightness adjustment.; In RGB mode: Short press for RGB cycle "breathing"/gradual change; Long press to adjust the speed of the stepless RGB mode.
4. Master Switch / Default Startup:
5. 1st press: Turns on in default CCT mode.
6. 2nd press: Switches to RGB mode.
7. 3rd press: Activates RGB mode (Note: seems to repeat or emphasize RGB startup based on original text).
8. 4th press: Turns off.
9. The cycle repeats.
10. In CCT mode: Long press to reset to 6000K / 100% brightness.

## **FCC Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment, This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.