

# WIRELESS KEYLESS ENTRY

## PROGRAMMING TYPE 1

NOTE: Factory set PIN Code 1111+ENTER for 1st channel (liftMaster yellow learn button), 2222+ENTER for 2nd channel (liftMaster purple learn button), 3333+ENTER for 3rd channel (liftMaster orange/red learn button), 4444+ENTER for 4th channel (liftMaster green learn button).

Chamberlain, LiftMaster, Sears Craftsman, Genius Echo TX4, Genie Overhead Door I, Stanley, Linear, Wayne Dalton and Genie Overhead Door II garage door openers with: **Smart/Learn Button.**

**1** Press and hold the \* and # buttons until the lights on the keypad stop blinking and remain to stay on.

**2** Enter a 4-digit personal identification number (PIN) of your choice:   ?  ?  ?  ?  
Then press the # button.

**3** Press and release the Enter button the number of times that corresponds with the garage door opener type:

Brand Name	Garage Door Opener Type	# of Presses
Chamberlain*	Yellow Learn Button, Security+2.0®, 2011-current	1
LiftMaster*	Purple Learn Button, Security+®, 2006-2014, 315MHz	2
CraftsMan*	Orange/Red Learn Button, Security+®, 1996-2005, 390MHz	3
	Green Learn Button, Billion Code®, 1993-1995, 390MHz	4
Genius® Echo TX4	Genius Echo TX4 433.92mhz	5
Genie® Overhead Door® I	315/390MHz, Intellicode® I, 1995-current	6
Stanley®	Security Code 310MHz 1998-current	7
Linear®	MegaCode 318MHz 1997-current	8
Wayne Dalton®	Rolling Code 372.5MHz 1999-current	9
Genie® Overhead Door® II	315/390MHz, Intellicode® II, 1995-current	10

**4** To exit programming mode, press the 0 button.

**5** Press and release the Learn button on the garage door opener.

The Learn LED will light.  
Within 30 seconds...

**6** Enter the 4-digit personal identification number (PIN) programmed in step 2 then press and release the Enter button until the garage door opener lights flash or two clicks are heard.

**7** To test, press the PIN, then press the ENTER button.

The garage door opener will activate.

## PROGRAMMING TYPE 2

Chamberlain, Liftmaster, Genie, Linear Multi Code, Stanley Multi Code, and Moore-O-Matic garage door openers with: **DIP Switches.**

**1** Press and hold the \* and # buttons until the lights on the keypad stop blinking and remain to stay on.

**2** Enter a 4-digit personal identification number (PIN) of your choice:   ?  ?  ?  ?  
Then press the # button.

**3** Press and release the Enter button the number of times that corresponds with the garage door opener type:

Brand Name	Garage Door Opener Type	# of Presses
Chamberlain*	390MHz, 9 Switch/ 3 Position Dip Switch*	11
Chamberlain*	315MHz, 9 Switch/ 3 Position Dip Switch*	12
Genie®	390MHz, 12 Switch/ 2 Position Dip Switch*	13
Linear® Multi Code	300MHz, 10 Switch/ 2 Position Dip Switch*	14
Chamberlain*	390MHz, 8 Switch/ 3 Position Dip Switch*	15
Stanley® Multi Code	310MHz, 10 Switch/ 2 Position Dip Switch*	16
Genie®	390MHz, 9 Switch/ 2 Position Dip Switch*	17
Linear®	310MHz, 8 Switch/ 2 Position Dip Switch*	18
Moore-O-Matic	310MHz, 8 Switch/ 2 Position Dip Switch*	18
Chamberlain*	390MHz, 7 Switch/ 3 Position Dip Switch*	19

**4** Enter the converted code and press the ENTER button.

The DIP SWITCHES will be located on the garage door opener motor head or inside the remote control.

If the opener has a group of 7-9 switches with 3 positions per switch (**TRINARY**):  
\*Switch in the UP(+) position = Press button 1  
\*Switch in the MIDDLE (0) position = Press button 2  
\*Switch in the DOWN (-) position = Press button 3  
In this example, the code would be:

If the opener has a group of 8-12 switches with 2 positions per switch (**BINARY**):  
\*Switch in the UP(+) position = Press button 1  
\*Switch in the DOWN (-) position = Press button 2  
In this example, the code would be:

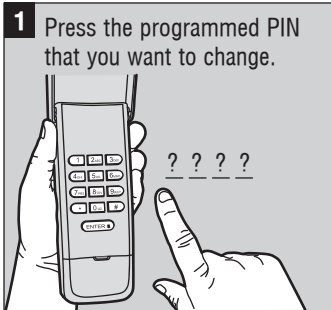
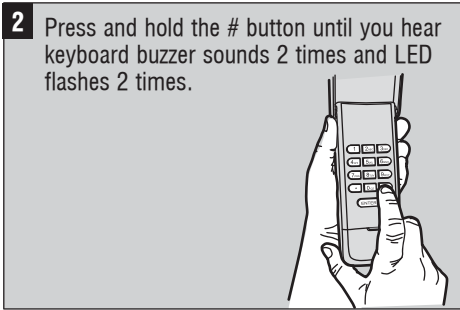
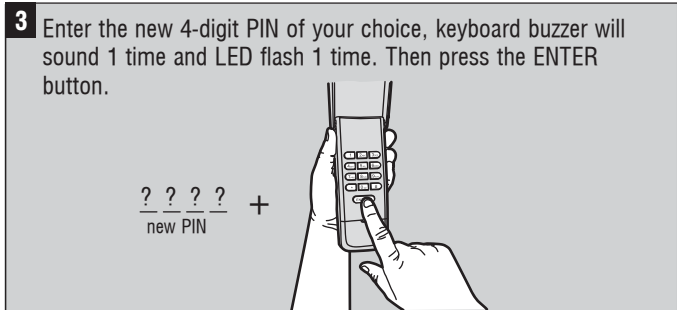
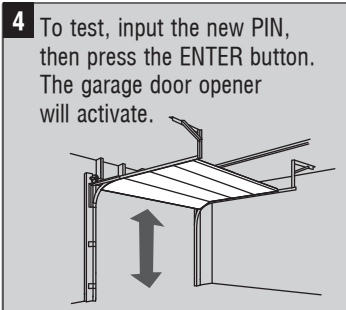
**5** Enter the 4-digit personal identification number (PIN) programmed in step 2 then press and release the Enter button until the garage door opener lights flash or two clicks are heard.

**6** To test, press the PIN, then press the ENTER button.

The garage door opener will activate.

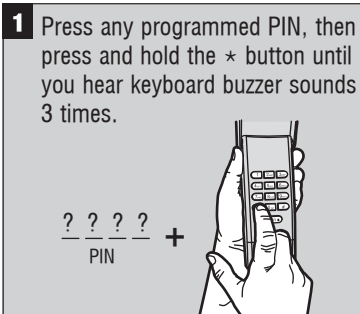
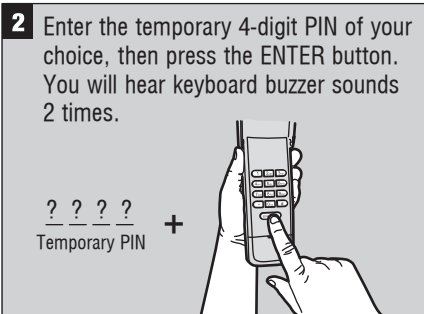
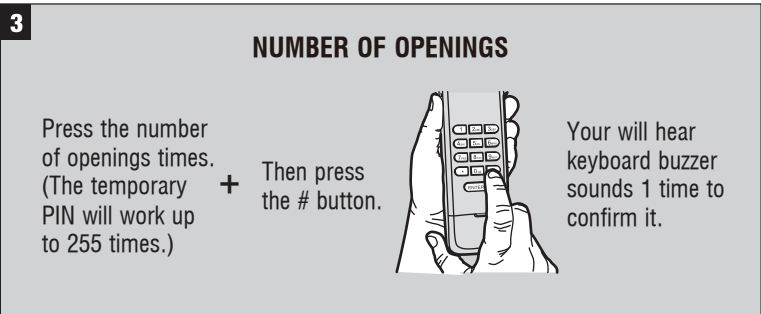
To program the Keyless Entry to more than one garage door opener, repeat the steps above using a new PIN for each additional garage door opener.

## CHANGE AN EXISTING PIN\*

- Press the programmed PIN that you want to change.  

- Press and hold the # button until you hear keyboard buzzer sounds 2 times and LED flashes 2 times.  

- Enter the new 4-digit PIN of your choice, keyboard buzzer will sound 1 time and LED flash 1 time. Then press the ENTER button.  
$$\begin{array}{c} \text{? ? ? ?} \\ \text{new PIN} \end{array} +$$
  

- To test, input the new PIN, then press the ENTER button. The garage door opener will activate.  


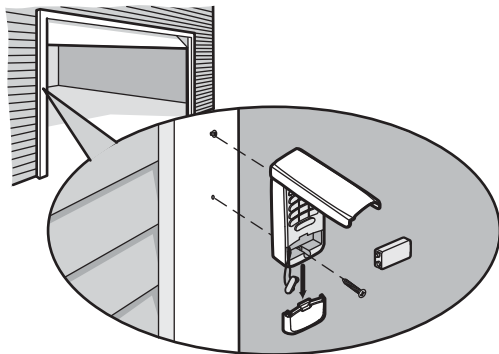
## PROGRAM A TEMPORARY PIN

A temporary 4-digit PIN can be programmed to allow access to visitors. Each programmed PIN can program one temporary PIN. The temporary PIN can be set for a number of door openings. The temporary PIN cannot be the same as any previously programmed PIN.

- Press any programmed PIN, then press and hold the \* button until you hear keyboard buzzer sounds 3 times.  
$$\begin{array}{c} \text{? ? ? ?} \\ \text{PIN} \end{array} +$$
  

  - Enter the temporary 4-digit PIN of your choice, then press the ENTER button. You will hear keyboard buzzer sounds 2 times.  
$$\begin{array}{c} \text{? ? ? ?} \\ \text{Temporary PIN} \end{array} +$$
  

  - NUMBER OF OPENINGS**  
Press the number of openings times. (The temporary PIN will work up to 255 times.)  
$$+ \text{ Then press the \# button.}$$
  
 You will hear keyboard buzzer sounds 1 time to confirm it.
- To test, press the temporary PIN, then press the ENTER button. The garage door opener will activate. If the temporary PIN was set for a number of openings, the test will use up one opening.

## INSTALLATION

- Select a location to mount the Keyless Entry at a minimum height of 5 feet (1.5 m) out of the reach of children.
- Remove battery cover and battery.
- Mark the top mounting hole and drill 1/8 inch (3.2mm) pilot hole.
- Install the top screw, allowing 1/8 inch (3.2mm) to protrude above the surface. Position the Keyless Entry over the top screw.
- Mark the bottom hole and drill 1/8 inch (3.2 mm) pilot hole. Install the bottom screw. Do not overtighten to avoid cracking the plastic housing.
- Reinstall battery and replace cover.



## OPERATION

The garage door opener activates when the PIN and ENTER button are pressed. The keypad will blink for 15 seconds, during that time the ENTER button can be used to stop, start or reverse the door.

If the wrong number is accidentally pressed, press the correct PIN then the ENTER button. The Keyless Entry will transmit only the last four digits that were pressed before the ENTER button.

### ONE BUTTON CLOSE:

Opener can be closed by pressing only the ENTER button Within 30 seconds if the one button close feature has been activated.

#### To activate the one button close feature:

- Press and hold the 1 and 9 buttons for 10 seconds.
- The keypad will blink twice when the one button close feature is activated.

#### To deactivate the one button close feature:

- Press and hold the 1 and 9 buttons for 10 seconds.
- The keypad will blink four times when the one button close feature is deactivated.

### TURN ON/OFF THE KEYBOARD BUZZER:

Each key pressed on the keyboard is accompanied by a beep confirmation. However, you can set the keyboard to silent mode as follows:

- Turn on, long press 2 and 9 button, till you hear the voice of keyboard buzzer.
- Close, long press 2 and 9 button, till you hear the voice of keyboard buzzer.

Note: The buzzer is turned on by default when the system leaves the factory.

### PASSWORD ANTI TAILGATING:

To prevent people entering with you from seeing the password you entered, you can enter the interference code when you enter the password. Enter the interference code. During this process, you can press any number (0 - 9 \*) (except the # key) in the keyboard at will. After multiple interference codes are pressed, press the correct 4-digit password and end with the # button. The keyboard will automatically ignore all the invalid interference codes you entered after the "#" is entered, and transmit the code corresponding to the correct password.

### FACTORY RESET:

If you get something wrong when program or entry PIN Code and can not proceed with any operation, you could reset the keypad PIN code for long press 0 and Enter buttons for 15 seconds till you hear a long sound to confirm it.

## BATTERY

### WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

Replace the battery when the keypad becomes dim or does not light after a button is pressed.

Dispose of old battery properly.

9V Battery

