

**LINKSYS**

**Full User Guide**

**WRT1900ACS**

DUAL -BAND GIGABIT  
Wi-Fi ROUTER

# Table of Contents

<b>Product Overview</b> .....	<b>4</b>
Front/top view .....	4
Back view.....	6
<b>Setting Up: Basics</b> .....	<b>10</b>
Where to find more help .....	10
How to install your router .....	10
<b>How to Use Linksys Smart Wi-Fi</b> .....	<b>13</b>
How to connect to Linksys Smart Wi-Fi.....	13
How to disable remote access.....	14
How to connect directly to your router.....	14
How to improve your wireless connection speed.....	15
How to change your network's name and password.....	15
How to change your router's local access password.....	16
How to change your router's time zone .....	17
How to test your Internet connection speed .....	18
Connecting devices to your network.....	19
How to connect a computer to your network .....	19
How to connect a USB printer .....	19
How to connect other devices .....	21
How to manually connect a network device.....	21
How to connect a network device using Wi-Fi Protected Setup™ .....	21
How to view device details.....	22
How to set up parental controls .....	23
How to set parental controls.....	23
How to configure your guest network.....	24
How to back up your router configuration.....	26
How to customize Linksys Smart Wi-Fi .....	26
Using widgets .....	26
Customizing the Network Map .....	27
<b>Using an External Drive</b> .....	<b>29</b>
Overview.....	29

How to attach a USB drive.....	29
How to use secured folder access.....	30
How to set up authorized users and shared folders.....	30
How to access shared folders.....	33
How to set up your router as a media server.....	33
How to connect your UPnP device to the media server.....	35

## Setting Up: Advanced .....38

How to manually set up your router.....	38
How to manually set up your Internet connection.....	39
How to associate multiple routers with your Linksys Smart Wi-Fi account.....	40
How to get the most out of your dual-band router.....	41
How to control access to your network.....	44
How to improve security using the built-in firewall.....	45
How to set up the DHCP server on your router.....	47
How to set up DHCP reservations.....	48
How to access your network on the Internet.....	48
How to clone a MAC address.....	50
How to connect to your corporate office using a VPN.....	50
How to optimize your router for gaming and voice.....	51
How to enable Voice over IP on your network.....	53
How to configure UPnP.....	54
How to put your new router behind an existing router.....	57
How to expose a device to the Internet.....	60

## Port Forwarding and Port Triggering.....62

How to set up port forwarding.....	62
How to set up port forwarding for a single port.....	62
How to set up port forwarding for multiple ports.....	63
How to set up port forwarding for a range of ports.....	63
How to set up port range triggering for online gaming.....	64

## Maintaining and Monitoring.....65


How to back up and restore your router configuration.....	65
How to upgrade the router's firmware.....	66
How to restore factory defaults.....	67
How to check the status of your router.....	68
How to disable the Ethernet port status lights.....	69

How to test your Internet connection .....	69
How to configure and use logs.....	70
<b>Troubleshooting .....</b>	<b>71</b>
Your router was not successfully set up.....	71
Your Internet cable is not plugged in message.....	72
Cannot access your router message.....	73
After setup.....	74
The Internet appears to be unavailable .....	74
Linksys Smart Wi-Fi does not open in your web browser.....	75
You cannot access Linksys Smart Wi-Fi .....	75
All other troubleshooting has been unsuccessful.....	75
<b>Specifications .....</b>	<b>76</b>
Linksys WRT1900ACS .....	76
Environmental.....	76


# Product Overview

WRT1900ACS

## Front/top view

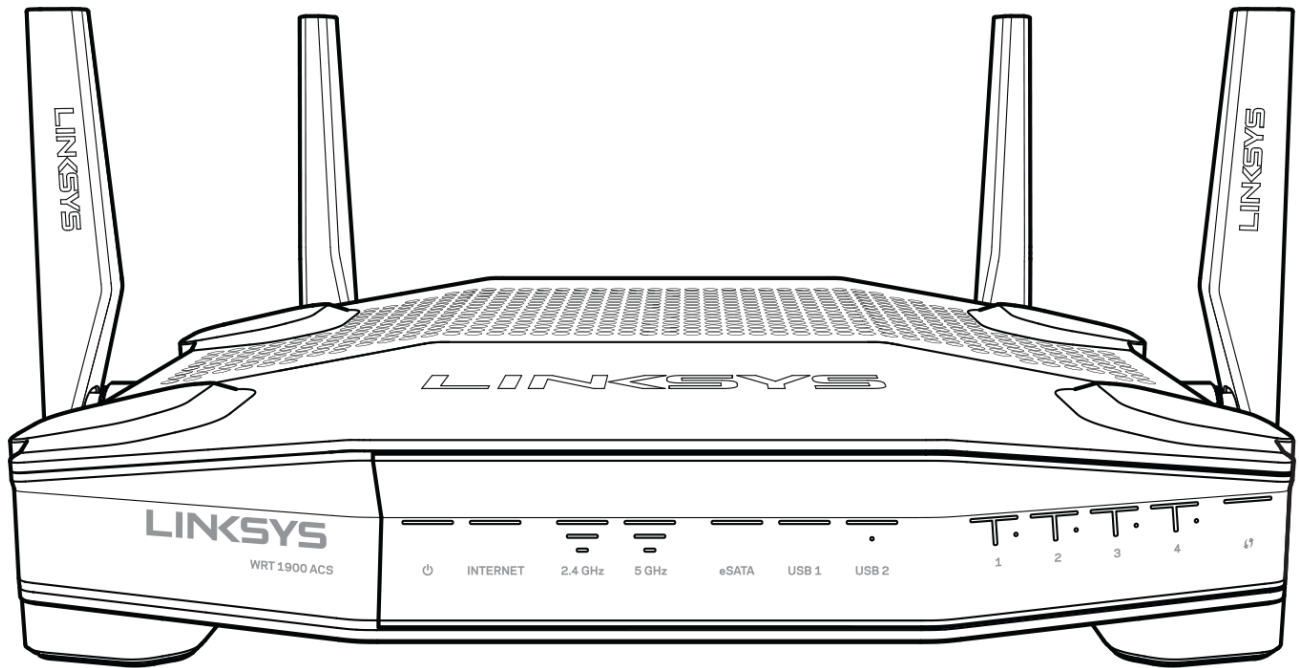

## Front panel

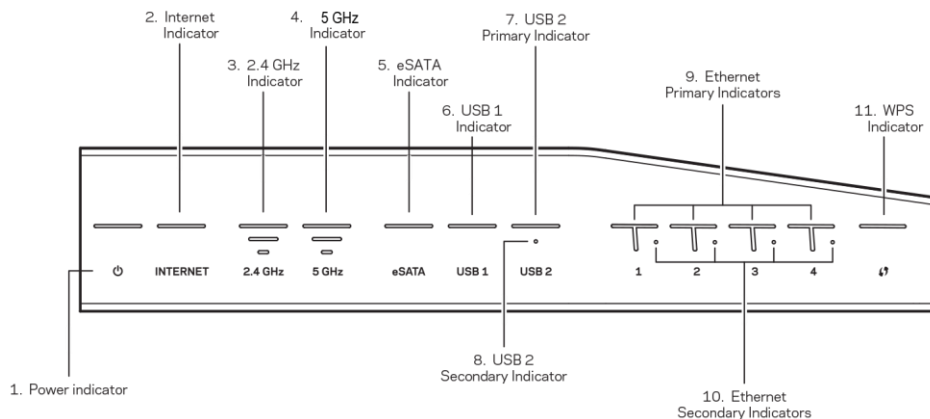

**Power indicator (1)**—The power icon LED is solid white while the router is powered on. It will blink when the router goes through its self-diagnostic mode during every boot-up.

**Internet (2)**—(White/Amber) The Internet LED is solid white when connected to the Internet. It blinks white while the router works to establish a connection. A solid amber LED indicates the connection is down due to configuration issues. Amber blinking indicates that the connection is down due to hardware issues.

**2.4 GHz (3)**—The Wireless LED is solid white when one or more clients are connected to the 2.4 GHz network. If the LED is blinking white, the router is sending or receiving data over the 2.4 GHz network.

**5 GHz (4)**—The Wireless LED is solid white when one or more clients are connected to the 5GHz network. If the LED is blinking white, the router is sending or receiving data over the 5 GHz network.

**eSATA (5)**—When off, the USB/eSATA port is off or a USB device is connected. The LED is solid white when an eSATA device is connected. A blinking white LED indicates activity through the eSATA port.

**USB1 (6)**—When off, the USB /eSATA port is off or an eSATA device is connected. The LED is solid white when a USB device is connected. A blinking white LED indicates activity on the port.

**USB2 Primary (7)**—When off, the USB 3.0 port is off. The LED is solid white when a USB device is connected. A blinking white indicates activity on the port.


**USB2 Secondary (8)**—When off, a USB 1.0 or USB 2.0 device is connected. A solid white LED indicates a USB 3.0 device is connected.

**Ethernet Primary (9)**—These numbered LEDs correspond with the numbered ports on the router's back panel. If the white LED is solid, the router is connected to a device through that port. A flashing white LED indicates network activity over that port.

**Ethernet Secondary (10)**—If the white LED is off, the router is successfully connected to a device through that port at 10/100 Mbps. A solid white LED indicates that the router is successfully connected to a device at 1000 Mbps.

**🔊 (11)**—The LED blinks for up to two minutes during Wi-Fi Protected Setup. It will be solid white for five seconds to indicate a successful connection. The LED blinks amber if the Wi-Fi Protected Setup process fails. Make sure the client device supports Wi-Fi Protected Setup. Wait until the LED is off, and then try again. The router supports one session at a time.

## Back view

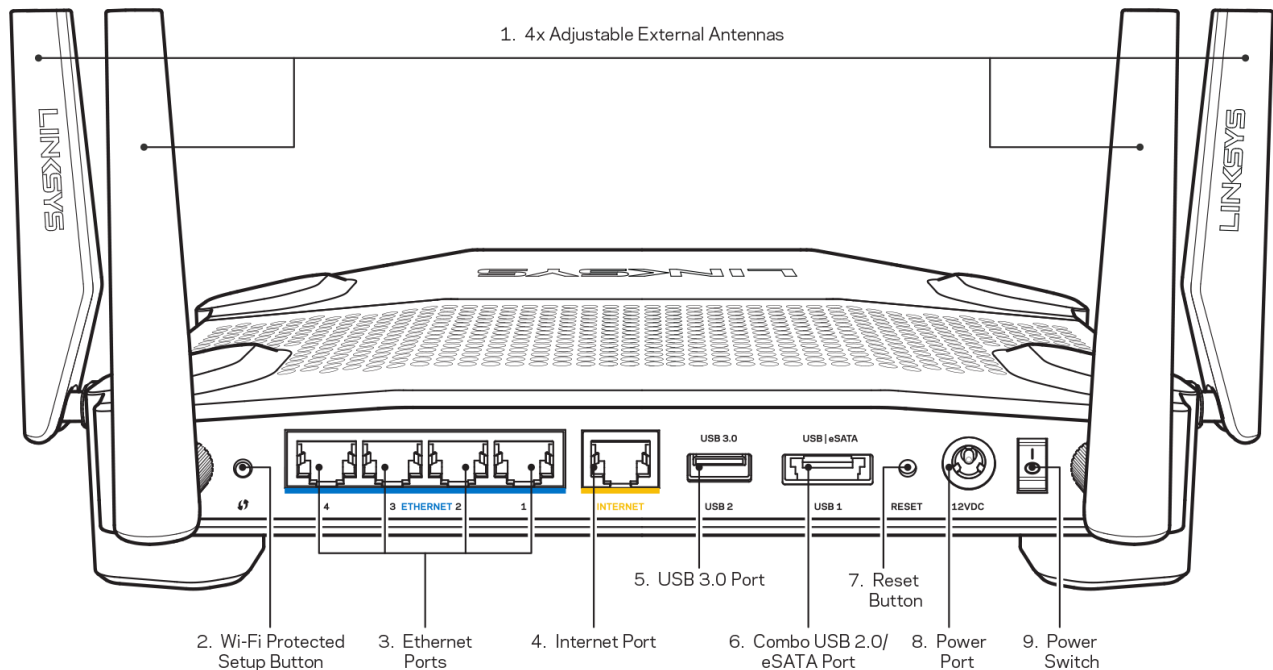

**Adjustable external antennas (1)**—This router ships with four adjustable external antennas that should be screwed in securely before powering it on.

**Wi-Fi Protected Setup™ button (2)**— Press to configure wireless security on Wi-Fi Protected Setup-enabled network devices.

**Ethernet ports (3)**—Connect Ethernet cables to these blue gigabit (10/100/1000) ports, and to wired devices on your network.

**Note**—For best performance, use CAT5e or higher rated cables on the Ethernet ports.

**Internet port (4)**—Connect an Ethernet cable to this yellow gigabit (10/100/1000) port, and to a broadband Internet cable/DSL or fiber modem.

**Note**—For best performance, use CAT5e or higher rated cables on the Ethernet ports.

**USB 3.0 port (5)**—Connect and share USB drives on your network or on the Internet.



**USB 2.0/eSATA port (6)**—Connect and share a USB or eSATA drive on your network or on the Internet. You can also connect a USB printer and share it across your network.

**Reset button (7)**—Press and hold for until the power LED starts flashing to reset the router to factory settings. You can also restore the factory settings using Linksys Smart Wi-Fi on the Internet or mobile app.

**Power port (8)**—Connect the included AC power adapter.


**Power switch (9)**—Toggle to turn on/off the router.

Avoid overheating

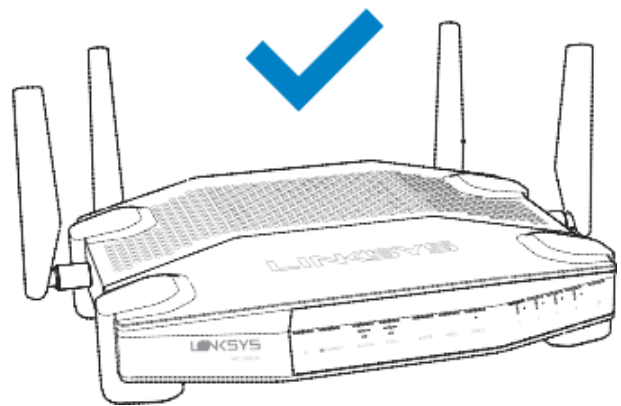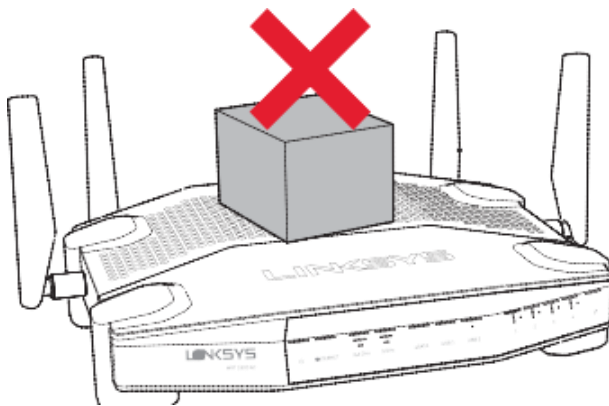

## Wall-Mounting Placement

The router has wall-mount slots on the bottom of each foot for flexibility in mounting the router on the wall. The distance between the slots on the short side is 104 mm. The distance between the slots on the longer side is 210 mm. Two screws are needed to mount the router.

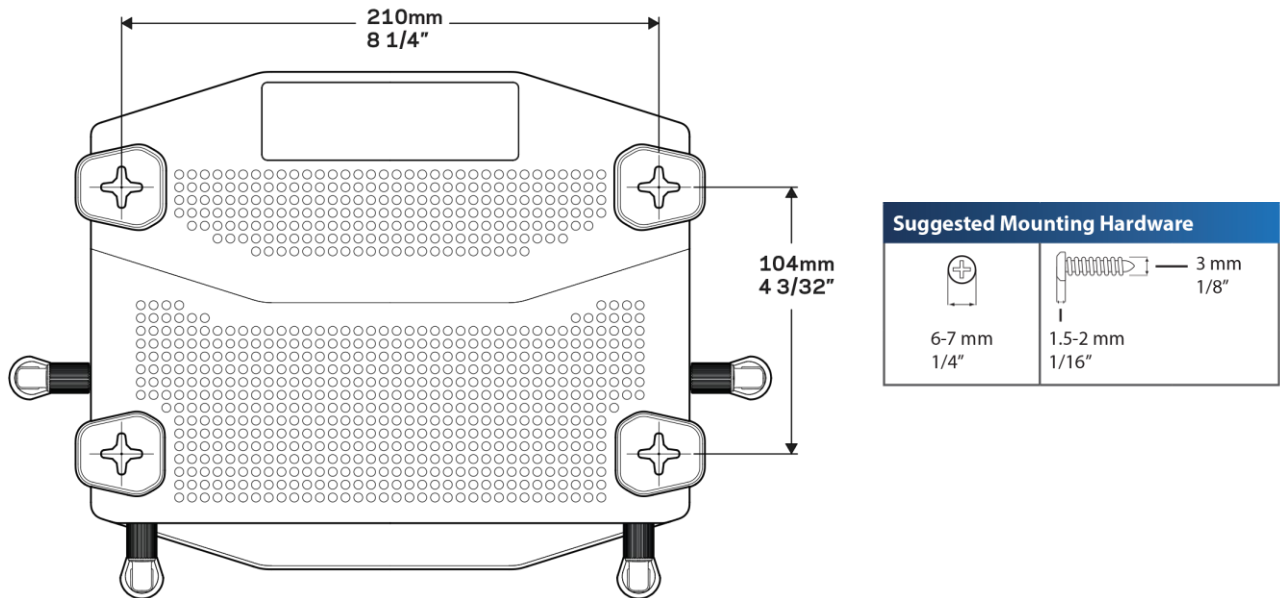

**Note**—Linksys is not responsible for damages incurred by unsecured wall-mounting hardware.

### Mounting Instructions

Determine where you want to mount the router and which side you should use to mount it. Make sure that the wall you use is smooth, flat, dry, and sturdy. Make sure the location is within reach of an electrical outlet.



Before drilling holes, choose the template orientation that fits your installation. Drill the holes using the template.

Insert a screw into each hole and leave 8 mm of its head exposed.



Position the router so the wall-mount slots line up with the two screws.

- o Place the wall-mount slots over the screws and slide the router down until the screws fit snugly into the wall-mount slots.

Print the next page at 100% size, and place on the wall to ensure precise spacing of holes.

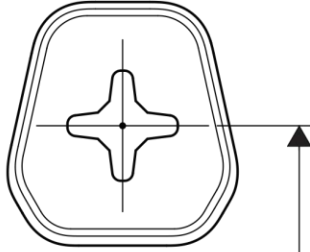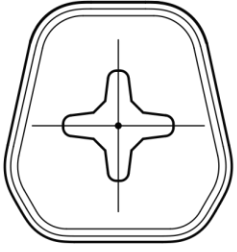

210mm  
8 1/4"

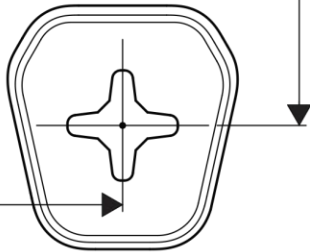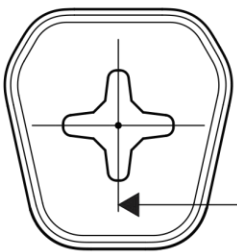

104mm  
4 3/32"




# Setting Up: Basics

## Where to find more help

In addition to this user guide, you can find help at these locations:

- [Linksys.com/support/wrt1900acs](http://Linksys.com/support/wrt1900acs) (documentation, downloads, FAQs, technical support, live chat, forums)
- Linksys Smart Wi-Fi help - Connect to Linksys Smart Wi-Fi (page [13](#)), then click Help at the top of the screen)

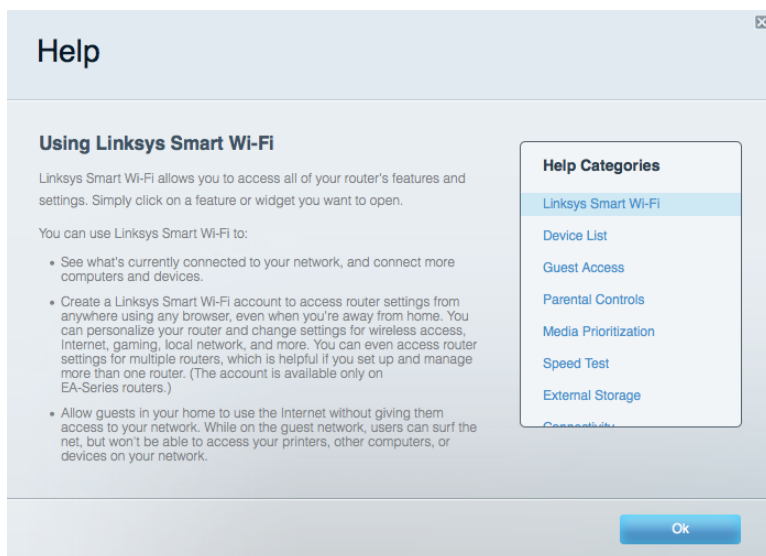

## How to install your router

1. If replacing an existing router, disconnect that router first.
2. Connect the antennas, plug in your router to a power source, and press the power switch to | (on).
3. Connect the Internet cable from your modem to the yellow Internet port on your router. Wait until the power indicator LED on the front panel is solid.
4. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) If you need help connecting to the network refer to your device documentation on the provided CD.

**Note**—You will not have Internet access until router setup is complete.

5. Open a web browser to launch the Linksys Smart Wi-Fi Router setup instructions. If you don't see the instructions, type <http://linksysmartwifi.com> in the address bar.

At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account. Use Linksys Smart Wi-Fi to configure your router from any computer with an Internet connection. Manage your router's settings:

- Change your router's name and password
- Set up guest access
- Configure parental controls
- Connect devices to your network
- Test your Internet connection speed

**Note**—*As part of the router setup process, you will be sent a verification e-mail. From your home network, click the link in the email to associate your router with the Linksys Smart Wi-Fi account.*

**Tip**—*Print the next page, then record your router and account settings in the table below as a reference. Store your notes in a safe place.*

2.4 GHz Network Name	
Network Password	
5 GHz Network Name	
Network Password	
Router Password	
2.4 GHz Guest Network Name	
2.4 GHz Guest Network Password	
5 GHz Guest Network Name	
5 GHz Guest Network Password	
Linksys Smart Wi-Fi Username	
Linksys Smart Wi-Fi Password	



# How to Use Linksys Smart Wi-Fi

This user guide represents the user experience of the cloud-based Linksys Smart Wi-Fi administrative interface. Some features and functionality might be different from those of the local firmware on your router. We recommend creating a Linksys Smart Wi-Fi account and using the cloud-based interface, rather than logging in with your router admin password, because it will always be the most up-to-date experience.

Some sections, including “How to back up and restore your router configuration” on page [65](#) requires connecting directly to the router (see page [14](#)), and requires the router’s admin password.


You can change router settings to make your network more secure or to work better with a device or game. Being able to adjust the settings while you’re away from home can help make router administration easier. You can configure your router from anywhere in the world by using Linksys Smart Wi-Fi, but you can also configure your router directly from your home network.

Linksys Smart Wi-Fi may be available for your mobile device, as well. See your device’s app store for information.

## How to connect to Linksys Smart Wi-Fi

To connect to Linksys Smart Wi-Fi:

1. Open your computer’s web browser.
2. Go to <http://www.linksyssmartwifi.com> and log into your account.

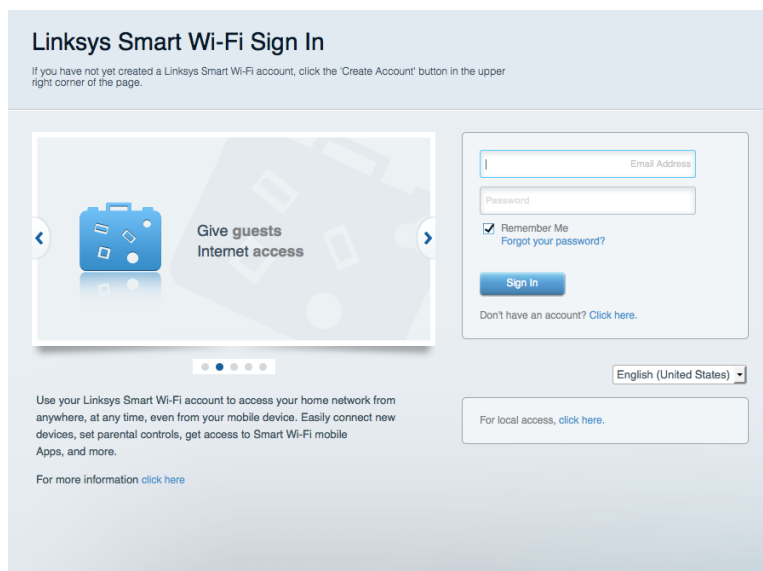


If you can’t remember your password, click *Forgot your password?* and follow the on-screen instructions to recover it.

## How to disable remote access

If you want to configure your router only while you are on your home network, you should disable remote access.

To disable remote access:

1. Log in to Linksys Smart Wi-Fi.
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Administration* tab, then deselect *Allow remote access to Linksys Smart Wi-Fi*.

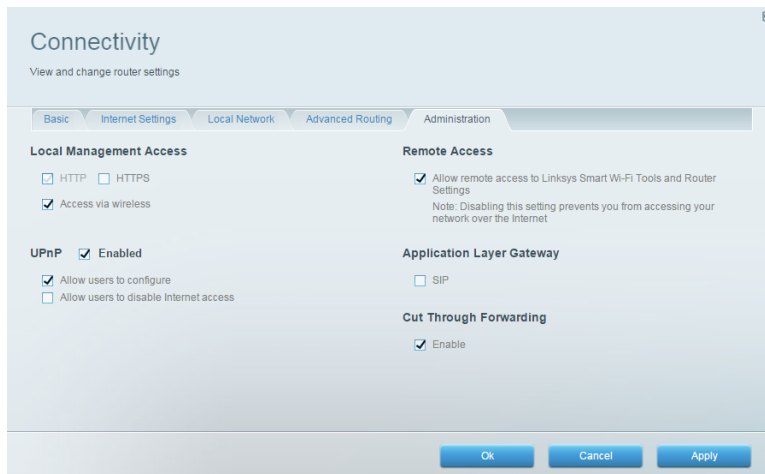

4. Click **Ok**.


## How to connect directly to your router

You can configure your router by directly accessing it on your home network instead of through the Internet-based Linksys Smart Wi-Fi.

To connect to your router while you are on your home network:

1. Open your computer's web browser.

2. Go to [www.linksyssmartwifi.com](http://www.linksyssmartwifi.com) and log into your router using the router password you created when you installed your router. (The “For local access, *click here*” link in the bottom-right corner will switch the input from cloud login to local login with your router admin password.)

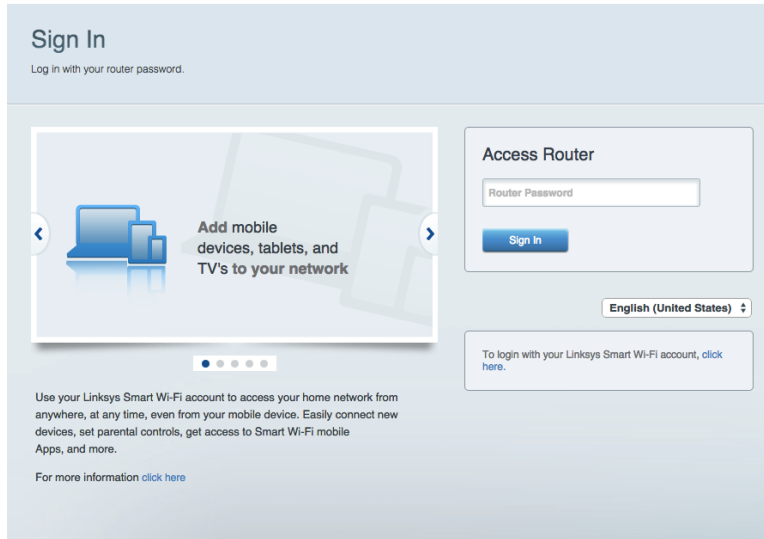

## How to improve your wireless connection speed

Make sure that your router is in a good location:

- For the widest coverage area, install your router near the center of your home, and near the ceiling, if possible.
- Avoid placing the router on or near metal objects (file cabinets and metal furniture), reflective surfaces (glass or mirrors), or masonry walls.
- Any obstruction can weaken the wireless signal (even non-metallic objects), so the fewer obstructions between the router and the wireless device, the better.
- Place the router in a location away from other electronics, motors, and fluorescent lighting.
- Many environmental variables can affect the router’s performance, so if your wireless signal is weak, place the router in several locations and test the signal strength to determine the ideal position.

If possible, upgrade wireless network interfaces such as wireless network cards in computers from older wireless standards to 802.11n or 802.11ac. If a wirelessly networked device uses an older standard, the performance of the entire wireless network may be slower.

## How to change your network’s name and password

You can change the name and password of your network, but if you do so, all wireless devices connected to your router will lose their Internet connection until you reconnect them using the new network name and password.

To change your router's name and password:

1. Log into Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Wireless*.

The screenshot shows the 'Wireless' settings page in the Linksys Smart Wi-Fi interface. It features two sections for configuring wireless networks. The top section is for the 2.4 GHz network, and the bottom section is for the 5 GHz network. Both sections include fields for 'Network name', 'Password', 'Broadcast SSID', 'Security mode', 'Network mode', 'Channel', and 'Channel width'. The 'Network' toggle is set to 'ON' for both. At the bottom of the page are three buttons: 'Ok', 'Cancel', and 'Apply'.


3. Click the *Wireless* tab.
4. To change a network name, type a new name in the Network name box.
5. To change a network password, type a new password in the Password box.
6. Click **Apply** to apply your changes.

## How to change your router's local access password

Your router's local access password was set when you ran the router's setup software, but you can change it at any time. You need the router password to change router settings when you don't have an Internet connection. When you do have an Internet connection, log into your Linksys Smart Wi-Fi account by following the directions under "How to connect to Linksys Smart Wi-Fi" on page [13](#).

To change your router's local access password

1. Log into Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Click *Connectivity* under *Router Settings*.
3. Click the *Basic* tab.
4. Click *Edit* next to *Router Password*. Type your current password, then the new password. Confirm the new password and click **Apply**.

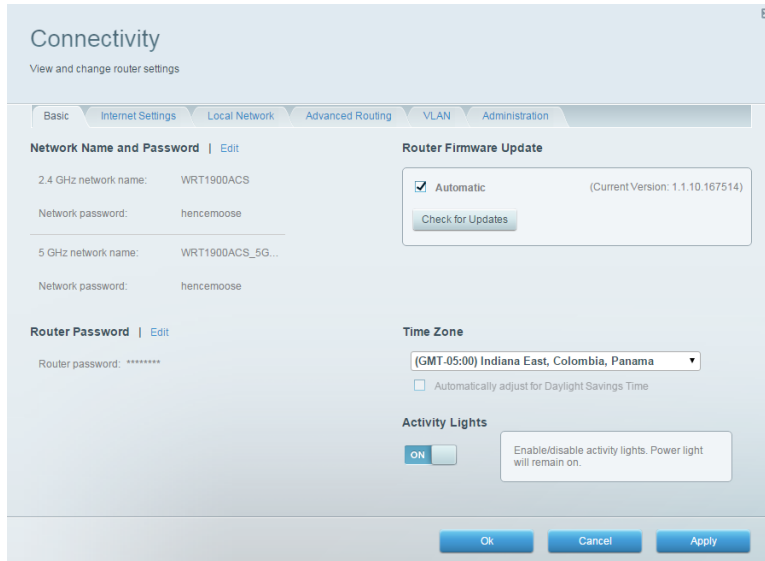


## How to change your router's time zone

Your router's time zone should be set to your local time zone.

To set your router's time zone:

1. Log into Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Click *Connectivity* under *Router Settings*.
3. Click the *Basic* tab, then select your time zone in the *Time Zone* drop-down list and click **Apply**.

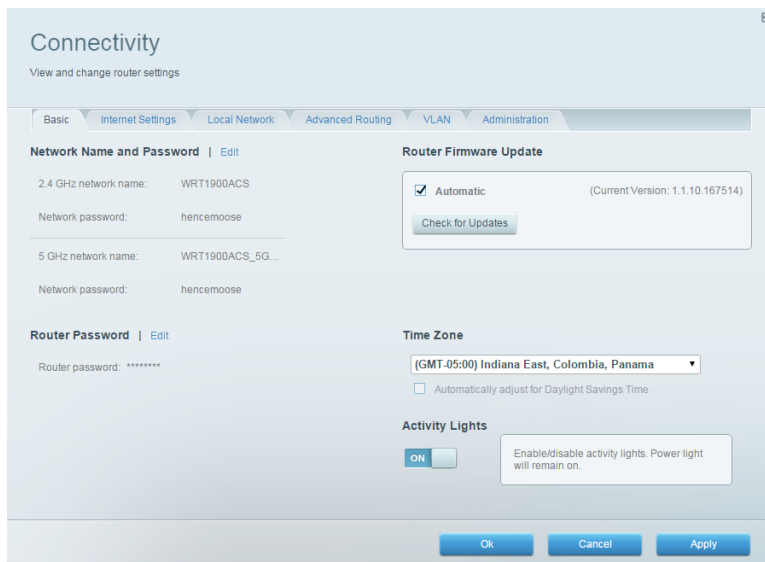


## How to test your Internet connection speed

**Note**—You can only run speed test on a router to which you are connected. Be sure to connect to one of the wireless networks of the router you are testing. You cannot run the speed test if accessing your Linksys Smart Wi-Fi cloud account on another router or access point.

Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)

1. Click **Speed Test** under **Smart Wi-Fi Tools**.

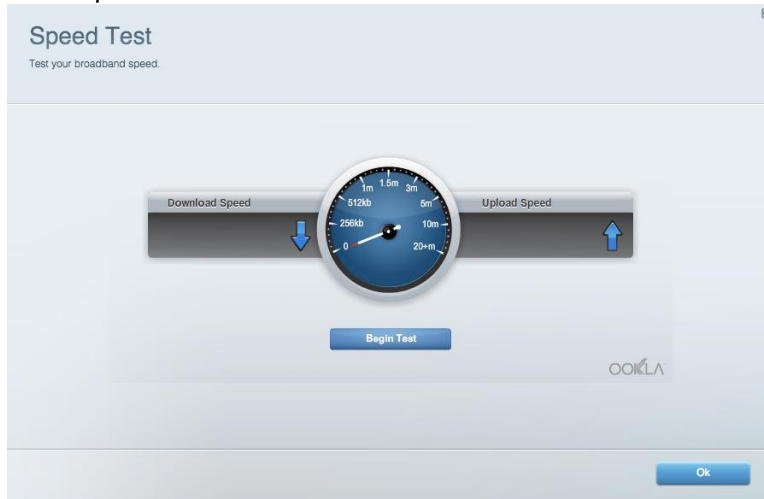

2. Click **Begin Test**. The test measures your download and upload speeds.



**Note**—Internet connection speeds are determined by a variety of factors, including ISP account type, local and worldwide Internet traffic, and number of devices in your home that are sharing the Internet connection.

3. Click **Restart Test** to run it again, and click **Show History** to display the results of past tests.

## Connecting devices to your network

Your Linksys router is the nerve center of your home network. Your router safely opens the Internet to your network, and all of your computers and network devices rely on your router to pass files, media, and network commands in an organized, error-free way. Whether connected wirelessly or with cables, each part of your network needs the router in order to work reliably with the other parts of your network.

## How to connect a computer to your network


At the computer you want to connect, enter your network's connection information into your wireless manager.

After that computer connects to your network, log in to Linksys Smart Wi-Fi (see "How to connect to Linksys Smart Wi-Fi" on page [13](#)), then click *Device List* to confirm that your router recognizes the new computer. You can use the Device List to monitor all network-attached devices.


## How to connect a USB printer

To connect a USB printer to your network through the router's USB port:


1. Log into Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Click *Network Map*, then click **Add a Device**.

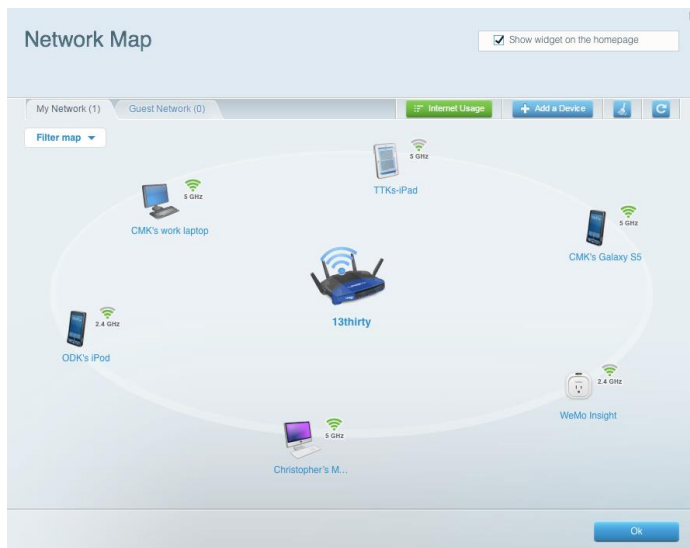

3. Under *Select the type of device to add to your network*, click **USB Printer**.

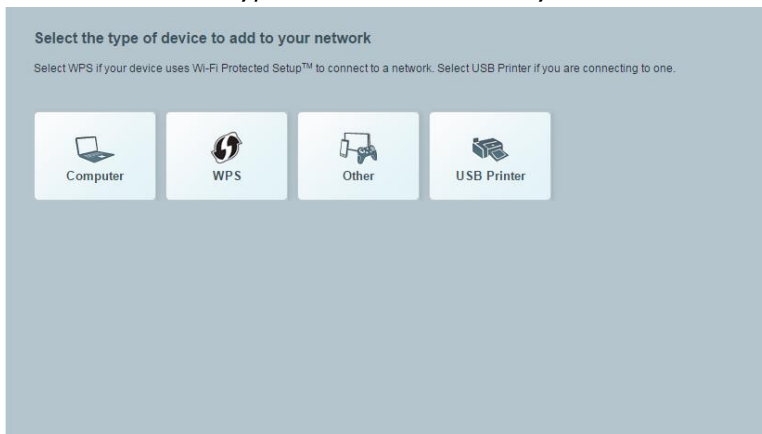

4. Follow the on-screen instructions for downloading and installing the VUSB (virtual USB) software for your computer.

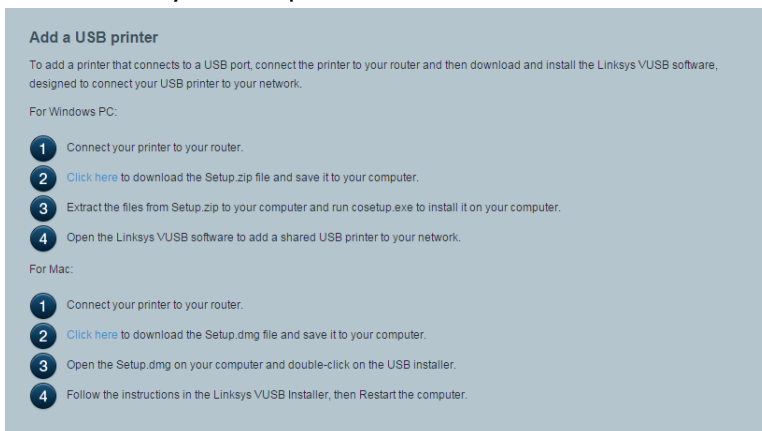

To connect a wireless printer to your network:

1. Follow the printer's instructions to connect it to your network. Use the connection information available in Linksys Smart Wi-Fi.
2. After that printer connects to your network, log into Linksys Smart Wi-Fi (page [13](#)), then click *Network Map* to confirm that your router recognizes the new printer.

When you set up a wireless printer make sure that it supports the WPA/WPA2 wireless encryption standard.

If your wireless printer supports Wi-Fi Protected Setup, you should use Wi-Fi Protected Setup to connect the printer to your network. See "How to connect a network device using Wi-Fi Protected Setup" on page [21](#).

## How to connect other devices

Many other types of wireless network devices can connect to your home network.

- Game consoles
- Internet-capable TVs and media players
- Digital music players
- Smartphones

Because of the wide variety of devices and methods of connecting, you must manually enter network information into the devices for a successful network connection.

**Tip**—For more instructions on connecting a game console to your network, see also the following:

- [“How to optimize your router for gaming and voice” on page 51](#)
- [“How to set up port forwarding” on page 62](#)
- [“How to set up port range triggering for online gaming” on page 64](#)

## How to manually connect a network device

Follow the device’s instructions to connect it to your network. Use the connection information available in Linksys Smart Wi-Fi.

After the device connects to your network, log into Linksys Smart Wi-Fi (page [13](#)), then click *Network Map* to confirm that your router recognizes the new device.

## How to connect a network device using Wi-Fi Protected Setup™

To connect a device using Wi-Fi Protected Setup:

Plug in and turn on the network device.

Under *Wireless*, click the *Wi-Fi Protected Setup* tab.

Use one of the following methods to complete the setup:

- If the device has a Wi-Fi Protected Setup button, press that button, then click the Wi-Fi Protected Setup button in Linksys Smart Wi-Fi or press the button on the side of your router.
- If the device has a Wi-Fi Protected Setup PIN, type that number into the Device PIN box in Linksys Smart Wi-Fi, then click Register.
- If the device’s own setup asks for the router’s Wi-Fi Protected Setup PIN, enter the number that appears under Router PIN in Linksys Smart Wi-Fi.


## How to view device details

You can use Linksys Smart Wi-Fi to view any network device's network information.

To view network device details:

Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)

Under Smart Wi-Fi Tools, click *Network Map*.

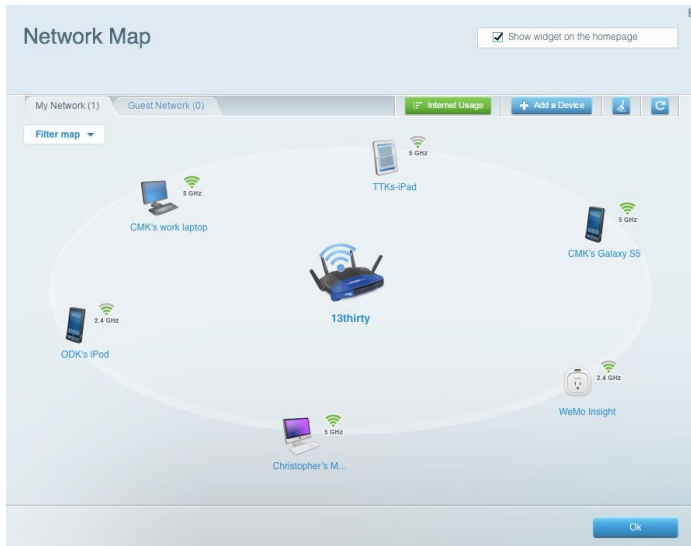

Click a device.

Information about the device appears on the screen.



Click **Ok**.

## How to set up parental controls

With your router, you can use parental controls to do the following:

- Set the times that Internet access is allowed.
- Block websites that you specify, or based on their content.


Set the above restrictions for specific computers.

**Tip**—When someone tries to open a blocked website, a Linksys Smart Wi-Fi login page appears. To view the blocked content, you must log in to your Linksys Smart Wi-Fi account and change the parental control restrictions.

## How to set parental controls

Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)

Under *Smart Wi-Fi Tools*, click *Parental Controls*.

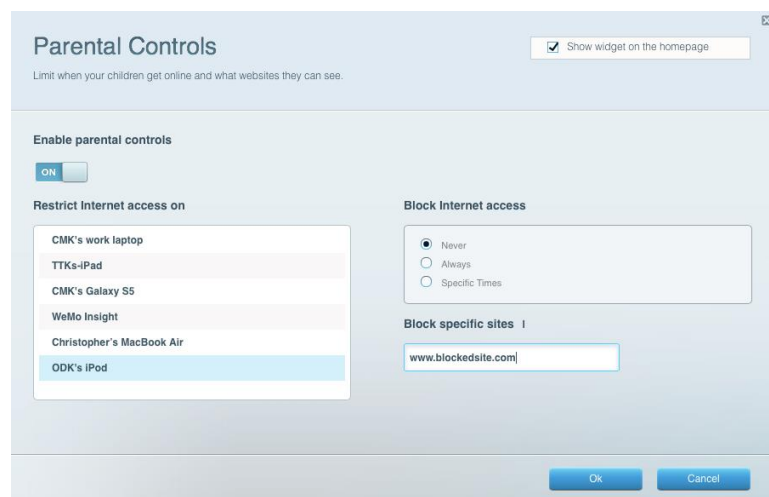

To turn on parental controls, slide the *Enable parental controls* switch so that ON is displayed.

**Tip**—It's not necessary to set parental controls over each computer on your home network. You can set the controls on only those computers that children can access.

To select a computer to apply parental controls to, click the name of the computer in the *Restrict Internet access* on list.

To block Internet access on the selected computer(s), under *Block Internet access*:

- Select *Never* to allow Internet access.
- Select *Always* to always block Internet access.
- Select *Specific Times* to set the times when Internet access is allowed.
  - Click *Edit* to change the Internet access schedule. You can click and drag to select or deselect a block of time.

**Block Internet access**  
Select the times and days to block Internet access.

	12	1	2	3	4	5	6	7	8	9	10	11
Sunday												
Monday												
Tuesday												
Wednesday												
Thursday												
Friday												
Saturday												

Router Time: 1:49:03 PM | [Edit](#)

To block specific websites:

Click *Add* next to *Block specific sites*.

Type the web address (URL) of the website to block, then click **Ok**. You can block up to 10 websites.

**Tip**—It's easier to copy and paste a web address than it is to type it in. Copy the address from your browser's web address box, then paste it into an available box in the *Block specific sites* field of *Linksys Smart Wi-Fi*.

Click **Ok** to apply any other changes to parental controls.

## How to configure your guest network


You can use your router's guest network to provide your guests with access to the Internet, while restricting their access to other resources on your local network. To prevent unauthorized users from using your Internet access, your guest network requires a password be entered for Internet access. The guest network is enabled by default.

Your wireless network's guest network and password were set when you ran the router's setup software, but you can change them at any time.

To set up guest access to your network:

Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page 13.)

Under *Smart Wi-Fi Tools*, click *Guest Access*. Your guest network, which was set up during your router installation, is displayed.

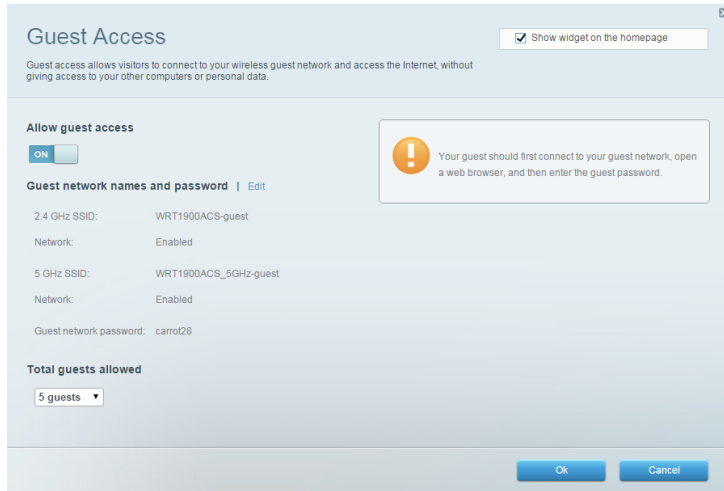

To turn guest access on or off, toggle the *Allow guest access* switch.

The guest network name is based on your 2.4 GHz network name and is automatically generated.


To change the guest network name and password, click *Edit* next to *Guest network name and password*. Type the new name and password.

To change the number of simultaneous guest network users you want to allow, click the drop-down box under *Total guests allowed*, then click the number that you want.

**Tip**—To keep your guest network secure, change the guest password when the guest no longer needs access to the account.

Click **Ok** to apply your changes.

**Tip**—The first time your guest tries to access the Internet through a web browser, they will see the *Guest access* screen. To continue, they must enter the password you provided in the *Guest Password* field, then click **Login**.

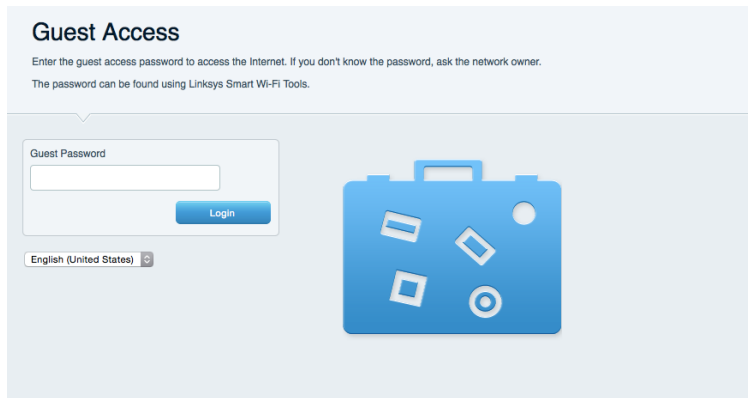

## How to back up your router configuration

When you are done setting up your router, you should back up its settings so that you can restore them later if necessary. For instructions, see “How to back up and restore your router configuration” on page [65](#).

## How to customize Linksys Smart Wi-Fi

You can customize your Linksys Smart Wi-Fi home page by adding or removing widgets. Widgets are miniature versions of menus that let you change basic settings or check the status of your network.

## Using widgets

To add a widget:

Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)

Open a menu, then select *Show widget on the homepage* in the upper-right corner.

To remove a widget:


On the home page, click the × in the upper-right corner of the widget you want to remove, or open a menu, then deselect *Show widget on the homepage* in the upper-right corner.

# Customizing the Network Map

You can change the icon and name of each device on your network.

To change the name

1. Click anywhere on the device tile in Network Map.

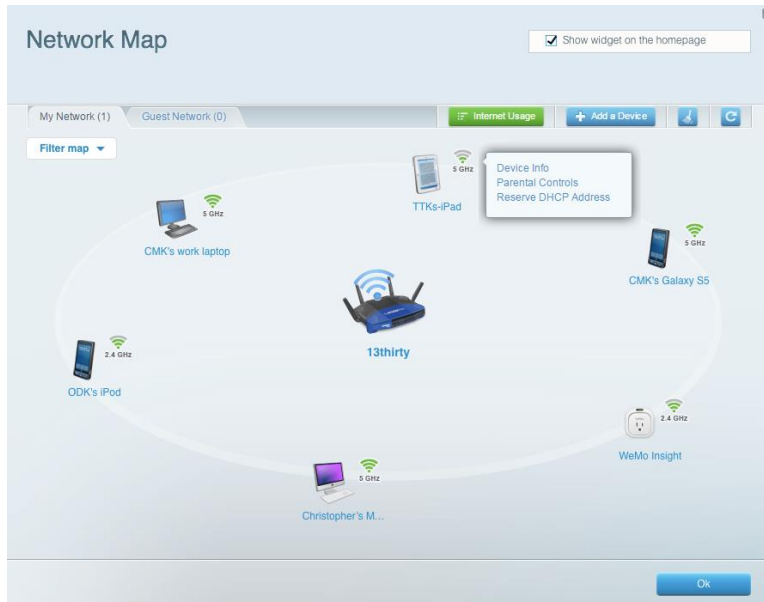

2. Click on Device Info




3. Click on Edit in the upper right corner.

4. Type in a new name.

To change the icon

1. Click anywhere on the device tile in Network Map.

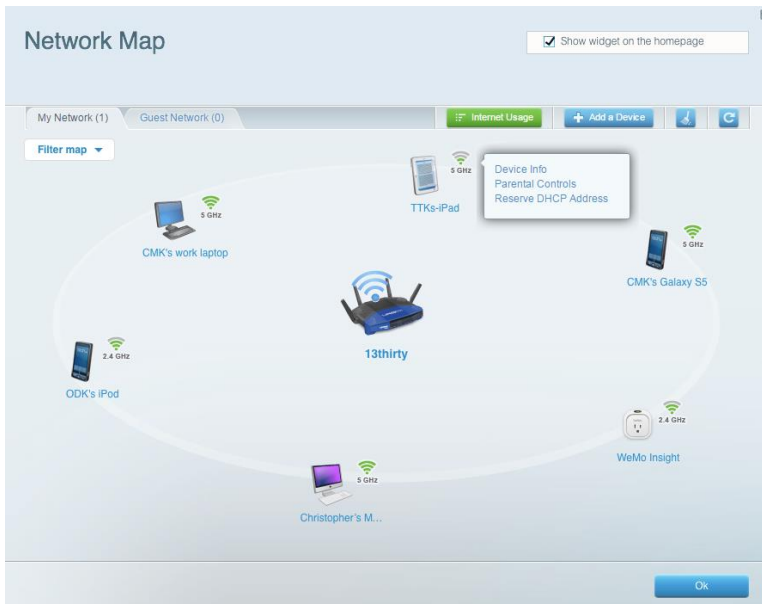

2. Click on Change under the current icon.



3. Choose a new icon from the available options.

# Using an External Drive

## Overview

You can attach most USB drives (including a thumb drive or a high-capacity external drive) to the USB port on your router. You can then use the drive as networked storage, as a media server (for media-enabled devices such as a networked TV), and as an FTP (File Transfer Protocol) server. You can also specify which users can access the content on the drive. Menus are subject to change.

## How to attach a USB drive

If a USB drive is already connected to the router, and you want to attach a different drive to that USB port, you should safely disconnect the old drive first.

To safely remove a USB drive from the router:

1. Log into Linksys Smart Wi-Fi, then click *External Storage* under *Smart Wi-Fi Tools*.
2. In the *Status* tab, click *Safely remove drive*.
3. Disconnect the old drive from the router.

To attach a USB drive to the router:

- Connect the USB drive to an available USB port on the back of your router. Your router will detect the drive.


To update the *External Storage* screen, you may need to click *Refresh*.

To view the status and settings of your attached drive:

1. Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Click *External Storage* under *Smart Wi-Fi Tools*.

The Status tab displays information such as the following:

- Drive capacity and use
- Secure folder access status
- Addresses for accessing shared folders, the FTP server, and media server

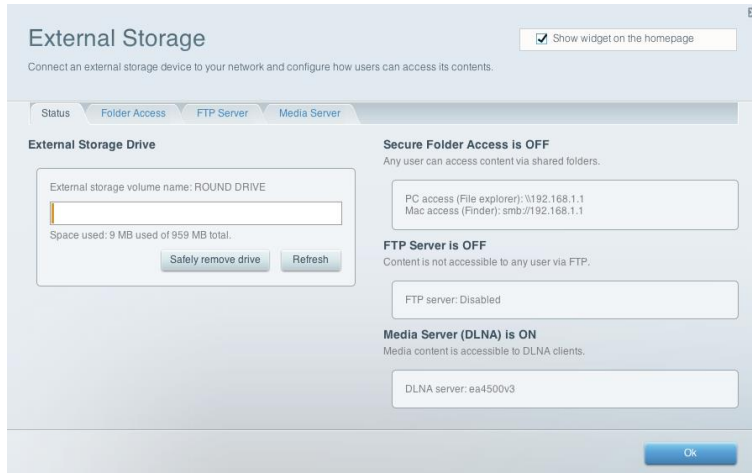

## How to use secured folder access

By default, when you connect a USB drive to your router, the entire contents of the drive are available for read and write access to anyone on your local network (no login credentials are required). You can secure the drive and its folders by restricting access to only authorized users.


**Tip**—When *Secure Folder Access* is on, the entire USB drive is secured.

## How to set up authorized users and shared folders

To enable access to shared folders:

Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)

Click *External Storage* under *Smart Wi-Fi Tools*, then click the *Folder Access* tab.

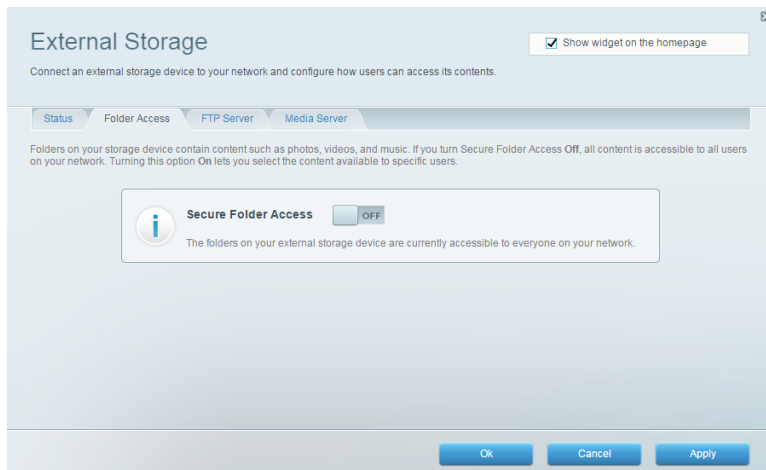

Toggle the switch for *Secure Folder Access* to turn it on.

In the *Authorized users* list, type a Username and Password for each new user.



**Tip**—Two accounts, Admin and Guest, are already set up and cannot be deleted.

Select the permissions to give the user.


- *Read Only* lets the user read (open) the file.
- *Read & Write* lets the user read, rename, overwrite, or delete the file. The user can also save new files to the folder.

Click *Select Share*.

A share is the name you give to folders you want to make accessible. If you already have shares set up, select the check box next to each share you want to grant the user access to, then click **Ok**.


If you do not have any shares set up, create a share.

Click the + button next to *Create new share*. The *Create New Share* dialog box opens.

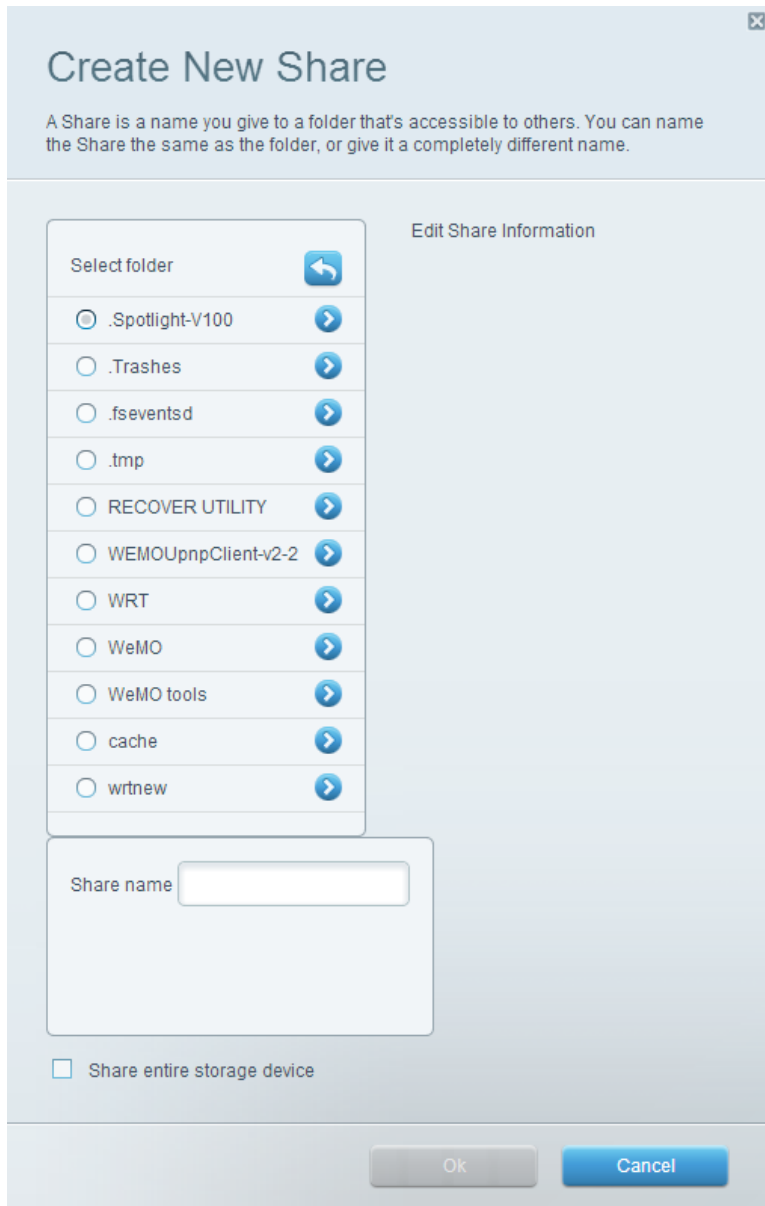

Select the folder that you want to share.

To view subfolders, click the  button next to the right of the folder name.

To return to a parent folder, click the  button at the top of the list. To select all folders on the drive, select *Share entire storage device*.

**Tips**—The share name automatically changes to the name of the folder you selected. You cannot select more than one folder for each share.

To use a different share name for a folder, type the name in the *Share name* field.

Click **Ok**.

Select the check box next to each share you want to grant access to, then click **Ok**.

Click **Add User**.

In the *Authorized users* list, you can also do the following:

- Click *Edit* to change a user's credentials.
- Click *Shares* to change the shares that a user can access.
- Click *Delete* to delete the user account.

## How to access shared folders

To access shared folders through Linksys Smart Wi-Fi, click *External Storage* under *Smart Wi-Fi Tools*.

In the *Status* tab, note the information in the box under *Secure Folder Access is ON*. This is the address you will need to access the shared folders from a file manager.

Enter the access address into your file manager.

**Tip**—You can also usually locate the folder by browsing through your computer's file manager.

Enter your user account name and password. The drive's contents (files and folders) appear in a window.

Use the file manager to open, copy, or view the folder's contents.

**Tips**—File managers display content in many ways, but you can usually use these common actions to navigate through folders:

- Click or double-click a folder name to open it.
- Click, double-click, or right-click a file to open, copy, or view it.

*Drag a file from another window and drop it into the shared folder's window to copy it to the shared folder. (To copy a file to the shared folder, your user account must have write access.)*

## How to set up your router as a media server


A media server lets you share media content across your network. Your router can act as a media server if it has a USB drive attached and if you have UPnP AV (Audio and Video)-enabled or DLNA (Digital Living Network Alliance)-certified devices in your home. Examples of UPnP AV-enabled devices include digital media players, gaming consoles with a built-in media player, and digital picture frames.

For example, if you have a digital media adapter that sends content to your entertainment system, and if your router's set up as a media server, then the digital media adapter can access your router's attached USB drive.


You can specify which folders are used by the media server, add and delete folders, and specify how often the folders are scanned for new content.

**To configure your router as a media server:**

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Click *External Storage* under Smart Wi-Fi Tools. The *External Storage* screen opens.
3. Click the *Media Server* tab.
4. Toggle the switch for *Enable Media Server* to turn it on.

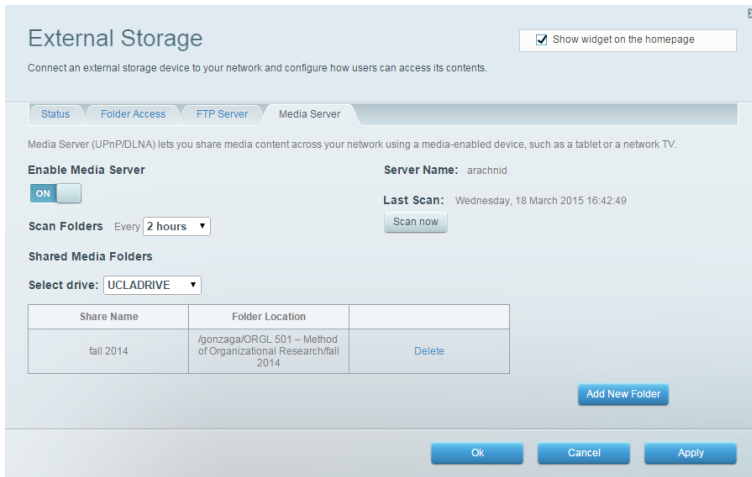


5. Click Add New Folder.

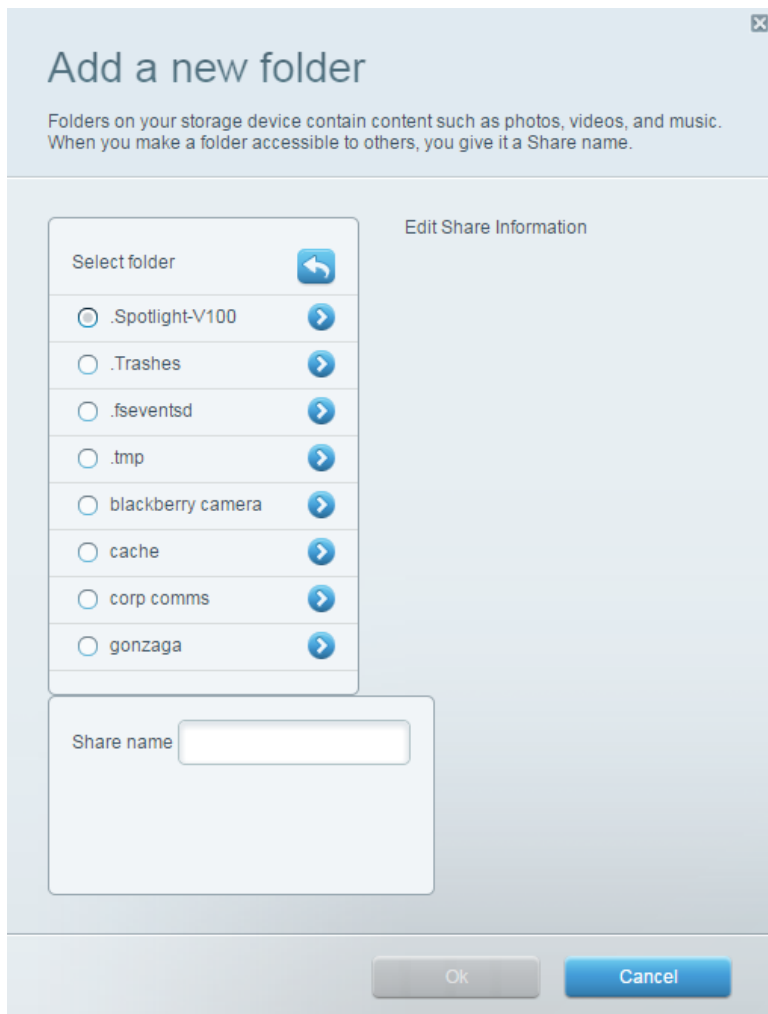

Select the folder that you want to share.

To view subfolders, click the  button next to the right of the folder name.

To return to a parent folder, click the  button at the top of the list.

**Tip**—The share name automatically changes to the name of the folder you selected. You cannot select more than one folder at a time.

Click **Ok** or **Apply** again to save changes.

## How to connect your UPnP device to the media server

After you set up your router's media server, you need to connect a UPnP-compatible device (such as a UPnP-compatible game console or digital media player) to the network so that you can play the media server's content.

### To connect an UPnP device to your router's media server:

Connect your UPnP device to your home network with wired (Ethernet cable) or wireless networking. If you are connecting wirelessly, you need to know your network's name and password. See your device's documentation for help.

On your UPnP device, change the media source to the media server name you specified on your router. (See "How to set up your router as a media server" on page 33.)


See your UPnP device's documentation for help with playing media on the device.

## How to remotely access storage

After you enable the router's FTP (File Transfer Protocol) server, you can access the attached drive's files from anywhere by using either a web browser or FTP software.

### To set up the FTP server:

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page 13.)
2. Click *External Storage* under *Smart Wi-Fi Tools*.
3. Click the *FTP Server* tab.
4. Toggle the switch for *Enable FTP Server* to turn it on.

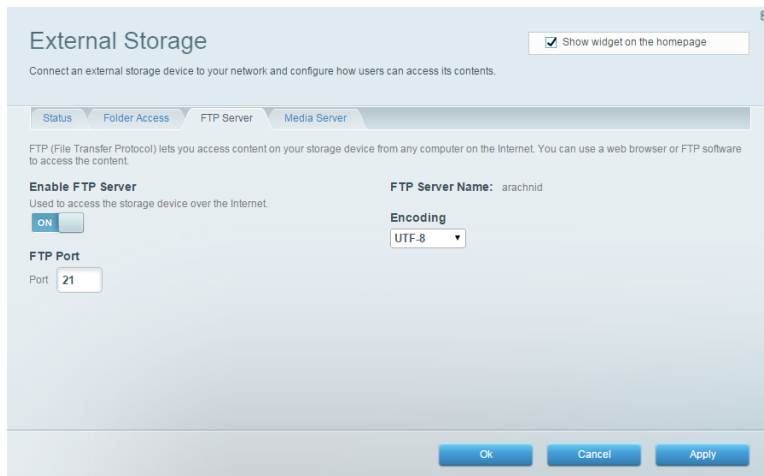

The screenshot shows the 'External Storage' configuration page with the 'FTP Server' tab selected. At the top right, there is a checkbox labeled 'Show widget on the homepage' which is checked. Below this, there are four tabs: 'Status', 'Folder Access', 'FTP Server', and 'Media Server'. The 'FTP Server' tab is active. The page contains the following settings:

- Enable FTP Server:** A toggle switch is set to 'ON'. Below it is the text 'Used to access the storage device over the Internet.'
- FTP Server Name:** Set to 'arachnid'.
- Encoding:** A dropdown menu is set to 'UTF-8'.
- FTP Port:** A text input field is set to '21'.

At the bottom of the page, there are three buttons: 'Ok', 'Cancel', and 'Apply'.

**Tip**—We recommend that you keep the default settings for *FTP Port* and *Encoding*, unless you are an advanced user and have reason to change them.

5. Click **Apply**.
7. Click the *Status* tab.

Note the information in the box under *FTP Server*. This is the information you will need to access the attached storage remotely.

Be sure to use *Secure Folder Access* with FTP. If left unsecured, users on the Internet may be able to add and delete files on the drive.

### To access the attached storage using a web browser:

1. Open a web browser.
2. In the browser's address or URL field, type the address that was provided on the *Status* tab above, starting with ftp://... If you have DDNS (Dynamic Domain Name Service), you can use your router's domain name instead.
3. Enter your User Name and Password. This is the same User Name and Password that were set up in the shared folders Authorized users list. See "How to set up authorized users and shared folders" on page [30](#).

The drive's contents (files and folders) appear in a browser window.

4. Click a file to download it to your computer, or click and drag a file from your computer's file manager to the browser window to upload a file (only if you have read and write access).

### To access the attached storage using FTP client software:

Run your FTP client software.

Refer to the software's help to determine how to connect to an FTP site with the following information:

The address that was provided on the Status tab above, starting with ftp://... If you have DDNS (Dynamic Domain Name Service), you can use your router's domain name instead.

The User Name and Password that were set up in the shared folders Authorized users list. See "How to set up authorized users and shared folders" on page [30](#).

The port and encoding specified during your FTP server setup (usually port 21, and UTF-8 encoding)

Refer to the software's help to determine how to download and upload files.

**Tips**—*FTP software and web browsers display FTP content in many ways, but you can usually use these common actions to navigate through FTP folders:*

- *Click a folder name to open it.*
- *Click a double period (..) or Up to a higher level directory to open a parent folder.*
- *Click or right-click a file to download or view it.*
- *Drag a file from another window and drop it into the FTP window to upload it. (To upload a file, your user account must have write access.)*

# Setting Up: Advanced

## How to manually set up your router

Although running your router's setup software is the easiest way to set up and maintain your router, advanced users may want to manually configure their router. Be careful when changing settings using this method.

Manually set up your router with a cable

1. Plug in your router.
2. Connect an Ethernet cable to the computer and to an available numbered Ethernet (blue) port on the back of your router.
3. Type [linksyssmartwifi.com](http://linksyssmartwifi.com) into a browser.
4. Click *I have read and accepted the License Terms for using this software*, read the license agreement, then select the checkbox.
5. Select *I want to skip Setup and configure my router manually*, and click Next. (If you do not have an Internet connection, click Login in the bottom-right of the next page and enter "admin" in the Access Router field.)

Manually setup your router wirelessly

1. Plug in your router and connect to your modem with an Ethernet cable in the yellow Internet port on the back of the router.  
**Tip**—*Make sure that your computer's wireless networking is turned on.*
2. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) If you need help connecting to the network, refer to your device documentation.
3. Type [linksyssmartwifi.com](http://linksyssmartwifi.com) into a browser.
4. Click *I have read and accepted the License Terms for using this software*, read the license agreement, then select the checkbox.
5. Select *I want to skip Setup and configure my router manually*, and click Next. (If you do not have an Internet connection, click Login in the bottom-right of the next page and enter "admin" in the Access Router field.)
6. If you have a Linksys Smart Wi-Fi account, enter your credentials. Create an account if you haven't already done so. Click Sign In.
7. Enter your router admin password. The default is "admin". Click Login and configure your router settings.

After you finish changing settings, click **Save** and close the browser window.

**Tip**—*For descriptions of the settings, click Help at the top of the screen.*

## How to manually set up your Internet connection

Running setup configures your router's Internet connection. However, for some ISPs (Internet Service Providers), especially those outside of the United States, you may need to manually configure your router's Internet connection.

Connect to your router and log in using the instructions under "How to manually set up your router" on page [38](#).

Under *Router Settings*, click *Connectivity*. The *Connectivity* page will open to the Basic tab. Choose the *Internet Settings* tab.

Connectivity  
View and change router settings

Basic Internet Settings Local Network Advanced Routing Administration

IPv4 | IPv6

Type of Internet Connection | Optional

IPv6 - Automatic: Enabled Domain name: hsd1.pa.comcast.net

DUID: 00:02:03:09:05:05:48:F8:B3:C7:86:9B MTU: Auto

6rd tunnel: Disabled Size: 0

Prefix:

Prefix length:

Border relay:

IPv4 mask length:


Ok Cancel Apply

IPv6 is a new IP protocol that uses simplified packet headers and requires IPsec. It also has improved support for mobile IP and computing devices.

**Note**—To use your router's IPv6 Internet connection settings, IPv6 service from your ISP (Internet service provider) is required. For more information on this service, ask your ISP.

To manually configure your router's IPv6 settings:

- Use an Ethernet cable to connect your router to your computer.
- Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
- Under *Router Settings*, click *Connectivity*.
- Click the *Internet Settings* tab, and click *IPv6*.
- Click *Edit*.

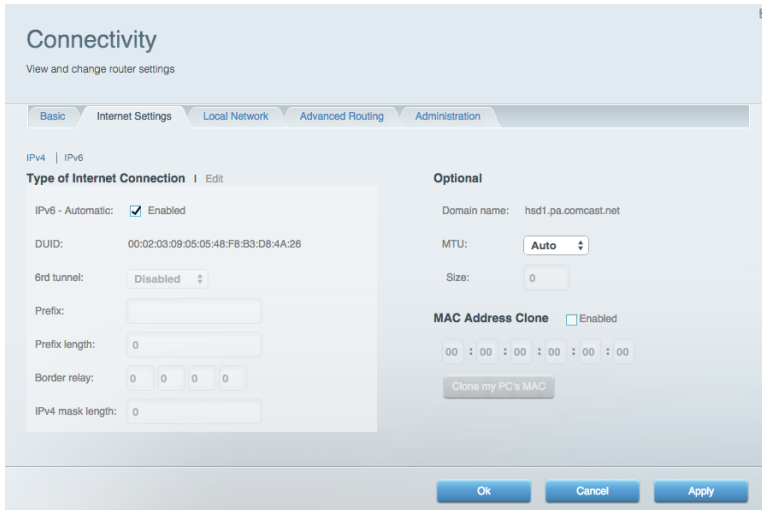

You can now view the following settings:

- *IPv6 - Automatic*—Select *Enabled* to use IPv6 for all network addressing.
- *DUID* (device user ID)—Used by DHCP to identify network clients.
- *6rd Tunnel*—Allows your router to send IPv6 IP addresses over IPv4 networks. To enable this option, *IPv6 - Automatic* must be unselected. To let your router handle the 6rd Tunnel settings (such as prefixes and address masks), change the 6rd tunnel setting to *Automatic*. Select *Manual* to change these settings manually.
- *Prefix*—Enter the prefix address used for the tunnel provided by your ISP.
- *Prefix Length*—Enter the prefix length used for the tunnel provided by your ISP.
- *Border Relay*—Enter the border relay address used for the tunnel provided by your ISP.
- *IPv4 mask length*—Enter the IPv4 address mask length used for the tunnel provided by your ISP.

Click **Apply**.

## How to associate multiple routers with your Linksys Smart Wi-Fi account

To associate an additional router to your Linksys Smart Wi-Fi account:

1. Run setup for the additional router. When setup is complete, you will be prompted to create a new Linksys Smart Wi-Fi account.
2. Instead of creating a new account, click Sign In at the bottom of the screen.
3. Enter your original Linksys Smart Wi-Fi account username and password, and click Sign In. The router will be added to your Linksys Smart Wi-Fi account.

To configure the new router, log in to Linksys Smart Wi-Fi, then select the router's network name from the drop-down list at the top of the screen.

## How to get the most out of your dual-band router

The most common reason people purchase dual-band routers is to ensure available bandwidth for streaming high-definition video. Users also want to make sure that their video streams won't be interrupted by other wireless network traffic. To get the most out of your dual-band router, you should upgrade your wireless clients and split your traffic.

### Upgrade your wireless clients

If you have network adapters that support only legacy wireless network standards such as 802.11b, you should consider upgrading them with Wireless-N (802.11n) or Wireless-AC (802.11ac) network adapters. Wireless-B (802.11b) devices can slow your entire wireless network. For the best performance, all of your wireless devices should support Wireless-N. You can then select Wireless-N Only as your Network Mode below.

**Note**—If you select *Wireless-N Only*, you may need to temporarily change your network settings to *Mixed* to provide access to guests without Wireless-N networking.

### Split your traffic

The best way to improve your multimedia wireless performance is to split your wireless traffic between your router's bands (ranges of radio frequencies). Your router supports the 2.4 GHz band and the 5 GHz band, and handles the two bands as two separate wireless networks to manage the traffic.

The most common way to split wireless traffic is to use the 2.4 GHz band for basic Internet tasks such as web browsing, email, and downloads, and use the 5 GHz band for streaming multimedia.

Although the 2.4 GHz band may be more crowded with wireless traffic from your neighbors, it's fine for basic Internet traffic that is not time-sensitive such as email. Even though you are connected to your own wireless network, you are still sharing air time with nearby networks. The 5 GHz band is much less crowded than the 2.4 GHz band, so it's ideal for streaming multimedia. The 5 GHz band has more available channels, so it is more likely that you will have your own, interference-free channel for your wireless network.

By default, your dual-band router uses the same network name on both the 2.4 GHz band and the 5 GHz band. The easiest way to segment your traffic is to rename one of your wireless networks. With a separate, descriptive name, it will be easy to connect to the right network.

## Reconfigure your wireless network:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).) Under *Router Settings*, click *Wireless*. The *Wireless* page opens to the *Wireless* tab.

The screenshot shows the 'Wireless' configuration page in the Linksys Smart Wi-Fi interface. It features a 'Show widget on the homepage' checkbox at the top right. Below the title, there are navigation tabs: 'Wireless' (selected), 'MAC Filtering', 'Wi-Fi Protected Setup', and 'Wireless Scheduler'. The main content area is divided into two sections for 2.4 GHz and 5 GHz networks. Each section includes a 'Network' toggle switch (both are 'ON'), a 'Network name' field, a 'Password' field, a 'Broadcast SSID' dropdown (set to 'Yes'), a 'Channel' dropdown (set to 'Auto'), a 'Security mode' dropdown (set to 'WPA2/WPA Mixed Personal'), and a 'Network mode' dropdown (set to 'Mixed'). At the bottom of the page, there are three buttons: 'Ok', 'Cancel', and 'Apply'.

2. Change any of the settings for either of the networks.
  - a. Network—You can select ON or OFF.
  - b. Network name—You can provide a unique SSID for each band of your network. The name must not exceed 32 characters.
  - c. Password—You can provide a unique password for each band of your network.
  - d. Broadcast SSID—You can select Yes or No. Hiding your SSID is not a valid security measure, and might cause connection problems for some wireless devices. The best way to secure your network is to use the router’s WPA2 security setting.
  - e. Channel—You can select Auto or any of 11 channels on the 2.4 GHz network. You can select Auto or any of 8 channels on the 5 GHz network.
  - f. Security mode—You can set up different security options for the 2.4 GHz and 5 GHz networks. If the security mode you select requires a passphrase, a *Password* field appears, and you must enter a password. You can select:
    - i. *None* (no security)
    - ii. *WEP*
    - iii. *WPA2 Personal*
    - iv. *WPA2 Enterprise*
    - v. *WPA2/WPA Mixed Personal*
    - vi. *WPA2/WPA Mixed Enterprise*

**Tip**—Wireless-N networks should use the *WPA2-Personal* security mode for best performance.

- g. Network mode—Your choice depends upon the clients that will connect to your network. If all of your devices are Wireless-N capable, you can select *Wireless-N Only* for either or both bands.
  - i. On the 2.4 GHz band, you can select from the following:
    - o Mixed
    - o 802.11 b/g Only
    - o 802.11 g Only
    - o 802.11 b Only
    - o 802.11 n Only
  - ii. On the 5 GHz band, you can select from the following:
    - o *Mixed (default)*, which accepts connections from 802.11a, 802.11ac or 802.11n clients
    - o *802.11 a Only*
    - o *802.11ac Only*
    - o *802.11a/n Only*
- h. Channel width—We recommend that you keep the default (Auto) setting for each band. In *Auto* mode, the router will use the widest possible channel width supported by the client and wireless environment if the following happens:

With more available channels and less chance of interference on the 5 GHz band, you have the option to force the 40 MHz mode.

  - iii. On the 2.4 GHz band, you can select from the following:
    - o *Auto* (20 MHz or 40 MHz)
    - o *20 MHz Only*
  - iv. On the 5 GHz band, you can select:
    - o *Auto* (automatically selects from the options below)
    - o *20 MHz Only*
    - o *40 MHz*
- i. Channel—Choose the operating channel for each band. Your router will automatically select the channel with the least amount of interference if you leave the default Auto setting. We recommend keeping the default settings for both bands.

To save your changes, click **Ok**.

## How to control access to your network

By default, setup enables industry-standard WPA2 (Wi-Fi Protected Access 2) security.

If you choose not to use the built-in security features of your router, you can still control access to your wireless network using MAC filtering. Every network device has a unique, 12-digit MAC (Media Access Control) address. Using MAC filtering, you can allow only known MAC addresses, and therefore known devices, onto your network. You can also exclude specific MAC addresses, denying them access to your network.


**Tip**—MAC filtering is not strong security. The best way to secure your network is to use the router's WPA2 security setting.

Example: Because each MAC filtering configuration is unique, this simplified example shows how to set up MAC filtering to allow only one device access to the network.

**Tip**—It is easier to select *Allow* to permit only known devices than to try to *Deny* (exclude) unknown devices.

To set up MAC filtering to allow one device access to your network:

- Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
- Under *Router Settings*, click *Wireless*.
- Click the *MAC Filtering* tab.

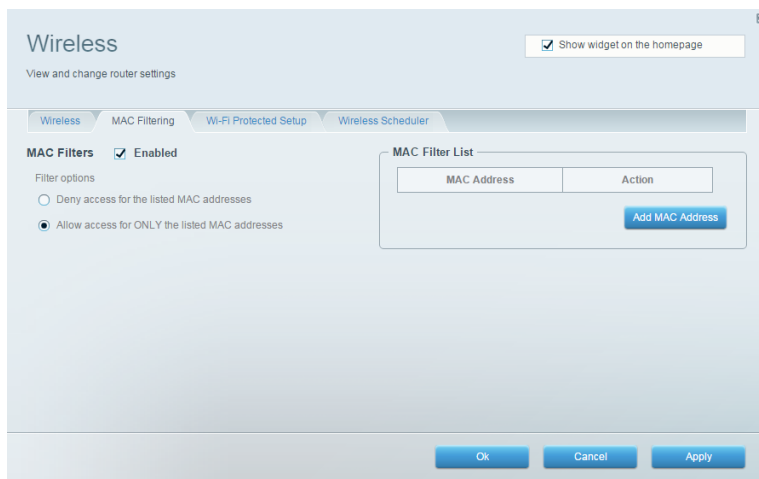


The screenshot shows the 'Wireless' settings page in the Linksys Smart Wi-Fi interface. The 'MAC Filtering' tab is selected. Under 'MAC Filters', the 'Enabled' checkbox is checked. The 'Filter options' section has two radio buttons: 'Deny access for the listed MAC addresses' (unselected) and 'Allow access for ONLY the listed MAC addresses' (selected). To the right, there is a 'MAC Filter List' table with two columns: 'MAC Address' and 'Action'. Below the table is an 'Add MAC Address' button. At the bottom of the page are 'OK', 'Cancel', and 'Apply' buttons.

- Select *Enabled* next to *MAC Filters*. Click **Yes** when asked whether you want to continue. Select *Allow access for ONLY the listed MAC addresses*.
- Click **Add MAC Address**. Enter the MAC address into the *MAC Filter List* and click **Apply**.

## How to improve security using the built-in firewall

By default, the firewall settings in your router work well in most home environments. You don't need to make changes. The SPI (Stateful Packet Inspection) firewall is enabled by default, and anonymous Internet requests and IDENT requests are filtered by default. All web filters are disabled, because enabling them may cause problems for sites that depend on ActiveX controls, Java, or cookies.

If you decide to change your firewall settings, log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).) Under *Router Settings*, click *Security*. The *Security* page will open to the *Firewall* tab.

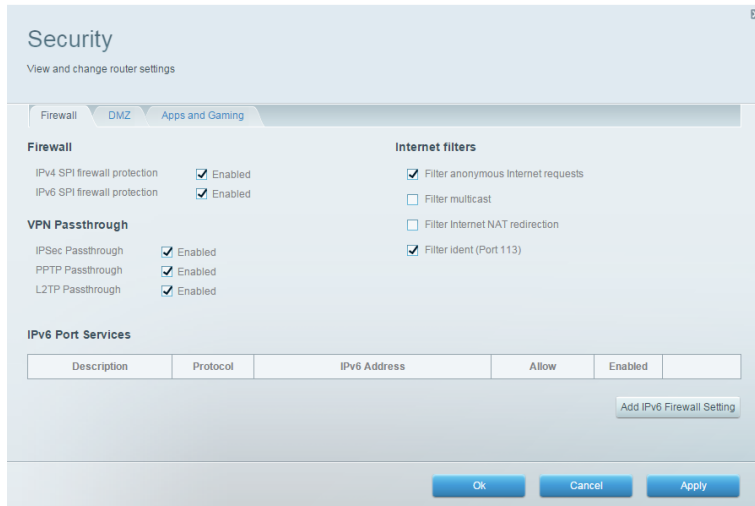

You can now change the following settings:

**Tip**—For more descriptions of each setting, click *Help* at the top of the screen.

1. *Firewall: SPI firewall protection*—This helps protect your local network from Internet threats. This option is enabled by default. This setting is separated into IPv6 and IPv4 options so that each can be handled separately.

**Caution**—To help protect your network, you should keep this option enabled.

### 2. *VPN Passthrough*:

- *IPSec Passthrough* – IPSec (Internet Protocol Security) is a suite of protocols used to implement secure exchange of packets at the IP layer. The VPN clients on the local network can establish an IPSec VPN tunnel through the router. This option is enabled by default.
- *PPTP Passthrough*– PPTP (Point-to-Point Tunneling Protocol) allows the PPP (Point-to-Point Protocol) to be tunneled through an IP network. The VPN clients on the local network can establish a PPTP VPN tunnel through the router. This option is enabled by default.

- *L2TP Passthrough* – L2TP (Layer 2 Tunneling Protocol) enables point-to-point sessions using the Internet on the Layer 2 level. The VPN clients on the local network can establish an L2TP VPN tunnel through the router. This option is enabled by default.

### 3. Internet filters:

- *Filter anonymous Internet requests*—This filter blocks Internet requests from unknown sources such as ping requests. This option is enabled by default.
- *Filter multicast*—Multicasting allows a single transmission to simultaneously reach specific recipients within your local network. Select this option to block multicasting. This option is disabled by default.
- *Filter Internet NAT redirection*—This filter prevents a local computer from using a URL or Internet IP address to access the local server. Select this option to enable the filter. This option is disabled by default. On some router models, this setting applies to IPv4 Internet only.
- *Filter ident (Port 133)*—This filter prevents port 133 from being scanned by devices from the Internet. This option is enabled by default.

Click **Save**.

## Changing IPv6 firewall settings

The IPv6 firewall lets you customize IPv6 port services for applications. When users send these types of requests to your network via the Internet, the router will allow those requests to the appropriate computers.

**Note**—To use your router's IPv6 Internet connection settings, IPv6 service from your ISP (Internet service provider) is required. For more information on this service, ask your ISP.

To set IPv6 firewall settings, do the following:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Security*. The *Security* page opens to the *Firewall* tab.

The screenshot shows the 'Security' configuration page with the 'Firewall' tab selected. The page is divided into several sections:

- Firewall:**
  - IPv4 SPI firewall protection:  Enabled
  - IPv6 SPI firewall protection:  Enabled
- VPN Passthrough:**
  - IPSec Passthrough:  Enabled
  - PPTP Passthrough:  Enabled
  - L2TP Passthrough:  Enabled
- Internet filters:**
  - Filter anonymous Internet requests
  - Filter multicast
  - Filter Internet NAT redirection
  - Filter ident (Port 113)
- IPv6 Port Services:** A table with columns for Description, Protocol, IPv6 Address, Allow, and Enabled. An 'Add IPv6 Firewall Setting' button is located below the table.

At the bottom of the page are three buttons: 'Ok', 'Cancel', and 'Apply'.

3. Click Add IPv6 Firewall Setting. You can now change the following fields:
  - *Description*—Enter a description of the application.
  - *Protocol*—Select TCP, UDP, or Both (default).
  - *IPv6 Address*—Enter the IPv6 address of the computer that should receive the traffic.
  - *Allow*—Select the range of port(s) used by incoming traffic.
  - *Enabled*—Select to enable IPv6 Port Services

Click **Save**. The list will update to show the new settings.

To change a saved setting, click *Edit* next to the setting.

To delete a saved setting, click *Delete* next to the setting.

Click **Apply** before leaving the page to be sure the changes are saved.

## How to set up the DHCP server on your router

Your router can be used as a DHCP (Dynamic Host Configuration Protocol) server to automatically assign an IP address to each computer or device on your network. The DHCP server is enabled by default. If you already have a DHCP server on your network, or if you do not want to use your router as a DHCP server, you should disable this setting.

**To configure your router's DHCP server settings do the following:**

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Local Network* tab.
4. To disable the DHCP server, deselect the *Enabled* checkbox.
5. Leave the *Enabled* checkbox selected to edit the following settings:
  - *Start IP address*
  - *Maximum number of users*
  - *IP address range (not editable)*
  - *Client lease time*
  - *Static DNS values*
  - *WINS*
  - Click **Apply**.

## How to set up DHCP reservations

DHCP reservations allows you to assign a unique, fixed IP address to a specific device on your network. Assigning a fixed IP address is a good way to manage devices such as print servers, web cameras, network printers, and game consoles. A fixed IP address is also recommended if you want to use port forwarding for devices that need to receive inbound traffic from the Internet (“How to set up port forwarding” on page [62](#)).

To configure DHCP reservations do the following:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Local Network* tab, and click *DHCP Reservations*, which lists attached network devices and current DHCP reservations.

The screenshot shows the 'DHCP Reservations' configuration window. It has a title bar with a close button. Below the title bar is a section titled 'Reserved Addresses' with a table with columns: Device Name, Assign IP Address, To: MAC Address, and an empty column. Below this table is a button labeled 'Manually add device reservation'. Underneath is the text 'Add reservations by selecting from your DHCP list:' followed by a table with columns: Device Name, Interface, IP Address, MAC Address, and Select. The table contains four rows of device information. At the bottom of the window are 'Ok' and 'Cancel' buttons.

Device Name	Interface	IP Address	MAC Address	Select
Christopher's MacBook Air	Wireless	192.168.1.102	68:A8:6D:11:9F:C4	<input type="checkbox"/>
CMK's Galaxy S5	Wireless	192.168.1.186	10:A5:D0:E7:7F:42	<input type="checkbox"/>
WeMo Insight	Wireless	192.168.1.193	94:10:3E:39:78:15	<input type="checkbox"/>
TTKs-iPad	Offline	192.168.1.117	1C:AB:A7:86:07:0D	<input type="checkbox"/>

4. Click the *Select* checkbox next to the device you want to reserve, and click **Add DHCP Reservation**.
5. Click *Edit* to change the reservation details, or click *Delete* to delete the reservation.
6. Click **Ok**.

**Tip**—For field descriptions, click *Help* at the top of the screen.

## How to access your network on the Internet


If you want to remotely access a drive attached to your router or view a web camera on your home network, you need to be able to easily enter your network’s address into a web browser.

Working with a DDNS (Dynamic Domain Name System) service provider, your router's DDNS feature lets you configure a domain name for your network, which you can then use to easily find your network on the Internet. If your ISP changes your network's IP address (which can happen frequently), the DDNS service providers detect the address change and continue to route your domain name to that address.

**Tip**—Before you configure DDNS on your router, you must sign up for DDNS service from a DDNS service provider that's supported by your router.

### To set up DDNS:

1. Sign up for DDNS service at either [www.dyndns.org](http://www.dyndns.org) or [www.tzo.com](http://www.tzo.com). Note all of the information provided to you by the DDNS provider.
2. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
3. Under *Router Settings*, click *Security*, then click the *Apps and Gaming* tab.
4. In the *Select a provider* drop-down list under the *DDNS* header, select your DDNS service provider.

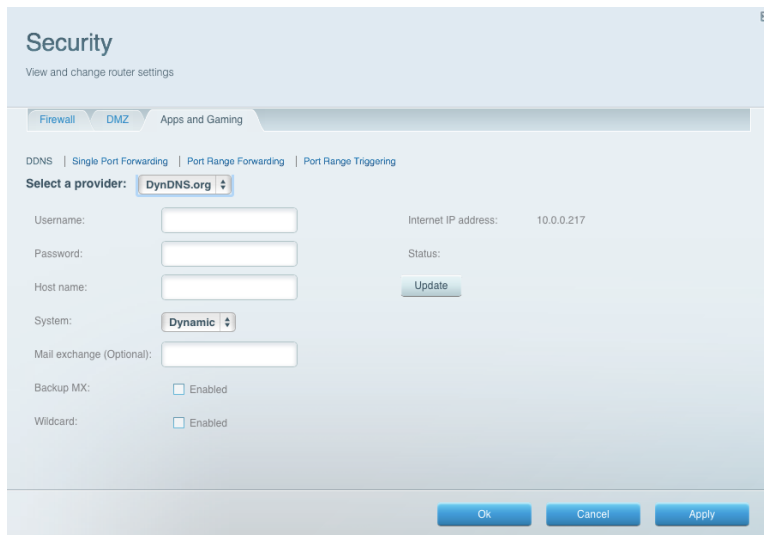

The screenshot shows the 'Security' configuration page in the Linksys Smart Wi-Fi interface. The 'Apps and Gaming' tab is selected. Under the 'DDNS' section, the 'Select a provider' dropdown is set to 'DynDNS.org'. The 'Internet IP address' is displayed as 10.0.0.217. There are input fields for 'Username', 'Password', and 'Host name'. The 'System' dropdown is set to 'Dynamic'. There are checkboxes for 'Backup MX' and 'Wildcard', both currently unchecked. An 'Update' button is located to the right of the 'Host name' field. At the bottom of the page, there are 'Ok', 'Cancel', and 'Apply' buttons.

5. Complete the fields with information provided by your DDNS provider, then click **Ok**.

To access the network from the Internet, enter the domain name provided by the DDNS service provider.

To access one of your network devices on the Internet, do the following:

- Configure the router to use port forwarding for the device (see "How to set up port forwarding for a single port" on page [62](#)). Note the port number used for the device.
- Enter the domain name for your network followed by a colon and the port number. Using a network camera as an example, if the domain name registered with your DDNS provider is `HappyBunny.linksysnet.com`, and your Internet camera has been configured to use port 1024, you would enter: `HappyBunny.linksysnet.com:1024`


## How to clone a MAC address

On any home network, each network device has a unique MAC (Media Access Control) address. Some ISPs register the MAC address of the device (usually a router or a computer) connected directly to the modem. If your computer's MAC address is registered with your ISP and you do not want to re-register the MAC address, then you can clone the address (assign the registered MAC address of your previous device to your new router). If you want to use the MAC address from an old router that you are replacing with your new router, you should first determine the MAC address of your old router, then manually enter it into your new router.

**Note**—For many ISPs that provide dynamic IP addresses automatically, the stored MAC address in the modem is reset each time you reset the modem. If you are installing this router for the first time, reset your modem before connecting the router to your modem. To reset your modem, disconnect power for about one minute, and reconnect power.

To clone a MAC address from your computer, do the following when connected to the Internet on the router you are accessing:

1. Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the Internet Settings tab.
4. Beside *MAC Address Clone*, click *Enabled*.

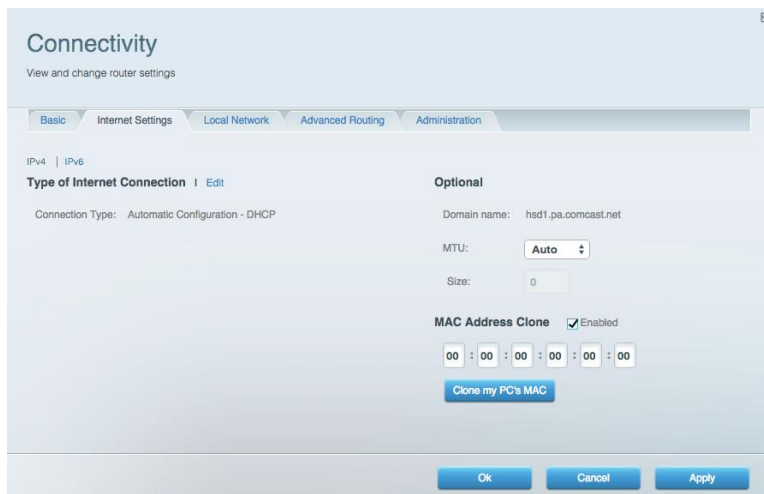

5. Enter the 12-digit MAC address of your old router, then click Ok.

## How to connect to your corporate office using a VPN


A VPN (Virtual Private Network) uses a public network such as the Internet to provide secure communications between a remote computer and another network. Corporations often provide VPN access to their networks to enable employees to work from remote offices or while traveling. Most corporate VPNs use the Internet.

For a typical VPN, the corporation installs a VPN gateway on their corporate network. Employees authorized to work remotely connect to the VPN gateway through the Internet using VPN software and security methods provided by their employers. Security and authentication requirements ensure a secure connection and access by only authorized users.

The default VPN settings in your router have been configured to pass through (allow) the most common types of VPN protocols. Usually, no changes are needed.

### To change your VPN passthrough settings:

1. Log into Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Security*.

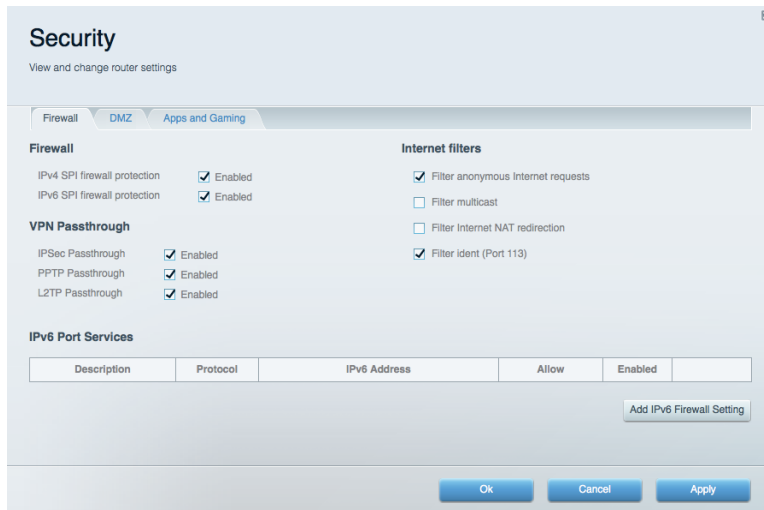

3. On the *Firewall* page enable each setting that you want to change.
  - o *IPSec Passthrough* – IPSec (Internet Protocol Security) is a suite of protocols used to implement secure exchange of packets at the IP layer. The VPN clients on the local network can establish an IPSec VPN tunnel through the router. This option is enabled by default.
  - o *PPTP Passthrough* – PPTP (Point-to-Point Tunneling Protocol) allows the PPP (Point-to-Point Protocol) to be tunneled through an IP network. The VPN clients on the local network can establish a PPTP VPN tunnel through the router. This option is enabled by default.
  - o *L2TP Passthrough* – L2TP (Layer 2 Tunneling Protocol) enables point-to-point sessions using the Internet on the Layer 2 level. The VPN clients on the local network can establish an L2TP VPN tunnel through the router. This option is enabled by default.
4. Click **Ok** to save your changes.

## How to optimize your router for gaming and voice


Your router can prioritize traffic between your network and the Internet. Performance for demanding, real-time applications, such as online gaming, VoIP calls, video streaming, and videoconferencing, can be improved by configuring media prioritization.

Prioritization settings are applied only to traffic that is uploaded to the Internet. The router cannot control the quality of the traffic after it reaches the Internet.


**Tip**—For more information on optimizing your router for online gaming, see “Port Forwarding and Port Triggering” on page 62.

To configure media prioritization:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page 13.)
2. Under *Smart Wi-Fi Tools*, click *Media Prioritization*.
3. Turn on *Prioritization* if it is not already on.
4. Click and drag high-priority devices from the *Normal Priority* list to the *High Priority* list.

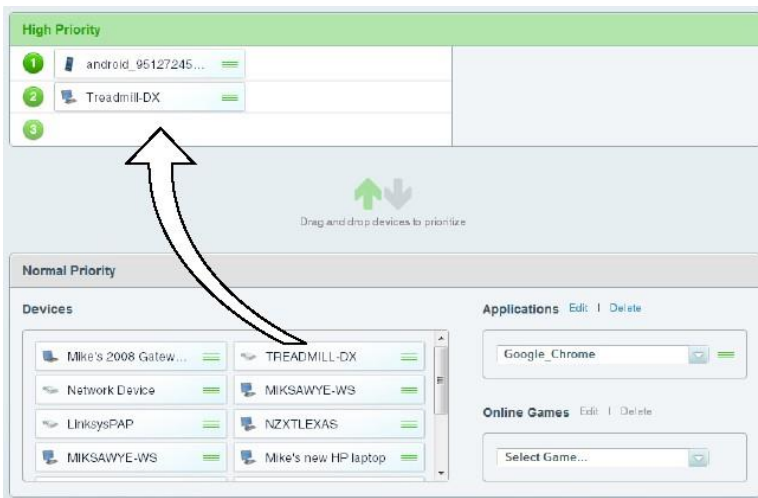

To prioritize an application or game, select the name in the drop-down list, then click and drag the icon next to the name to the *High Priority* list.

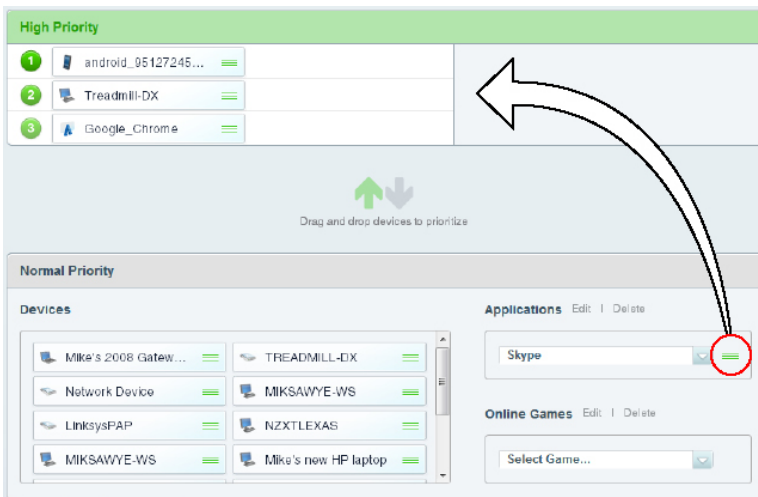

If the application name isn't listed, click *Add a New Application...* at the bottom of the drop-down menu, and add the name.

**Tip**—If you want to add a new application or game, you need to know its port and protocol information (see the application or game's documentation for help).

Click *Settings*.

Set the maximum *Downstream Bandwidth*. If you set the bandwidth lower than the actual bandwidth of your router, performance may be limited.

To help manage traffic priority with devices that support WMM, turn on WMM Support.

**Tip**—WMM (Wi-Fi MultiMedia) Support is a wireless feature based on the IEEE 802.11e standard. WMM improves quality for audio, video, and voice applications by prioritizing wireless traffic. This feature requires that the wireless client devices in your network also support WMM.

To have the router resend data if an error occurs, turn off *No Acknowledgement*.

**Caution**—If you specify a maximum bandwidth that is too high, the router cannot apply priorities correctly, and prioritization problems may result.

Click **Ok**.

## How to enable Voice over IP on your network


VoIP (Voice over Internet Protocol) is a technology for using the Internet as an interface for telephone communications. To use VoIP, you need to get an account with a VoIP service provider. The VoIP service provider typically provides you with a telephone adapter that connects to your network. If you do not use your network to make phone calls, you don't need to change the default settings.

The Application Layer Gateway SIP (Session Initiation Protocol) allows SIP packets, used by some VOIP service providers, to get through your router's firewall.

To configure the router for VoIP, do the following:

Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)

Under *Router Settings*, click *Connectivity*, then click the *Administration* tab.

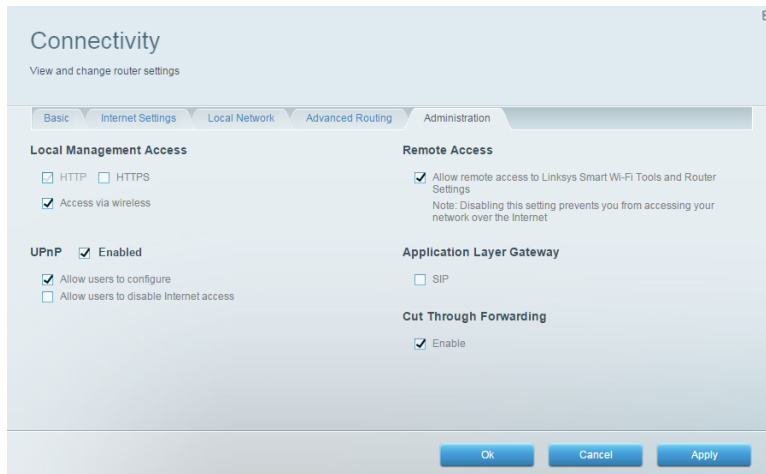

If your VoIP service uses SIP, select the *SIP* checkbox under *Application Layer Gateway*.

**OR**

If your VoIP service uses other NAT traversal solutions such as STUN (Session Traversal Utilities for NAT), TURN (Traversal Using Relay NAT), or ICE (Interactive Connectivity Establishment), deselect the *SIP* checkbox.


**Note**—You may need to contact your VoIP service provider to determine the type of NAT traversal configuration they use.

## How to configure UPnP

UPnP (Universal Plug and Play) allows devices connected to a network to discover each other and automatically create working configurations. Examples of UPnP-capable devices include web cameras, online gaming applications, and VoIP devices. UPnP is enabled by default.

To configure UPnP, do the following:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Connectivity*, then click the *Administration* tab.

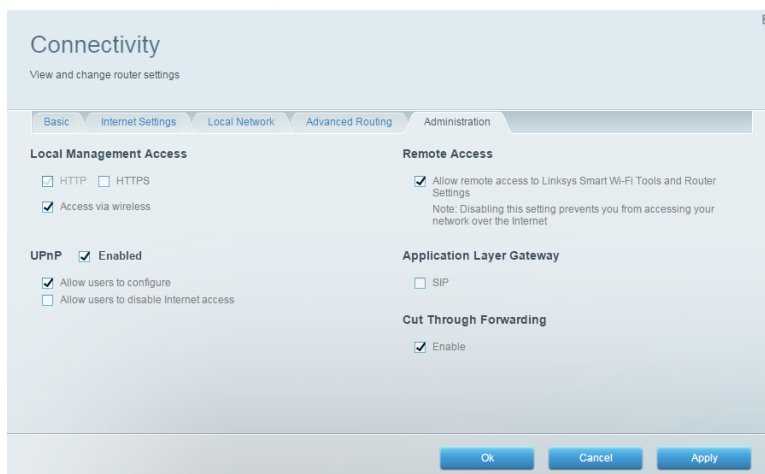

To use UPnP, select *Enabled* (default) next to *UPnP*.

To allow changing router settings while using UPnP, select *Allow Users to Configure*.

To prevent local network users from disabling your Internet connection through UPnP, deselect the *Allow users to disable Internet access* checkbox.

Click **Ok**.

## How to use a router as an access point

If you have a large area to cover with your wireless signal, or if part of your home has weak signals due to interference, you can use this router to extend the range of your old router's wireless network.

### To set up your new router as an access point:

1. Use a network cable to connect this router's Internet port to the Ethernet or LAN port on the router that is connected to your modem.
2. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
3. Under *Router Settings*, click *Connectivity*, then click the *Internet Settings* tab.
4. Click *IPv4*.
5. For *Type of Internet Connection*, select *Bridge Mode*.
6. Click *Obtain an IPv4 address automatically*, then click **Ok**. The new router's LAN IP address will be changed and obtained from the router that is connected to your modem.

You can also use your old router to extend the range of your wireless network. This is a complex process, so this procedure assumes that you have some networking knowledge.

**Tip**—Check the documentation for your old router. Some brands of routers include either a switch on the outside of the case or a software option to convert it to an access point. If either of these options is available, follow your old router's instructions to convert it to an access point.

You need to take note of your new router's settings, and apply some of those settings to the old router so it can work as an access point.

### To view your new router's settings:

1. Make sure that your new router is connected to the Internet.
2. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
3. Under *Router Settings* click *Wireless*. Take note of the Network name (SSID), Password, Security mode, and Channel.
4. Under *Router Settings*, click *Connectivity*, then click the *Local Network* tab. Take note of the DHCP server's IP address range (192.168.1.100 to 192.168.1.149 by default).

### To use your old router as an access point:

1. With your computer connected to your old router, log into its browser-based administration utility.

**Note**—Save our changes by clicking *Apply* after finishing each step below.

2. Open the setup page for the local network (LAN).
3. In the Router IP address field, enter an unused IP address for the LAN network of your new router.

*For example, if your new router has an IP address of 192.168.1.1, you should choose an IP address on the 192.168.1.0 network. You can choose any address within the range of 192.168.1.2 to 192.168.1.254. You should exclude addresses in the range that will be used by the DHCP Server of your new router (192.168.1.100 to 192.168.1.149). A safe choice might be 192.168.1.250. Take note of this address, because this will be the address that you will use to manage your old router in the future.*

4. In the Subnet Mask field, enter "255.255.255.0" or, if available, select that subnet mask from a drop-down list.
5. Disable the DHCP server on your old router. (Because your old router will be operating as an access point instead of a router, you don't want it to distribute IP addresses. There should be only one active DHCP server on your network, and that should be your new router.)

**To reconfigure the wireless network on your old router:**

1. Open the wireless network setup page.
2. Change the network name (SSID) to match the name of your new network. Having the same network name and security settings enables you to seamlessly roam between your new router and your old router.
3. Change the security mode to match the security mode on your new router.
4. Change the password (sometimes called the pre-shared key) on your old router to match the password on your new router.
5. Change the wireless channel to a non-conflicting channel. Some manufacturers have an Auto function for channel selection that automatically selects a wireless channel that does not interfere with other nearby wireless networks. If your old router supports an Auto function, select that. Otherwise, you may need to manually select the wireless operating channel on your old router. In the 2.4 GHz wireless spectrum, there are only three non-overlapping channels: 1, 6, and 11. Pick a channel that does not overlap the operating channel of your new router. For example, if your new router is operating on channel 11, configure your old router for either channel 1 or channel 6.
6. Connect an Ethernet network cable to one of the LAN/Ethernet ports on your old router and an Ethernet port on your new router.

**Caution**—Do not connect the cable to the Internet port on your old router. If you do, you may not be able to set up the router as an access point on the current network.

## How to put your new router behind an existing router

There are several reasons you might want to use your new router behind another router:

- Case 1      You might be in an environment that shares the landlord's Internet connection with all tenants. In this case, you should put your own router behind the landlord's router in order to create your own private network and to isolate computers on your network from the rest of the building.
- Case 2      You are sharing an office building Internet connection, and you want to control Internet access or the content viewed by your employees.
- Case 3      You already have an existing network and you want to extend the network's range or add wireless capabilities to your network.
- Case 4      You want to separate older, less secure network devices from the rest of the network.

In most cases, you can easily add your router to an existing wireless network by running Linksys Smart Wi-Fi. If you are unable to set up the additional router using the instructions below, see "To share an Internet connection" on page [57](#) or "To extend your network" on page [60](#).

### To add your router to your existing wireless network:

1. Connect your router's Internet port to the LAN/Ethernet port on your existing (upstream) router or gateway.
2. Connect to the secure wireless name shown in the Quick Start Guide that came with your router. (You can change the network name and password later during router setup.) If you need help connecting to the network, refer to your device documentation.

**Note**—*You will not have Internet access until router setup is complete.*

3. Open a web browser and follow the instructions to complete your router's setup. If instructions do not appear in the web browser, enter [linksysmartwifi.com](http://linksysmartwifi.com) in the browser's address bar.
4. At the end of setup, follow the on-screen instructions to set up your Linksys Smart Wi-Fi account.

**Note**—*As part of the router setup process, you will be sent a verification e-mail. From your home network, click the link in the e-mail to associate your router with the Linksys Smart Wi-Fi account. Make sure that the link opens in a supported web browser - latest versions of Google Chrome, Firefox, Safari (for Mac and iPad) and Internet Explorer 8 or newer.*

### To add another router to share an Internet connection:

**Note**—*This is a complex process, so this procedure assumes that you have some networking knowledge.*

This topic covers cases 1 and 2 on page [57](#).

- Determine the IP address range for your upstream (office or building) network.

To determine the address range by using a Windows computer:

1. Connect your computer to your upstream network's router.
2. Click Start, Run, type CMD, then click OK. The command prompt window appears.
3. Type "ipconfig," then press Enter.

**Tip**—*Although you can determine your computer's IP address in many ways, this method is quick and relatively easy.*


4. Take note of the IP address. For this example, the IP address will be 192.168.100.192.

- To determine the address range by using a Mac computer:

1. Connect your computer to your upstream network's router.
2. From the Dock, click *System Preferences*, click *Network*, then click *Ethernet* (or *USB Ethernet*) in the window to the left. A network status window opens.
3. Take note of the IP address. For this example, the IP address is 192.168.100.139.
4. Example: The above examples show that upstream IP addresses are on the 192.168.100.0 network. (The "0" indicates the entire network.) Your upstream network's address may be different. The default address of your new Linksys router is 192.168.1.1. In setting up one router behind another, you must make sure that the local network on your new router is different than the network of your upstream router. In the above example, because the default local network on your Linksys router 192.168.1.0 is on a different subnet than the office network's 192.168.100.0, you will be able to place your Linksys router behind the other router.
5. Connect an Ethernet network cable to a LAN/Ethernet port on your upstream network to the yellow Internet port on your router.

**Caution**—*Connect the upstream network to your router's yellow Internet port, not one of the blue Ethernet ports. If you connect to an Ethernet port, you create IP addressing problems for the office network.*

**Tips**—*An office network often has a wall plate with an Ethernet port that you can connect to. If you are doing this in a home environment (without wall ports), connect an Ethernet network cable between a LAN port on your upstream router and the Internet port on your Linksys router.*

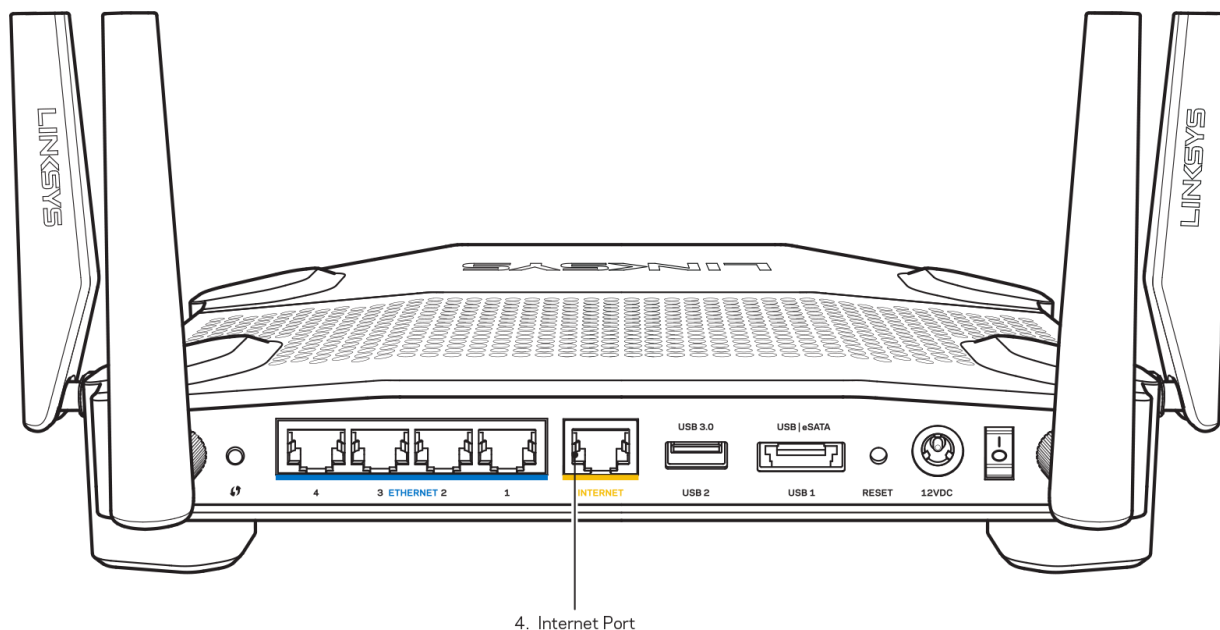

Computers connected to the Linksys router are now on the same network, and are isolated from the upstream network. However, you will still have access to the Internet through the upstream router (by way of your Linksys router). Because two routers are between your computer and the Internet, Internet traffic undergoes two network address translations. This is sometimes referred to as Double NAT.

Your computers can also use the built-in capabilities of your Linksys router, such as parental controls. If you need further control over the type of content your employees or family access, you can create an account with an Internet filtering site such as [www.opendns.com](http://www.opendns.com). After you create an account with them, use their DNS in place of your ISP's DNS.

To use an outside DNS:

1. Log into Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Local Network* tab.
4. Complete the Static DNS fields with the information provided by your content filtering provider.
5. Click **Ok**.

**To extend your network or add wireless capabilities, do one of the following:**

(This topic covers cases 3 and 4 on page [57](#).)

**Note**—*This is a complex process, so this procedure assumes that you have some networking knowledge.*

1. If you want to extend your network, you may also follow the instructions above. One example of this might be to provide a separate wireless network for your children to keep their wireless network traffic separate from your wireless network. You might also want to isolate one network from another network so that network shares aren't visible across networks. In this case, use an Ethernet cable to connect the Internet port of the downstream router to one of the LAN ports of the upstream router. Make sure that the local network subnets on the two routers are different.

**OR**

2. You can extend your network by turning the downstream router into an access point. (See "How to use a router as an access point" on page [55](#).) When you use a router as an access point, computers connected to the access point are on the same IP subnet as all other devices connected to the router. File, printer, and media sharing is much easier if all devices are on the same subnet.


## How to expose a device to the Internet

If you are operating a web server, a mail server, or a web camera, you may want to expose that device to the Internet so anybody can access it. Your router includes a DMZ (Demilitarized Zone) feature that forwards all inbound ports presented on the WAN interface, except those that are specifically forwarded, to an individual IP address or MAC address. This feature is normally not used, because it presents significant security risks to the device that you designate for the DMZ. The DMZ device is not protected by the built-in firewalls, Internet filters, or router web filters, and is open to attacks from hackers.

A much safer way of exposing devices to the Internet would be to use port forwarding. See "How to set up port forwarding" on page [62](#).

**To set up a device in the DMZ, do the following:**

1. Configure your device with a static IP address. See your device's documentation for help with setting a static IP address or use DHCP reservation (see "How to set up the DHCP server on your router" on page [47](#)).
2. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
3. Under *Router Settings*, click *Security*, then click the *DMZ* tab.

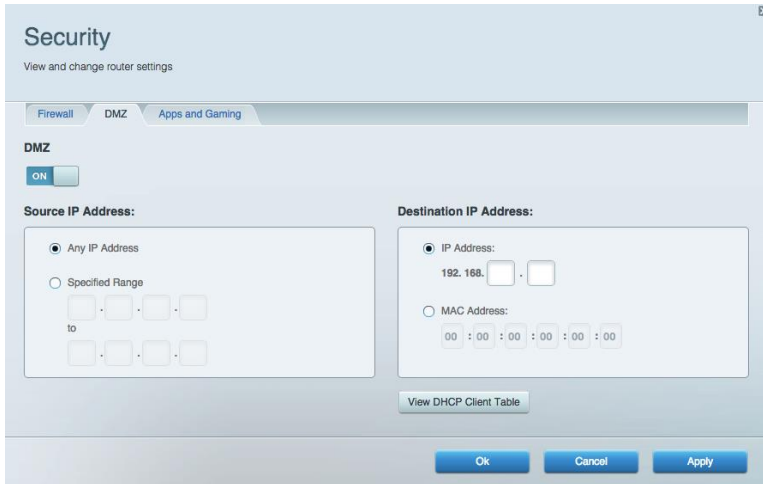

4. Click the setting for DMZ to turn it on.
5. In the *Source IP Address* section, select *Any IP Address* to allow access to your DMZ device from the entire Internet, or select *Specified Range* and enter a range of allowed source addresses.
6. In the *Destination IP Address* section, enter the last three digits of the IP address of the device that will be in the DMZ. The rest of the IP address is already completed.

**OR**

If you want to specify the 12-digit MAC address of the device instead of setting up a DHCP address reservation, you can replace Step 6 with the following steps:

7. In the *Destination IP Address* section, select *MAC Address*, then click *View DHCP Client Table*. The *DHCP Client Table* screen opens.



8. Click **Select** next to the device that you want to place in the DMZ, then click **Close**. The corresponding MAC address is copied into the *MAC Address* field.
9. Click **Ok**.

# Port Forwarding and Port Triggering

## How to set up port forwarding

Port forwarding is a feature that forwards inbound traffic from the Internet on a specific port or ports to a specific device or port on your local network.

Set up port forwarding for the following:

- A single port (see “How to set up port forwarding for a single port” below).
- Multiple ports (see “How to set up port forwarding for multiple ports” on page [63](#))
- A range of ports (see “How to set up port forwarding for a range of ports” on page [63](#))

## How to set up port forwarding for a single port

Single port forwarding forwards inbound traffic from the Internet on a specific port to a single device on your local network. An example of single port forwarding would be sending inbound web requests, typically on port 80, to a web server.

**Tip**—See the device’s documentation for port and protocol information.

### To set up single port forwarding:

1. Follow your device’s instructions for configuring it with a static IP address or use DHCP reservation to assign it a permanent address (see “How to set up the DHCP server on your router” on page [47](#)).
2. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
3. Under *Router Settings*, click *Security*.
4. Click the *Apps and Gaming* tab.
5. Click *Single Port Forwarding*.
6. Click *Add a new Single Port Forwarding*.
7. In the *Application name* field, enter a descriptive name.
8. In the *External Port* field, type the external port number (not always required).
9. In the *Internal Port* field, type the internal port number (not always required).
10. In the *Protocol* drop-down list, select *TCP*, *UDP*, or *Both* (default).
11. In the *Device IP#* field, enter the last three digits of the IP address you have reserved for the computer you want to forward Internet traffic to. The rest of the IP address has already been completed for you.
12. Select the *Enabled* checkbox then click *Save*. If you don’t want to use port forwarding but want to keep the information in the table, unselect the checkbox.

## How to set up port forwarding for multiple ports

Some applications require forwarding of multiple ports. VNC (Virtual Network Computing) software that allows you to operate your computer remotely from anywhere on the Internet is one example. To forward to multiple ports, create additional entries to forward additional ports to the same IP address.

Example: You want to set up your computer so you can remotely access it using VNC software. By default, VNC uses TCP ports 5800 and 5900.

### To set up single port forwarding for multiple ports:

1. Make sure that the software you want to use has been installed on a networked computer.
2. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
3. Set up DHCP reservation for the IP address of the computer on which you installed the software. (See “How to set up the DHCP server on your router” on page [47](#).)
4. Under *Router Settings*, click *Security*.
5. Click the *Apps and Gaming* tab.
6. Click *Single Port Forwarding*.
7. Click *Add a new Single Port Forwarding*.
8. In the *Application* name field, enter a descriptive name.
9. Enter in the same port number for the *External Port* and the *Internal Port*.
10. In the *Protocol* drop-down list, select *TCP*, *UDP*, or *Both* (default).
11. In the *Device IP#* field, enter the last three digits of the IP address you have reserved for the computer you want to forward Internet traffic to. The rest of the IP address has already been completed for you.
12. Select the *Enabled* checkbox, then click *Save*. If you don't want to use port forwarding but want to keep the information in the table, deselect the checkbox.

**Note**—If you want to use software such as VNC on multiple computers, you will need to reconfigure the default ports that VNC uses on each additional computer. Then, create additional port forwarding entries for each additional computer. See your software's documentation for help.

## How to set up port forwarding for a range of ports


Some applications require forwarding to a range of ports.

Example: You want to set up your computer so you can use BitTorrent, a popular peer-to-peer file sharing application. BitTorrent uses port 6881 by default. If that port is busy, the requesting BitTorrent client tries the next port in sequence. The most common configuration for home routers with a single BitTorrent computer is to set up port forwarding using a range of ports starting with 6881 and ending with port 6889.

### To set up port range forwarding:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)

2. Set up a DHCP reservation for the IP address of the computer on which you installed the software. (See "How to set up the DHCP server on your router" on page 47.) In this example, the IP address of the desktop computer with a BitTorrent client installed is 192.168.1.140.
3. Under *Router Settings*, click *Security*.
4. Click the *Apps and Gaming* tab.
5. Click *Port Range Forwarding*. The *Port Range Forwarding* screen opens.

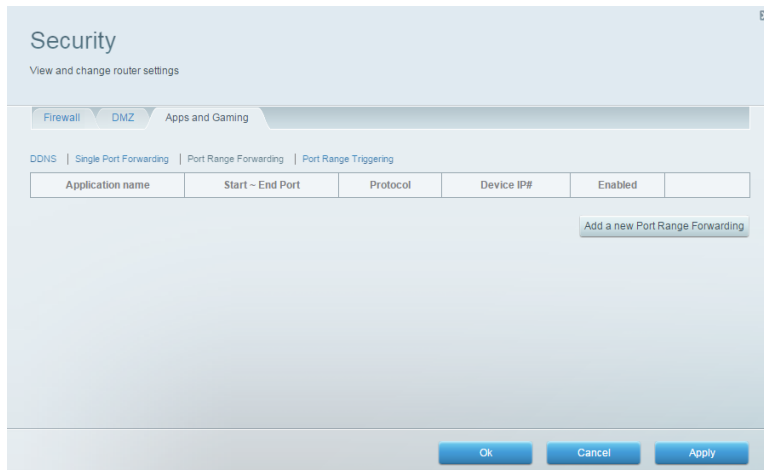

6. Click *Add a new Port Range Forwarding*.
7. In the *Application name* field, enter a descriptive name.
8. In the *Start ~ End Port* fields, enter the range or ports. For this example, the range is "6881 - 6889".
9. Select *TCP* as the protocol.
10. In the *Device IP#* field, enter the last 3 digits of the IP address of the device running the software. The rest of the IP address fields already completed. In this example, you would enter "140".
11. Select the *Enabled* checkbox then click *Save*. If you don't want to use port range forwarding but want to keep the information in the table, deselect the checkbox.


**Tips**—To use software like BitTorrent on multiple computers on your network, create additional entries with a unique range of ports as shown above. BitTorrent works only with ports between 6881 and 6999. Depending on your computer's firewall software, you may need to open a range of ports in your firewall to enable software that uses port range forwarding.

## How to set up port range triggering for online gaming

Port range triggering allows the router to watch outgoing data for specific port numbers. The IP address of the computer that sends the matching data is remembered by the router, so that when the requested data returns through the router, the data is routed back to the proper device. An example of port range triggering would be to enable a USB or Bluetooth headset for online chat and gaming.

### To set up port range triggering for multiple entries:

1. See your device documentation for information on the ports that the device uses.
2. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
3. Under *Router Settings*, click *Security*.
4. Click the *Apps and Gaming* tab.
5. Click *Port Range Triggering*. The *Port Range Triggering* screen opens.

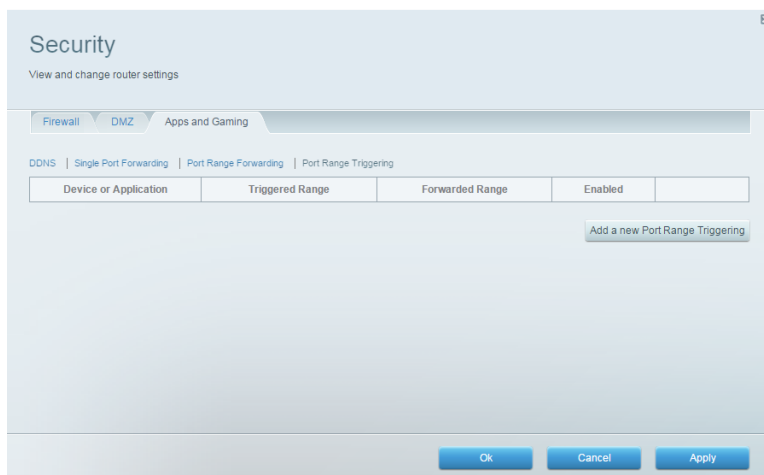

6. Click *Add a new Port Range Triggering*.
7. In the *Device or Application* field, enter a descriptive name (such as "PS3 Headset").
8. For single ports, enter the same port number in each *Triggered Range* and *Forwarded Range* field.
9. For port ranges, enter the same number ranges in each set of *Triggered Range* and *Forwarded Range* fields.
10. Select the *Enabled* checkbox, then click *Save*. If you don't want to use port range triggering but want to keep the information in the table, deselect the checkbox.

## Maintaining and Monitoring


### How to back up and restore your router configuration

As with any valuable data, you should back up your router configuration. Your router might contain many customized settings. Those settings would be lost if you reset your router to its factory defaults, and you would need to re-enter all of them manually. If you back up your router configuration, restoring settings is easy.

**Note**—You can only back up the router configuration locally (not remotely).

### To back up your router configuration:

1. Log in to Linksys Smart Wi-Fi with your router admin password. (See “How to connect directly to your router” on page [14](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Diagnostics* tab.

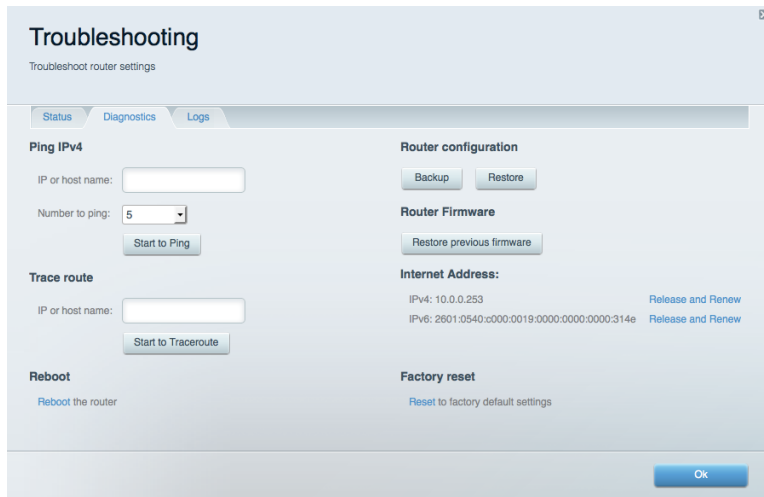

4. Under *Router configuration*, click **Backup**.
5. Windows users, specify a file location, then click **Save**.

**Tip**—When saving multiple backup files, include the backup date in the filename as you save.

### To restore your router configuration do the following:

1. Log in to Linksys Smart Wi-Fi with your router admin password. (See “How to connect directly to your router” on page [14](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Diagnostics* tab.
4. Under *Router configuration*, click **Restore**.
5. Click **Choose File** to navigate to the location of your configuration file, then select the file and click **Open**.
6. To restore the configuration, click **Start to Restore**.

## How to upgrade the router’s firmware

Linksys may periodically publish a firmware upgrade either to fix a problem or to add features to your router.

**Important**—Do not interrupt the upgrade process. You should not turn off the router or press the Reset button during the upgrade. Doing so may permanently disable the router.

**Tips**—Your router automatically checks for available updates and installs them by default. Use the following instructions only if the automatic firmware update has been turned off.

To upgrade the router's firmware, do the following:

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Basic* tab.
4. Under *Firmware Update*, click *Check for Updates*.
5. If an available update is found, follow the on-screen instructions to install it.

**Tip**—To have your router automatically check for updates and install them, select *Automatic* under *Router Firmware Update*.

## How to restore factory defaults

If you've tried previous troubleshooting steps and your network still doesn't work, you may need to restore your router's factory defaults. To restore your router to factory defaults, you can use the Reset button on the router or use Linksys Smart Wi-Fi. To use Linksys Smart Wi-Fi to do this, you must connect directly to your router. (See "How to connect directly to your router" on page [14](#).)

**To reset your router using the reset button:**

**CAUTION**—Whenever you restart the router, all logs that are not saved will be lost.

With your router connected to power and turned on, press and hold the Reset button on the back of your router until the power indicator flashes.

**To reset your router to factory defaults using Linksys Smart Wi-Fi:**

1. Log in to Linksys Smart Wi-Fi with your router admin password. (See "How to connect directly to your router" on page [14](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Diagnostics* tab.

4. Under *Factory reset*, click *Reset*.



5. Click **Yes** to confirm. All settings and logs will be deleted, and your router will return to its factory default settings.


## How to check the status of your router

Your router status tells you whether you have a secure Internet connection and informs you about the status of your network-connected devices.

To check your router status:

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Status* tab. Detailed information about your router status is displayed.

**Tip**—For field descriptions, click *Help* at the top of the screen.

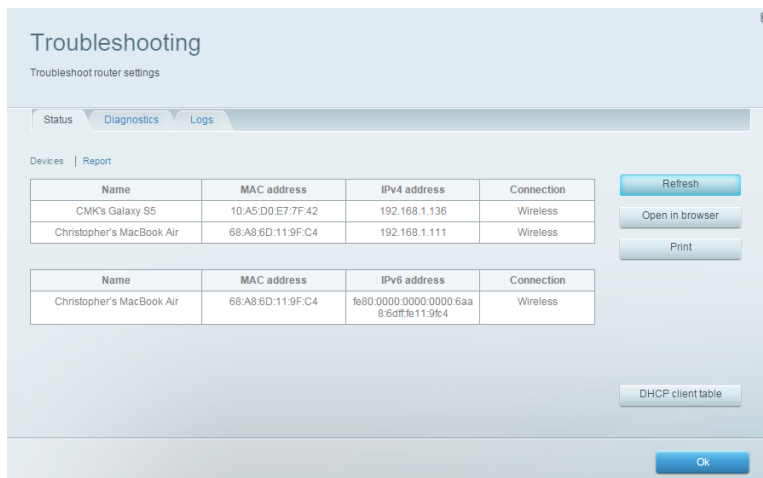

4. To view a list of connected network devices, click *Devices*. To view a full report of your router status, click *Report*.
5. Click **Ok** to close the screen.

## How to disable the Ethernet port status lights

Depending on the placement of the router in a home, you might find the lights distracting. You can easily disable the lights using Linksys Smart Wi-Fi.

To disable the lights, do the following:


1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Connectivity*.
3. Click the *Basic* tab.
4. Under *Activity Lights*, click the **ON/OFF** button.

## How to test your Internet connection

Your router includes two diagnostic tests, Ping and Trace route, that let you check network connections, including network devices and your Internet connection.

To diagnose your Internet connection, do the following:

1. Log in to Linksys Smart Wi-Fi. (See “How to connect to Linksys Smart Wi-Fi” on page [13](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Diagnostics* tab.

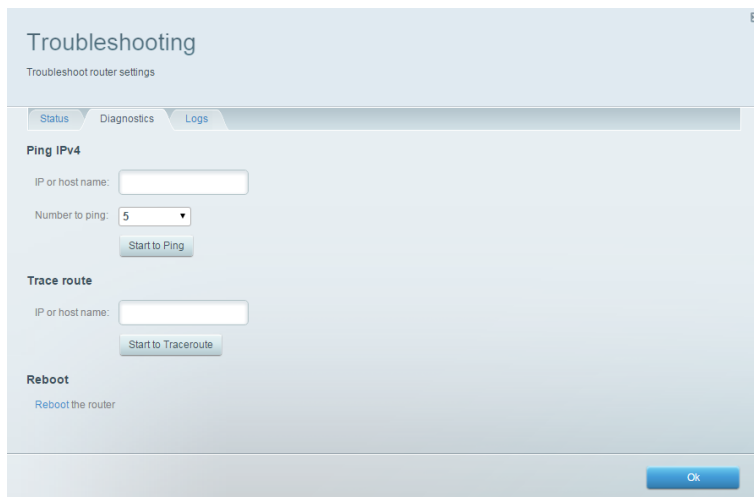

To check whether an address can be reached:

1. Under *Ping IPv4*, enter an IP address or URL into the *IP or host name* field.
2. Select a number of times to ping from the *Number to ping* drop-down list.
3. Click *Start to Ping*. A window will open showing the ping test results. You will see a response for each successful ping.

**Note**—If an Internet URL fails to respond to ping, it doesn't necessarily mean that the site is down. For security reasons, some sites are configured to not respond to ping requests.

To trace the route that packets take between your router and a specific address, do the following:

1. Under *Trace route*, enter an address in the *IP or host name* field.
2. Click *Start to Traceroute*. A window will open with the test results.




## How to configure and use logs

Your router can track all traffic for your Internet connection and record that information in a log.

To enable and view logs, do the following:

1. Log in to Linksys Smart Wi-Fi. (See "How to connect to Linksys Smart Wi-Fi" on page [13](#).)
2. Under *Router Settings*, click *Troubleshooting*.
3. Click the *Logs* tab.

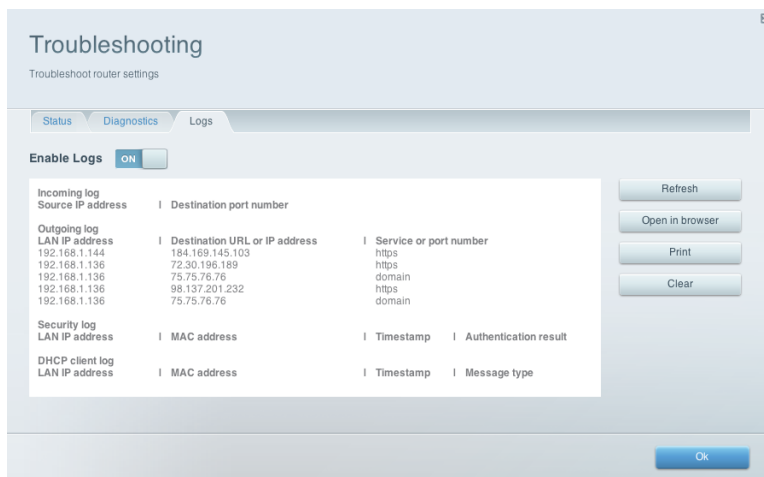

4. To enable logs, click the button next to *Enable Logs* to turn them on.

You can view the logs directly in the list, open the logs in a separate browser window, or print the logs.


# Troubleshooting

This chapter can help you solve common setup issues and connect to the Internet. You can find more help from our award-winning customer support at [Linksys.com/support/EA6350](https://Linksys.com/support/EA6350).

## Your router was not successfully set up

If Linksys Smart Wi-Fi did not complete the setup, you can try the following:

- Press and hold the Reset button on your router with a paperclip or pin until the LED starts blinking (about 10 seconds). Install the router again.



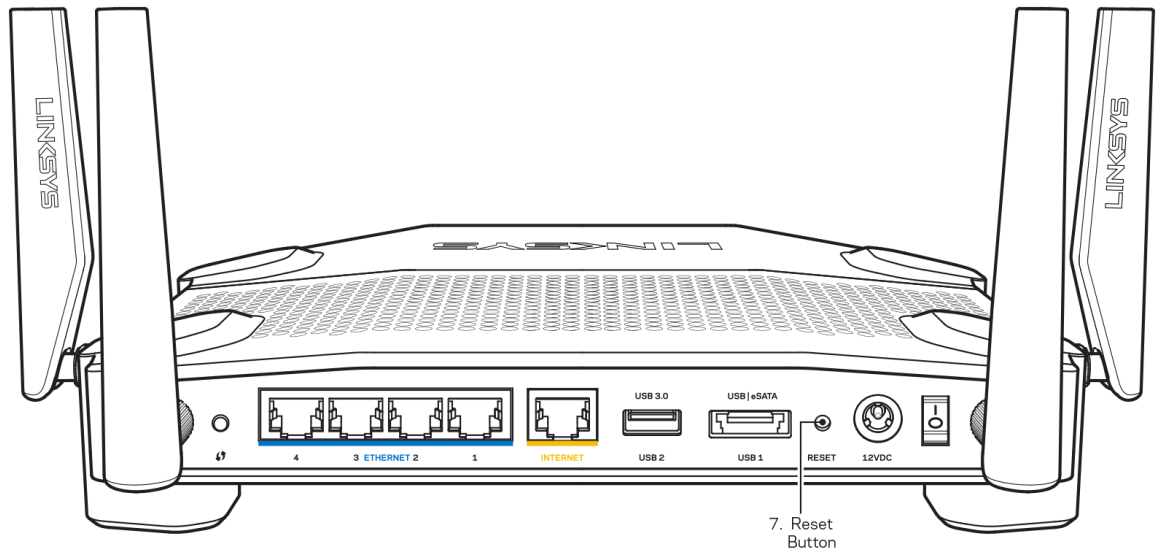


- Temporarily disable your computer's firewall (see the security software's instructions for help). Install the router again.
- If you have another computer, use that computer to install the router again.

## Your Internet cable is not plugged in message

If you get a “Your Internet cable is not plugged in” message when trying to set up your router, follow these troubleshooting steps.

- Make sure that an Ethernet or Internet cable (or a cable like the one supplied with your router) is securely connected to the yellow Internet port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled Ethernet, but may be named Internet or WAN.

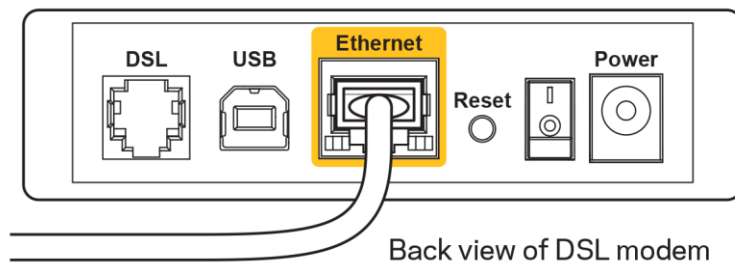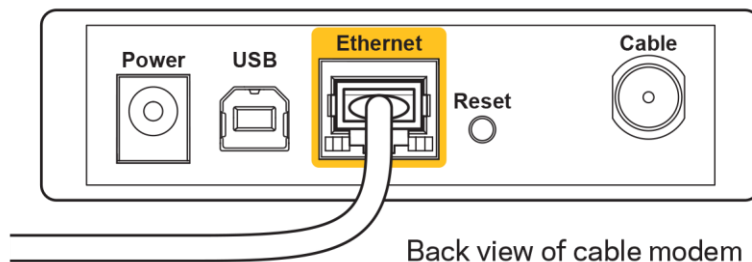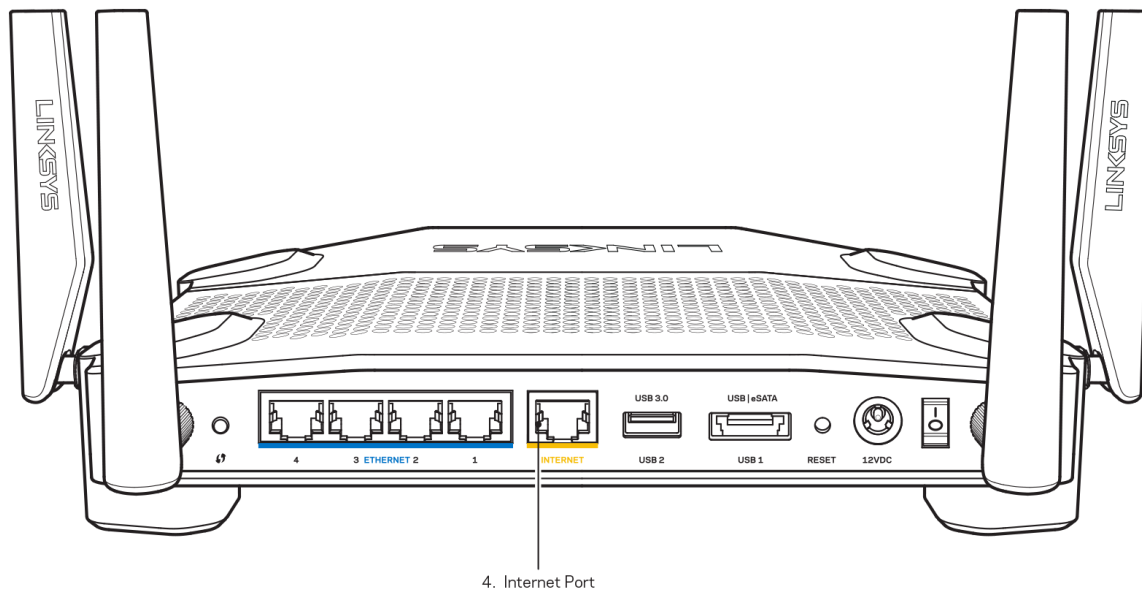

- Make sure that your modem is connected to power and is turned on. If it has a power switch, make sure that it is set to the ON or I (as opposed to O) position.
- If your Internet service is cable, verify that the cable modem’s CABLE port is connected to the coaxial cable provided by your ISP.

- If your Internet service is DSL, make sure that the DSL phone line is connected to the modem's DSL port.
- If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.
- Install the router again.

## Cannot access your router message

To access your router, you must be connected to your own network. If you currently have wireless Internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers\*:

1. On your Windows desktop right-click the wireless icon in the system tray.
2. Click View Available Wireless Networks. A list of available networks will appear.
3. Click your own network name. Click Connect. In the example below, the computer was connected to another wireless network named wraith\_5GHz. The wireless network name of the Linksys WRT1900ACS router, Damaged\_Beez2.4 in this example, is shown selected.




4. If you are prompted to enter a network security key, type your password (security key) into the network security key field. Click **OK**.
5. Your computer will connect to the network, and you should be able to access the router.

*\*Depending on your version of Windows, there could be some differences in wording or icons in these steps.*

To fix the problem on Mac computers:

1. In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks will appear. Linksys Smart Wi-Fi has automatically assigned your network a name.

2. In the example below, the computer was connected to another wireless network named wraith\_5GHz. The wireless network name of the Linksys WRT1900ACS router, Damaged\_Beez2.4 in this example, is shown selected.

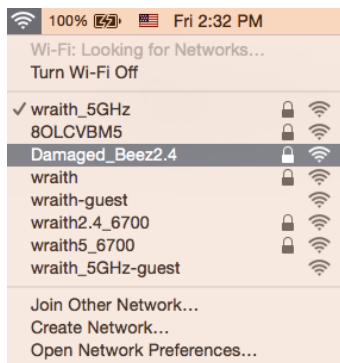

3. Click the wireless network name of your Linksys WRT1900ACS router (Damaged\_Beez2.4 in the example).
4. Type your wireless network password (Security Key) into the Password field. Click **OK**.

## After setup

### The Internet appears to be unavailable

If the Internet has difficulty communicating with your router, the problem may appear as a “Cannot find [Internet address]” message in your Web browser. If you know that the Internet address is correct, and if you’ve tried several valid Internet addresses with the same result, the message could mean that there’s a problem with your ISP or modem communicating with your router.

Try the following:

- Make sure that the network and power cables are securely connected.
- Make sure that the power outlet that your router is connected to has power.
- Reboot your router.
- Contact your ISP and ask about outages in your area.

The most common method of troubleshooting your router is to turn it off, then back on again. Your router can then reload its custom settings, and other devices (such as the modem) will be able to rediscover the router and communicate with it. This process is called rebooting.

To reboot your router using the power cord, do the following:

1. Disconnect the power cord from the router and the modem.
2. Wait 10 seconds, and reconnect the power cord to the modem. Make sure it has power.
3. Wait until the modem’s online indicator has stopped blinking (about two minutes). Reconnect the power cord to the router.
4. Wait until the power indicator stops blinking. Wait two minutes before trying to connect to the Internet from a computer.