

BOSE

QUIETCOMFORT HEADPHONES (2ND GEN)

Please read and keep all safety and use instructions.

Declarations of conformity can be found at: www.Bose.com/compliance

CE Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements.

Important Safety Instructions

Do not use this apparatus near water.

Clean only with a dry cloth.

Only use attachments/accessories specified by the manufacturer.

Refer all servicing to qualified personnel. Servicing is required when the product does not operate normally or has been physically damaged.

WARNINGS/CAUTIONS



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.



This symbol means use of this product with an incompatible or improperly installed battery could cause a safety hazard. Contact Bose customer service for battery service options or visit bose.com/batt for more information.

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, dripping, splashing, or moisture and do not place liquid filled objects such as vases, on or near the product.
- This product must only be operated with compatible Bose certified batteries. Contact Bose customer service for battery service options.
- Do not expose products containing batteries to excessive heat (e.g. from storage in direct sunlight, fire or the like).
- The battery provided with this product may present a risk of fire, explosion or chemical burn if mishandled, incorrectly replaced or replaced with an incorrect type.
- If the battery leaks, do not allow the liquid to come in contact with the skin or eyes. If contact is made, seek medical advice.
- Place your hands around the middle of each earcup when rotating, folding, and placing the headphones in the case and removing from the case. Keep your fingers away from the hinges to avoid pinching.
- Product is not intended for use by children.
- To avoid hearing damage, do not use your headphones at a high volume. Turn the volume down on your product before placing the headphones in/on your ears, then turn the volume up gradually until you reach a comfortable, moderate listening level.
- Use of this product while operating a vehicle may be prohibited by law in some locations. Use caution and follow applicable laws. Stop using this product immediately if it interferes with your ability to remain attentive or interferes with your ability to hear surrounding sounds, including alarms and warning signals, while operating a vehicle.
- Use caution if using these headphones while performing any activity that requires your attention. Do not use the headphones when the inability to clearly hear surrounding sounds may present a danger to yourself or others, for example while riding a bicycle or walking in or near traffic, a construction site, railroad, etc.
- Do NOT use the headphones if they emit any loud unusual noise. If this happens, turn the headphones off and contact Bose customer service.

- Remove product immediately if you notice heat coming from the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Use this product only with an agency approved LPS power supply which meets local regulatory requirements (e.g., UL, CSA, VDE, CCC).
- Do NOT make unauthorized alterations to this product.
- Do not place or install near any heat sources, such as fireplaces, radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.

WARNING: Do not expose product to any chemical substances that are not specified by Bose, including but not limited to lubricants, cleaning agents, contact sprays, or hydrocarbon based solvents. Exposure to such substances can lead to degradation of the plastic material, resulting in cracking and/or exposure to a hazardous condition.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving product or antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules and with ISSED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with FCC and ISSED Canada radiation exposure limits set forth for general population. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Meets IMDA Requirements.

FCC ID: A94443644 | **IC:** 3232A-443644

CAN ICES (B)/NMB (B)

For Europe: Frequency band of operation 2400 to 2483.5 MHz. | Maximum transmit power less than 20 dBm EIRP.

SAR Information

Frequency Band	Maximum Reported SAR(W/kg) Scaled SAR 1g
BT-EDR	0.00
SAR Limited(W/kg)	1.6



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Low-power Radio-frequency Devices Technical Regulations: Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.



The power delivered by the charger must be between min 1.8 Watts required by the radio equipment, and max 2.5 Watts in order to achieve the maximum charging speed.

Power State Information: The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2020, is in compliance with Commission Regulation (EU) 2023/826. For information about power consumption for different standby modes and the period after which the product automatically reverts to those modes, visit www.Bose.com/compliance and select this regulation.

Removal of the rechargeable lithium-ion battery in this product should be conducted only by a qualified professional. Please contact your local Bose retailer or see products.bose.com/static/compliance/index.html for further information.



原電池請回收

Please dispose of used batteries properly, following local regulations. Do not incinerate.



R-C-Bos-443644
보스코리아 유한회사

Names and Contents of Toxic or Hazardous Substances or Elements										
	Toxic or Hazardous Substances and Elements									
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)	Dybutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)	Butyl benzyl phthalate (BBP)	Bis(2-ethylhexyl) phthalate (DEHP)
PCBs	X	O	O	O	O	O	O	O	O	O
Metal Parts	X	O	O	O	O	O	O	O	O	O
Plastic Parts	O	O	O	O	O	O	O	O	O	O
Speakers	X	O	O	O	O	O	O	O	O	O
Cables	X	O	O	O	O	O	O	O	O	O
This table is prepared in accordance with the provisions of SJ/T 11364.										
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.										
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.										

Restricted substances and its chemical symbols						
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr ⁺⁶)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	—	o	o	o	o	o
Metal Parts	—	o	o	o	o	o
Plastic Parts	o	o	o	o	o	o
Speakers	—	o	o	o	o	o
Cables	—	o	o	o	o	o
Note 1: "o" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. Note 2: The "—" indicates that the restricted substance corresponds to the exemption.						

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "6" is 2016 or 2026.

Importers: Bose Electronics (Shanghai) Company Limited, Level 6, Tower D, No. 2337 Gudai Rd. Minhang District, Shanghai 201100 | Bose Products B.V., Vijzelstraat 68, 1017HL Amsterdam, The Netherlands | Ingram Micro Mexico SA de CV, Joseillo 3 Int. Piso 5 Col. El Parque, Naucalpan de Juarez, Edo Mex 53398
 Phone Number: +52 55 5263 6500 | Bose Limited (H.K.), 7F., No. 2, Sec. 3, Minsheng E. Road, Zhongshan Dist., Taipei City 104511, Phone Number: +886-2-2514 7676 | Bose Limited, 16 Dufour's Place, London W1F 7SP

Mexico Service Phone Number: 0800-266-0292

Input Rating: 5V --- 0.5A

Model: 443644. The CMIIT ID is located inside the earcup under the fabric.

License Disclosures: To view the license disclosures that apply to the third-party software packages included as components of the Bose QuietComfort Headphones (2nd Gen), use the Bose app. You can access this information from the Settings menu.

Apple, the Apple logo, iPad, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. The trademark "iPhone" is used in Japan with a license from Aiphone K.K.

Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

Google, Android, and Google Play are trademarks of Google LLC.

Spotify is a registered trademark of Spotify AB.

The Spotify Software is subject to third party licenses found here:

<https://www.spotify.com/connect/third-party-licenses>

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

Bose, the B logo, QuietComfort, and ActiveSense are trademarks of Bose Corporation. | Bose Corporation Headquarters: 1-877-230-5639 | ©2026 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Serial Number and Regulatory Markings Location: This information is located inside the earcups under the inner fabric. Remove the ear cushions, grab the upper edge of fabric, and gently peel away until the information is displayed.

Please complete and retain for your records

Serial number: _____

Model number: 443644

Please keep your receipt. Now is a good time to register your Bose product. You can easily do this by going to worldwide.Bose.com/ProductRegistration

WHAT'S IN THE BOX

Contents	11
----------------	----

BOSE APP

Download the Bose app	12
-----------------------------	----

HEADPHONE CONTROLS

Power on	14
Power off	15
Media playback and volume	16
Phone calls	17
Modes	18
Immersive audio settings	18
Device voice control	18

SHORTCUTS

Enable, disable, or change your shortcut	19
Use your shortcut	19

NOISE CANCELLATION

Change the noise cancellation setting	20
Noise cancellation while on a call	20
Use noise cancellation only	20

IMMERSIVE AUDIO

Immersive audio settings	21
Change the immersive audio setting	22
Change the mode	22
Use your shortcut	22

LISTENING MODES

Modes.....	23
Aware mode with ActiveSense.....	24
Change the mode	25
Set favorites and add or remove custom modes from the headphones.....	25

BLUETOOTH® CONNECTIONS

Connect using the Bose app.....	26
Connect using the <i>Bluetooth</i> menu on your device	26
Disconnect a device	27
Reconnect a device.....	27
Connect another device	28
Switch between two connected devices when streaming audio.....	28
Reconnect a previously-connected device.....	29
Clear the <i>Bluetooth</i> headphone device list	29
Android™ devices only	30
Connect using Fast Pair	30

WIRED CONNECTIONS

AUX audio.....	31
USB Type-C® audio.....	32

BATTERY

Charge the headphones.....	33
Charging time	34
Playback time.....	34
See the battery level	34

HEADPHONE STATUS

<i>Bluetooth</i> status	35
Battery status	36
Power and charging status	36
Update and error status	36

CARE AND MAINTENANCE

Store the headphones	37
Service the headphone battery.....	39
Update the headphones	39
Clean the headphones.....	39
Replacement parts and accessories	39
Limited warranty.....	39
Serial number and regulatory markings location.....	40

TROUBLESHOOTING


Reset the headphones.....	43
Restore the headphones to factory settings.....	44

CONTENTS


Confirm that the following parts are included:




Bose QuietComfort Headphones
(2nd Gen)

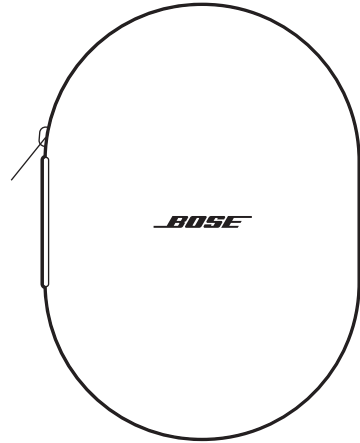

Carry case



USB-C® to USB-C cable



USB-C to 3.5mm cable

NOTE: If any part of your product appears to be missing or damaged, don't use it. Visit support.bose.com/qc2 for troubleshooting articles, videos, and product repair or replacement.

The Bose app lets you set up and control the headphones from any device, such as a smartphone or tablet.

Using the app, you can manage *Bluetooth* connections, manage headphone settings, adjust the audio, and get any future updates and new features made available by Bose.

NOTE: If you've already downloaded the Bose app for another Bose product, you can add the headphones from the product list screen.


DOWNLOAD THE BOSE APP

1. On your device, download the Bose app.




2. Follow the app instructions.

The headphone controls are located on the back of the both earcups.

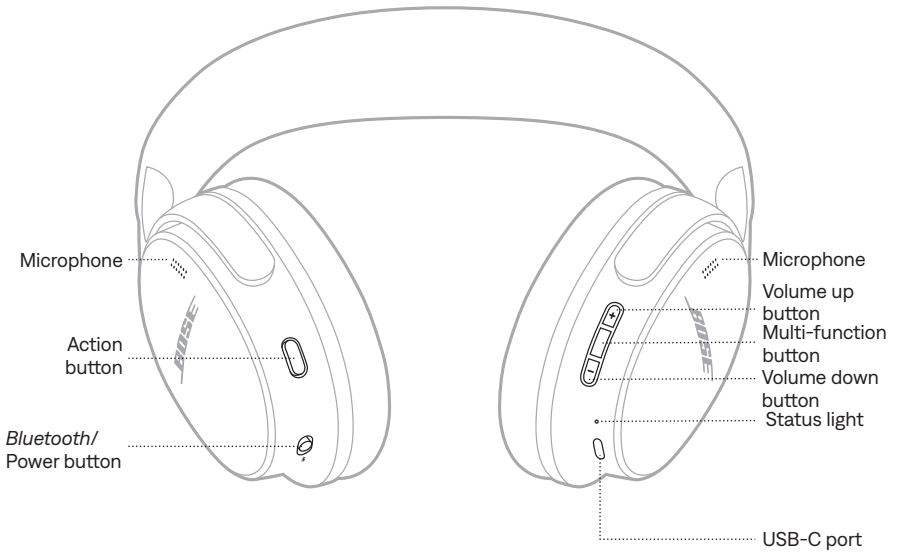

POWER ON


Slide the *Bluetooth/Power* switch to the center.

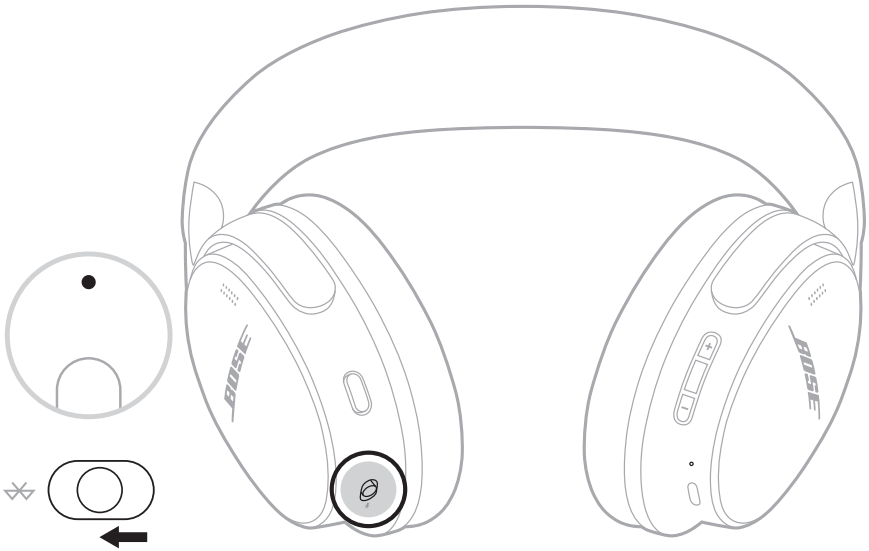

After a few seconds, you hear a tone. The status light glows according to the current charge level (see page 36).

POWER OFF


Slide the *Bluetooth/Power* switch backward.

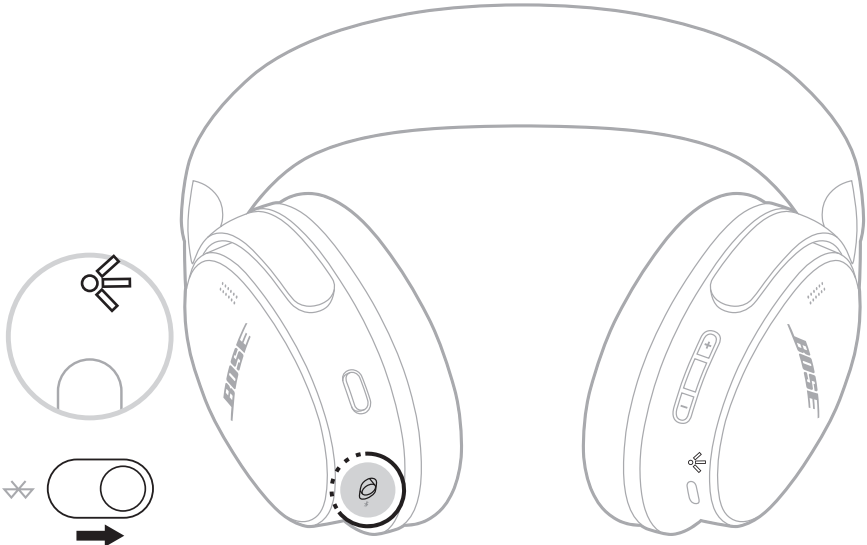

NOTE: When the headphones are powered off, noise cancellation is disabled.

MEDIA PLAYBACK AND VOLUME

The Multi-function button and volume buttons control media playback and volume.

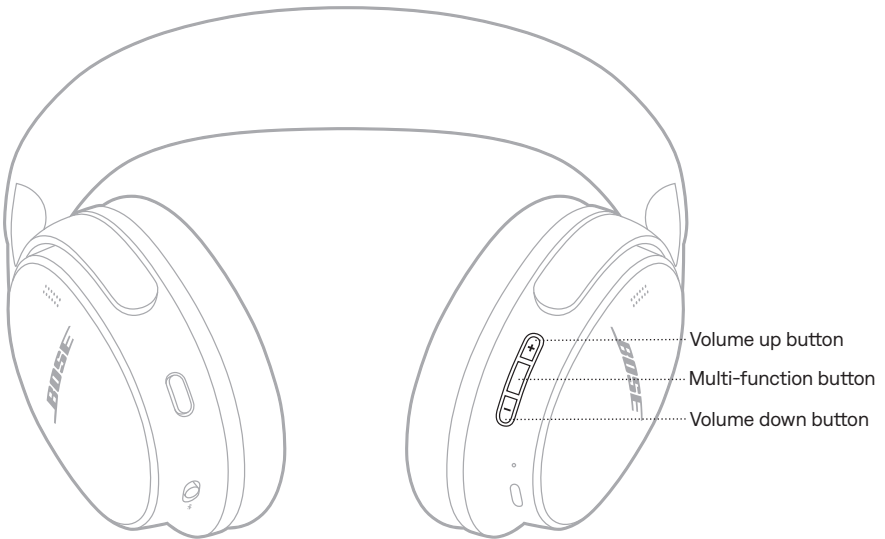


FUNCTION	WHAT TO DO
Play/Pause	Press the Multi-function button.
Skip forward	Double-press the Multi-function button.
Skip backward	Triple-press the Multi-function button.
Volume up	Press +.
Volume down	Press —.

NOTES:

- To quickly increase the volume, press and hold +.
- To quickly decrease the volume, press and hold —.

PHONE CALLS

The Multi-function button controls phone calls.

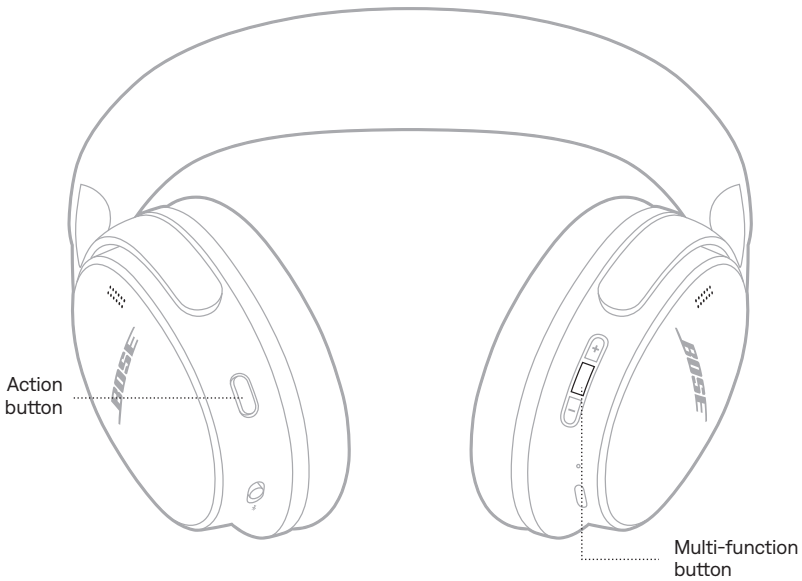

FUNCTION	WHAT TO DO
Answer a call	Press the Multi-function button.
End/Decline an incoming call	Double-press the Multi-function button.
Answer a second incoming call and put the current call on hold	While on a call and a second incoming call is ringing, press the Multi-function button.
Decline a second incoming call and stay on current call	While on a call and a second incoming call is ringing, press and hold the Multi-function button for 1 second.

MODES

The Action button allows you to quickly and easily switch between modes.

For information about changing the mode, see page 23.

IMMERSIVE AUDIO SETTINGS

For information about changing the immersive audio setting, see page 22.

DEVICE VOICE CONTROL

You can set a shortcut to access your device voice control using the headphones. The microphones on the headphones act as an extension of the microphone on your device.

For information about shortcuts, see page 19.

NOTE: You can't access voice control while on a call.

A shortcut enables you to quickly and easily access one of the following functions:

- Cycle through audio settings (see page 21)
- Play music from Spotify
- Use your device voice control (see page 18)

ENABLE, DISABLE, OR CHANGE YOUR SHORTCUT

To enable, disable, or change your shortcut, use the Bose app. To access this option, tap Shortcut on the product control screen.

USE YOUR SHORTCUT

Press and hold the Action button.



Noise cancellation reduces unwanted noise, providing a clearer, more lifelike audio performance.

By default, the headphones power on in Quiet mode. Noise cancellation is fully enabled (see page 23).

CHANGE THE NOISE CANCELLATION SETTING

You can switch between preset noise cancellation settings by changing the mode. For information about modes, see page 23.

NOISE CANCELLATION WHILE ON A CALL

When you make or receive a call, the headphones remain at the current noise cancellation setting and self voice is activated. Self voice helps you hear yourself speak more naturally.

To adjust noise cancellation while on a call, change the mode (see page 23).

NOTE: To adjust self voice, use the Bose app. You can access this option from the Settings menu.

USE NOISE CANCELLATION ONLY

You can use noise cancellation only, without audio or interruptions from phone calls.

1. Do one of the following:
 - Disconnect your device (see page 27).
 - Turn the *Bluetooth* feature off on your device.
2. Press and hold the Action button to change the listening mode (see page 23).

NOTE: To reconnect your device, select the headphones from the *Bluetooth* list on your device, connect using the Bose app (see page 12).

Immersive audio takes what you're hearing out of your head and places it in front of you—like you're always in the acoustic sweet spot. It feels like the sound is coming from outside the headphones, resulting in a more natural listening experience. Immersive audio works on any streaming content from any source, taking it to new heights with better sound clarity and richer sound quality.

NOTE: When you make or receive a phone call, immersive audio is temporarily set to Off. When you end the call, the headphones return to the previous immersive audio setting.

IMMERSIVE AUDIO SETTINGS

SETTING	DESCRIPTION	WHEN TO USE
Motion	Audio sounds like it's coming from two stereo speakers in front of you that follow the movements of your head. NOTE: This setting is used by default in Immersion mode.	Use for the most consistent experience. Best for when you're doing activities that require you to frequently turn your head or look down.
Still	Audio sounds like it's coming from two stereo speakers in front of you that stay where they are when you move your head. NOTES: • A few seconds after you stop moving your head, the speakers recenter on your position. • To access this option, use the Bose app. Tap Immersive Audio on the product control screen.	Use for the most realistic and powerful experience. Best for when you're stationary.
Off	Audio sounds like it's coming from your headphones.	Use when you want a classic listening experience or want to conserve battery life.

CHANGE THE IMMERSIVE AUDIO SETTING

You can change the immersive audio setting by changing the mode or using a shortcut to cycle through immersive audio settings.

TIP: You can also change the immersive audio setting using the Bose app. To access this option, tap Immersive Audio on the product control screen.

Change the mode

To cycle through modes, press the Action button. For information about changing the mode, see page 23.

NOTES:


- Changing the mode changes both the immersive audio and noise cancellation settings.
- You can also create a custom mode with your preferred immersive audio and noise cancellation setting (see page 23).

Use your shortcut

You can use your shortcut to cycle through immersive audio settings without affecting your current mode's noise cancellation setting. This temporarily customizes the current mode until you power the headphones off or change the mode.

NOTE: To change the immersive audio setting using the headphones, it must be set as a shortcut (see page 19).

1. Press and hold the Action button.

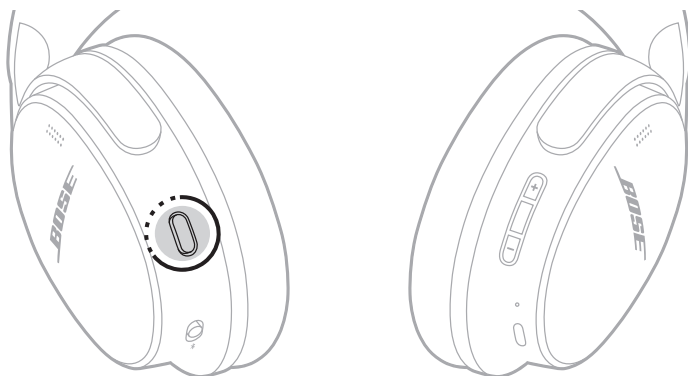

A voice prompt announces each immersive audio setting in a loop.

2. When you hear the name of your preferred setting, release the Action button.

Listening modes are preset audio settings that you can switch between based on your listening preferences and environment. They consist of noise cancellation and immersive audio settings.

You can choose between four pre-configured modes — Quiet, Aware, Immersion, or Cinema — or create up to seven of your own custom modes.

MODES

MODE	DESCRIPTION
Off	All noise control settings are set to off.
Quiet	Full noise cancellation with Bose-optimized stereo audio. Allows you to block out distractions using the highest level of noise cancellation.
Aware	Full transparency with Bose-optimized stereo audio. Allows you to hear your surroundings while enjoying your audio in stereo.
Immersion	Full noise cancellation with immersive audio set to Motion. Allows you to block out distractions and immerse yourself in lifelike audio.
Cinema	Full noise cancellation with Immersive Audio set to Still. Allows you to experience your video content in a movie-like way by spatializing your audio, balancing background sounds and sound effects, and enhancing dialogue clarity.
Custom	Custom noise control (noise cancellation or wind block) and immersive audio settings based on your listening preferences and environment. NOTE: You can create up to seven custom modes using the Bose app. To access this option, tap Modes on the product control screen.

NOTES:

- By default, the headphones power on in Quiet mode. When you switch modes, your headphones power on in the last mode used.
- For information about noise cancellation and immersive audio settings, see page 20 and page 21.

Aware mode with ActiveSense

The dynamic noise cancellation of Aware mode with ActiveSense technology allows you to hear your surroundings while reducing unwanted noise.

Aware mode with ActiveSense allows the headphones to automatically increase noise cancellation when sudden or loud noises occur near you, so you can maintain awareness without intermittent noise interrupting your audio. Once the noise stops, noise cancellation automatically returns the previous setting.

To enable ActiveSense, use the Bose app. To access this option, on the product control screen, tap **Modes > Aware > ●●●**.

CHANGE THE MODE

NOTE: To access a mode on the headphones, it must be set as a favorite in the Bose app. To set your favorite modes, tap Modes on the product control screen. By default, Quiet, Aware, and Immersion are set as favorites.

1. To cycle through modes, press the Action button.



A voice prompt announces each mode in a loop.

2. When you hear the name of your preferred mode, release the Action button.

TIP: You can also change the mode using the Bose app. To access this option, tap Modes on the product control screen.

Set favorites and add or remove custom modes from the headphones

To add or remove modes from the headphones, tap Modes on the product control screen and customize which modes are set as your favorites.

You can connect the headphones to your device using the Bose app, the *Bluetooth* menu on your device, or Fast Pair (Android devices only).

You can store up to six devices in the headphone device list, and the headphones can be actively connected to up to two devices at a time (multi-point connection). You can play audio from only one device at a time.

NOTES:

- For the best experience, use the Bose app to set up and connect your device (see page 12).
- For information about connecting using Fast Pair, see page 30.

CONNECT USING THE BOSE APP

To connect the headphones and manage *Bluetooth* settings using the Bose app, see page 12.

CONNECT USING THE *BLUETOOTH* MENU ON YOUR DEVICE

1. With the headphones powered on, slide the *Bluetooth/Power* switch  forward and hold for 3 seconds, the status light pulses blue.




2. On your device, enable the *Bluetooth* feature.

NOTE: The *Bluetooth* feature is usually found in the Settings menu.

3. Select the headphones from the list of available products.

NOTE: Look for the name you entered for your headphones in the Bose app. If you didn't name your headphones, the default name appears.

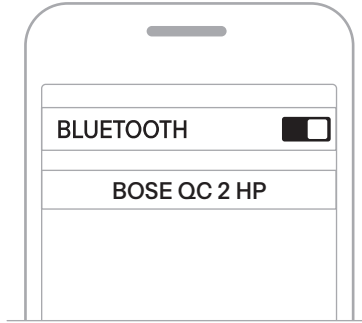

Once connected, the status light glows solid blue for 10 seconds.

NOTE: If a device is already connected, a tone plays and the status light glows solid blue for 10 seconds.

DISCONNECT A DEVICE

To disconnect a device, use the Bose app.

TIP: You can also use *Bluetooth* settings on your device to disconnect.

RECONNECT A DEVICE

When powered on, the headphones try to reconnect with the two most recently-connected devices.

NOTES:

- The devices must be within range (30 ft or 9 m) and powered on.
- Make sure the *Bluetooth* feature is enabled on your device.
- If the multi-point connection feature is disabled, the headphones try to reconnect with the most recently-connected device.

CONNECT ANOTHER DEVICE

By default, the headphones can be actively connected to up to two devices at a time (multi-point connection).

To connect another device, use one of the following options:

- The Bose app (see page 12).
- The *Bluetooth* menu on your device (see page 26).
- Fast Pair (Android devices only) (see page 30).

NOTES:

- You can only play audio from one device at a time.
- To manage or disable the multi-point connection feature, use the Bose app. You can access this option from the Settings menu.
- Disabling the multi-point connection feature disconnects the second connected device.

SWITCH BETWEEN TWO CONNECTED DEVICES WHEN STREAMING AUDIO

1. Pause audio on your first device.
2. Play audio on your second device.

The headphones switch to that device's audio stream.


NOTE: Your headphones receive phone calls from both devices, regardless of which device is playing audio.

RECONNECT A PREVIOUSLY-CONNECTED DEVICE

Reconnect a previously-connected device using the Bose app (see page 12) or your source device *Bluetooth* settings.

CLEAR THE *BLUETOOTH* HEADPHONE DEVICE LIST

1. Slide the *Bluetooth*/Power switch forward  and hold for 15 seconds.

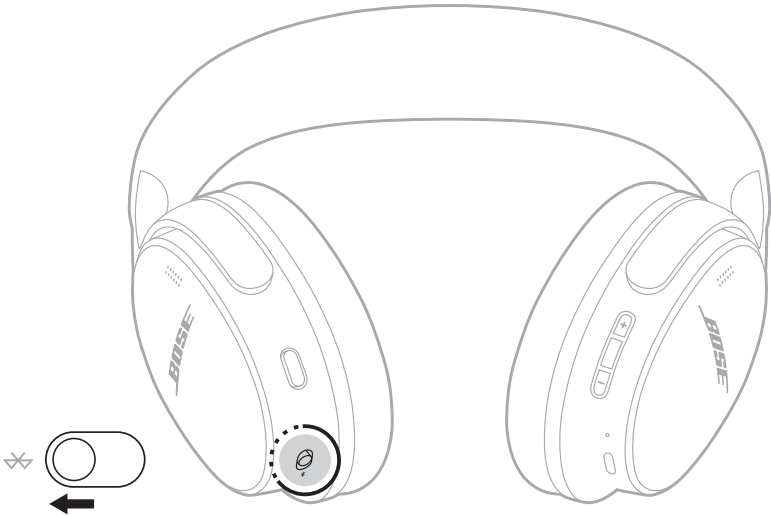

2. Delete your headphones from the *Bluetooth* list on your device. Repeat for each previously-connected device.

All devices are cleared, and the headphones are ready to connect.

ANDROID DEVICES ONLY

If you have an Android device, you can access the following additional connection features.

Connect using Fast Pair

In one tap, the headphones enable quick, effortless *Bluetooth* pairing with your Android devices.

NOTES:

- To use Fast Pair, you need an Android device running Android 6.0 or higher.
 - Your Android device must have the *Bluetooth* and Location features enabled.
1. With the headphones powered on, slide the *Bluetooth/Power* forward and hold. You hear the power off tone and the status light blinks white twice. Continue holding until the status light pulses blue.



2. Place your headphones next to your Android device.

A notification displays on your device prompting you to pair the headphones.

NOTE: If you don't see a notification, check that notifications are enabled for the Google Play Services app on your device.

3. Tap the notification.

NOTE: You can also tap the button on the notification to download the Bose app and finish setting up the headphones.

AUX AUDIO

Use the USB-C to 3.5 mm audio cable to listen to audio from your source device when a *Bluetooth* connection isn't available.

NOTES:

- The headphones must be powered on for you to use the audio cable.
 - Phone calls and media playback controls are disabled and must be controlled on your source device.
 - *Bluetooth* connection and microphone voice pick-up on the earcups are disabled.
 - For the best experience, a *Bluetooth* connection is recommended.
1. Connect the cable to the USB-C port on the right earcup.



2. Connect the other end of the cable to the 3.5 mm port on your source device.


USB TYPE-C® AUDIO

The headphones support USB-C audio. To play audio from a source device, connect your headphones to your device using the USB-C cable.

If the headphone battery is depleted, you can use the USB-C to USB-C cable to connect to an external power source and still use the headphones while charging.

NOTES:

- The headphones will charge while they're powered on.
 - To continue listening to audio on your source device when the headphone battery is depleted and a *Bluetooth* connection isn't available, connect the USB-C cable.
1. Connect the USB-C cable to the USB-C port on the right earcup.

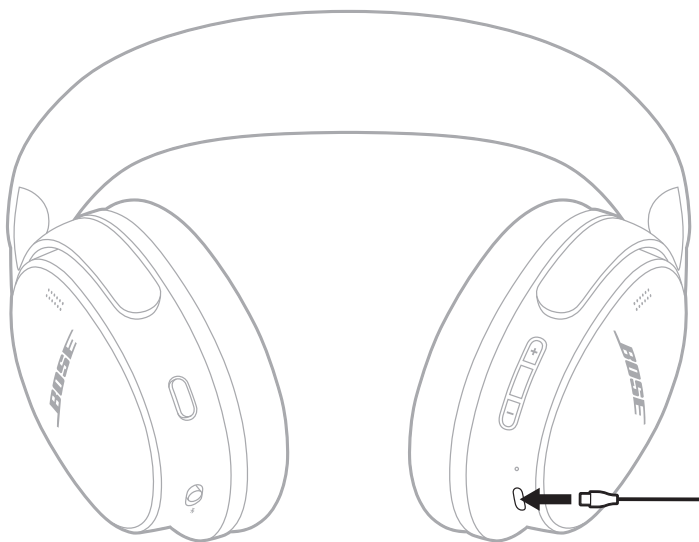


2. Connect the other end to a USB-C port on your source device.
3. Power on the headphones (see page 14).

NOTE: Slide the *Bluetooth/Power* switch forward $\times$ to switch between your USB-C connected device and your previously-connected *Bluetooth* devices (see page 29).

CHARGE THE HEADPHONES

1. Connect the USB-C cable to the USB-C port on the right earcup.
2. Connect the other end to a USB-C power source such as a computer or wall charger.

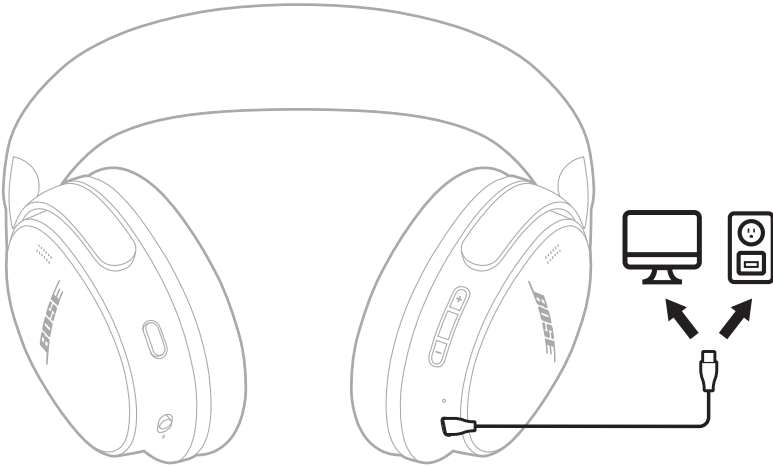

The headphones begin charging, and the status light glows solid amber. When the headphones are fully charged, the status light glows solid white.

NOTES:

- The headphones can be used in *Bluetooth* or USB audio mode while they are charging (see "USB Type-C® Audio" on page 32).
- The headphones charge faster when they are powered off (see "Charging time" on page 34).

Charging time

Allow up to 3 hours to fully charge the headphones.¹

NOTE: Charging is slower when the headphones are in use.

Playback time

A full charge powers the headphones for up to:

- 24 hours with noise cancellation set to On and immersive audio set to Off.
- 18 hours with noise cancellation and immersive audio set to On.

When the headphone battery level is low, a 15-minute charge powers the headphones for up to 2.5 hours with noise cancellation set to On and immersive audio set to Off.

See the battery level

To visually check the battery, see the status light located on the right earcup. For more information, see page 34.

¹ Testing conducted by Bose in April 2025 using production-representative Bose QuietComfort Headphones (2nd Gen). Quick charge testing consisted of charging headphones with battery depleted (to the point of no audio playback) for 15 minutes, then resuming audio playback with volume set to playback loudness of 75dB SPL, 3-band EQ set to zero, in Quiet Mode (full noise cancellation) with Immersive Audio switched off, resulting in up to 2.5 hours playback time before battery depletion. With Immersive Audio on, playback time was up to 2 hours before battery depletion. Time to achieve fully charged headphones was determined by charging headphones with battery depleted (to the point of no audio playback) to 100% battery charge. Battery life varies based on settings and usage.

The status light is located on the right earcup. The status light glows according to headphone status.



BLUETOOTH STATUS

Shows the *Bluetooth* connection status.

LIGHT ACTIVITY	SYSTEM STATE
Pulsing blue	Ready to connect
Solid blue (5 seconds)	Connected
Blinks white 2 times	Device list cleared

BATTERY STATUS

Shows the battery status.

LIGHT ACTIVITY	SYSTEM STATE
Solid white	Full charge
Solid amber	Low to medium charge

TIP: You can also check the battery level using the Bose app or using your paired source device.

POWER AND CHARGING STATUS

Shows the power and charging status.

LIGHT ACTIVITY	SYSTEM STATE
Solid amber	Charging
Solid white	Full charge

UPDATE AND ERROR STATUS

Shows the update and error status.

LIGHT ACTIVITY	SYSTEM STATE
Blinks white 3 times (repeated)	Updating software (wirelessly)
Fast blinking white (10 seconds)	Updating software (via USB)
Blinks white (3 seconds)	Reset
Blinking amber and white	Error - contact Bose customer service

STORE THE HEADPHONES

The earcups rotate for easy, convenient storage. Place the headphones flat into the case.

1. Place your hands around each earcup.




2. Rotate both earcups inward so they lay flat.



- Slide the earcups up into the headband.



- Fold the left earcup up toward the headband and place the headphones in the case.

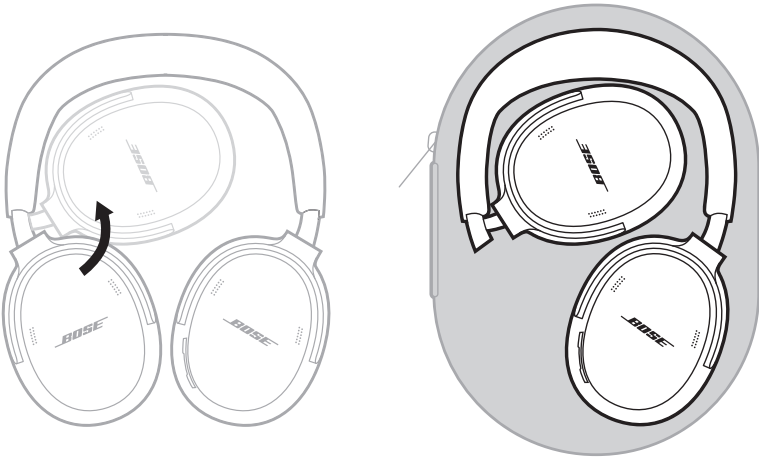

SERVICE THE HEADPHONE BATTERY

This product must only be operated with compatible Bose certified batteries. For battery service options, contact Bose customer service or visit support.Bose.com/qc2

UPDATE THE HEADPHONES

The headphones begin updating automatically when connected to the Bose app and an update is available. Follow the app instructions.

You can also update the headphones using the Bose updater website. On your computer, visit: btu.Bose.com and follow the on-screen instructions.

CLEAN THE HEADPHONES

The headphones may require periodic cleaning. If the headband or other exterior surfaces need to be cleaned, gently wipe with a slightly damp cloth.

- Use only a water dampened cloth. Don't use cleaning products. Don't allow any moisture to enter the headphones through the ports or earcups.
- Don't force any dirt or debris into the ports. Don't blow air into or vacuum the ports or the interior of the earcups.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: support.Bose.com/qc2

LIMITED WARRANTY

Your headphones are covered by a limited warranty. Visit our website at worldwide.Bose.com/Warranty for details of the limited warranty.


To register your product, visit worldwide.Bose.com/ProductRegistration for instructions. Failure to register will not affect your limited warranty rights.

SERIAL NUMBER AND REGULATORY MARKINGS LOCATION

TIP: You can also view the serial number using the Bose app. You can access this option from the Settings menu.


The serial number and regulatory markings are located inside the left earcup under the inner fabric. The inner fabric covers and protects the components inside the earcup.

1. On the left earcup, gently pull one area of the cushion away from the earcup until all tabs around the inside rim of the earcup release.

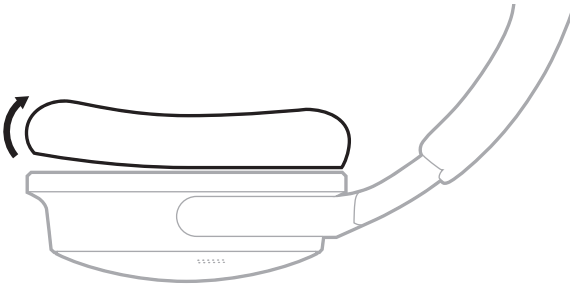


2. Grab the upper edge of the fabric and gently peel away until the information is displayed.


CAUTION: Be careful not to press down on or remove any other components inside the earcup as this could damage the headphones.

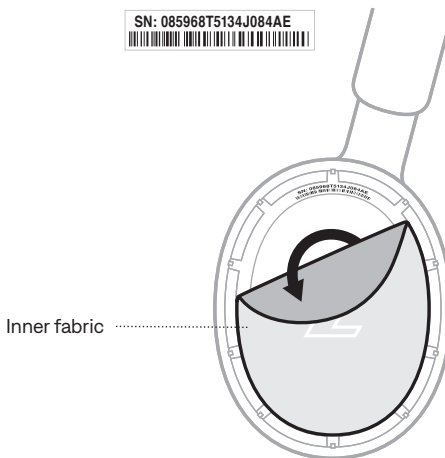

- Secure the fabric back in place.

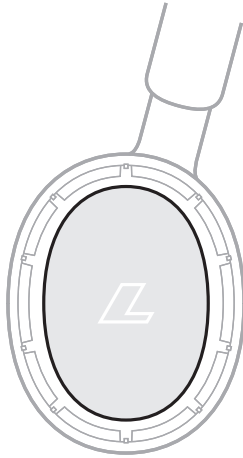

- Press the edge of the cushion against the edge of the earcup until you hear and feel a snap. Continue pressing around the edge of the earcup until all tabs snap into place.

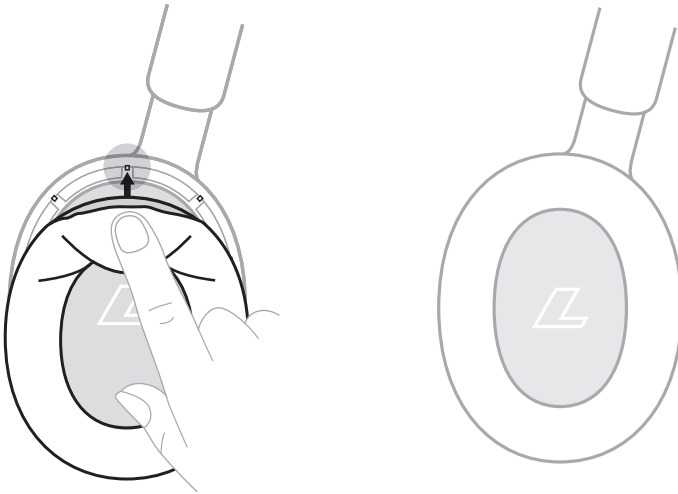

NOTE: To ensure proper audio performance, all tabs must be secure on the cushion.

TROUBLESHOOTING

You can access troubleshooting articles, videos, and other resources at:
support.Bose.com/qc2-og

If you are unable to resolve your issue, contact Bose customer service.


Visit: worldwide.Bose.com/contact

RESET THE HEADPHONES


If the headphones are unresponsive, you can reset them.

Resetting the headphones resets the product controls and reboots the headphones. It doesn't clear any device settings.

1. Remove the headphones from the *Bluetooth* list on your device.
2. Connect the USB-C cable to the USB-C port on the right earcup.

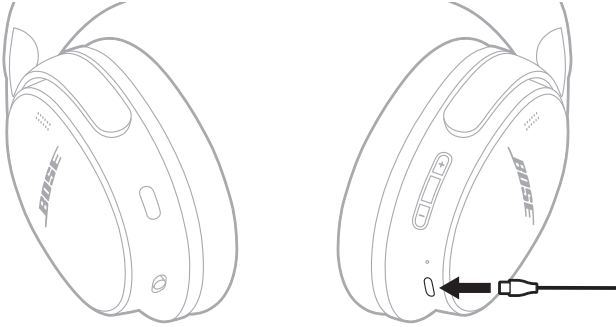

3. Slide the *Bluetooth/Power* switch forward and hold while connecting the other end of the USB-C cable to a USB-C power source such as a computer or wall charger.

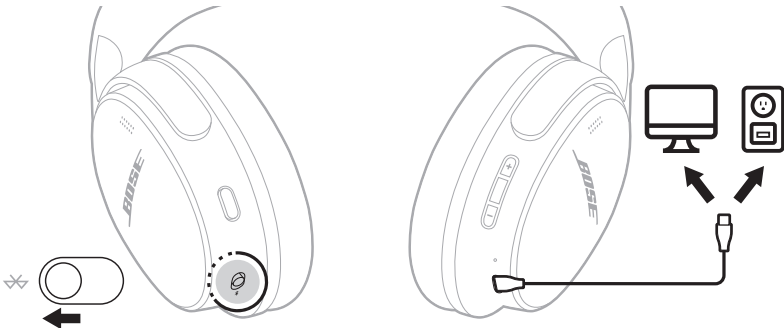

4. Once the USB-C cable is connected to a USB-C power source, release the *Bluetooth/Power* button.

When the reset is complete, the status light blinks white for 3 seconds, then glows according to the current charge level (see page 36).

NOTE: If you're unable to resolve your issue, additional troubleshooting and support is available at: support.Bose.com/qc2

RESTORE THE HEADPHONES TO FACTORY SETTINGS


A restore to factory settings clears all settings and return the headphones to their original out-of-box state. After, the headphones can be configured as if they were being set up for the first time.

Restoring to factory settings is only recommended if you are having issues with the headphones or you have been instructed to do so by Bose customer service.

1. Remove the headphones from the *Bluetooth* list on your device.
2. Remove the headphones from your Bose account using the Bose app.

NOTE: For more information about how to remove the headphones from your Bose account using the Bose app, visit: support.Bose.com/qc2

3. Slide the *Bluetooth/Power* switch forward  and hold for 20 seconds.

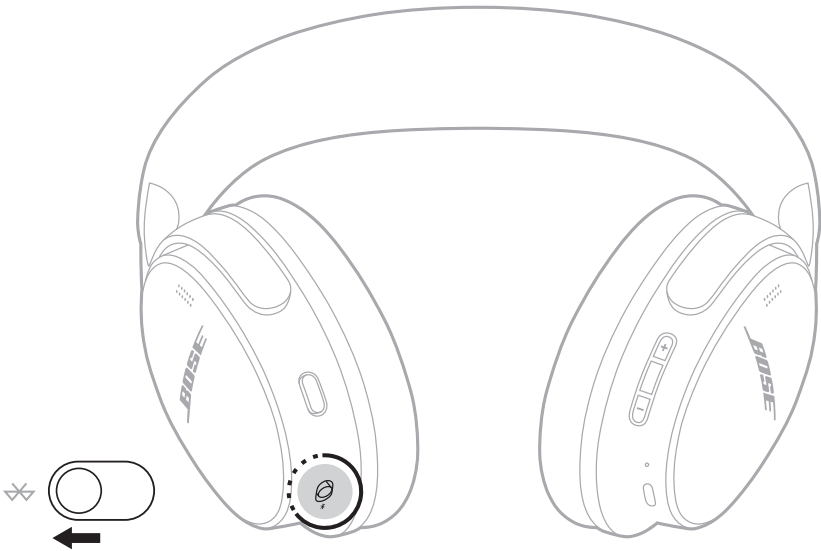

When the restore is complete, the status light blinks blue. The headphones are now in their original out-of-box state.

NOTE: If you're unable to resolve your issue, additional troubleshooting and support is available at: support.Bose.com/qc2



901307-0010