


Start Here



Serenelifehome.com/
register

serenelife™

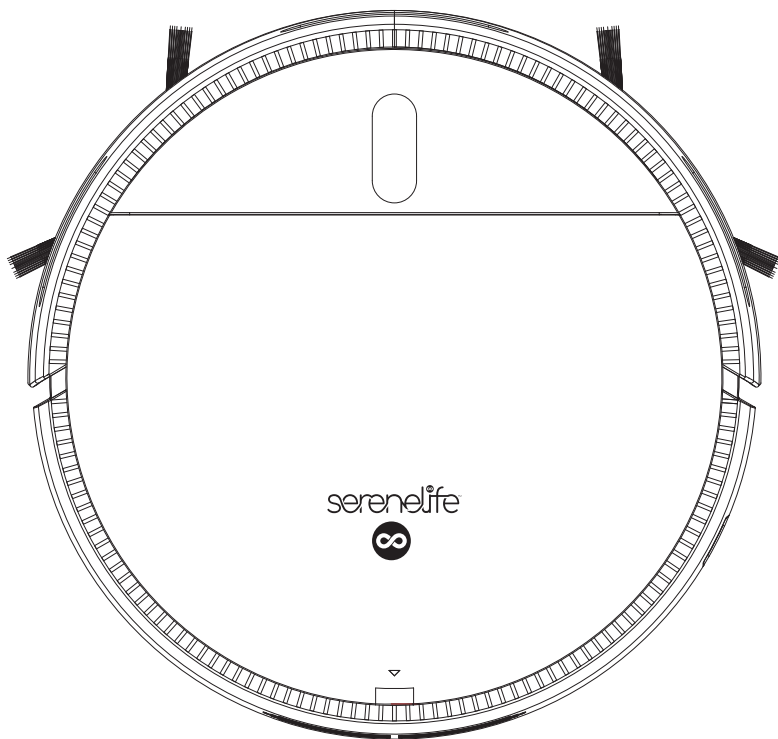

Serene Breeze Robot Vacuum Cleaner

USER GUIDE

CONTENTS

FEATURES & TECHNICAL SPECS	3
SAFETY INSTRUCTIONS	4
CAUTION	4
PRODUCT INTRODUCTION	5
CHARGING GUIDE	7
PRODUCT OPERATION	9
APP INSTRUCTIONS	11
PRECAUTIONS BEFORE USE	15
PRODUCT MAINTENANCE	16
TROUBLESHOOTING	18
WARNING CODE TABLE	21
REGISTER PRODUCT	21

WARNING:

BE SURE TO READ ALL INSTRUCTIONS, WARNINGS AND
PRECAUTIONS CAREFULLY BEFORE USING THIS PRODUCT.
FAILURE TO DO SO COULD RESULT IN INJURY TO YOU
OR DAMAGE TO THE UNIT.

California Prop 65 Warning



WARNING:

This product may expose you to chemicals, which is known to the state of California to cause cancer, birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Features:

- Keep it Clean: Sweep, Dust and Vacuums
- Versatile & Convenient Floor Cleaning
- Smart, Random Cleaning Path Navigation
- Low-Profile Design Slides Underneath Furniture
- Anti-Fall Sensors & Protective Bumper Housing
- Obstacle Detection Cleans Around Household Objects
- Works on Hardwood, Linoleum, Tile, Low/Hard Carpet Floors
- 3 Cleaning Modes: Auto, Spot, Edge
- App Control with Bluetooth Connection
- Automatic Recharge with Docking Station
- Easy to Maintain
- One Button Operation
- Built-in Rechargeable Battery
- Dual Spinning Side Brush Lifts Debris
- Includes Charging / Power Adapter
- Perfect for the Home or Office

Technical Specs:

- Construction Material: ABS + POM + PC (Injection Molding Part)
- Dust Bin Capacity: 0.37L
- Water Tank Capacity: 0.15L
- Average Charge Time: 4-6 Hours
- Vacuum Operation Run-Time: 80 Minutes
- Battery Type: 7.4V Li-ion, 2000mAh - 14.8Wh
- Remote Control Battery Operated, Requires (2) x 'AAA' Batteries (Not Included)
- Unit Average Power: 15W
- Suction Power: 700Pa
- Power Supply: AC110-240V, 50-60Hz Power Adapter
- Low Noise: ≤70 dB
- Item Weight: 3.5 lbs.
- Power Cable Length: 6 ft. (1.83m)
- Product Dimensions (L x W x H): 11.41" x 11.41" x 3.07" -inches

Safety Instructions

Please follow the following safety precautions before using the product:


- Please read this manual carefully before using the product and use the product according to the instructions in this manual.
- Keep it properly.
- If you need to transfer the product to a third party, please attach the manual together with the product.
- Any operation inconsistent with this manual may lead to damage to the product and personal injury.



Caution

1. This product can only be dismantled by an authorized technician.
Such behavior without permission is not suggested.
2. Only the power adapter provided by the factory can be used with this product.
The use of an adapter of other specifications may cause damage to the product.
3. Don't touch the cord, charging base, and power adapter with a wet hand.
4. Keep the openings and running parts free of curtains, hair, clothes, or fingers.
5. Don't put the cleaner around burning objects, including cigarettes, lighters, or anything that is likely to cause fire. Don't use the cleaner to pick up combustible materials, including gasoline or toner from printers, copiers, and mixers.
Don't use it around flammable substances.
6. Please clean the product after charging, and turn off the product switch before cleaning.
7. Do not over-bend wires or place heavy or sharp objects on the machine.
8. This product is an indoor household appliance; please don't use it outdoors.
9. The cleaner can't be used by children of 8 years and below or persons with mental disorders, unless they have been given supervision or instruction concerning the use of this appliance. Don't let your children ride on or play with the cleaner.
10. Do not use this product on wet or watery ground.
11. Possible problems in product cleaning shall be eliminated as soon as possible.
Please clear up any power cord or small object on the floor before using the cleaner in case they hinder the cleaning. Fold over the fringed hem of the carpet and prevent the curtain or tablecloth from touching the floor.

12. If the room to be cleaned contains a staircase or any suspended structure, please test first whether the robot will detect it and not fall off the edge. If a physical barrier is needed for protection, make sure the facility does not cause such injuries as tripping.
13. When the product is not used for a long time, the machine shall be charged every three months to avoid battery failure due to low power for a long time.
14. Don't use it without the dustbin and filters in place.
15. Make sure the power adapter is connected to the socket or charging base when charging.
16. Avoid any cold or heat. Operate the robot between 14°F to 122°F.
17. Before discarding the product, disconnect the cleaner from the charging base, turn off the power and remove the battery.
18. Make sure the product is not powered on when removing the battery.
19. Please remove and discard the battery in accordance with local laws and regulations before discarding the product.
20. Do not use the product with a damaged power cord or power socket.
Do not use the product when the product cannot work normally due to falling, damage, outdoor use, or water ingress.

Product Introduction

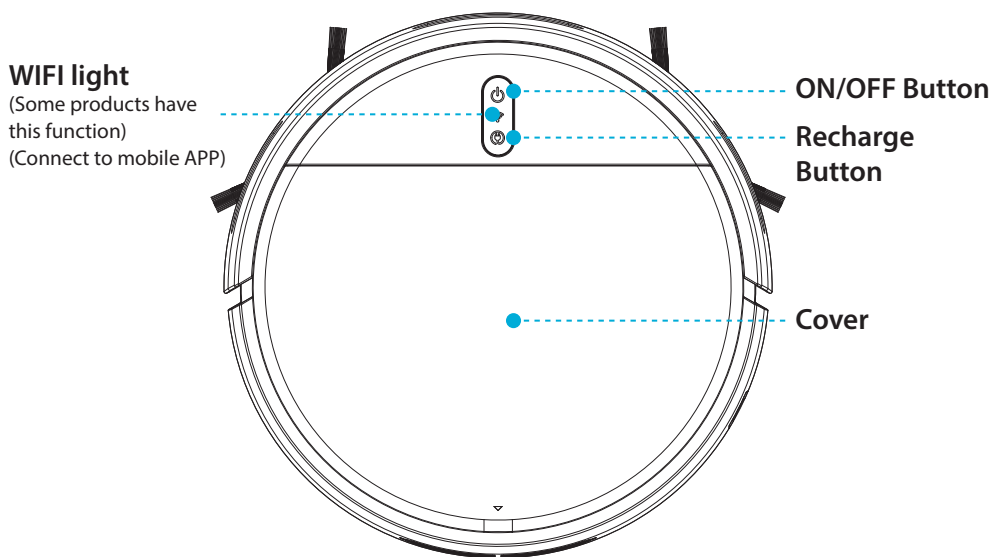

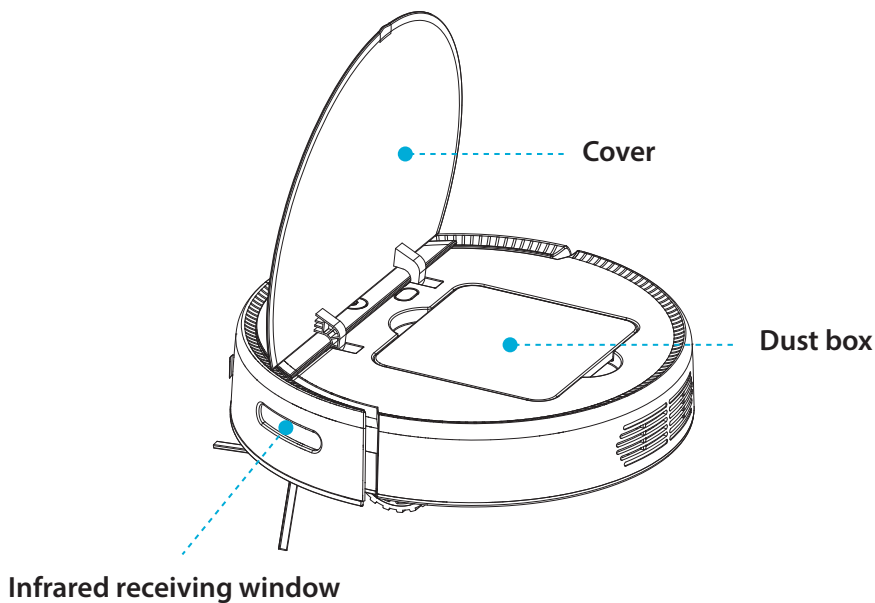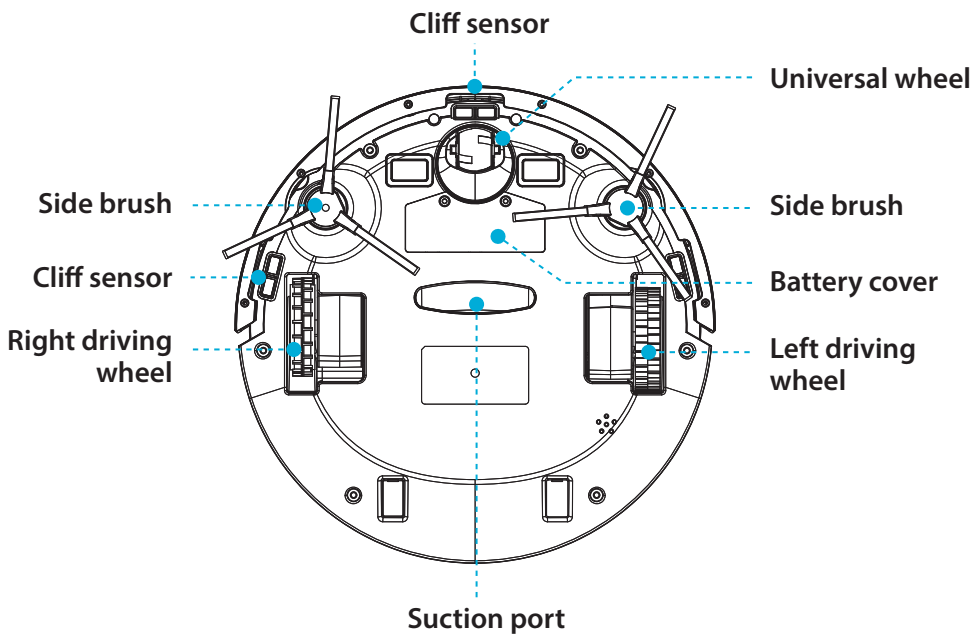

What's in the Box

- Smart Robot Vacuum
- Remote Control
- (1) US Plug/ Power Adapter
- (1) Mop Cloth
- (1) Water Tank
- (1) Pairs Side Brush
- (1) Charging Station


- For the purpose of continuous improvement, all rights to change and interpret are reserved in terms of technology and design regarding the product.
- The models only differ slightly in color and appearance without other essential differences.

Charging Guide

How to Use the Charging Base

Place the charging base on flat ground, then connect the power adapter.

The power indicator will be constantly on. The indicator light of the charging base will go out during normal charging.

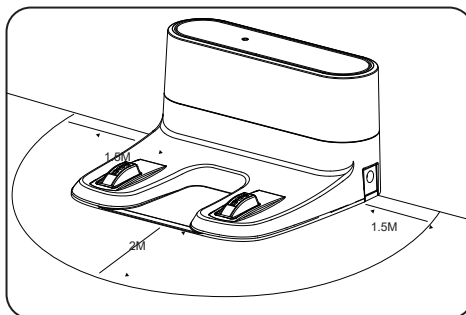


Notes

Place the charging base on flat ground, with the back against the wall, and remove all obstacles around the charging base of about 5 ft (1.5 meters) in width and 6.5 ft (2 meters) in front of the charging base, as shown in the figure.

Two Charging Methods

1. Directly plug the power adapter into the machine, with the other end connecting with the power supply, as shown in figure A.
Please use the power adapter provided.
2. Use the charging base for charging, as shown in figure B.

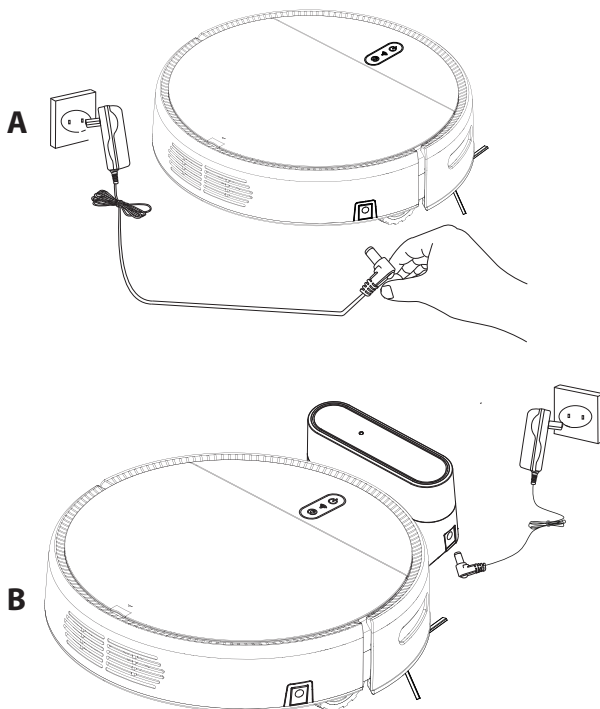


Notes


- A. Please charge the machine for not less than 12 hours when charging for the first time, and charge it until the red light of the power key  and  breathes. When the battery is fully charged, the green light will be constantly on.
- B. For daily use, please store the machine on the charging stand and make sure the charging stand is powered on.
- C. When not in use for a long time, please fully charge the machine, turn off the power switch and store it in a cool and dry place.
- D. When setting the reservation mode, do not use manual charging mode. It is recommended to use automatic charging mode.
- E. After using the mopping function, remove the water tank and rag when charging.

Product Operation


1. Water Tank Installation

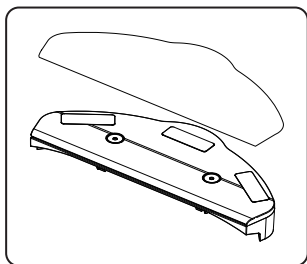

1. Attach the mop to the Velcro on the water tank.

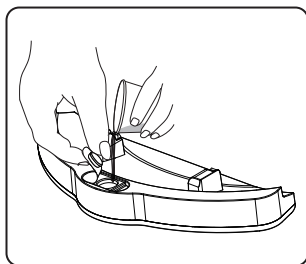

2. Open the inlet on the water tank and slowly fill it with water.

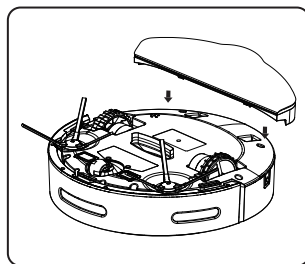


3. Turn the machine upside down, align the positioning column of the water tank with the positioning hole at the bottom of the machine, and press the water tank firmly into place.

Attention

- The water tank will start to seep after water is added. Please remove the water tank before charging.
- When using the water tank, add water or clean it promptly. Always remove the tank before adding water.
- Do not use the water tank on carpets. When mopping the floor with the water tank, fold up the edges of any carpets to avoid contaminating them with dirt from the mop.
- After cleaning the mop, ensure it is dry and no longer dripping before attaching it to the water tank. The mop should be flat.

2. Power ON

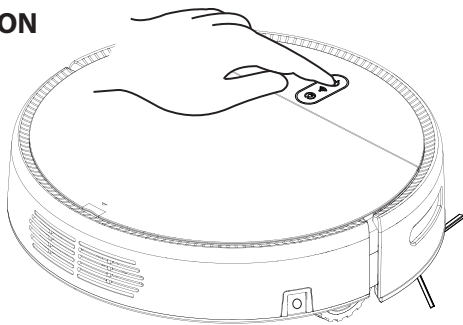

Function Key



On-off key

WIFI light (some products with this function)


Recharge key

Power On: Press and hold the power key for 3 seconds to power on.

Indicator Status:

1. **Start:** The corresponding function light is green.
2. **Exception:** The red light blinks.
3. **Charging:** The red light pulses.
4. **Full:** The green light is steady.


Remote Control Functions

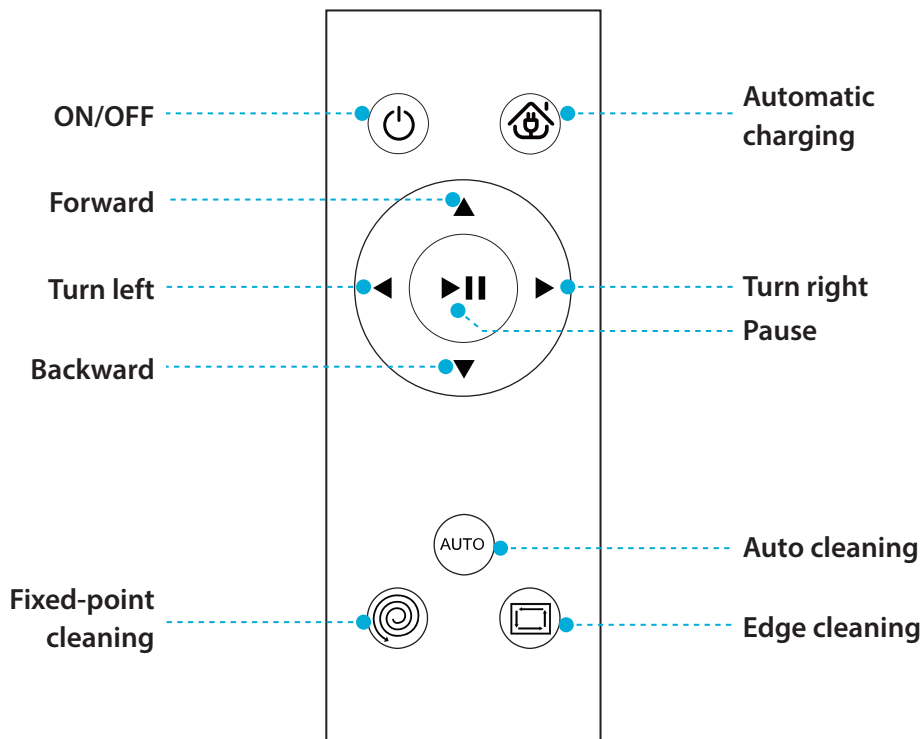



APP INSTRUCTIONS

This app is subject to updates. We reserve the right to update the app without prior notice.


1. **Download the App:** Scan the QR code with your cell phone or search for "Smart Life" in the mobile app market and download the app. Ensure your cell phone is connected to WiFi.

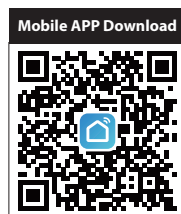



2. **Register or Log In:** Open the "Smart Life" app and register a new account or use an existing account.

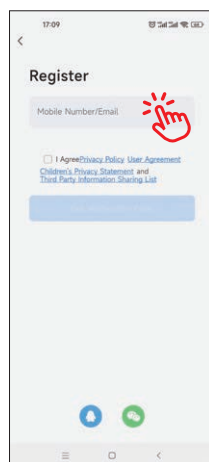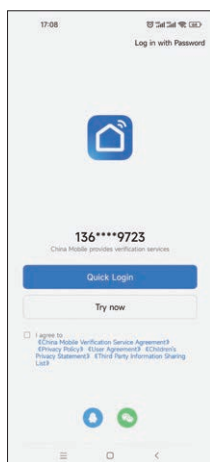


3. **WiFi Fast Connection:** Press and hold the  button and  button simultaneously for more than 3 seconds. The robot will emit a "beep" sound, and the blue indicator light  will flash quickly, indicating that the robot is in WiFi fast connection mode.

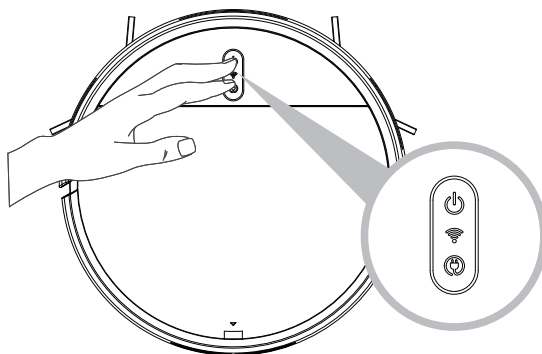

4. **Connect WiFi:** After registering, connect to WiFi (ensure it's 2.4GHz) and turn on Bluetooth. Proceed to the next step, **"Add Device."**


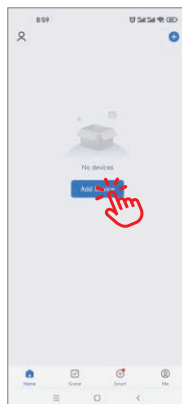
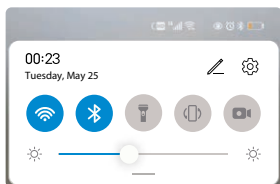


5. **Add Device:** Click on the "+" sign in the upper right corner and select "Add" for the detected product on the next page.

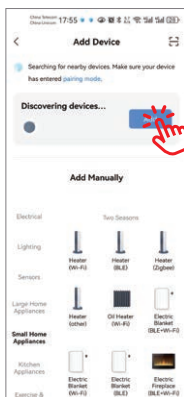


6. Enter WiFi Details:


Ensure the name of your home WiFi is correct, enter the WiFi password, and click **NEXT** (note: only 2.4G WiFi is available). A control interface will appear once the device is successfully bound.

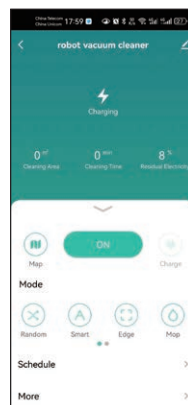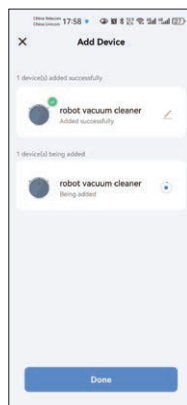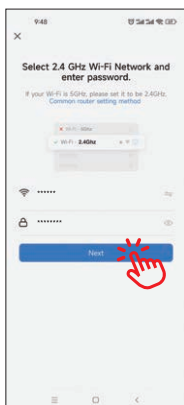

7. Rapid Network Distribution Mode: Select "Small Home Appliances" and then "Robot Vacuum."

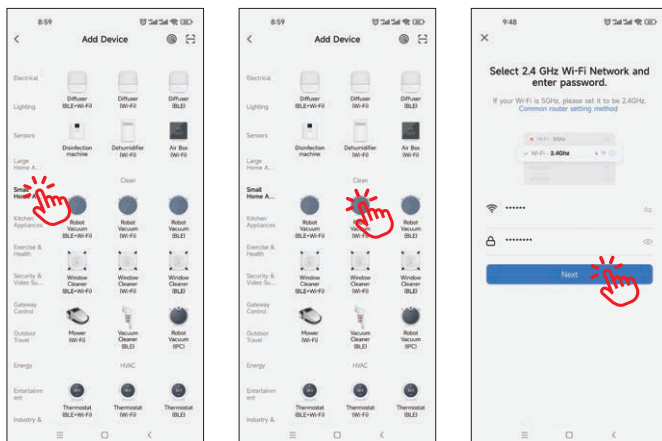



Ensure the WiFi LED indicator is flashing, check **"Confirm indicator rapidly blink,"** and click **NEXT** for network connection. Click Finish after the device is successfully added. It may take several seconds to connect the device to the WiFi network, depending on signal strength.

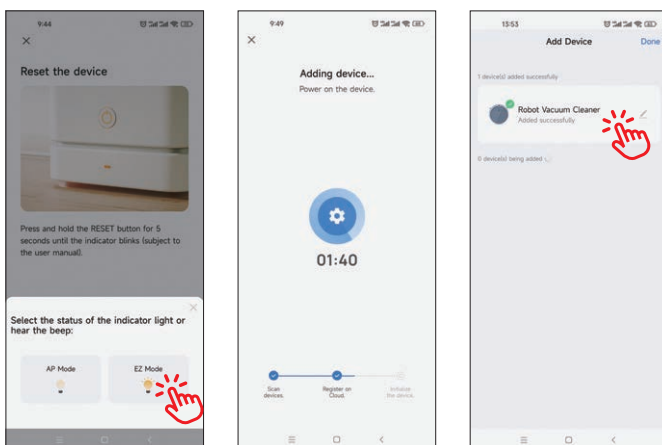


Reset WiFi

In case of connection timeout or when connecting another cell phone, first switch on the device. Press and hold the  button and  button simultaneously for more than 3 seconds, then reconnect to the WiFi network.


8. Click on **"Robot Vacuum Cleaner,"** as shown in the figure, to enter the control interface.

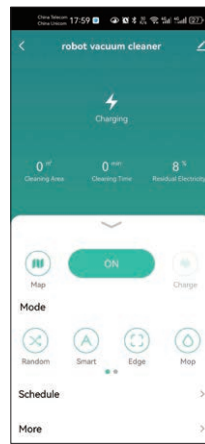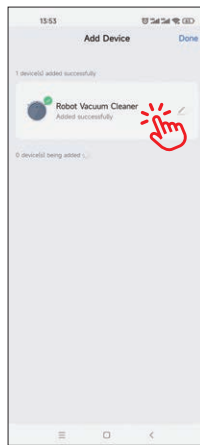


9. If the device does not respond, a page will be displayed, as shown in the figure. Click on **"Switch Pairing Mode"** to check for the issue, or click on **"Retry"** to add the device again.

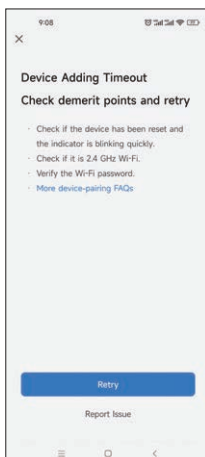


10. To unbind the device, click on **Me > Home Management > Home Name > Delete Home** at the lower right corner, as shown in the figure. (**Note: To reconnect the device after unbinding it, repeat the previous steps.**)

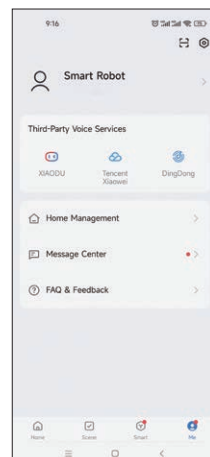


Precautions Before Use

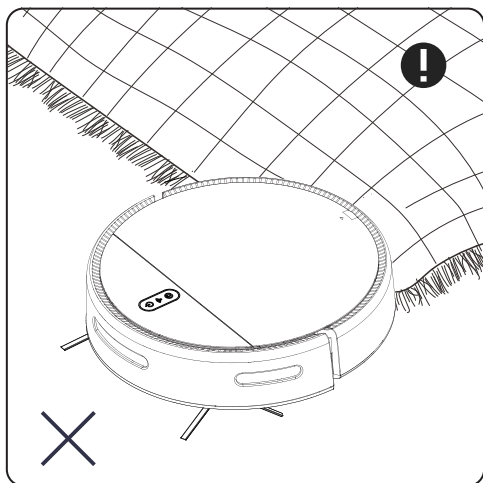


Fold the fringed edge of the carpet to prevent entanglement with the robot.

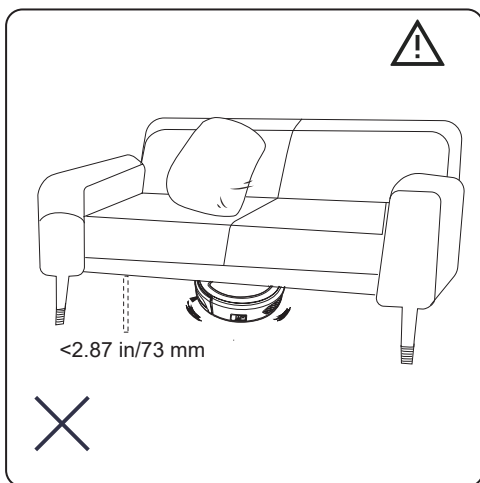

The robot cannot be used in a space lower than 2.87 inches (73mm) in height.

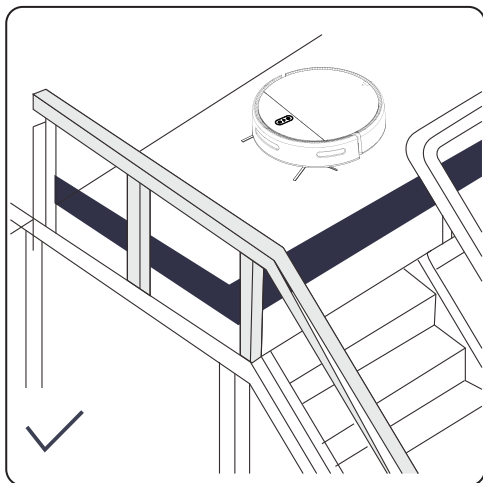


Use the machine in a fenced environment to prevent it from hanging or falling.

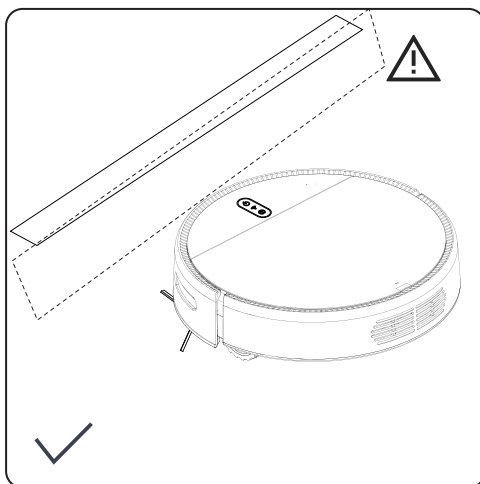


If dirty or used on reflective/dark colored floors, the robot's performance may be reduced.

Product Maintenance


1. Clean the Dust Box

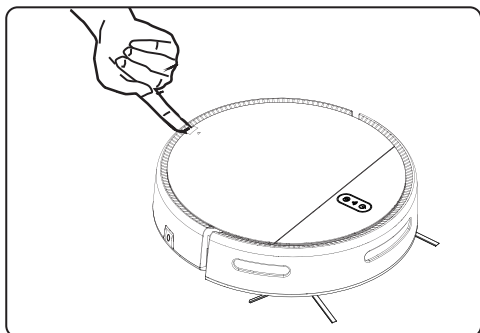


Open the cover

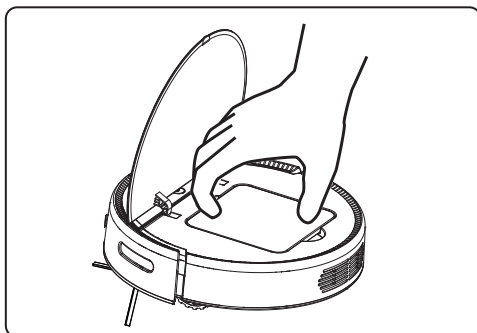


Take out the dust box.

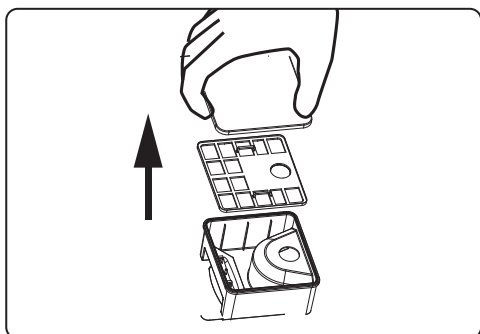


Open the dust cover and remove the air filter.

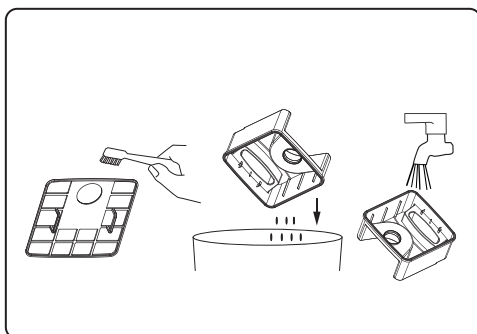

Clean the dust box with a brush, empty the dust box, clean it with water, and wipe it dry.

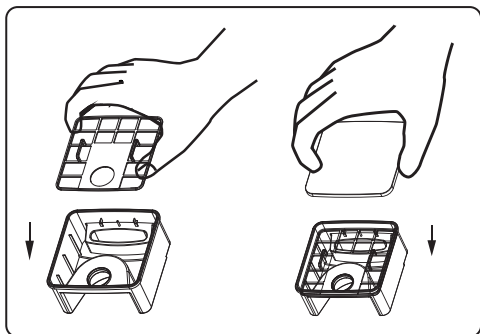


After cleaning, replace the dust cover and filter.

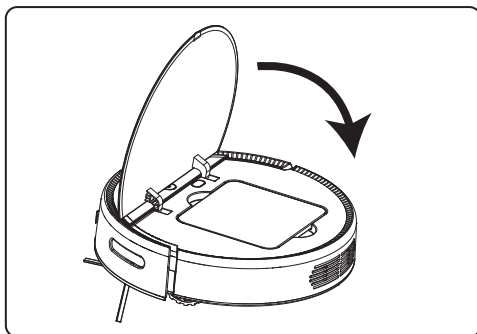


Put the dust box back into the sweeper and close the flap.


2. Clean Other Components

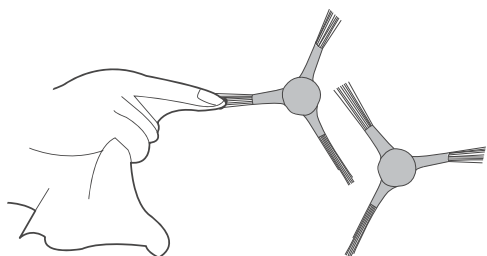


Side Brush: Remove and wipe the side brush with a clean cloth.

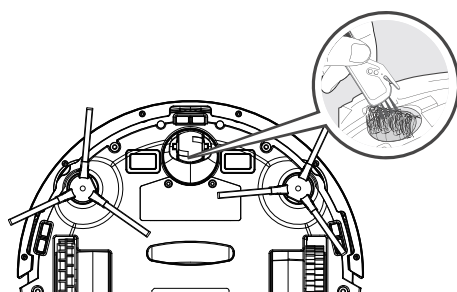


Universal Wheel: Clean the universal wheel to remove hair entanglement.

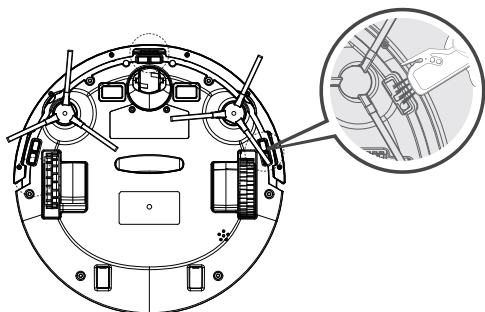


Cliff Sensor: Clean the cliff sensor to ensure sensitivity.

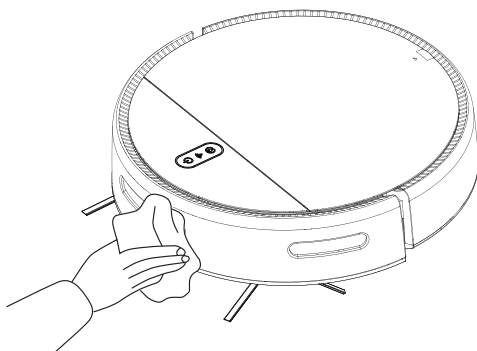

Sensor Window: If there is dust in the suction port, clean it with a cloth.

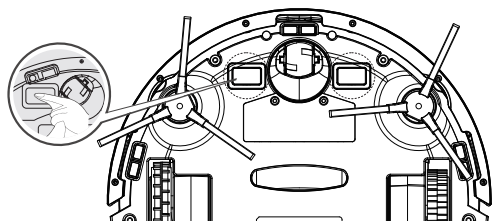

Charging Electrode: Use a dry cloth to clean the bottom of the machine and the charging electrode on the charging dock.

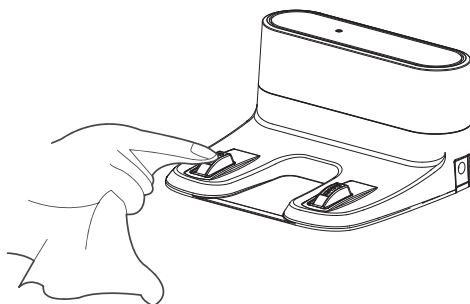

Troubleshooting

No.	Fault Condition	Possible Reasons	Solution
1	Robot fails to connect to the APP	Incorrect router username or password.	Reset the router with the correct username and password.
		Robot is not within the network signal range.	Ensure the robot is within the network signal range.
		The robot is not configured.	Configure the network for the robot.
		The robot is not connected to a 2.4GHz network.	The robot cannot connect to a 5GHz network; please connect to a 2.4GHz network.
2	Robot fails to charge	The adapter is not the original model.	Use the original adapter model.
		Poor contact between the robot and the charging dock electrodes.	Ensure that the robot and the charging dock are properly aligned and plugged in. Clean the charging electrodes on both the dock and the robot as per the maintenance instructions.
		The charging dock is not connected to a power supply.	Ensure that the charging dock is properly connected to a power supply.
		Long-term non-use leads to battery over-discharge.	If the battery cannot be charged due to long-term non-use, please contact after-sales service.
3	Robot fails to return to the charging dock	The charging dock is placed incorrectly.	Place the charging dock correctly according to the instructions.
		The charging dock is powered off or has been moved manually.	Check whether the charging dock is connected to power and avoid moving it.

No.	Fault Condition	Possible Reasons	Solution
3	Robot fails to return to the charging dock	The machine is obstructed by ground obstacles such as wires, carpet corners, or closed doors.	Remove any ground obstacles and ensure the recharging route is clear.
		The robot did not start cleaning from the charging dock.	Start the robot cleaning from the charging dock.
4	Robot displays abnormal behavior (e.g., disorderly route, repeated cleaning, or small areas fail to get cleaned up)	Wires, slippers, or other objects on the ground are obstructing the robot.	Remove objects from the ground before the robot starts working. If some areas fail to get cleaned, the robot will automatically detect and clean them; do not manually interfere.
		The robot is working on a newly waxed and polished floor, reducing friction.	Avoid using the robot on freshly waxed floors.
		The home environment is unsuitable for the robot to clean effectively.	Adjust the home environment to ensure the robot can work on the floor.
5	Robot is stuck during operation	The robot is entangled or obstructed by wires, curtains, carpet edges, etc.	The robot will try to free itself; if it cannot, manually assist it.
		The robot may be stuck under furniture with a height similar to the robot's height.	Raise or adjust the furniture to prevent the robot from getting stuck.
6	Robot makes loud noise when running	Side brushes, dust bin, or filters are blocked.	Regularly clean and maintain the side brushes, dust bin, and filters.
7	Rolling brush does not rotate	The rolling brush is entangled with hair.	Remove hair from the rolling brush.
		Rolling brush and its shield are installed incorrectly.	Reinstall the rolling brush assembly correctly.

No.	Fault Condition	Possible Reasons	Solution
7	Rolling brush does not rotate	The rolling brush assembly has sucked in foreign matter.	Disassemble the rolling brush assembly and remove any foreign matter.
8	Remote control failure	Low battery in the remote controller.	Replace the battery.
		The robot is turned off or has low battery.	Ensure the robot's power switch is on and the battery is fully charged.
9	Robot fails to start	The robot is out of power or the power switch is off.	Charge the robot or turn on the power switch.
	Robot shakes when running	Side brush or caster tangled with hair.	Remove hairs from the side brush or the universal wheel.
	Abnormal operating condition	The intake port is blocked or the dust bin is full.	Check the suction port and clean the dust bin.
		HEPA filter is blocked.	Clean or replace the HEPA filter.
	Water not coming out	The outlet hole of the water tank is blocked or the water tank is empty.	Clear the outlet hole and fill the water tank.
		The water pump is not working.	Contact after-sales maintenance.
	Machine skids	The floor is too wet.	Wring out the mop cloth and clean up any water stains on the floor.
	Machine keeps going backwards	Abnormal cliff sensor behavior.	Clean the surface

If the problems cannot be resolved using the above steps, please contact the after-sales service for further assistance.

Warning Code Table

When the robot encounters an issue, it will emit a series of beeps, and the red light will either flash or stay on. Refer to the following table to diagnose and troubleshoot the problem:

No.	Beep Pattern and Light Status	Issue	Solution
1	Beeps once, red light stays on	Wheel is stuck	Check the wheel gap for any obstructions and clean it out.
2	Beeps once, red light keeps flashing	Front bumper is stuck	Check the front bumper for any obstructions and remove any foreign matter.
3	Beeps twice, red light keeps flashing	Side brush is abnormal	Check if the side brush is entangled with hair and clean it.
4	Beeps three times, red light keeps flashing	Ground sensor is abnormal	Check if the ground sensor is dirty and clean it.
5	Beeps four times, red light keeps flashing	Power is low	Charge the robot as soon as possible.

Warm Tips:

If the above methods do not resolve the issue, try the following:

1. Restart the machine.
2. If restarting does not solve the problem, please contact the after-sales service center for maintenance.

Register Product

Thank you for choosing SereneLife. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support. Complete the form to access expert support and to keep your SereneLife purchase in perfect condition.

Start Here



Model Number:
PUCRCVAC100BK
[Serenelifehome.com/
pages/register](https://Serenelifehome.com/pages/register)

serenelife™



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

Serenelifehome.com/ContactUs