

# VIVITAR<sup>®</sup>

## SMART SECURITY

### WIRELESS VIDEO DOORBELL



WIRELESS  
WiFi



VIVITAR APP



WATER  
RESISTANT



TWO-WAY  
AUDIO



MOTION  
DETECTION




NIGHT  
VISION




TM

# 1.


## WHAT'S INCLUDED



**DB-270**  
**Wireless Video Doorbell**

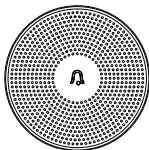


**Wireless Chime**




**Mechanical Chime Kit**



**Reset Pin**

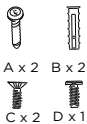

**Mounting Screws**



**Screwdriver**






**Angled Wall Mount**



**Quick Start Guide**  
**with Warranty Information**

## 2.

### A QUICK LOOK

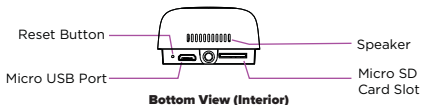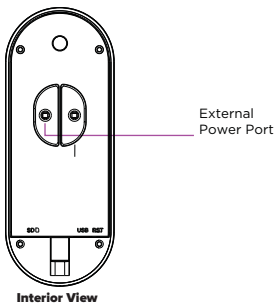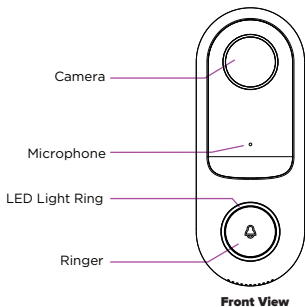


# 3.


## MOUNTING

To mount your doorbell to a wall, follow the steps below.


### General Installation

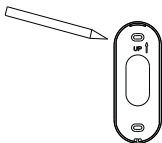


1. Use the wall mount attached to the rear of your doorbell, to mark the precise points on your wall to drill holes.

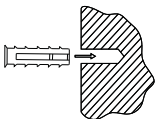

2. Drill holes into your wall at the marked points, then insert the included mounting anchors into holes.

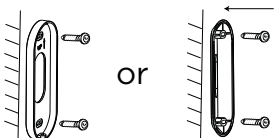

3. Use the included screws to attach the wall mount to the wall, making sure the screws go through the mounting anchors. If desired you can also attach the included angled wall mount to the wall, and then attach the wall mount to the angled wall mount.

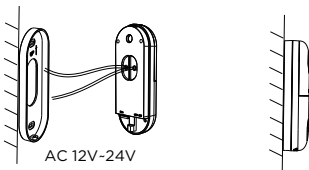


4. To power your doorbell, connect your home's corresponding electrical cables to the external power ports on your doorbell. It does not matter which cable goes to which port. Then attach the doorbell to the wall mount. If you are unfamiliar or inexperienced with your home's electrical systems, contact a certified electrician for assistance.

## 4.


### MECHANICAL CHIME KIT

Both a mechanical chime kit and wireless chime are included with your doorbell. The mechanical chime kit can be connected to your home's existing doorbell chime. The wireless chime can be used independently. For more information on setting up your wireless chime, view the "Wireless Chime" section of this guide.

Before setting up your doorbell's chime kit, first turn off the power breaker at your fuse box for your existing doorbell and mechanical chime. Ring your doorbell again to confirm it is now powered off.

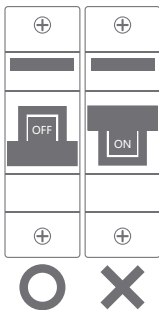

Find your home's mechanical chime: it is typically a rectangular box that produces the sound when your doorbell is pressed. It may (or may not) be mounted immediately inside your FRONT door. Remove the cover.

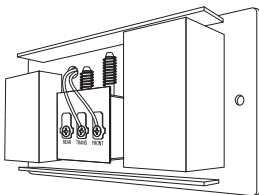


(Example of a Mechanical Chime)


## 5.

### MECHANICAL CHIME KIT

Slightly unscrew both of the mechanical chime's screw terminals.

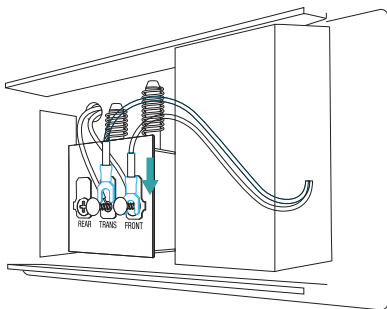


Locate the Chime Kit included in the smart doorbell's packaging, and the terminals on the inside of the chime. Connect one of the Chime Kit's prongs to the transformer terminal (usually labeled TRANS, T, AC, or O). Connect the other prong to the chime's front terminal (usually labeled FRONT, F, 1, or C1). Either prong on the Chime Kit can be connected to either of the terminals on the chime.

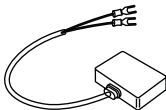

## 6.

### MECHANICAL CHIME KIT

Using double sided tape, affix the Chime Kit to your chime wherever there is space and replace the cover. Be careful not to interfere with any of the chime's moving parts.

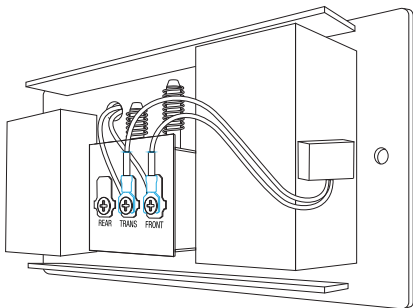


Ensure that the Chime Kit and wires **DO NOT** interfere with the mechanical parts of the chime. Mount on the outside of the chime if there is not enough room to mount inside. Then replace your chime's cover.

# 7.

## APP INSTALLATION

In order to use your plug, you will first need to download the Vivitar Smart Security 2 App, which is available on the Google Play Store and on the iPhone App Store.




# 8.

## APP REGISTRATION

To successfully use the Vivitar Smart Security 2 App, you will first need to create an account. To do so, follow the steps below.



Open the Vivitar Smart Security 2 App and press "Register."

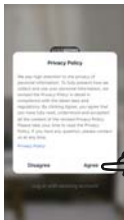

Agree to the terms of the privacy policy.



Enter your e-mail address or phone number to create an account.



You will receive a verification code over email or text message. Enter it here.



Setup a password for your account. Once finished, you can login to your account.


## 9.

### DOORBELL SETUP



Micro SD  
Card Slot

1. For best results, insert a 8-32GB Micro SD card (not included) into the Micro SD memory card slot.

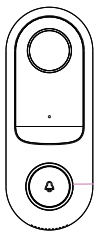


**LED Light Ring**



(flashing) = Ready for Wi-Fi  
Connection

2. Once your doorbell is installed and powered on, the LED Light Ring will illuminate and then start to flash to indicate that your doorbell is ready for Wi-Fi Connection.

Reset Button



**NOTE:** If you are having trouble connecting to Wi-Fi, press and hold the reset button for approximately 5 seconds to reset your doorbell.

# 10.

## Wi-Fi CONNECTION



Go to your phone's settings menu, and make sure that your phone is connected to a 2.4GHz Wi-Fi network.



Open your Vivitar Smart Security 2 app. Choose to add a device, and in the Add Device screen, select to add a Smart Camera.



Confirm that the LED light ring on your doorbell is still blinking.



Enter your Wi-Fi network name and password.

**NOTE:** Press "other mode" for additional setup methods. Your App offers QR Code, AP Mode and Smart Configure setup options. Note that the AP Mode option is not compatible with your device. Switch to Smart Configure mode if you have issues with standard QR Code mode.

# 11.

## Wi-Fi CONNECTION



Your app will display a QR code. Once displayed on the screen, hold your phone directly in front of your doorbell's camera lens.



Your doorbell should emit a beep to indicate that it is ready to connect to your network.




Wait as the Wi-Fi connection is established.



Once the connection is established, you can use the App to control your doorbell.


## 12.

## USING THE APP

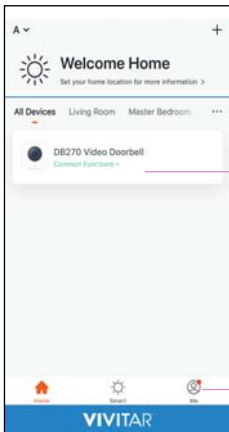

On your APP's main screen you will see the connection status of your camera. Press the camera icon to view video.

Press the Me icon to access settings and additional help with using your app.

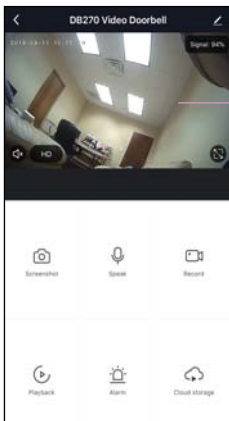


View who's at the door at any time.

**NOTE:** Keep notifications set to ON in order to receive alerts when someone rings the doorbell.

**NOTE:** Screen shots displayed in this user's guide of the Smart Security 2 software application may appear differently than those currently featured in your app as frequent updates and improvements are being made to the software.


# 13.

## USING THE APP

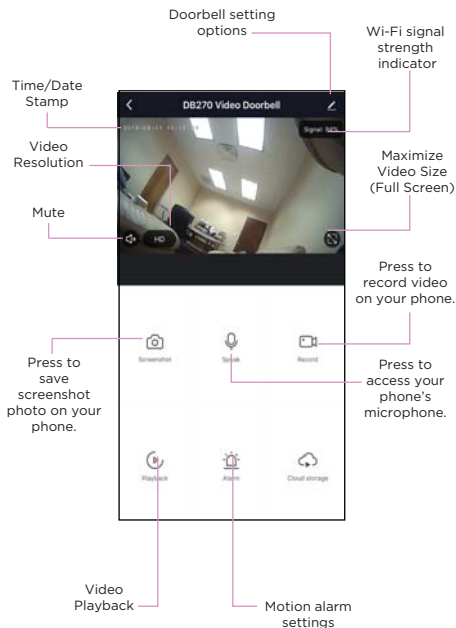


# 14.


## WIRELESS CHIME

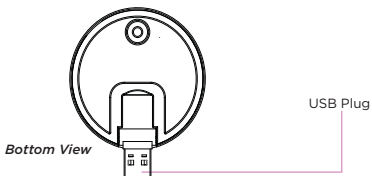

1. Plug the wireless chime's USB plug into an available USB power adapter.

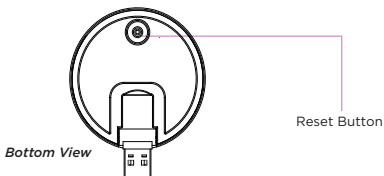

2. Press the reset button to prepare your wireless chime to be synchronized with your phone.

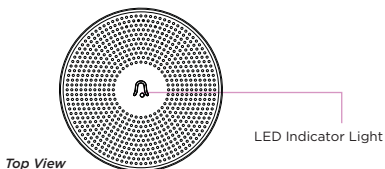

3. The LED Indicator light on your wireless chime will turn blue and flash when it is ready to be synchronized with your phone.

**NOTE:** If you are having troubles using your wireless chime, press and hold the reset button for approximately 5 seconds to restore to original factory default settings.

# 15.


## WIRELESS CHIME



Press the doorbell settings option in your app.



Press the bell setting menu option.

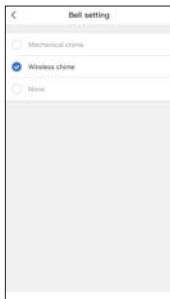

In the bell settings menu you can choose the type of chime you want to access: Wireless Chime, Mechanical Chime or none.

# 16.

## WIRELESS CHIME




After choosing the type of chime you are using, go back to the doorbell setting menu.



Press the ring setting menu option.



Make sure the LED light on your wireless chime is still blinking. Then press "Add" to synchronize your wireless chime with your phone.

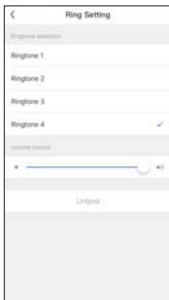

In the ring setting menu you can choose the ringtone sound emitted by your wireless chime and the volume of your wireless chime.

# 17.

## FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Keep manual and all relevant information for future reference.**

# 18.

## WARRANTY CARD

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

***What Is Not Covered by Warranty:***

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

***To Obtain Warranty Service and Troubleshooting Information:***

Call 1-800-592-9541 or Visit our website at [www.vivitar.com](http://www.vivitar.com).

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepared.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

