


Product Description




(HRF520BW HRF520BS)

- 1. Refrigerator LED lamp
- 2. Rating plate
- 3. Glass shelves

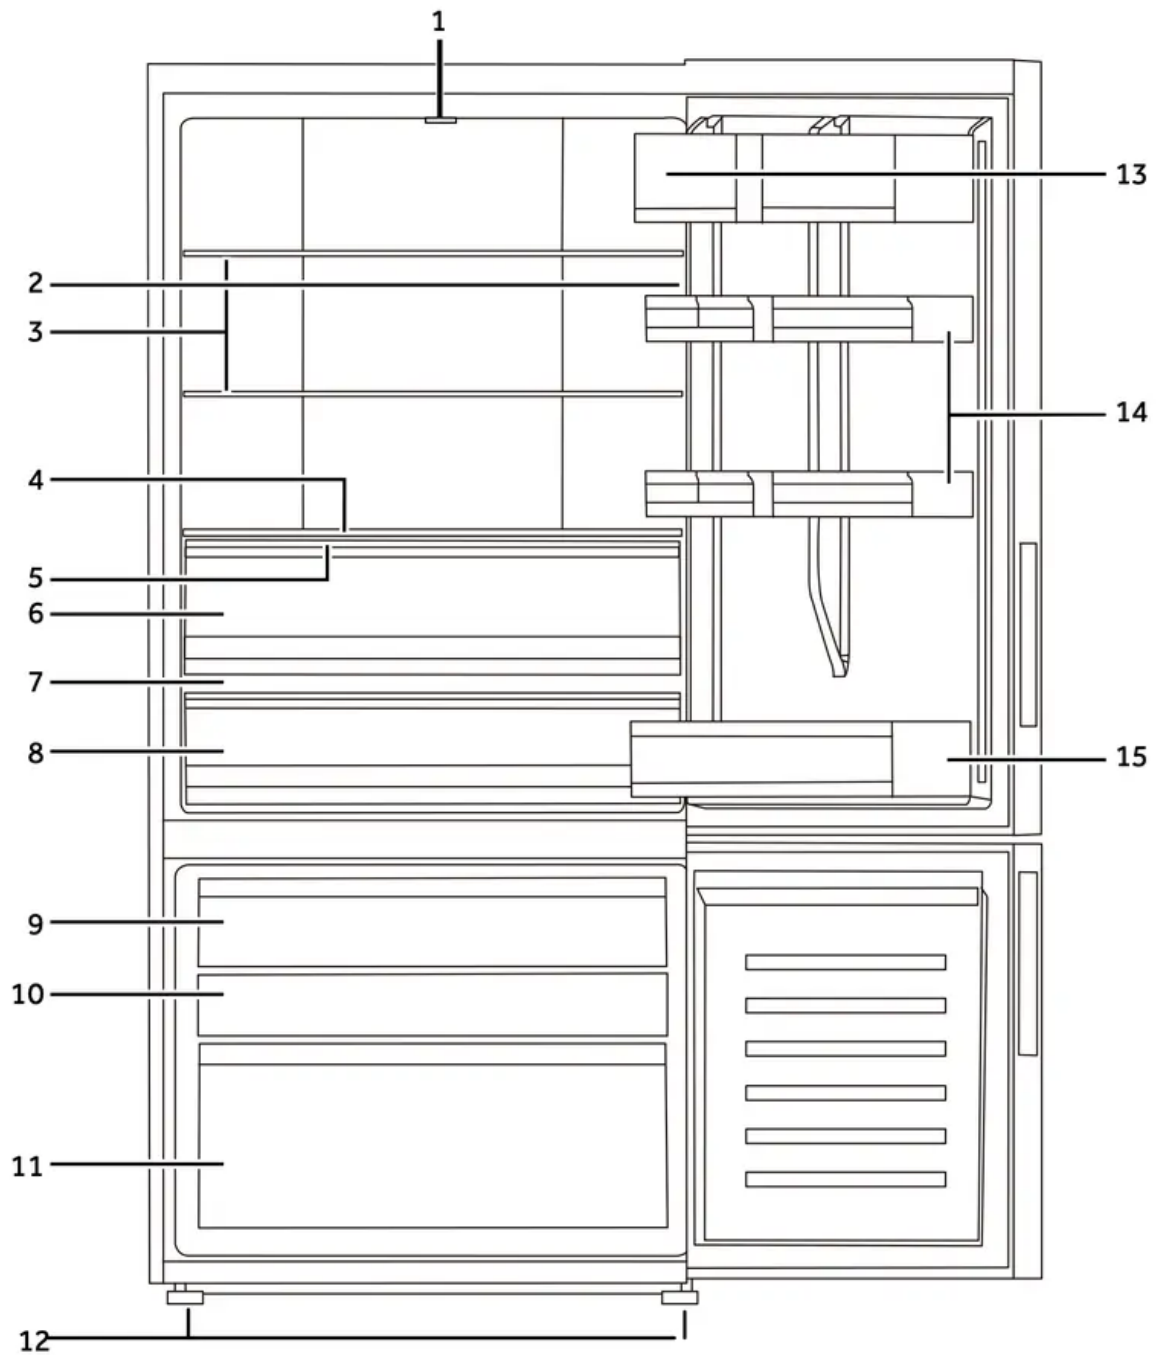

4. Fresh storage box cover
5. HCS (Humidity Control System)
6. Fresh storage box
7. My Zone glass cover
8. My Zone box
9. Upper freezer storage drawer
10. Middle freezer storage drawer
11. Lower freezer storage drawer
12. Adjustable feet
13. Upper door dairy bin
14. Middle door shelves
15. Bottom door shelf



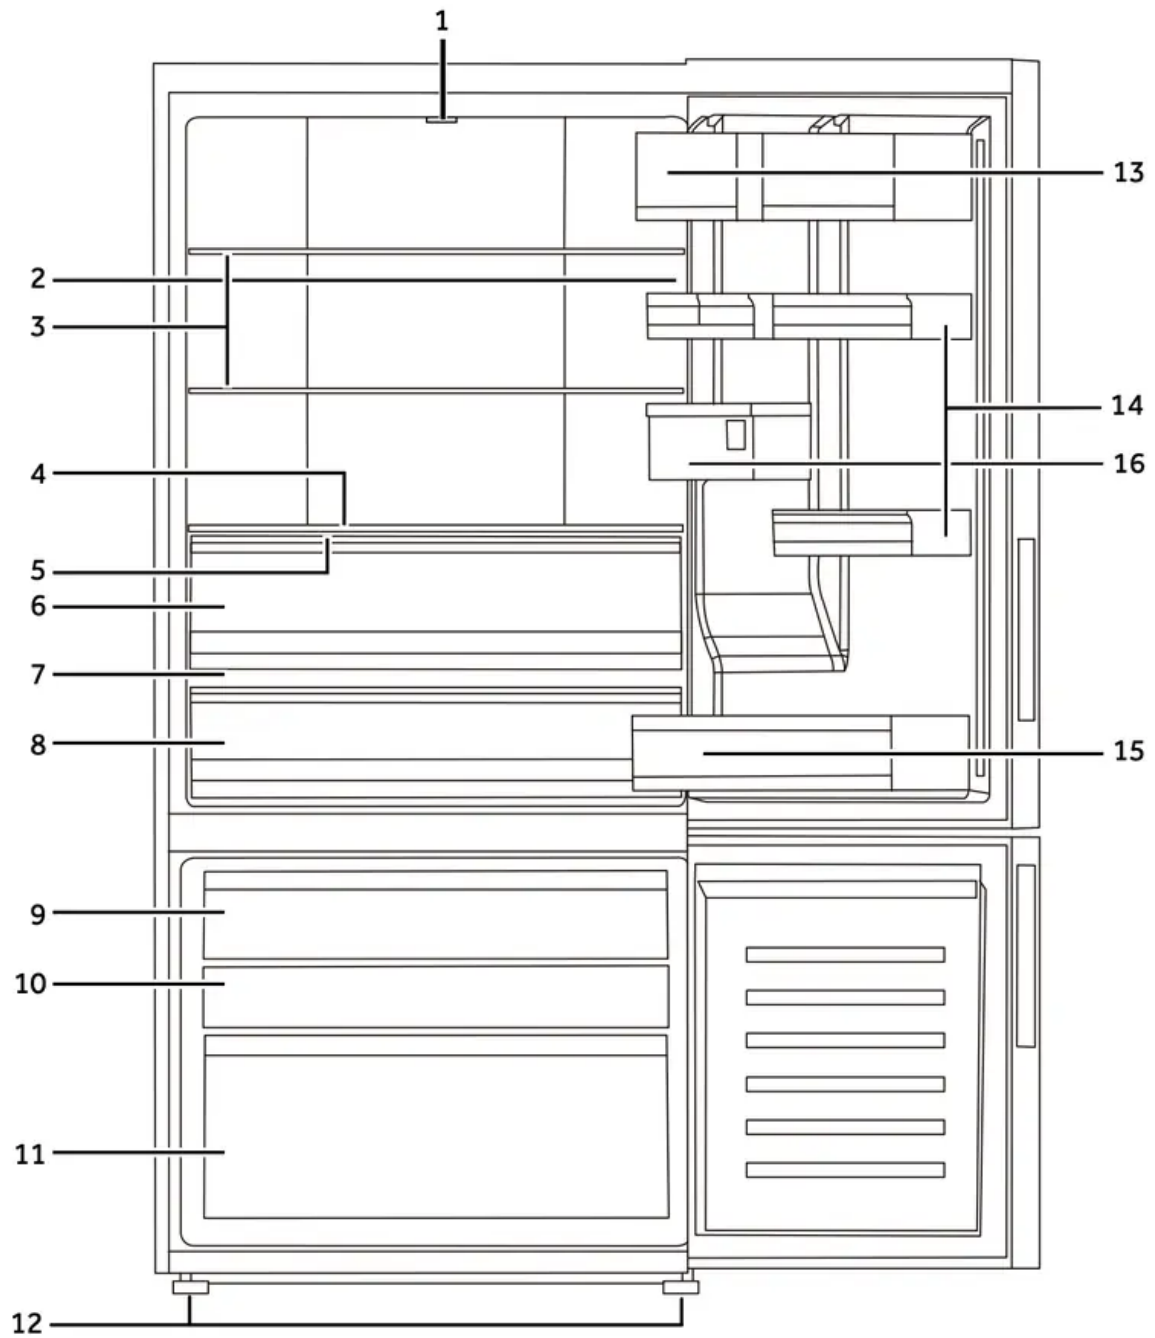


(HRF520BHS)

1. Refrigerator LED lamp
2. Rating plate
3. Glass shelves
4. Fresh storage box cover
5. HCS (Humidity Control System)
6. Fresh storage box
7. My Zone glass cover

8. My Zone box
9. Upper freezer storage drawer
10. Middle freezer storage drawer
11. Lower freezer storage drawer
12. Adjustable feet
13. Upper door dairy bin
14. Middle door shelves
15. Bottom door shelf
16. Water tank




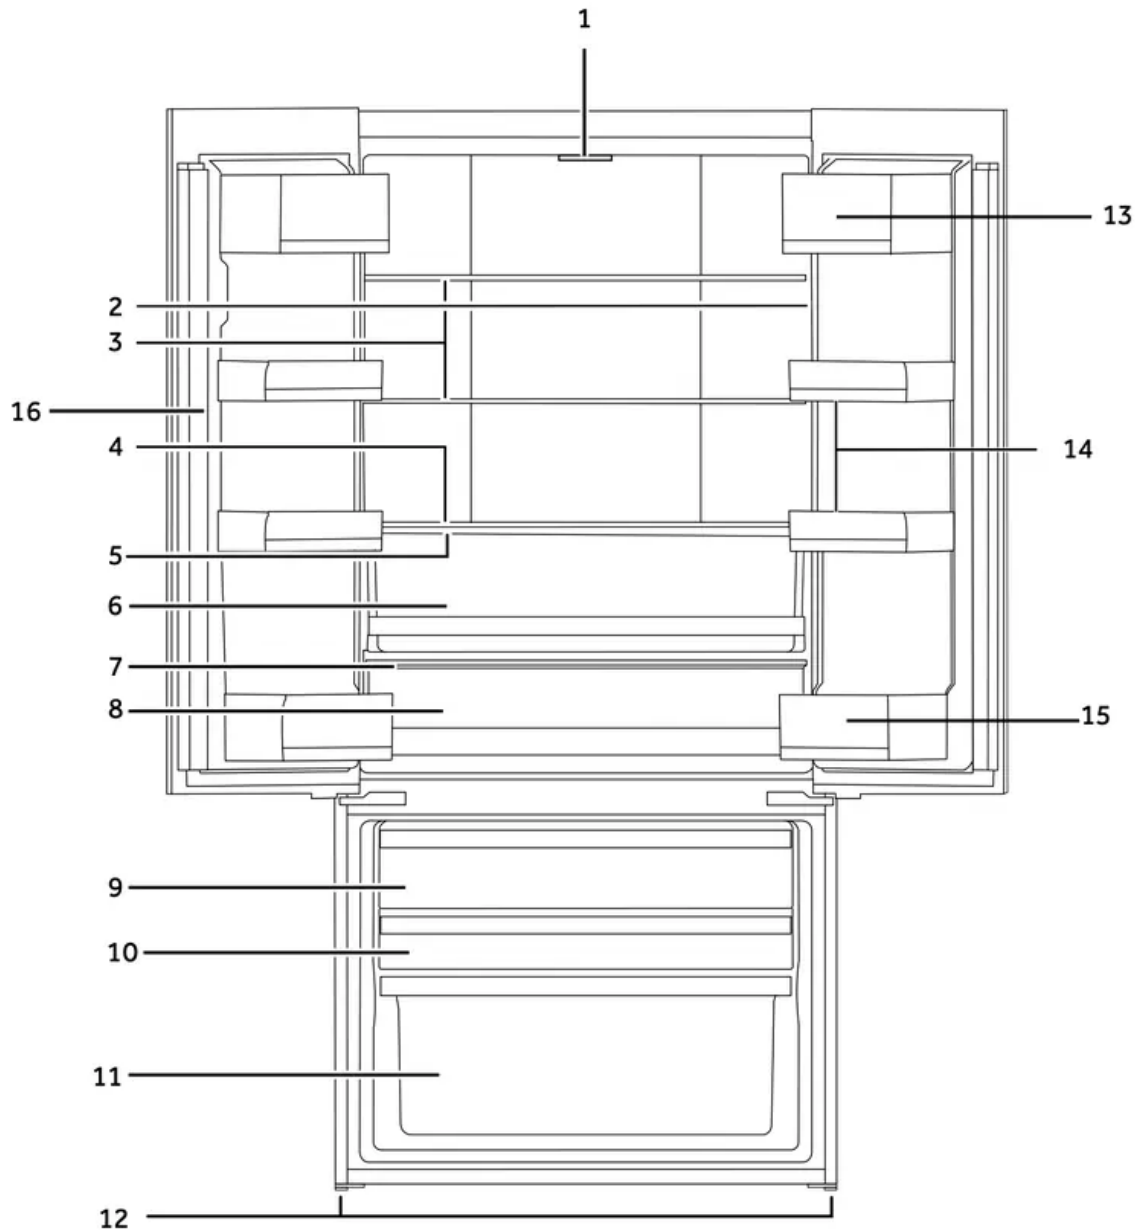

HRF520FS

1. Refrigerator LED lamp
2. Rating plate
3. Glass shelves
4. Fresh storage box cover
5. HCS (Humidity Control System)
6. Fresh storage box
7. My Zone glass cover
8. My Zone box
9. Upper freezer storage drawer

- 10. Middle freezer storage drawer
- 11. Lower freezer storage drawer
- 12. Adjustable feet
- 13. Upper door dairy bin
- 14. Middle door shelves
- 15. Bottom gallon door shelf
- 16. Door flapper

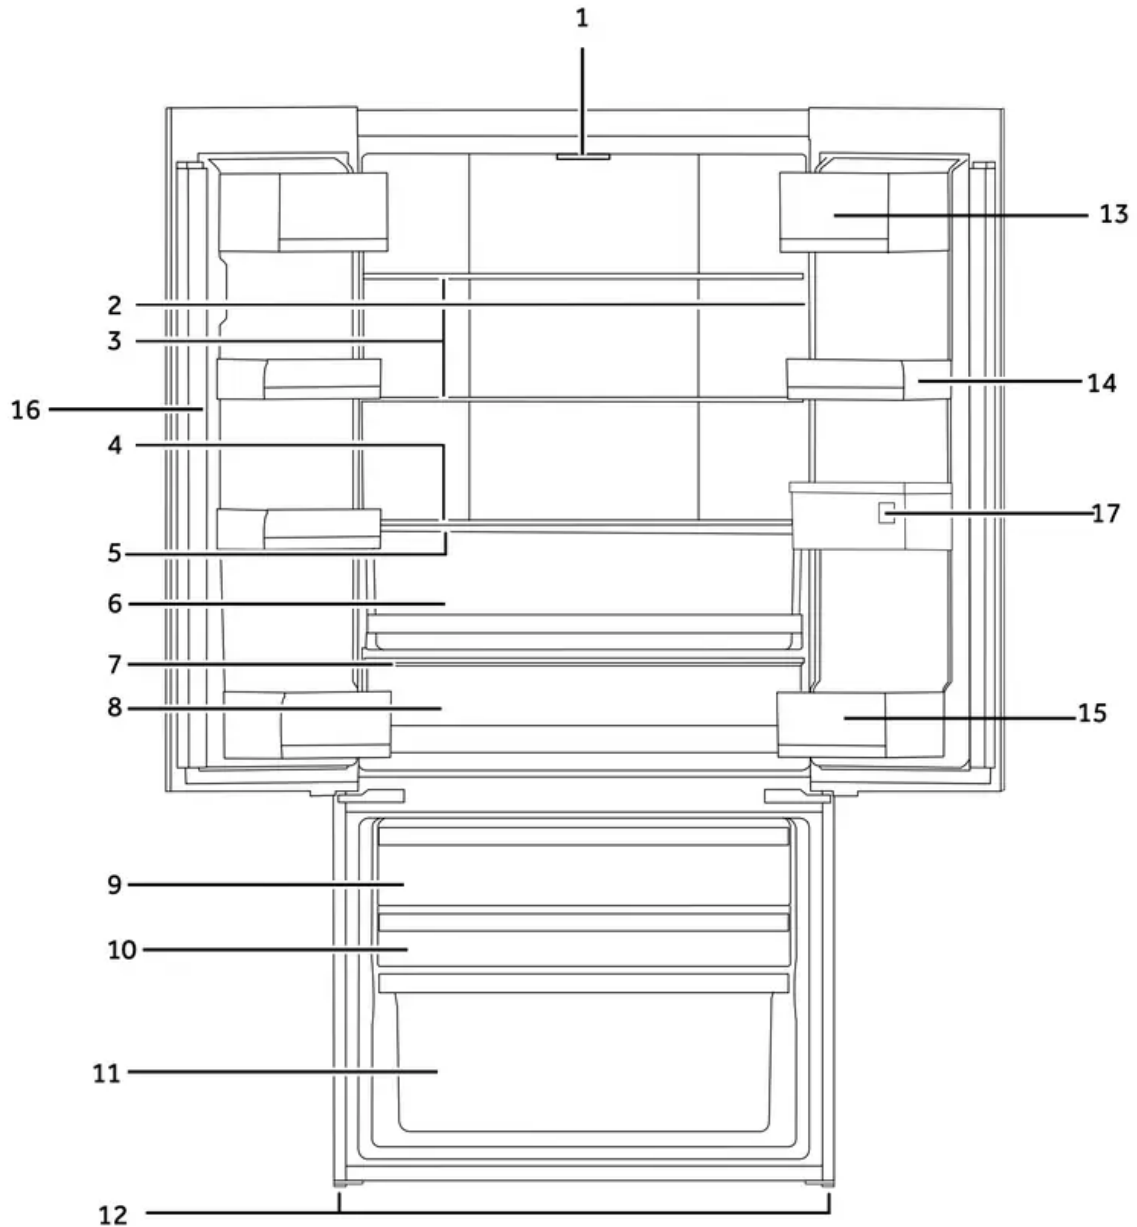

HRF520FHS

- 1. Refrigerator LED lamp

2. Rating plate
3. Glass shelves
4. Fresh storage box cover
5. HCS (Humidity Control System)
6. Fresh storage box
7. My Zone glass cover
8. My Zone box
9. Upper freezer storage drawer
10. Middle freezer storage drawer
11. Lower freezer storage drawer
12. Adjustable feet
13. Upper door dairy bin
14. Middle door shelves
15. Bottom gallon door shelf
16. Door flapper
17. Water Tank

Use

Before first use

- Remove all packaging materials, keep them out of children`s reach and dispose them in an environmentally friendly manner.
- Clean the inside and outside of the appliance with water and a mild detergent before putting any food in it.
- After the appliance has been levelled and cleaned, wait for at least 2 hours before connecting it to the power supply. See INSTALLATION.
- Precool the compartments at high settings before loading with food. The function Super Cool and Super Freeze help to cool down the compartments quickly.
- The refrigerator temperature and freezer temperature are automatically set to 3°C and -18°C respectively. These are the recommended settings. If desired, you can change these temperatures manually. Please see FUNCTIONS.

Control panel

Frost Free



a1

a2

A

Fridge

Fast Cool.Hold 3 sec.



b1

b2

B

Freezer

Fast Freeze.Hold 3 sec.



c1

Beverage Cooling



c2

Meat & Poultry



Buttons:

- A. Fridge selector
- B. Freezer selector
- C. My Zone selector
- D. Panel lock selector

Indicators:

- a1. Super Cool function
- a2. Temperature fridge
- b1. Super Freeze function
- b2. Temperature freezer
- c1. Beverage Cooling function
- c2. Meat & Poultry function
- c3. Seafood function
- d. Panel lock

Sensor keys

The buttons on the control panel are sensor keys, which respond when lightly touched with the finger.

Switch on/off the appliance

The appliance is in operation as soon as it is connected to the power supply.

When the appliance is powered on for the first time, indicator “b2” is shining on the display until the temperature reaches -5°C or after 1 hour working. The temperatures displayed in “a2” and “b2” will show the actual temperatures in the compartment.

Notice

- The appliance is preset to the recommended temperature of 3°C (refrigerator) and -18°C (freezer). Under normal ambient conditions you need not set a temperature.
- When the appliance is switched on after disconnection from the main power supply, it may take up to 12 hours for the correct temperatures to be reached.

Empty the appliance before switching off. To switch off the appliance, pull the power cord out off the power socket.

Standby-mode

The display screen turns off automatically 30 seconds after pressing a key. The display will be automatically locked. It lights up automatically when pressing any key or opening the door (alarm does not light up the display screen).

Lock/unlock panel




- Touch button “D” for 3 seconds to block all panel elements against activation. The related indicator “d” is now displayed.
- To unlock, press button “D” again.

Notice: The control panel is automatically blocked against activation if after 30 seconds no button is pressed. To change any settings the control panel must be unlocked.

Door/drawer opening alarm

When the refrigerator door or the freezer drawer is opened for more than 3 minutes, the door/drawer opening alarm will sound. The alarm can be silenced by either closing the door/drawer. If the door/drawer is left open for more than 7 minutes, the light inside the refrigerator/under the refrigerator door and control panel illumination will automatically switch off.

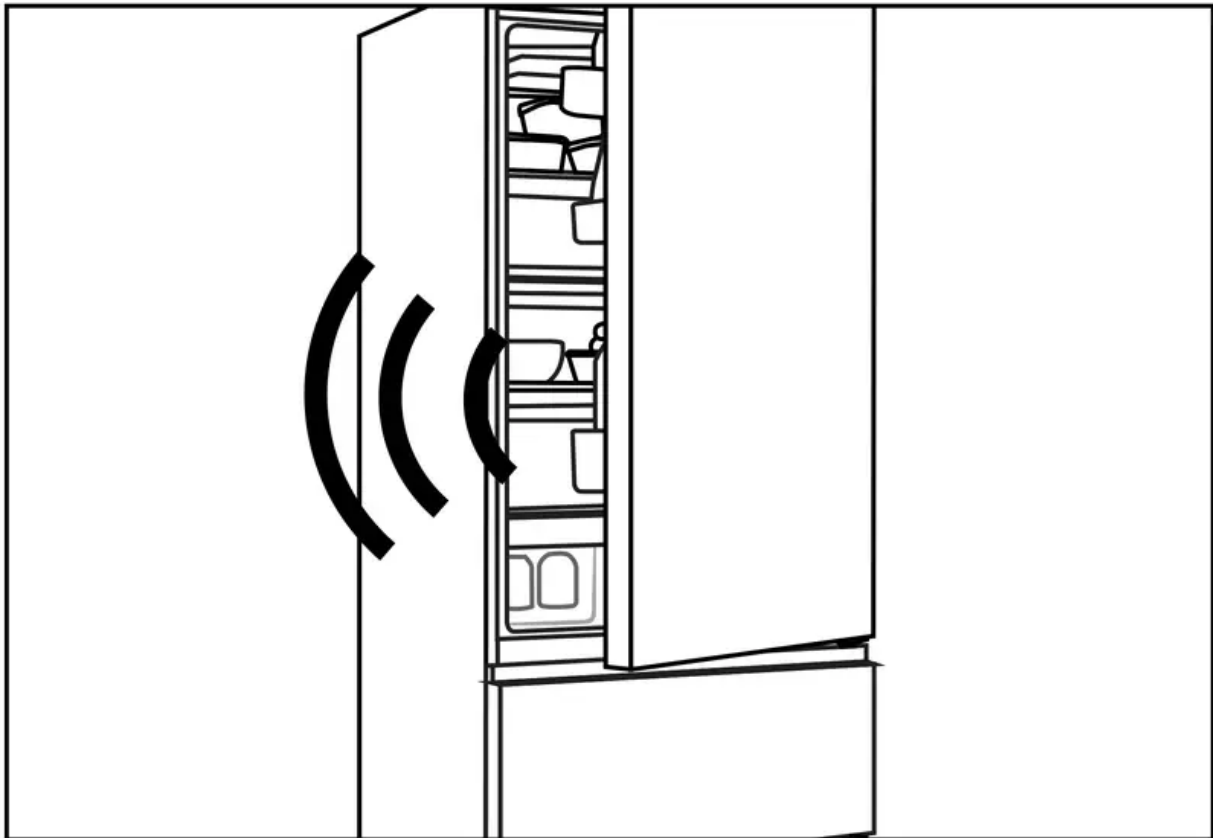


Adjust the temperature

The internal fridge/freezer temperatures are influenced by the following factors:

- ambient temperature;
- frequency of door opening;
- amount of stored foods;
- installation of the appliance;


Adjust the temperature for fridge

1. Unlock the panel if it is locked.
2. Press button "A" (Fridge) to select the fridge compartment. Indicator "a2" is flashing.
3. Press button "A" to set the refrigerator temperature. The temperature increases in sequences of 1°C from a minimum of 2°C to a maximum of 8°C, switching to 2°C again when pressing further. The optimum temperature in the refrigerator is 5°C. Colder temperatures mean unnecessary energy consumption.
4. Press any key except "A" to confirm, or the setting confirms automatically after 5 seconds. Indicator "a2" stops flashing.

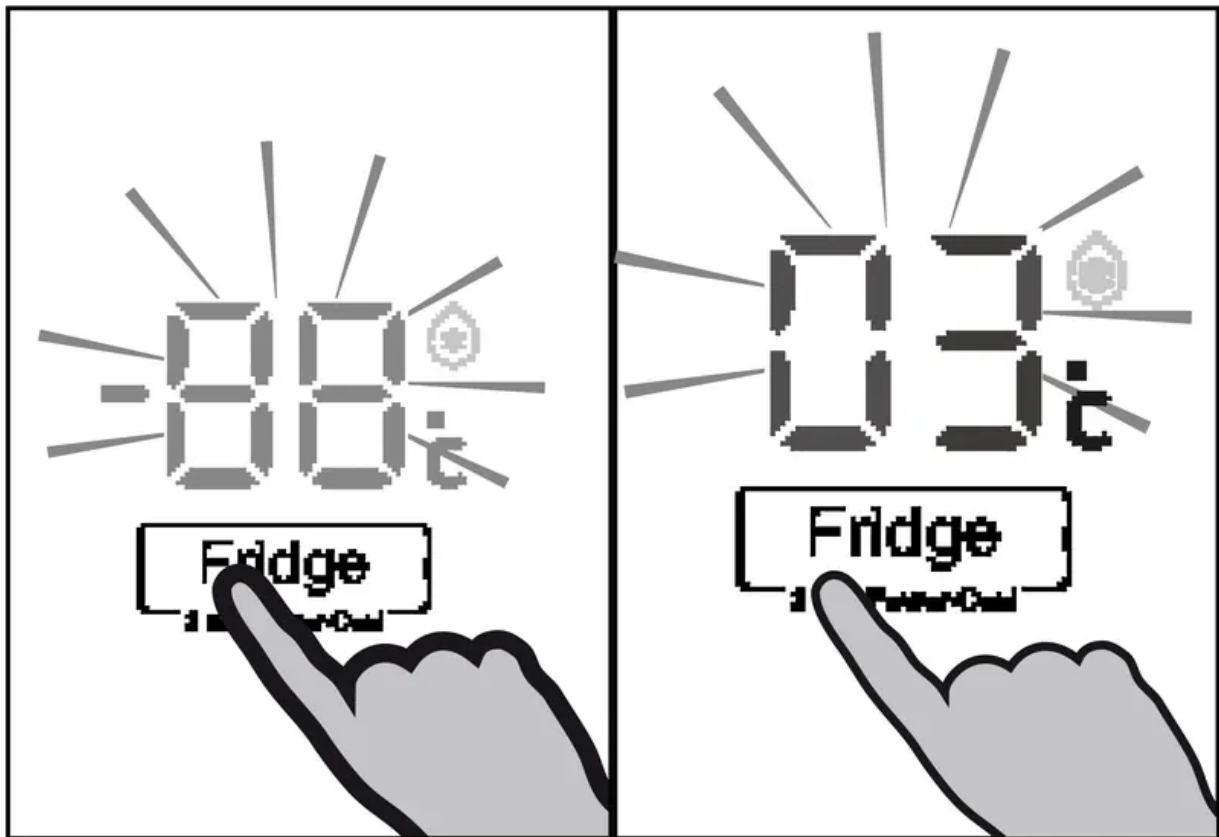

Adjust the temperature for freezer


1. Unlock the panel if it is locked.
2. Press button "B" (Freezer) to select the freezer compartment. Indicator "b2" is flashing.
3. Press button "B" (Freezer) to set the freezer temperature. The temperature increases in sequences of 1°C from a minimum of -14°C to a maximum of -24°C, switching to -14°C again when pressing further.
The optimum temperature in the freezer is -18°C. Colder temperatures mean unnecessary energy consumption.
4. Press any key except "B" (Freezer) to confirm, or the setting confirms automatically after 5 seconds. Indicator "b2" stops flashing.

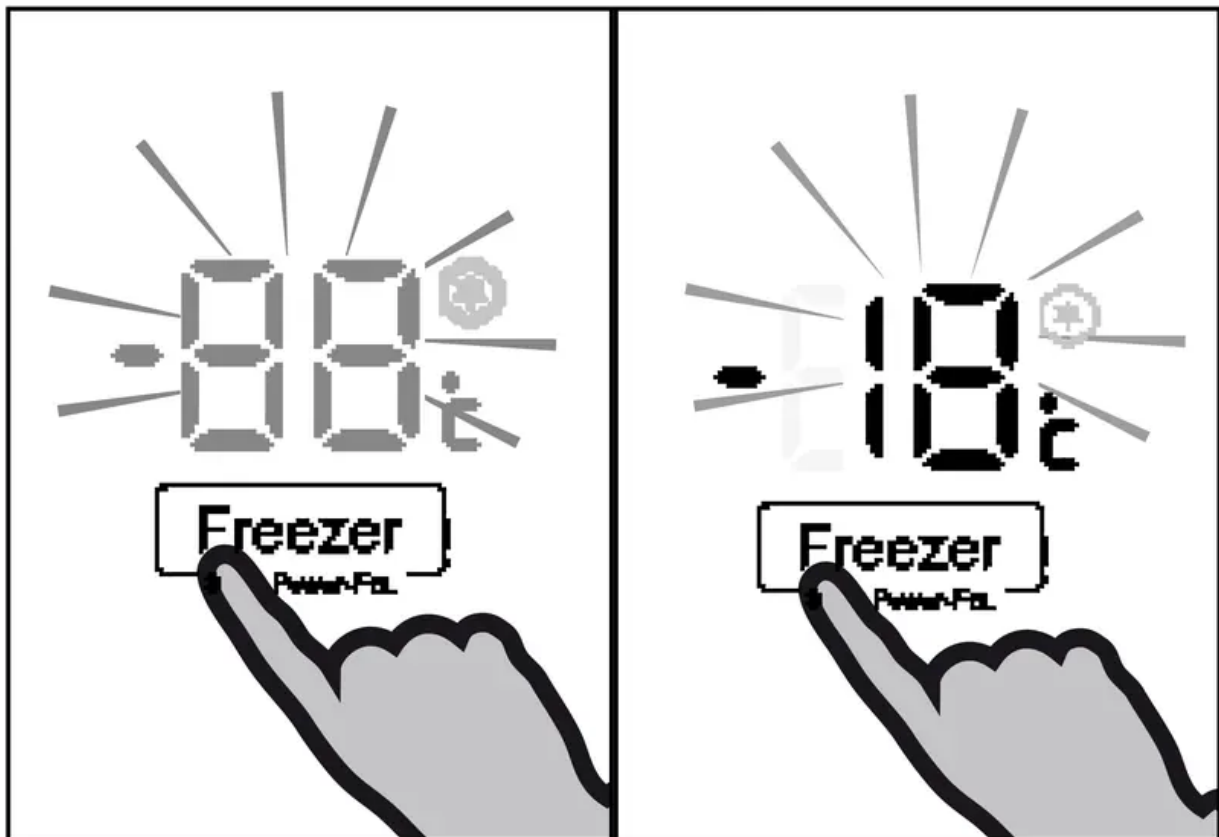

Super Cool function

Switch on the Super Cool function if larger quantities of food need to be stored (for example after the purchase). The Super Cool function accelerates the cooling of fresh food and protects the goods already stored from undesirable warming. The factory setting temperature is +2°C.

1. Unlock the panel if it is locked.
2. Press button "A" (Fridge) for 3 seconds. Indicator "a1" illuminates and the function is activated.
3. The same operation can exit Super Cool function.

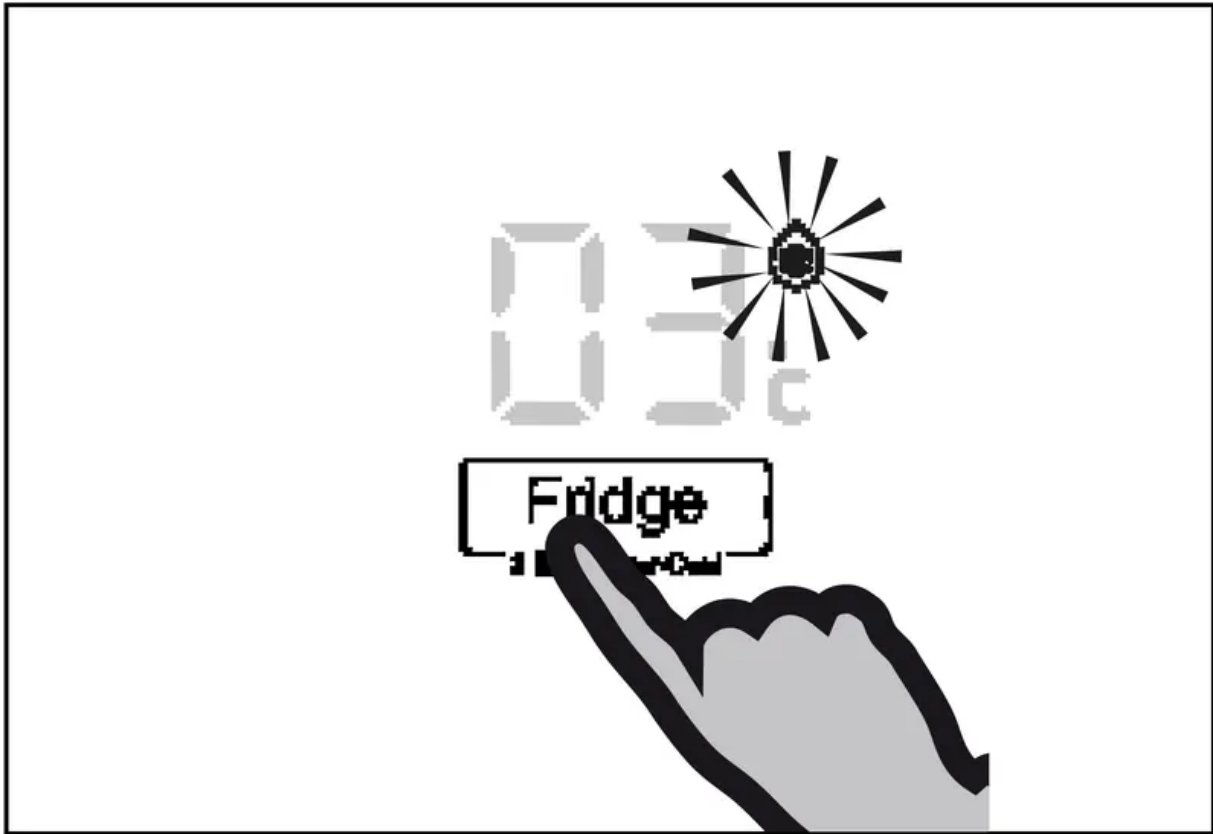


Notice: This function will be automatically disabled after 3 hours.

Super Freeze function

Fresh food should be frozen as quickly as possible to the core. This preserves the best nutritional value, appearance and taste. The Super Freeze function accelerates the freezing of fresh food and protects the goods already stored from undesirable warming. If you need to freeze a large amount of food once, it is recommended to turn the Super Freeze function on 24h before needing to use.

1. Unlock the panel if it is locked.
2. Press button "B" (Freeze) for 3 seconds. Indicator "b1" illuminates and the function is activated.
3. The same operation can exit Super Freeze function.

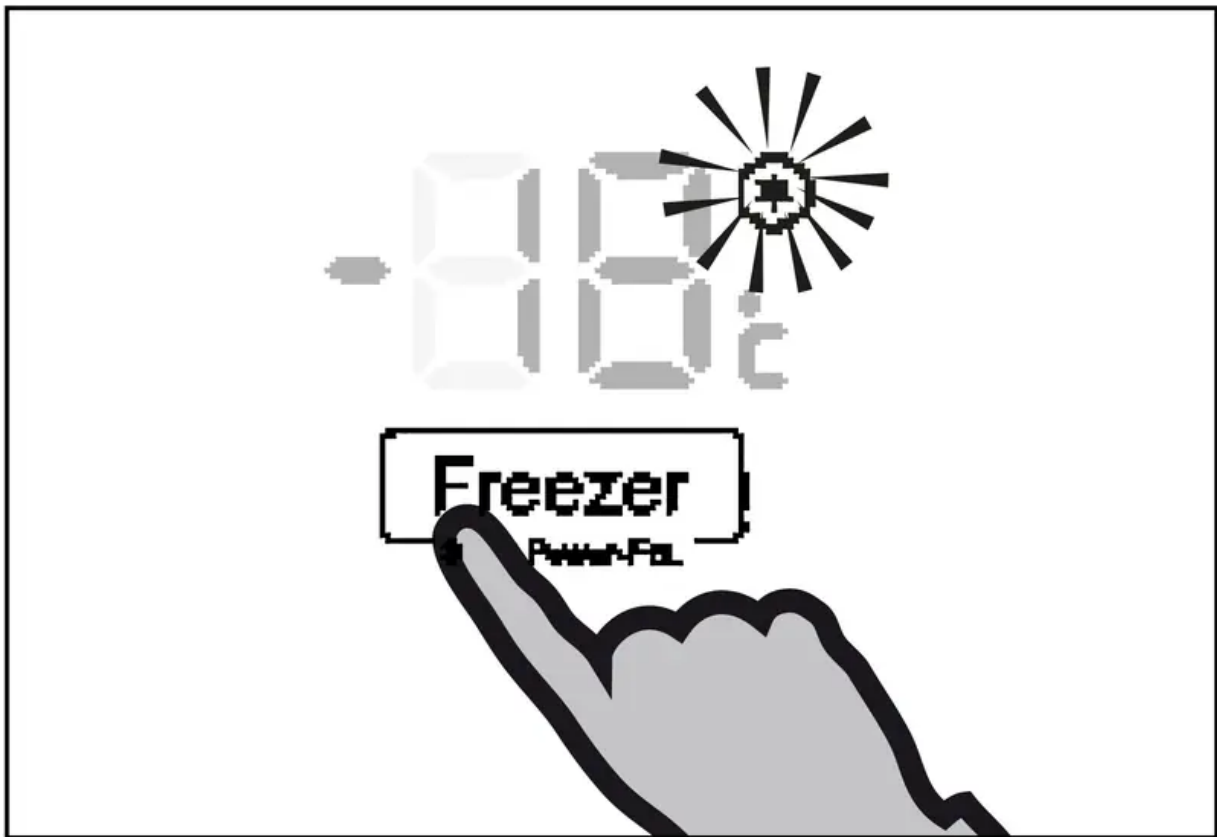


Notice: The Super Freeze function will automatically switch off after 56 hours. The appliance is then operated at the previously set temperature.

My Zone drawer

The fridge compartment is equipped with a My Zone drawer. In accordance with the food's storage demands, the most suitable function can be selected to get the optimal nutritional value of the foods. The following functions are available:

- Beverage Cooling (2-4°C). This function is suitable to cool beverages like beer, soft-drinks, yogurts, etc.

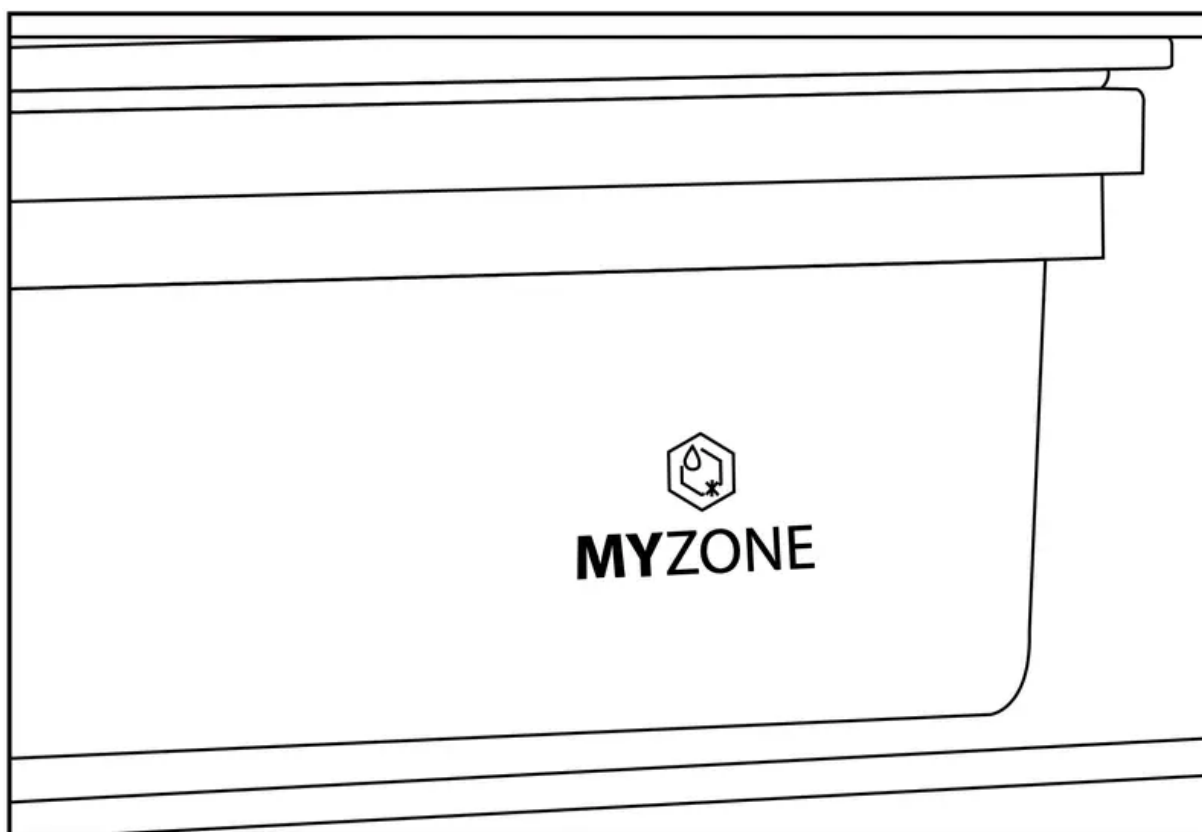

Notice: The Beverage Cooling function has a temperature range of 2~4°C. This has been designed to store drinks at a cold temperature for consumption. It is also suitable to store some fruits and vegetables that will not be damaged at this temperature. Please note cold-sensitive fruits like pineapple, avocado, bananas, grapefruits and vegetables such as potatoes, aubergines, beans, cucumbers, zucchini and tomatoes and cheese should not be stored in the My Zone drawer.

- Meat & Poultry (0°C). This function is suitable to store fresh food such as meat or poultry for immediate consumption. Most foods stay fresh at 0°C, but not frozen.
- Sea Food (-1°C). This function is suitable to store fresh food such as seafood and mussels.

Notice: Due to the different water content within different types of meat or seafood, on occasions it may occur that some food will experience freezing to a degree when stored at temperature of 0°C or below. Freshly cut meat should be stored in the My Zone drawer.

Please do not store fruit and vegetables in the Meat & Poultry or Seafood functions. Due to the high water content of fruits and vegetables, it is likely they will experience some freezing and be damaged. It is easy to freeze the fruit and vegetables.

Select the function for My Zone drawer

1. Unlock the panel if it is locked.


2. Press button "C" to select the My Zone function.

Beverage Cooling "c1" light.

Meat & Poultry "c2" light.


Seafood "c3" light.

3. Press any key except "C" (My Zone) to confirm, or the setting confirms automatically after 5.

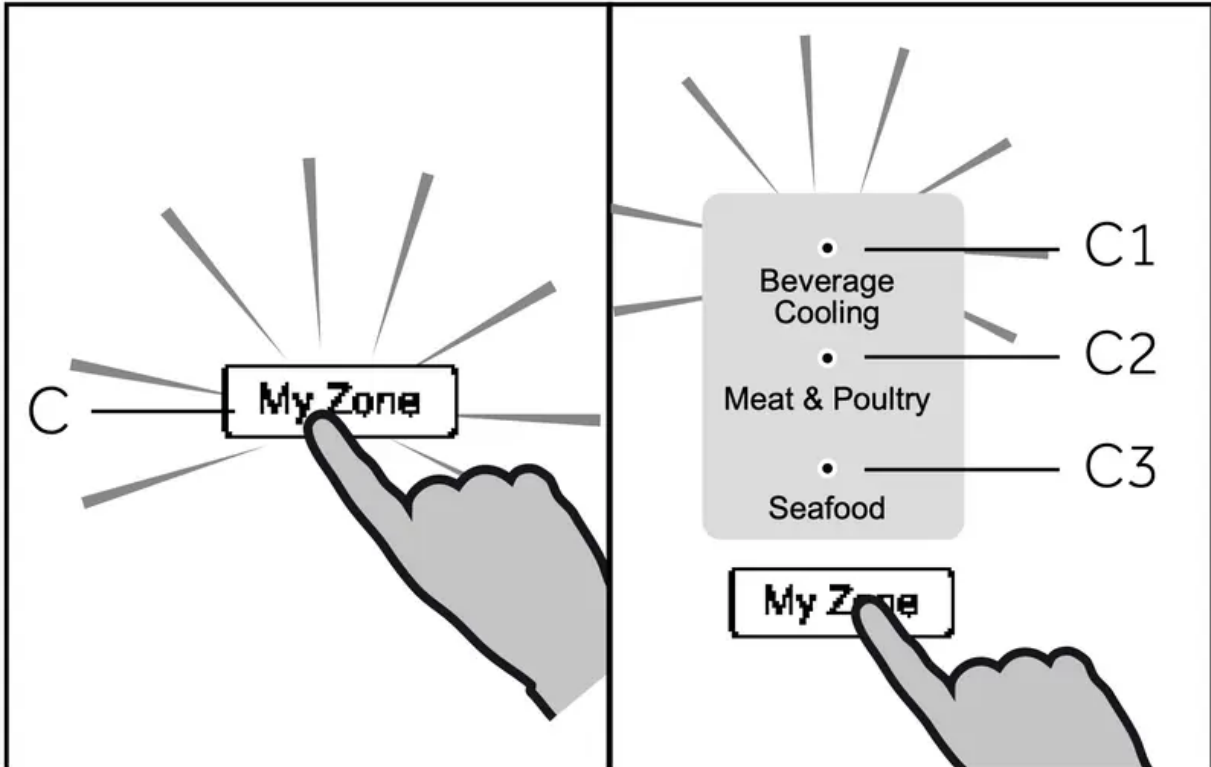

Fresh storage drawer

The Fresh Storage drawer is suitable to store fruits and vegetables. It has a Humidity Control System (HCS) module which automatically controls the moisture above 85%. It can maintain this level for several weeks.

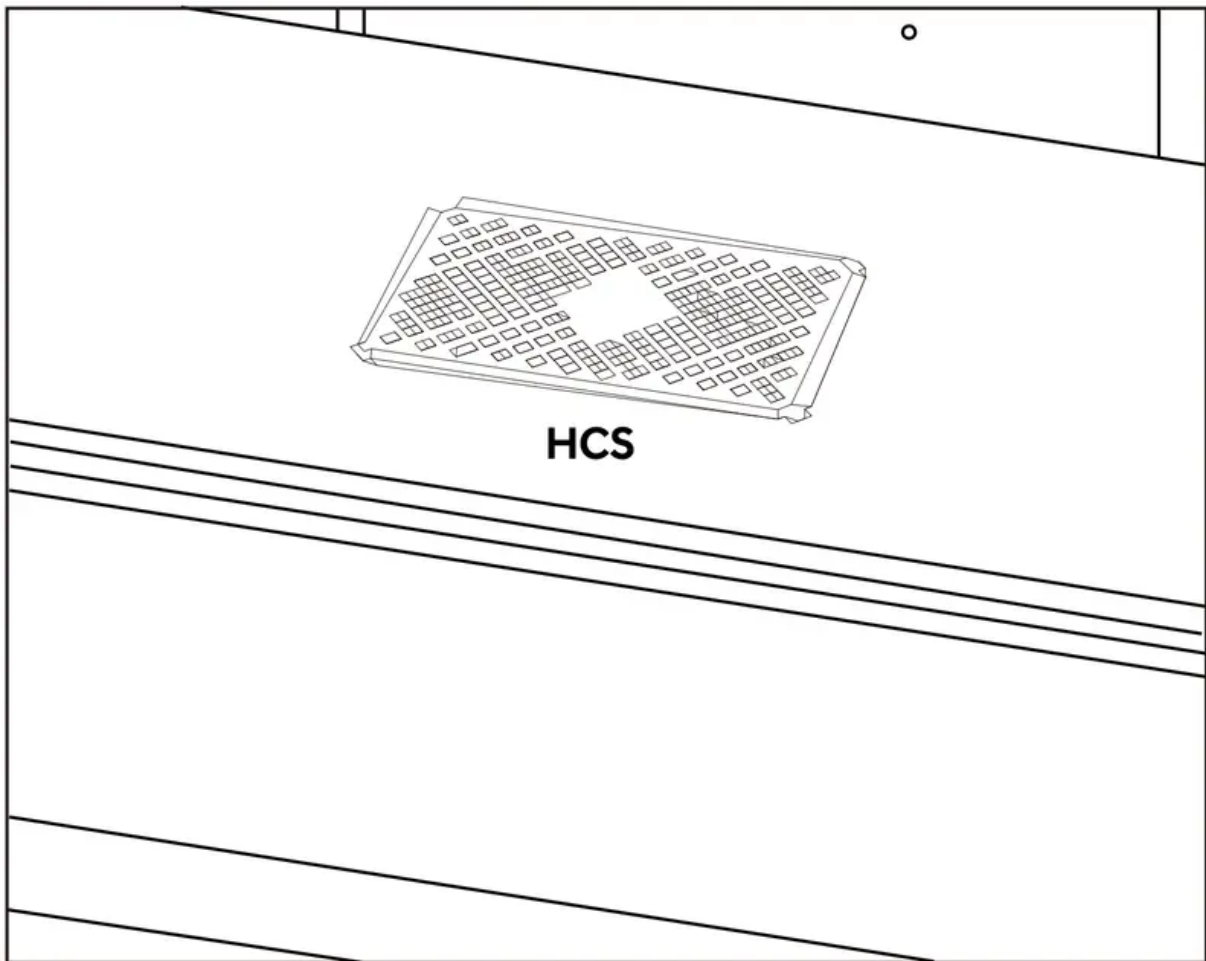


Water dispenser (Only models with water dispenser)

With the water dispenser, drinking water can be conveniently stored in your tank. The water tank should be cleaned before first use (see CARE AND CLEANING).

Filling the water tank

WARNING! Use drinking water only.

1. Ensure that the water tank is properly inserted (see EQUIPMENT).
2. Rotate and lift the round lid (A) and fill the water tank up with fresh drinking water.
3. Fill water only up to the mark (2.5L); as it could overflow when the door opens and closes.
4. Close the round lid until it clicks into place.

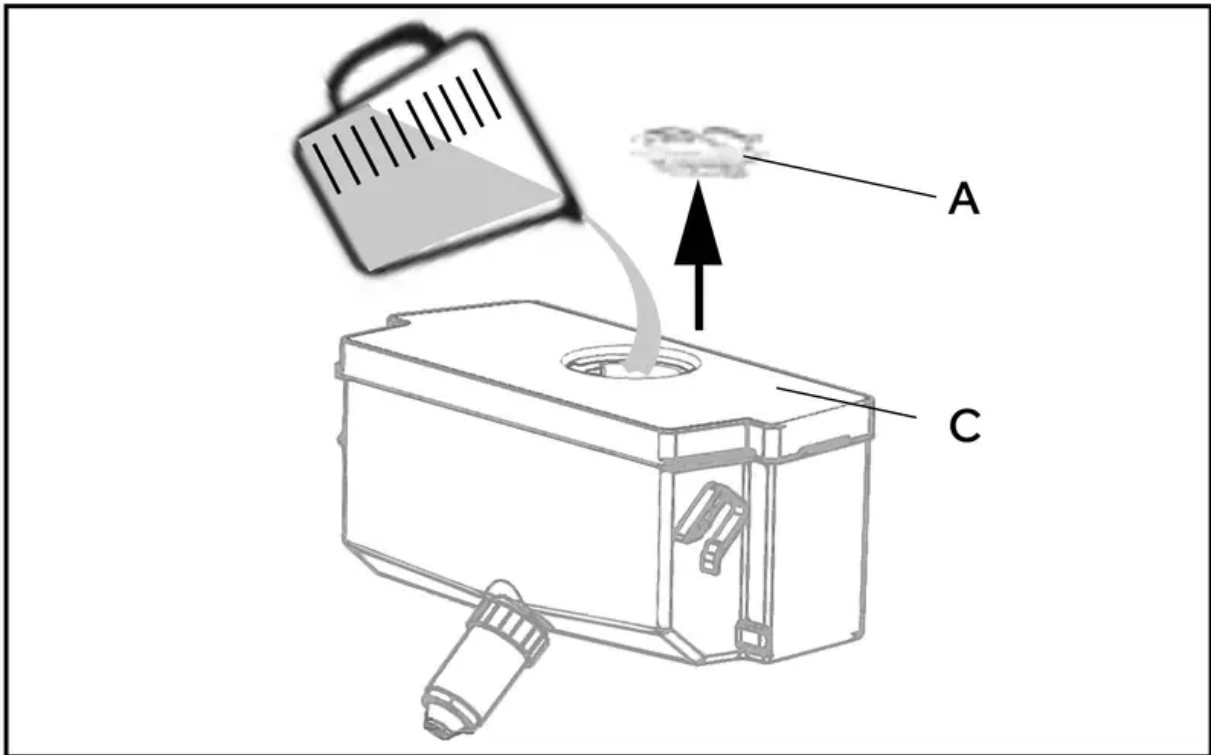


Notice

- Before refilling dispose residual water and clean the water tank.
- When you don't need water for a long time, please empty the water tank and insert the cleaned tank.
- The cover (C) on the water tank is additionally used to save energy. If you do not want to use water from the water dispenser for a long period, please still install the cover because of better insulating and saving energy.

Getting water from the dispenser

1. Place a glass underneath the water outlet.
2. Push gently against the water dispenser lever with your glass.
Make sure the glass is in line with the dispenser to prevent the water from splashing out.

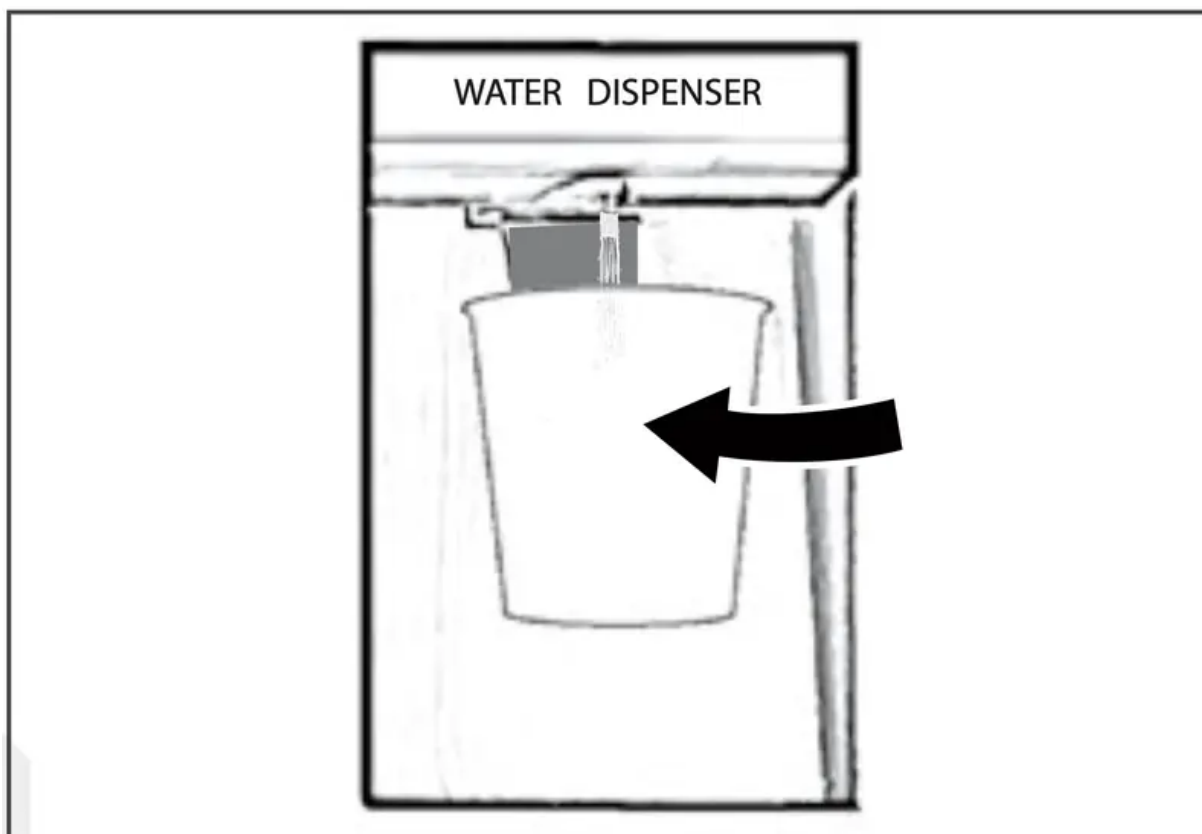


Tips on storing fresh food

Storing in the refrigerator compartment

- Keep your fridge temperature below 5°C.
- Hot food must be cooled to room temperature before storing in the appliance.
- Foods stored in the refrigerator should be washed and dried before storing.
- Food to be stored should be properly sealed to avoid odour or taste alterations.
- Do not store excessive quantities of food. Leave spaces between foods to allow cold air flowing around them, for a better and more homogeneous cooling.
- Foods eaten daily should be stored at the front of the shelf.
- Leave a gap between foods and the inner walls, allowing air flow. Don't store foods against the rear wall: foods could freeze against rear wall. Avoid direct contact of food (especially oily or acidic food) with the inner liner, as oil/acid can erode the inner liner. Clean away oily/acid dirt whenever it is found.
- Defreeze frozen food in the fridge storage compartment. This way, you can use the frozen food to decrease the temperature in the compartment and save energy.
- The ageing process of fruit and vegetables such as courgettes, melons, papaya, banana, pineapple, etc. can be accelerated in the refrigerator. Therefore, it is not advisable to store them in the refrigerator. However, the ripening of strongly green fruits can be

promoted for a certain period. Onions, garlic, ginger and other root vegetables should also be stored at room temperature.

- Unpleasant odours inside the fridge are a sign that something has spilled and cleaning is required. See CARE AND CLEANING.
- Different foods should be placed in different areas according to their properties:

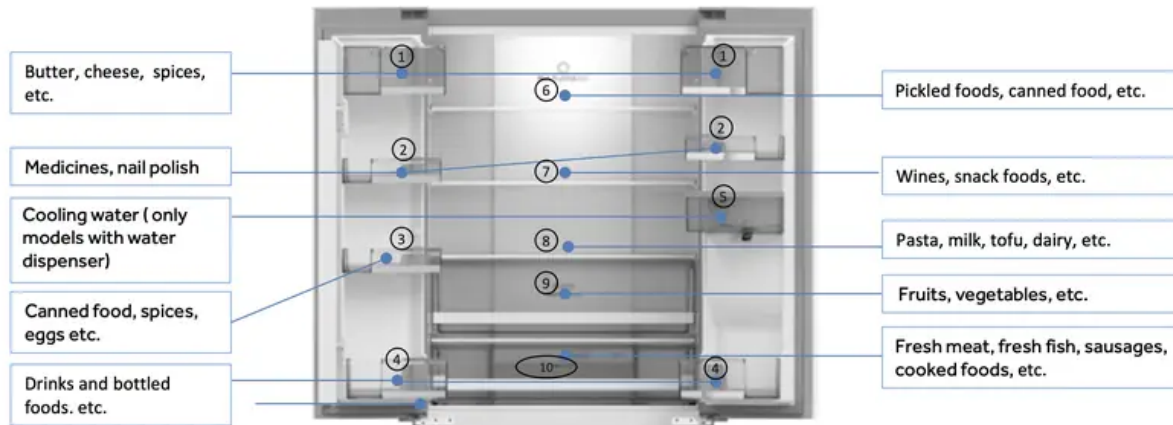


Storage in the freezer compartment

- Keep the freezer temperature at -18°C .
- 24 hours before freezing, switch on the Super Freeze function; for small quantities of food 4-6 hours are sufficient.
- Hot food must be cooled to room temperature before storing in the freezer compartment.
- Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5Kg. It is better to pack food before putting it into the freezer. The outside of the packaging must be dry to avoid bags sticking together. Packaging materials should be odour-free, airtight, non-poisonous and nontoxic.
- In order to avoid expiration of storage periods, please note the freezing date, time limit and name of the food on the packaging according to the storage periods of different foods.
- **WARNING!** Acid, alkali and salt etc. could erode the internal surface of the freezer. Do not place food with these substances (eg. seafood) directly on internal surfaces. Salt water in the freezer should be cleaned up immediately.
- Do not exceed the food storage times recommended by the manufacturers. Only take the required amount of food out of the freezer.
- Consume defrosted food quickly. Defrosted food cannot be re-frozen unless it is first cooked, otherwise it may be less edible.
- Do not load excessive quantities of fresh food in the freezer compartment. Refer to the freezing capacity of the freezer (see TECHNICAL DATA).

- Food can be stored in the freezer at a temperature of at least -18°C for 2 to 12 months, depending on its properties (eg. meat: 3-12 months, vegetables: 6-12 months).
- When freezing fresh food, avoid bringing it in contact with already frozen food. Risk of thawing!
- Defreeze frozen food in the fridge. This way, you can use the frozen food to decrease the temperature in the fridge compartment and save energy.

Different foods should be placed in different areas according to their properties:

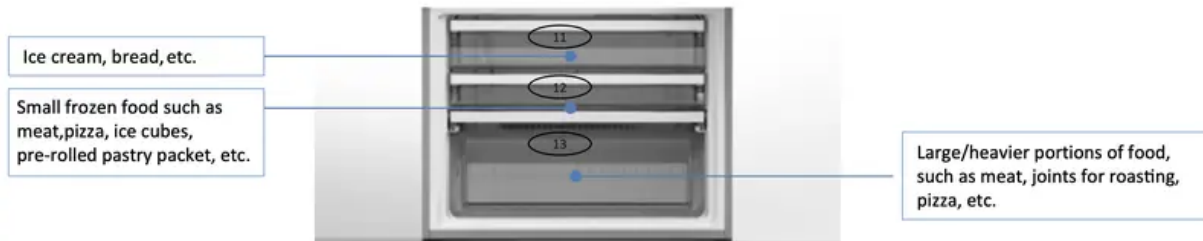


When storing commercially frozen foods, please follow these guidelines:

- Always follow manufacturers' guidelines for the length of time you should store food for. Do not exceed these guidelines!
- Try to keep the length of time between purchase and storage as short as possible to preserve food quality.
- Buy frozen foods, which have been stored at a temperature of -18°C or below.
- Avoid buying food which has ice or frost on the packaging. This indicates that the products might have been partially defrosted and refrozen at some point, which may affect the quality of food.

Equipment

Multi-air-flow


The refrigerator is equipped with a multi-air-flow system, with which cool air flows are located on every shelf level. This helps to maintain a uniform temperature to ensure that your food is kept fresher for longer.

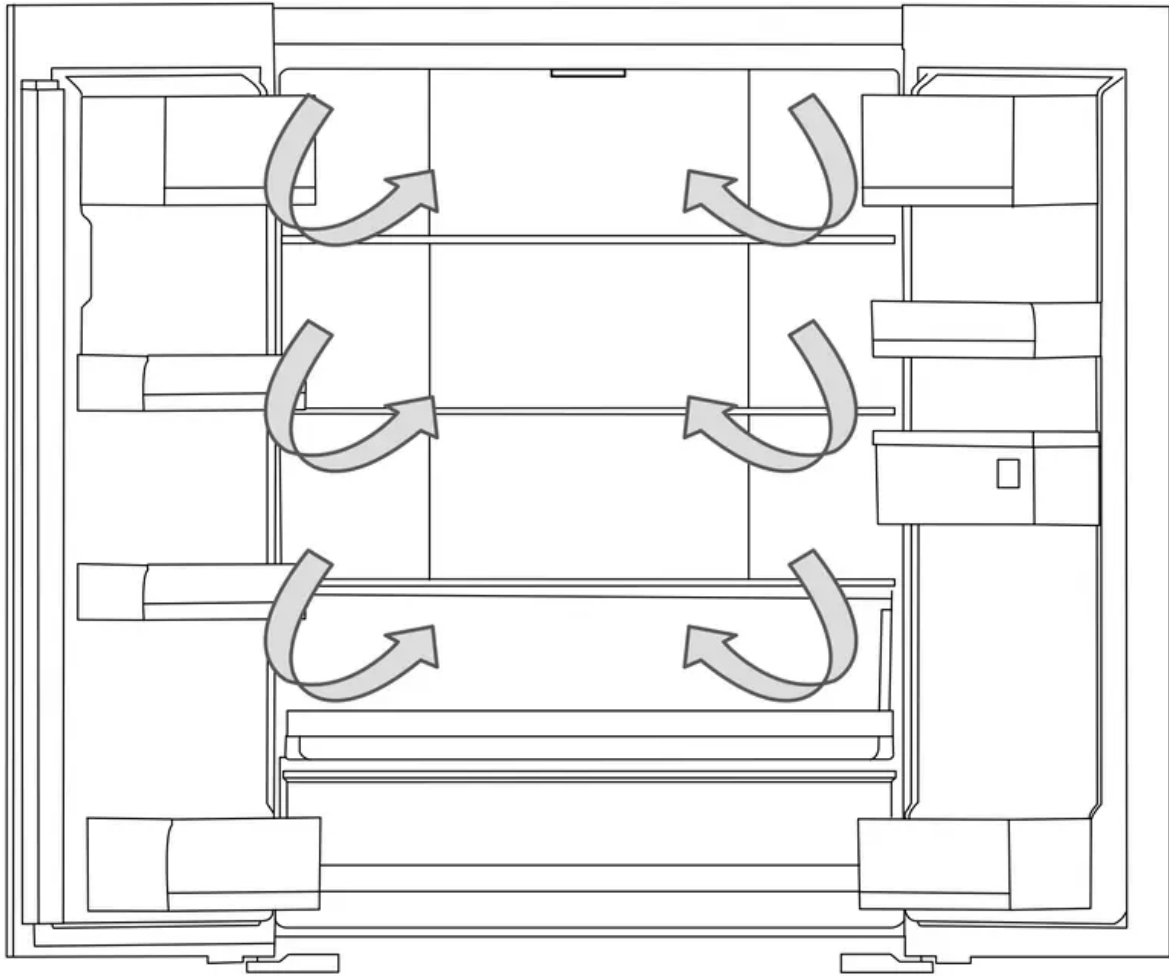

Adjustable shelves

The height of the shelves can be adjusted to fit your storage needs.

1. To relocate a shelf, remove it first by uplifting its hind edge (1) and pulling it out (2).
2. To reinstall it, put it on the lugs on both sides and push it to the most rearward position until the rear of the shelf is fixed inside the slots in the sides.

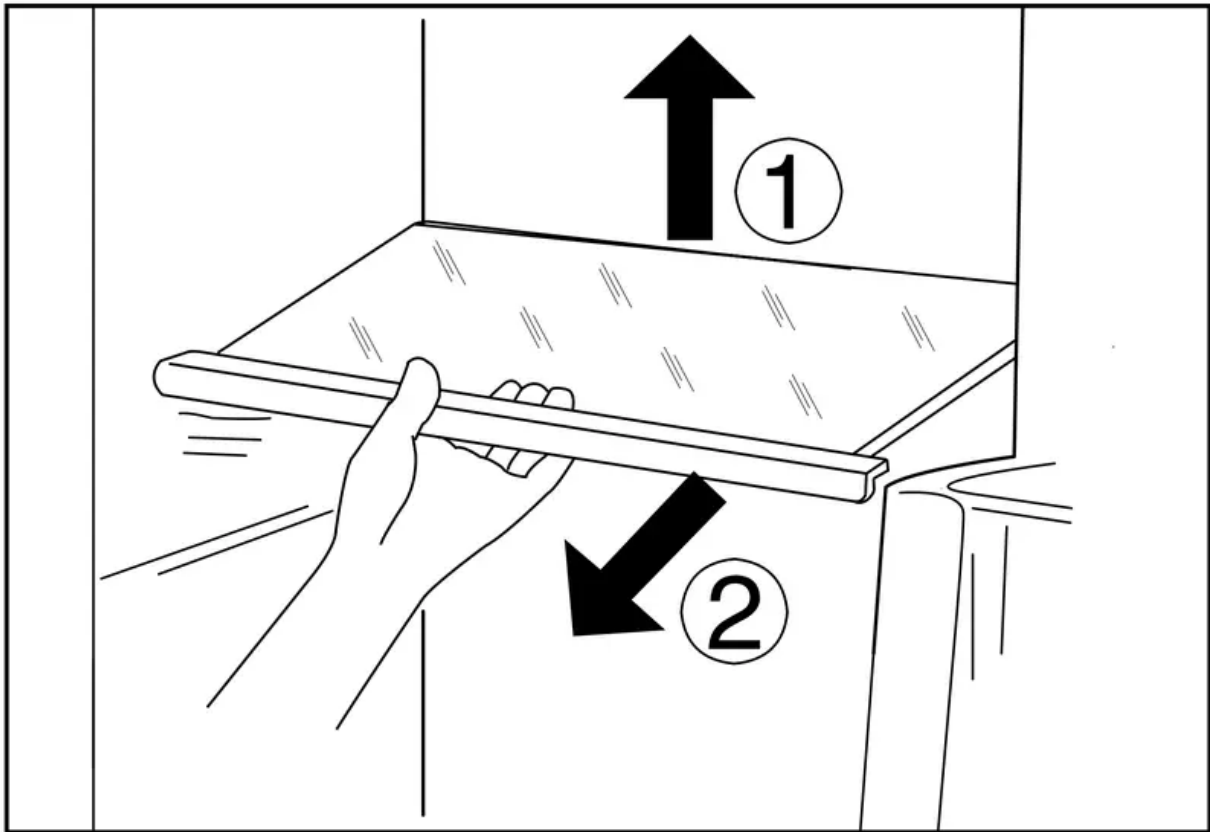

Notice: Ensure that both ends of a shelf are level.

My Zone drawer and Fresh Storage drawer

For use and setting of the My Zone drawer please check section USE.


To remove the drawer:

Pull out (1) to the maximum extent.

Lift (2) to separate the drawer from the rail and remove (3).

It can be mounted in reverse order.

Use same process for the Fresh Storage drawer.

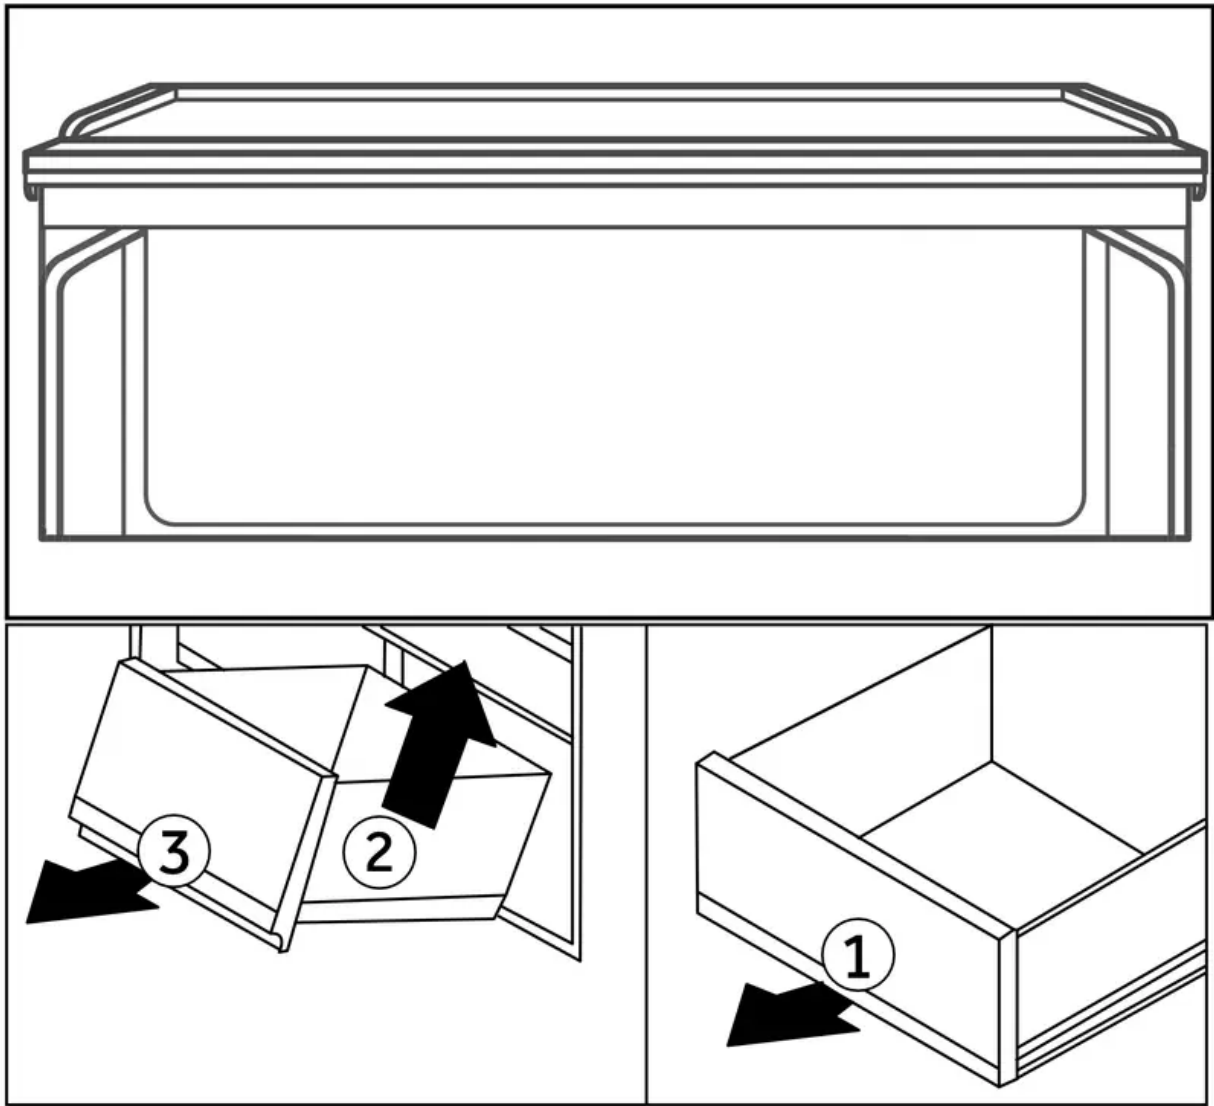


Removable door racks

The door racks can be removed for cleaning:

Place hands on each side of the rack, lift it upwards (1) and pull it out (2).

In order to insert the door rack, the above steps are carried out in reverse order.

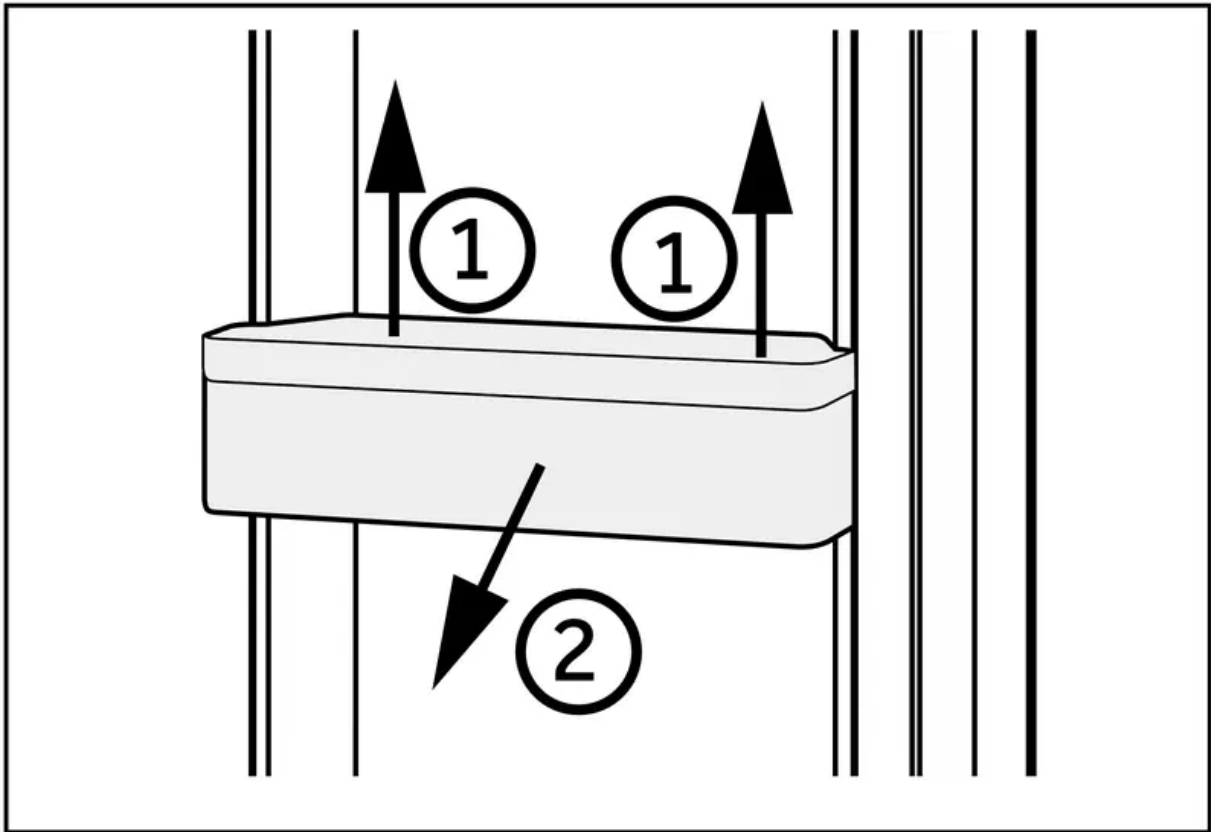


Removable water tank (only models with water dispenser)

The water tank can be removed and reinstalled for cleaning in the same way as the door racks.


Insert water tank (only models with water dispenser)

Place the water tank in the position that the water out-let (B) fits into the opening of the door. Make sure that the water tank is locked.

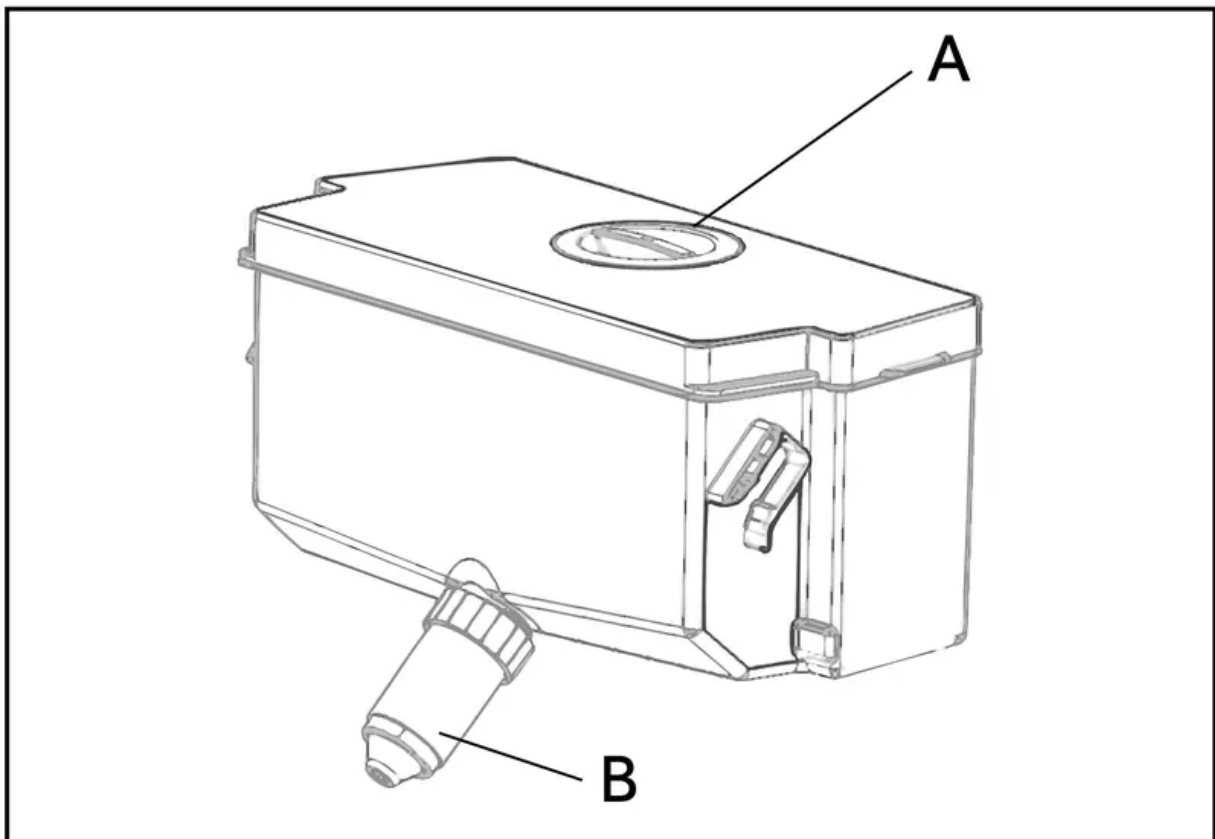

Ice cube tray

1. Fill the ice cube tray 3/4 full of water, close with the cover and put it into the pre-freezing compartment.
2. Twist the ice cube tray slightly or hold it under flowing water to loosen the ice cubes.

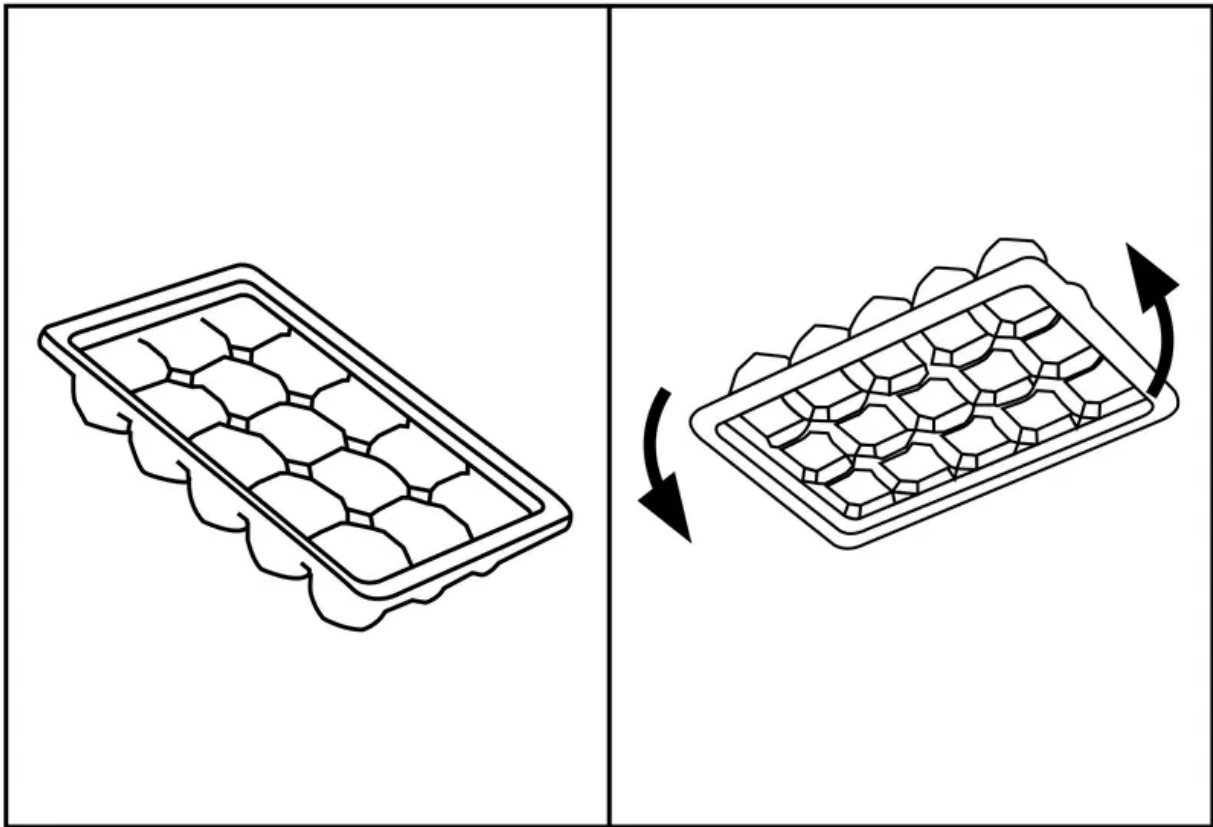

Removable freezer drawer


The freezer drawers are removable:

Drawer D1 and D3 (if fitted)

1. Pull out the drawer to the maximum extent.
2. Lift the drawer and remove.


Drawer D2

1. Pull out the drawer to maximum extent,
2. Press the Stop limit on both sides.
3. Lift the drawer and remove.

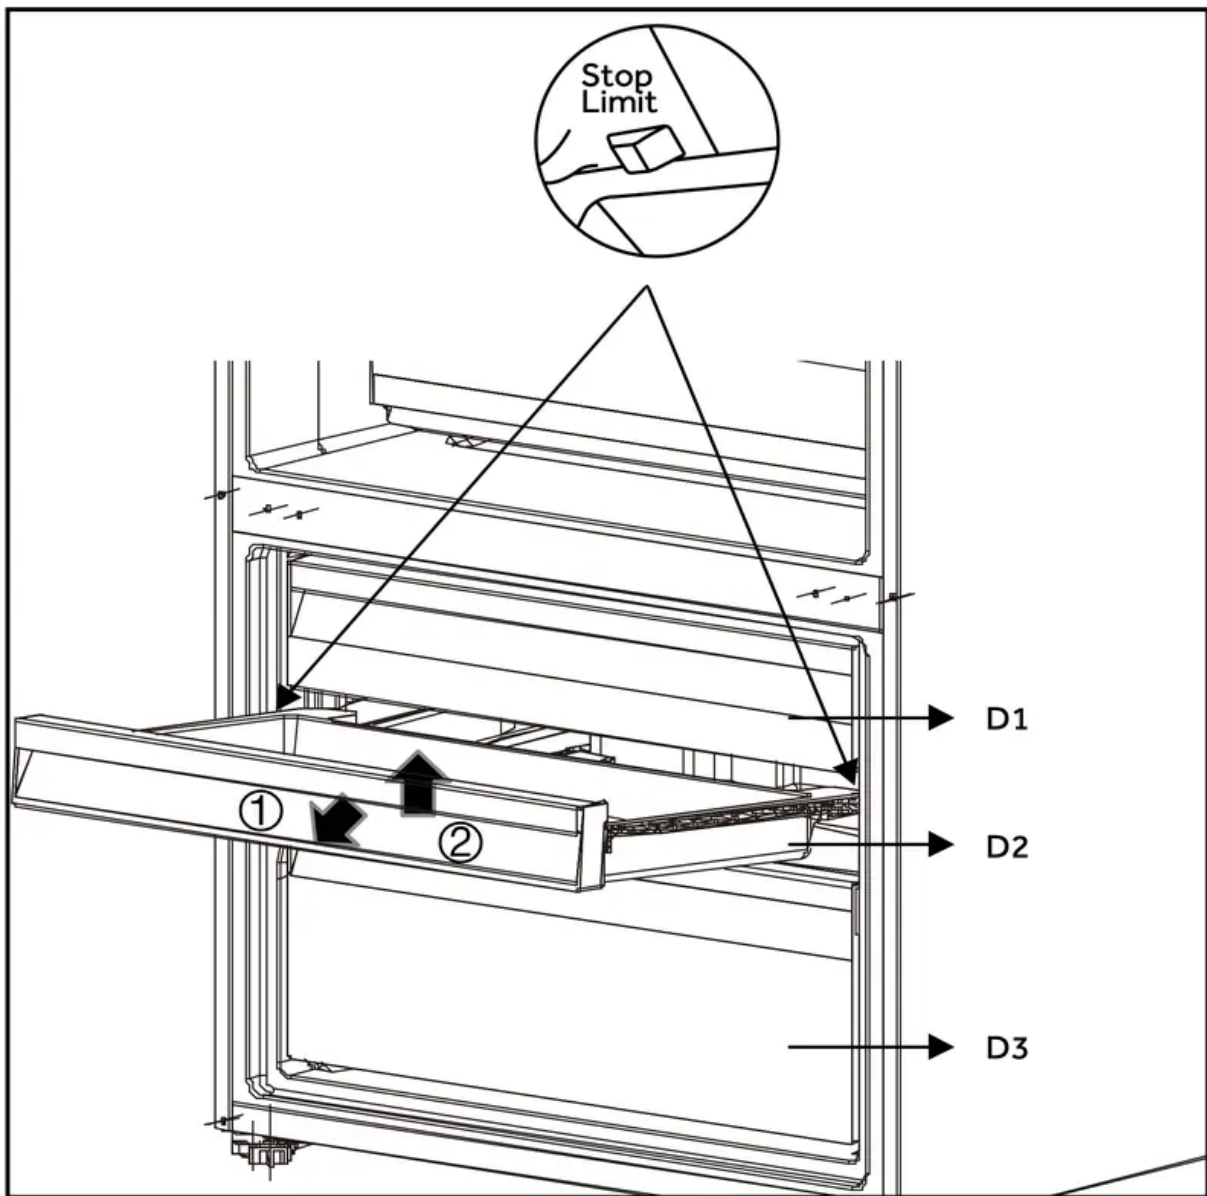

Drawer D4 (if fitted)

1. Pull out the drawer to maximum extent.
2. Lift to separate the box from the rails and remove. In order to insert the boxes and drawer, the above steps are carried out in reverse order.

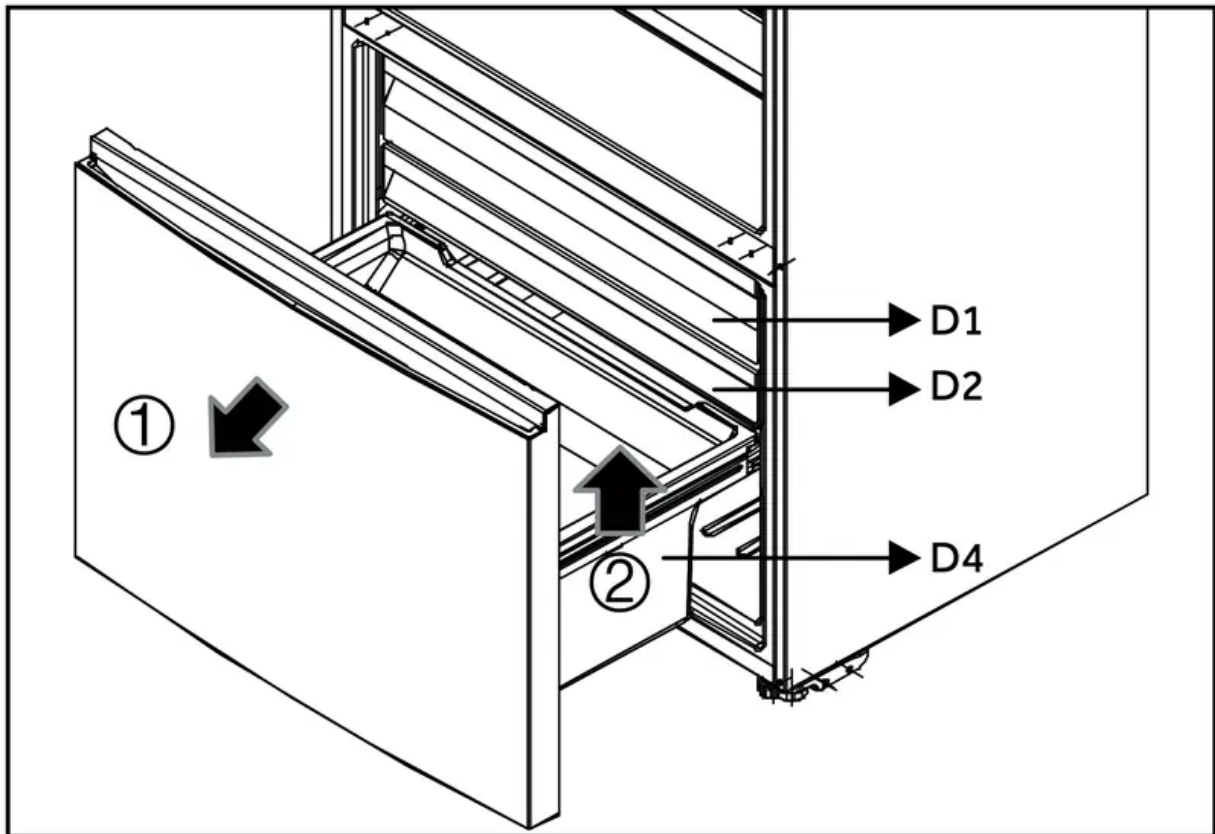

Energy saving tips

- Make sure the appliance is properly ventilated (see INSTALLATION).
- Do not install the appliance in direct sunlight or near sources of heat (eg. stoves, heaters).
- Avoid unnecessarily low temperature in the appliance. The energy consumption increases the lower the temperature in the appliance is set.
- Functions like Super Cool or Super Freeze consume more energy.
- Allow warm food to cool down before placing it in the appliance.
- Open the appliance door as little and as briefly as possible.
- Do not overfill the appliance to avoid obstructing the air flow.
- Avoid air within the food packaging.
- Keep door seals clean so that the door always closes correctly.
- Defreeze frozen food in the fridge storage compartment.

Care and Cleaning

WARNING! Disconnect the appliance from the power supply before cleaning.


Cleaning

Clean the appliance when only little or no food is stored.

The appliance should be cleaned every four weeks for good maintenance and to prevent bad stored food odors.

WARNING!


- Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone and similar organic solutions, acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.
- Do not spray or flush the appliance during cleaning.
- Do not use water spray or steam to clean the appliance.
- Do not clean the cold glass shelves with hot water. Sudden temperature change may cause the glass to break.
- Do not touch the inside surface of the freezer storage compartment, especially with wet hands, as your hands may freeze onto the surface.
- In case of heating check the condition of frozen goods.

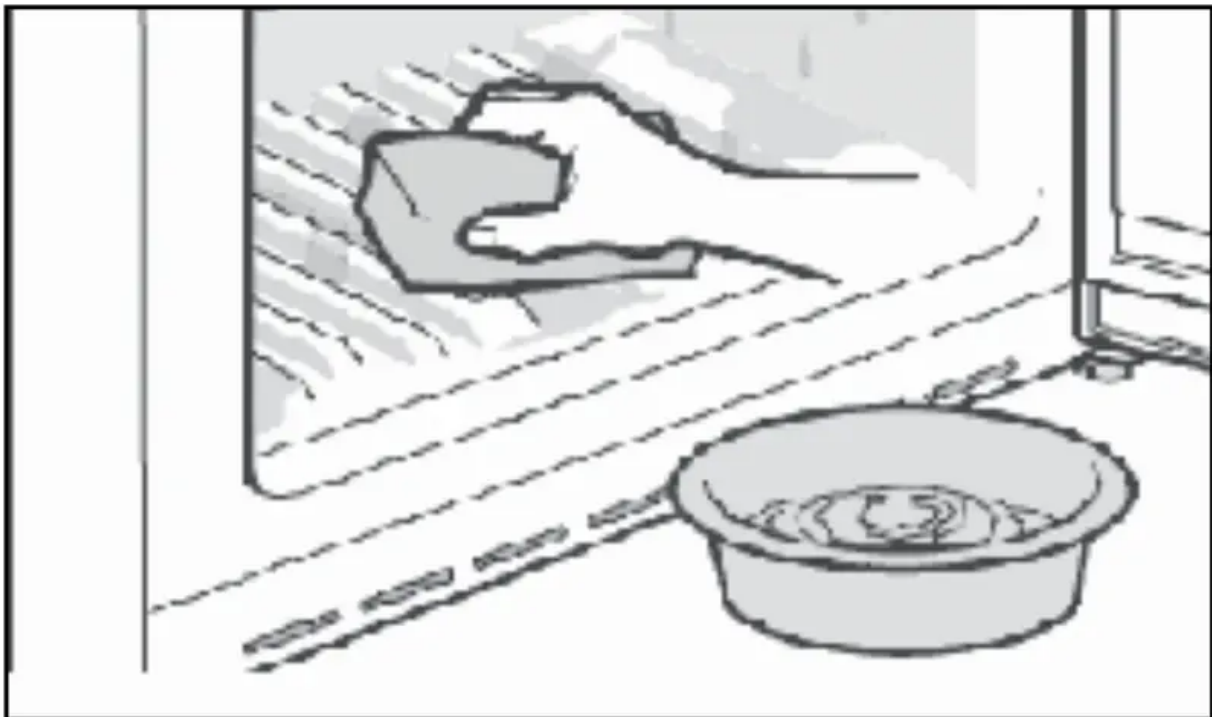

- Always keep the door gasket clean.
- Clean the inside and housing of the appliance with a sponge dampened in warm water and neutral detergent.
- Rinse and dry with soft cloth.
- Do not clean any of the parts of the appliance in a dishwasher.

- Allow at least 5 minutes before restarting the appliance as frequent starting may damage the compressor.

Cleaning the water tank (only models with water dispenser)

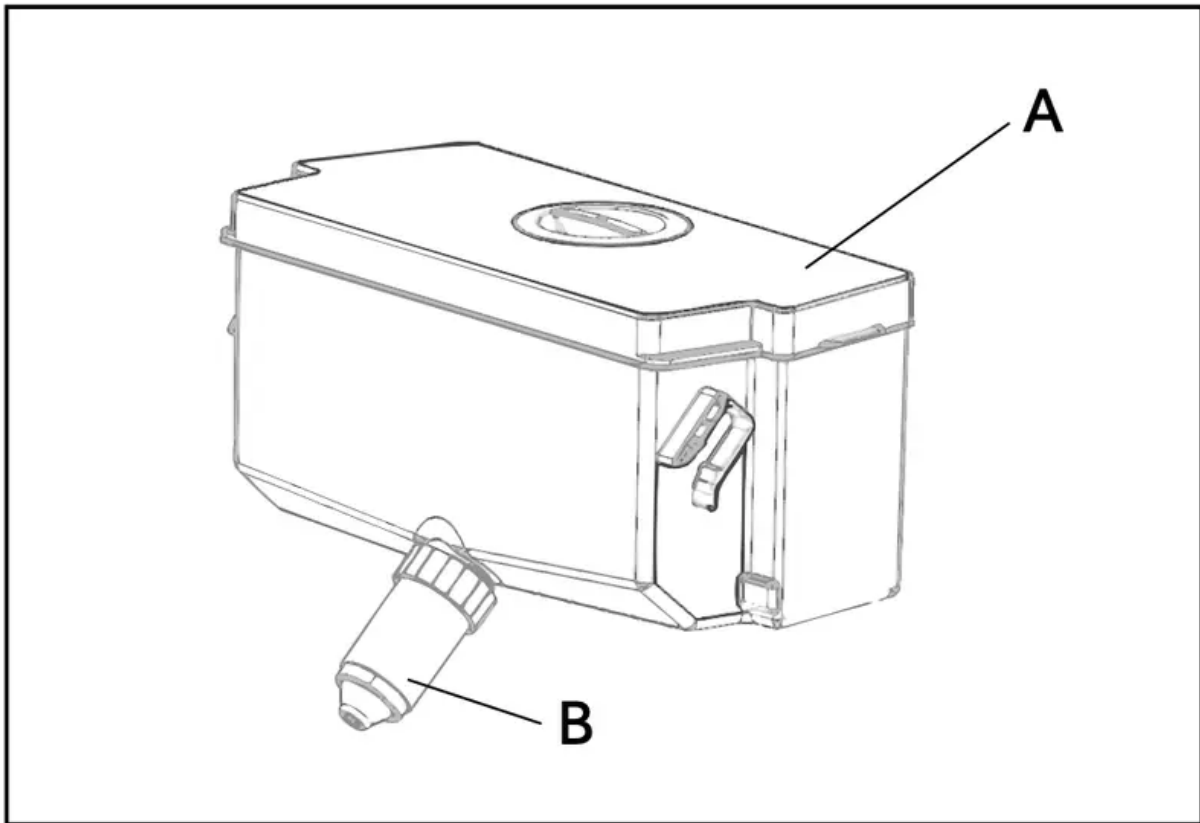

1. Take the water tank out of the appliance.
2. Remove the cover (A).
3. Unscrew the dispenser cock (B).
4. Clean the tank and dispenser cock with warm water and liquid dishwashing detergent. Make sure all soap is rinsed off.
5. Mount the dispenser cock, close the cover and replace the tank inside the appliance.

Defrosting

The defrosting of the refrigerator and the freezer compartment are done automatically; no manual operation is needed.

Replacing the LED lamps

WARNING! Do not replace the LED lamp yourself, it must only be replaced by either the manufacturer or the authorised service agent.

The appliance uses LED lamps as its light, featuring low energy consumption and long service life. If there is any abnormality, please contact customer service. See CUSTOMER SERVICE.

Parameters of the lamp:

Model	Refrigerator compartment		Freezer compartment	
	Voltage	max Power	Voltage	max Power
HRF520BW	12V	2W	-	-
HRF520BS				
HRF520BHS				
HRF520FS				
HRF520FHS				

Non-use for a longer period

If the appliance is not used for an extended period of time, and the Holiday function for the refrigerator is not being used:

- Take out the food.
- Unplug the power cord.
- Clean the appliance as described above.
- Keep the door and freezer drawers/door open to prevent the creation of bad odours inside.

Notice: Turn the appliance off only if strictly necessary.

Moving the appliance

1. Remove all food and unplug the appliance.
2. Secure shelves and other moveable parts in the fridge and the freezer with adhesive tape.
3. Do not tilt the refrigerator more than 45° to avoid damaging the refrigerating system.

WARNING!

- Do not lift the appliance by its handles.
- Never place the appliance horizontally on the ground.

Troubleshooting

Many problems that occur can be solved without specific expertise. In case of a problem, please refer to the below list of possibilities and follow instructions before contacting after sales service. See CUSTOMER SERVICE.

WARNING!

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

- Electrical equipment should be serviced only by qualified electrical experts, because improper repairs can cause considerable consequential damages.
- A damaged power supply should only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Problem	Possible Cause	Possible Solution
<p>The compressor does not work.</p>	<ul style="list-style-type: none"> • Mains plug is not connected in the mains socket. • The appliance is in the defrosting cycle. 	<ul style="list-style-type: none"> • Connect the mains plug. • This is normal for an automatic defrosting.
<p>The appliance runs frequently or runs for too long a period of time.</p>	<ul style="list-style-type: none"> • The indoor or outdoor temperature is too high. • The appliance has been powered off for a period of time. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long. • The temperature setting for the freezer compartment is too low. • The door/drawer gasket is dirty, worn, cracked or mismatched. • The required air circulation is not guaranteed. 	<ul style="list-style-type: none"> • In this case, it is normal for the appliance to run longer. • Normally, it takes 8 to 12 hours for the appliance to cool down completely. • Close the door/drawer and ensure the appliance is located on level ground and there is no food or container holding door ajar. • Do not open the door/drawer too frequently. • Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable. • Clean the door/drawer gasket or replace them through customer service. • Ensure adequate ventilation.
<p>The inside of the refrigerator is dirty and/ or smells.</p>	<ul style="list-style-type: none"> • The inside of the refrigerator needs cleaning. 	<ul style="list-style-type: none"> • Clean the inside of the refrigerator. • Wrap the food thoroughly.

	<ul style="list-style-type: none"> • Food of strong odour is stored in the refrigerator. 	
It is not cold enough inside the appliance.	<ul style="list-style-type: none"> • The temperature is set too high. • The temperature of the food stored is too warm. • Too much food has been stored at one time. • The goods are too close to each other. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long. 	<ul style="list-style-type: none"> • Reset the temperature. • Always cool down goods before storing them. • Always store small quantities of food. • Leave a gap between several foods allowing air flow. • Close the door/drawer. • Do not open the door/drawer too frequently.
It is too cold inside the appliance.	<ul style="list-style-type: none"> • The temperature is set too low. • The Super Freeze/ Super Cool function is activated or is running too long. 	<ul style="list-style-type: none"> • Reset the temperature. • Switch off the Super Freeze/ Super Cool function.
Moisture formation on the inside of the refrigerator compartment.	<ul style="list-style-type: none"> • The climate is too warm and too damp. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long. 	<ul style="list-style-type: none"> • Increase the temperature. • Close the door/drawer. • Do not open the door/drawer too frequently. • Let hot foods cool to room temperature and cover foods and liquids.

	<ul style="list-style-type: none"> • Food containers or liquids are left open. 	
Moisture accumulates on the refrigerator outside surface or between the doors/ door and drawer.	<ul style="list-style-type: none"> • The climate is too warm and too damp. • The door/drawer is not closed tightly. The cold air in the appliance and the warm air outside it condensates. 	<ul style="list-style-type: none"> • This is normal in damp climate and will change when the humidity decreases. • Ensure that the door/ drawer is tightly shut.
Strong ice and frost in the freezer compartment.	<ul style="list-style-type: none"> • The goods were not adequately packaged. • A door/drawer of the appliance is not tightly closed. • The door/drawer has been opened too frequently or for too long. • The door/drawer gasket is dirty, worn, cracked or mismatched. • Something on the inside prevents the door/drawer to close properly. 	<ul style="list-style-type: none"> • Always pack the goods well. • Close the door/drawer. • Do not open the door/ drawer too frequently. • Clean the door/drawer gasket or replace them with new ones. • Reposition the shelves, door racks, or internal containers to allow the door/drawer to close.
The appliance makes abnormal sounds.	<ul style="list-style-type: none"> • The appliance is not located on level ground. • The appliance touches some object around it. 	<ul style="list-style-type: none"> • Adjust the feet to level the appliance. • Remove objects around the appliance.
A slight sound is heard similar to that of flowing water.		<ul style="list-style-type: none"> • This is normal.

<p>You hear an alarm beep.</p>	<ul style="list-style-type: none"> • The fridge storage compartment door is open. • The temperature in the freezer is too high. 	<ul style="list-style-type: none"> • Close the door or silence the alarm manually. • The alarm is normal when it is first started due to relatively higher temperature. You can silence the alarm manually (see USE).
<p>You hear a faint hum.</p>	<ul style="list-style-type: none"> • The anti-condensation system is working. 	<ul style="list-style-type: none"> • This prevents condensation and is normal.
<p>The interior lighting or cooling system does not work.</p>	<ul style="list-style-type: none"> • Mains plug is not connected in the mains socket. • The power supply is not intact. • The LED lamp is out of order. 	<ul style="list-style-type: none"> • Connect the mains plug. • Check the electrical supply to the room. Call the local electricity company! • Please call customer service to change the lamp.

Power interruption

In the event of a power cut, food should remain safely cold for about 16 hours. Follow these tips during a prolonged power interruption, especially in summer:

- Open the door/drawer as few times as possible.
- Do not put additional food into the appliance during a power interruption.
- If prior notice of a power interruption is given and the interruption duration is longer than 16 hours, make some ice and put it in a container in the top of the refrigerator compartment.
- An inspection of the goods is required immediately after the interruption.
- As temperature in the refrigerator will rise during a power interruption or other failure, the storage period and edible quality of food will be reduced. Any food that defrosts should be either consumed, or cooked and refrozen (where suitable) soon afterwards in order to prevent health risks.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

